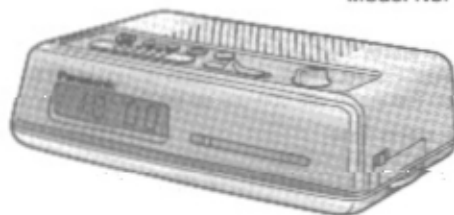 


**FM-AM Clock Radio****Operating Instructions**Model No. **RC-6266**

**Supplied accessory (Except for the U.S.A. and Canada):**  
Power plug adaptor

Before connecting, operating or adjusting this product, please read these instructions completely.

Please keep this manual for future reference.

**Before using this unit please read these operating instructions carefully.**

Take special care to follow the warnings indicated on the unit itself as well as the safety suggestions listed below.

 
 
 
 
Afterwards keep them handy for future reference.

**Safety**

- 1. Power Source**—The unit should be connected to power supply only of the type described in the operating instructions or as marked on the unit.
- 2. Polarization**—If the unit is equipped with a polarized AC power plug (a plug having one blade wider than the other), that plug will fit into the AC outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- 3. Power Cord Protection**—AC power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Never take hold of the plug or cord if your hand is wet, and always grasp the plug body when connecting or disconnecting it.
- 4. Nonuse Periods**—When the unit is not used, turn the power off. When left unused for a long period of time, the unit should be unplugged from the household AC outlet.

**Installation**

 Press.  Press and hold.

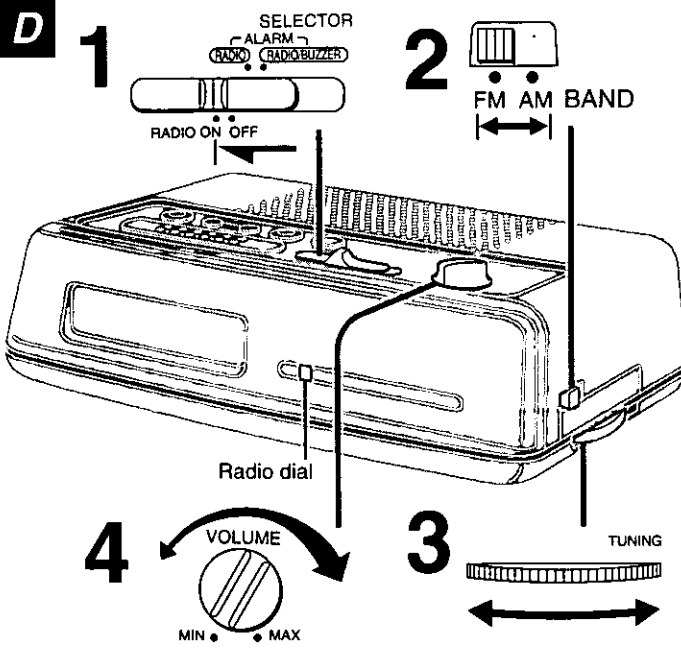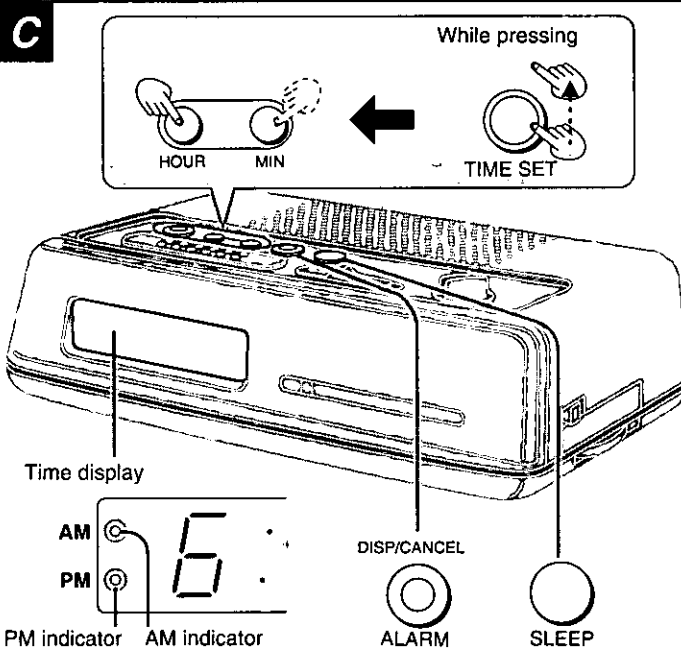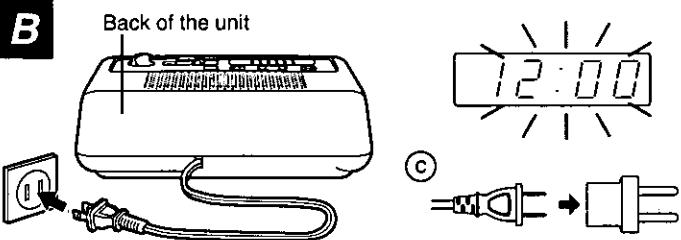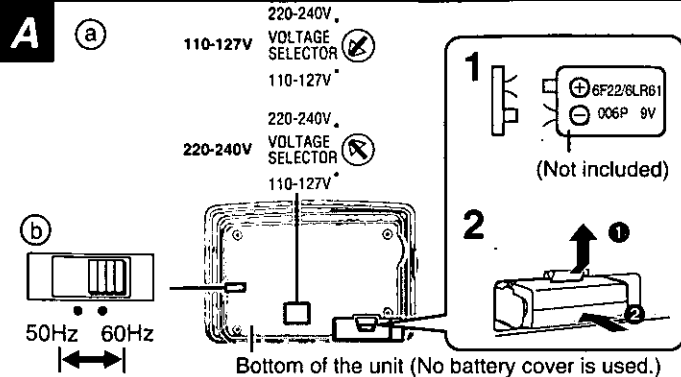

## Power supply

**Voltage selector A - (a)** (Except for the U.S.A. and Canada)  
Use a screwdriver to set the voltage for your area.

**Frequency selector A - (b)** (Except for the U.S.A. and Canada)  
Select the frequency for the power supply in your area.

**Dry cell memory back-up battery (not included) A**

This battery saves the clock and alarm settings if there is a power interruption.

**Using AC power cord E**

Ⓢ If the power plug will not fit your socket, use the power plug adaptor (included). (Except for the U.S.A. and Canada)

**If the power is interrupted**

• The time display clears until the unit is turned on again. The clock can gain or lose up to six minutes an hour while the power is interrupted.

**Replacing the battery**

• The service life of this battery is approximately 1 year.  
• If, after a power interruption, the display flashes after turning the unit on again, the battery needs to be replaced.

### Note

- Align the poles (⊖ and ⊕) properly when inserting the battery.
- Do not heat or disassemble the batteries. Do not allow them to contact flame or water.
- Remove the battery if the unit is not to be used for a long time.
- Do not peel off the covering on batteries and do not use if the covering has been peeled off.

Mishandling of battery can cause electrolyte leakage which can damage items the fluid contacts and may cause a fire.

If electrolyte leaks from the batteries, consult your dealer.

Wash thoroughly with water if electrolyte comes in contact with any part of your body.

## Setting the time

While pressing [TIME SET], press [HOUR] or [MIN] to set the time.

[HOUR]: Increases the time by one-hour units.

[MIN]: Increases the time by one-minute units.

• Make sure the AM or PM setting is correct.

AM: The AM indicator lights.

PM: The PM indicator lights.

• The seconds are reset to zero when [TIME SET] and [MIN] are pressed.

■ **To check the second display**

While pressing [DISP/CANCEL, ALARM], press [SLEEP].

The time display changes to show the last digit of the minutes and the seconds.

 
## Listening to the radio

■ **To adjust antenna**

### AM




### FM (for the U.S.A. and Canada)

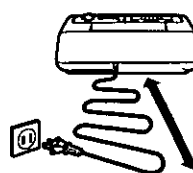

Extend and change the direction of the AC power cord.

### FM (for others)

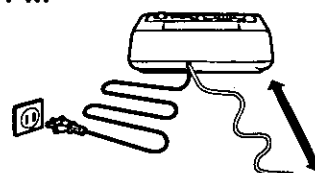 

Extend and change the direction of the FM antenna cord.



■ **To turn off:**

Set [SELECTOR] to OFF.

### Note

  These speakers do not have magnetic shielding. Do not place them near televisions, personal computers or other devices easily influenced by magnetism.

While pressing

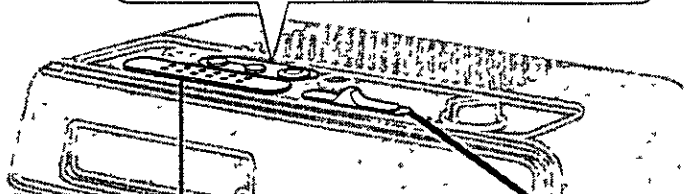

## Using the unit as an alarm clock

This unit has two alarms

The alarm automatically shuts off in about 2 hours

- (RADIO) Radio alarm **E-③**  
 (RADIOBUZZER) Radio and buzzer alarm **E-④**

**For your reference**

To wake with the buzzer alarm only, set the [VOLUME] to MIN

**Note**

- Make sure the AM or PM setting is correct

**■ To shut off the alarm**

Press [DISP/CANCEL, ALARM]. (The alarm is turned off but the setting remains intact so the alarm will operate as set the next day as well )

**■ To check the alarm time**

Press [DISP/CANCEL, ALARM].

The alarm time is displayed while [DISP/CANCEL, ALARM] is pressed

**■ To turn the alarm off**

Set [SELECTOR] to OFF

Marking sign is located on bottom of the unit.

For USA and Canada

**CAUTION:**  
TO PREVENT ELECTRIC SHOCK MATCH  
WIDE BLADE OF PLUG TO WIDE SLOT,  
FULLY INSERT.

**THE FOLLOWING APPLIES ONLY IN THE U.S.A.**

**CAUTION:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the conditions that this device does not cause harmful interference.

Any unauthorized changes or modifications to this equipment would void the user's authority to operate this device.

Panasonic Consumer Electronics  
Company, Division of Matsushita  
Electric Corporation of America  
One Panasonic Way,  
Secaucus, New Jersey 07094

ONLY FOR U.S.A.

**Panasonic**

Panasonic Sales Company, Division  
of Matsushita Electric  
of Puerto Rico, Inc. ("PSC")  
Ave. 65 de Infanteria, Km. 9.5  
San Gabriel Industrial Park  
Carolina, Puerto Rico 00985

## Limited Warranty

Panasonic Consumer Electronics Company or Panasonic Sales Company (collectively referred to as "The warrantor") will repair this product with new or refurbished parts, free of charge, in the U.S.A. or Puerto Rico from the date of original purchase in the event of a defect in materials or workmanship as follows:

**For one (1) year—Radio, Clock Radio, Radio with Tape Player or Recorder, Speaker**

**For ten (10) days—Batteries**—(when applicable)—New rechargeable batteries in exchange for defective rechargeable batteries. Non-rechargeable batteries are not warranted.

For assistance in the U.S.A. in obtaining repairs contact:

**Panasonic Services Company**  
**Panasonic PLUS Department**  
20421 84th Avenue South  
Kent, WA 98032  
Phone: 1-800-833-9626  
FAX: 1-800-237-9080

If repair is needed, during the warranty period the purchaser will be required to furnish a sales receipt/proof of purchase indicating date of purchase.

Also, the purchaser will be responsible for shipping the unit to the above address. This warranty is extended only to the original purchaser.

For assistance in Puerto Rico contact, Panasonic Sales Company at the address or telephone number above.

This warranty only covers failures due to defects in materials or workmanship which occur during normal use and does not cover damage which occurs in shipment or failures which are caused by products not supplied by the warrantor or failures which result from accident, misuse, abuse, neglect, mishandling, misapplication, faulty installation, set-up adjustments, improper maintenance, alteration, improper antenna, inadequate signal pick-up, maladjustment of consumer controls, modification, line power surge, or commercial use of the product, or damage that is attributable to acts of God, or service by anyone other than a PASC Factory Servicenter.

### LIMITS AND EXCLUSIONS

There are no express warranties except as listed above.

THE WARRANTOR SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT, OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING WITHOUT LIMITATION, DAMAGE TO TAPES, RECORDS OR DISCS. ALL EXPRESS AND IMPLIED WARRANTIES, INCLUDING THE WARRANTIES OF MERCHANTABILITY, ARE LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above exclusions or limitations may not apply to you.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If a problem with this product develops during or after the warranty period, you may contact your dealer or Panasonic PLUS Department. If the problem is not handled to your satisfaction, then write to the Customer Satisfaction Center at the company address above or call toll free 1-800-211-7262.

### If you ship the product

Carefully pack and send it prepaid, adequately insured and preferably in the original carton. Attach a letter, detailing the complaint, to the outside of the carton.

*Do NOT send the product to the Executive or Regional Sales offices. They are NOT equipped to make repairs.*

### Customer's Record

Model  
No. \_\_\_\_\_

Serial  
No. \_\_\_\_\_  
or  
Code  
No. \_\_\_\_\_

Date  
of  
Purchase \_\_\_\_\_

Dealer's  
Name \_\_\_\_\_

Dealer's  
Address \_\_\_\_\_