 
 


# In the box



Action Camera



computer)





Bicycle Mount



Helmet mount with strap




 
Attachment Buckle

## Charging the battery

2. The Charging indicator light will illuminate red.

Setting up your camera

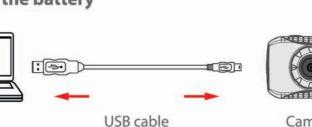








 
card slot (as shown below) until it clicks and locks into place. 1. Connect the camera to your computer using the included USB cable.



SD card installation

1. Turn off the camera.

2. Insert the Micro SD card into the

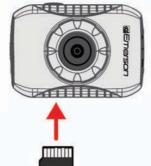

A card can only be inserted one way: do not use force when inserting the card. Inserting or removing a card while the camera is on may damage the card, files stored on the card.

This camera has no internal memory and requires a Micro SD card (not included) to take and save pictures or record videos. The camera can support Micro SD cards up to 32GB. To install the Micro SD card into the camera, follow the steps

#### Location of controls




# Using your camera

Turning the camera on/off 1. To turn the camera on, press and HOLD the [POWER] button until the display turns on.

3. The battery indicator is located on the lower left corner of the camera's LCD


2. To turn the camera off, press and HOLD the [POWER] button until the display turns off.

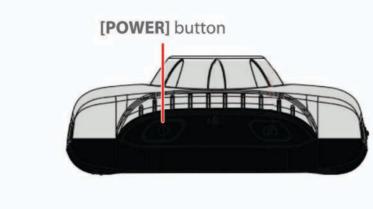

#### **Using the Camera Mode Selector Switch Camera Mode Selector**

This camera has three different modes depending on what you are doing with the camera. For example:

- A) To take pictures switch the [Camera Mode Selector] all the way up to the picture mode position. B) To take videos switch the [Camera Mode Selector] to the middle,
- video mode position. C) To playback pictures/videos switch the [Camera Mode Selector] to the bottom position, playback mode.
- 1. Use the [Camera Mode Selector] Switch to activate any of the camera
- 2. Slide the selector up and down to choose one of three desired modes.

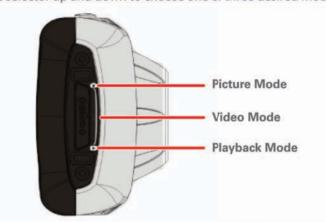

## Picture Mode

. Make sure that a Micro SD card is inserted into the camera.

2. Turn on the camera, and switch the [Camera Mode Selector] to picture

3. Press the [SHUTTER / BACK] button to take a picture.



7. Pictures Remaining 8. Micro SD Card Indicator 9. Zoom level 10. Battery Indicator

Self timer and continuous shooting While in picture mode, press the [MENU / SELECT] button, then press the [DOWN / ZOOM - ] button till you see the [Driver Mode], press the [MENU / **SELECT**] button to select it. 2. Use the arrows to select from 2 second self-timer, 10 second self-timer or Burst.

3. When you select 2 or 10 seconds self timer, the timer starts counting down

Zooming in & Out -In picture of video mode press the up and down arrow keys

from 2 or 10 seconds, and the camera takes a picture; when you select burst, the camera takes 3 pictures continuously. 4. Press the [SHUTTER / BACK] button to start self timer or burst snapshot. 5. To turn off the self timer or Burst feature repeat step 1 then select "Off".

## Video Mode

Micro SD Card Slot

1. Make sure that a Micro SD card is inserted into the camera.

3. Press the [SHUTTER / BACK] button, the camera starts recording video

2. Turn on the camera, and switch the [Camera Mode Selector] to video

4. To stop recording press the [SHUTTER / BACK] button again.



## Playback Mode

System Settings > Power Save).

1. Turn on the camera, and switch the [CAMERA MODE SELECTOR] to playback

is camera has an auto-shutoff feature which can be set for specific times (refer to

Use the [▲] or [▼] buttons to scroll through picture and video files.

#### Video Playback

1. If you select a video, press the [SHUTTER / BACK] button to start the

2. To stop the video playback press the [MENU / SELECT] button.



#### Connect your camera to a computer

Connecting the camera

To edit or upload and share your videos and pictures, you must first transfer

them to your computer. Follow the steps below to connect the camera to your

1. Make sure the camera is turned off, and that a Micro SD card is inserted in the camera before connecting it to your computer.

2. Insert the smaller end of the USB cable into the camera's USB port. 3. Connect the larger end of the USB cable into your computer's USB port.

5. Autoplay will prompt your device is connected.

6. On your PC select "open folder" to view files. 7. Select "DCIM" then select "100MEDIA".

8. Pictures and videos will be be displayed in this folder.

9. Before disconnecting the camera, click on the "Safely Remove Hardware" icon usually located on the lower right corner of your desktop.

Click on "My Computer", RIGHT click on "MICROSD" then click on "Eject" from the drop down menu.

Please do not disconnect the USB cable during loading, as it may cause damage to the camera and the files on the SD card.

#### System Settings

To make changes to the camera's settings, follow the instructions below:

1. Press the [MENU / SELECT] Button. Quickpress the [POWER] Button. 3. Use the [▲] or [▼] buttons to scroll through the settings. 4. Press the [MENU / SELECT] button to select the desired setting.

#### System Settings Screen



#### System Settings Options

- Jordan Schmidt - January		
<b>AUTO REVIEW</b>	Set time of review after picture is taken (off, 1 sec, 3 sec).	
POWER FREQUENCY	50Hz / 60Hz (The Camera's default setting is 60hz for the USA and North Ame	
POWER SAVE	Select off,1,3, or 5 minutes. To conserve battery power, the cam will shut off if no buttons are pressed within the selected time.	
DATE & TIME	Set the camera's date and time.	
LANGUAGE	Set the camera's language	
FORMAT	Erase all data on the SD card	
RESET ALL	Reset the camera's settings to factory default.	

#### Picture Mode Settings

To make changes to the picture mode settings, follow the instructions below:

To make changes to the video mode settings, follow the instructions below:

1. Switch the [Camera Mode Selector] to picture mode. 2. Press the [MENU / SELECT] Button. Use the [▲] or [▼] buttons to scroll through the settings. 4. Press the [MENU / SELECT] button to select the desired setting.



#### **Picture Mode Settings Options**

RESOLUTION	1M (1280x960) / 3M (2048x1536) / 5M (2592x1944) (Higher picture resolution takes up more space on the SD card).
QUALITY	Super fine / Fine / Normal
METERING	Center / Multi / Spot
WHITE BALANCE	Auto / Daylight / Cloudy / Fluorescent / Tungsten
EXPOSURE	Adjust the exposure
DRIVER MODE	"Off" (disables the self timer), "2" or "10" second options (self timer), "Burst" (3 frame shot)
EFFECT	Norma / B&W / Sephia / Negative / Red / Green / Blue
DATE STAMP	OFF / DATE / DATE & TIME

#### Video Mode Settings

1. Switch the [Camera Mode Selector] to video mode. 2. Press the [MENU / SELECT] Button. Use the [▲] or [▼] buttons to scroll through the settings. 4. Press the [MENU / SELECT] button to select the desired setting.



#### **Video Mode Settings Options**


and mount octaming of participations	
OVIE SIZE	HD 1280X720 / 640X480 / 320X240
CORDING INTERVAL	Select OFF, 1, 3, or 5 minutes.
ETERING	Center / Multi / Spot
HITE BALANCE	Auto / Daylight / Cloudy / Fluorescent / Tungsten
FECT	NOR / B&W / SEPIA / NEGATIVE / RED / GREEN / BLUE
ATE STAMP	OFF / DATE / DATE & TIME

#### Playback Mode Settings

To make changes to the playback mode settings, follow the instructions below:

1. Switch the [Camera Mode Selector] to playback mode. 2. Press the [MENU / SELECT] Button. Use the [▲] or [▼] buttons to scroll through the settings. 4. Press the [MENU / SELECT] button to select the desired setting.


#### Playback Mode Settings Screen

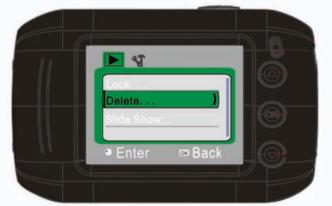


#### **Playback Mode Settings Options**

оск	Lock one or all of your picture and video files. When locked the file will not be to be deleted.
DELETE	"One" (Delete the currently displayed video or picture) or "All"
LIDE SHOW	Start a slide show, and adjust the slide show settings.


# **Mount Kit Assembly**

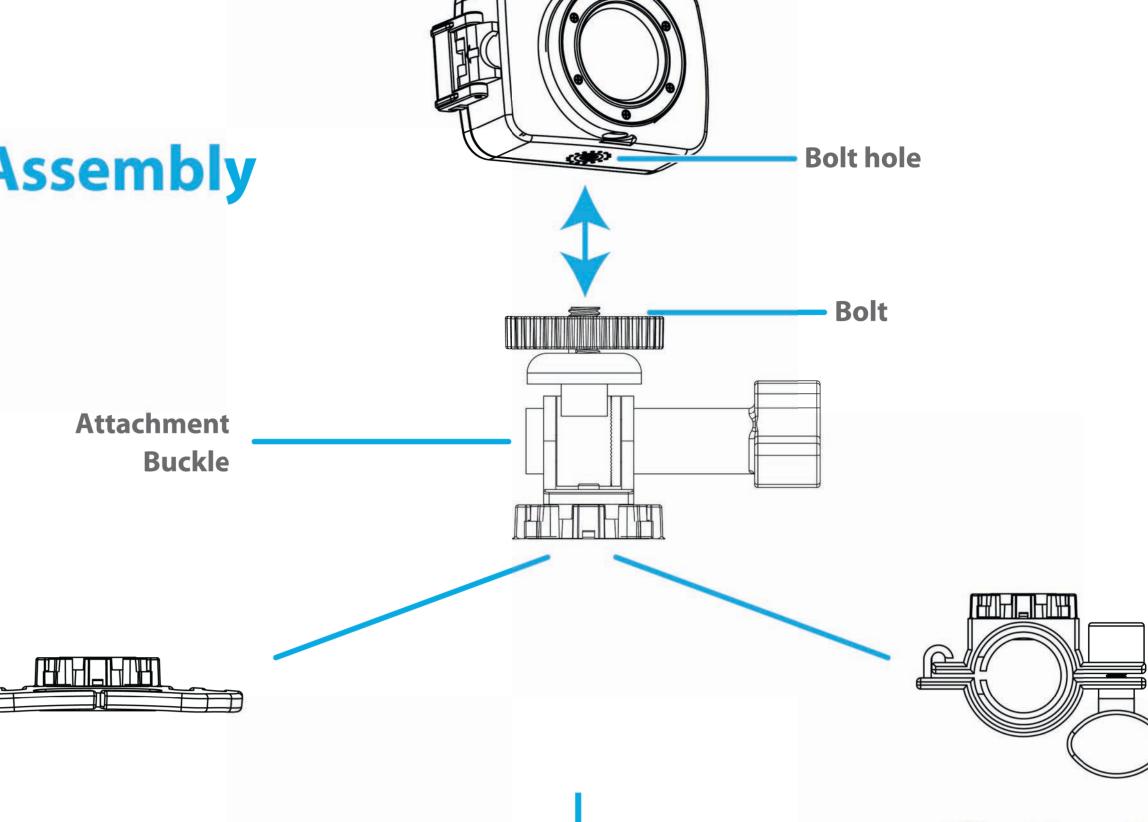



## **Helmet Mount**

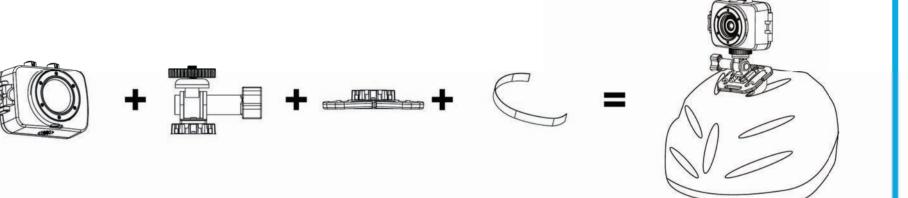

# **Bike Mount**

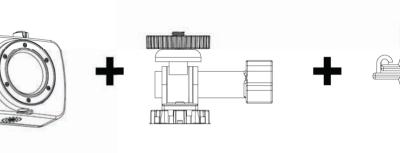

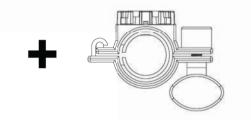

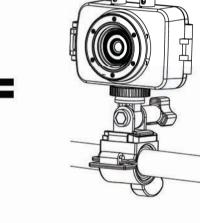

#### Waterproof case

#### Assembling camera into case

Your action cam comes with a water proof case for underwater action and added durability. To assemble your camera to the case, follow the instructions below:


1. Open the latch on the water proof case. 2. Insert the camera lens forward into the case.

3. Close the door and secure the latch.

**FCC** information

interference to radio communications.

NOTE: Please make sure latch is secure and that all seals are in place to ensure no water can seep in.

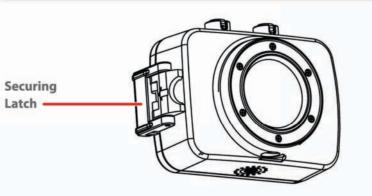

the the camera to the bike mount, follow the instructions below:

**NOTE:** Use the included rubber swatch to mount it securely.

3. With the camera assembled to the water proof case or included shield align the bolt on the attachment buckle to the hole on your waterpoof case or shield **NOTE:** You must either use the waterproof case or shield to assemble the camera and turn. When the desired position is reached, you can use the wheel on the

4. Connect the attachment buckle to the bike mount by pinching both sides on the attachment buckle and sliding it on to the mount.

camera to the attachment buckle.

#### This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**Warning:** Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to NOTE: This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. his equipment generates, uses and can radiate radio frequency energy and, if

not installed and used in accordance with the instructions, may cause harmful

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to
- which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

## **Bike Mount Assembly**

#### Assembling camera to bike mount Your action cam includes the necessary accessories for bike action. To assemble

1. Install the bike mount onto your bikes handle bars by putting the bottom half of your bike mount onto the handle bar and connecting it to the top part of

2. Use the included screw to secure the bike mount, tighten till the bike mount is

bottom end of the bolt to tighten.

**NOTE:** You must either use the waterproof case or shield to assemble the

#### Limited Warranty

In the unlikely event that this product is defective, or does not perform properly, you may within ninety (90) days from your original date of purchase return it to the authorized service center for repair or exchange.

#### TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated
- Prepay all shipping costs to the authorized service center, and remember to insure your return. • Include a return shipping address (no P.O. Boxes), a telephone
- contact number, and the defective unit within the package. Describe the defect or reason you are returning the product.

Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

Helmet assembly

bottom end of the bolt to tighten.

to the attachment buckle.

Assembling camera to helmet mount

on the attachment buckle and sliding it on to the mount.

and velcro the mount through the holes on your helmet.

Your action cam includes the necessary accessories for helmet action. To

assemble the the camera to the helmet mount, follow the instructions below:

1. With the camera assembled to the water proof case or included shield align

2. Connect the attachment buckle to the helmet mount by pinching both sides

3. Insert the helmet strap through the slots on the side of the helmet mount

the bolt on the attachment buckle to the hole on your waterpoof case or shield

and turn. When the desired position is reached, you can use the wheel on the

Southern Telecom, Inc. Attention: Customer Service (2nd Floor) 14-C 53rd Street Brooklyn, NY 11232

Should you have any questions or problems concerning this product, please contact our customer service department at:

> **Customer Support:** 2 1-877-768-8483 (Toll Free)

Monday - Thursday: 9AM - 5PM (EST) Friday: 9AM - 3PM (EST)

www.southerntelecom.com

This warranty does not cover damage resulting from accident, misuse, abuse improper installation or operation, lack of reasonable care, and unauthorized modification. This warranty is voided in the event any unauthorized person opens, alters or repairs this product. All products being returned to the authorized service center for repair must be suitably packaged.

#### **Limitation of Warranty:**

• THE WARRANTY STATED ABOVE IS THE ONLY WARRANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WARRANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY AIT, INC. IT'S AGENTS, OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. AIT, INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRANTIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS OF THE STATE OF NEW YORK. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRANTY PERIOD SET FORTH ABOVE.

damages, or limitations on how long an implied warranty lasts so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.

Some states do not allow the exclusion nor limitation of incidental or consequential