

mellerware®

INDULGE
pamper
pack

makes life easier



3 Massage settings

4 Reflex massage
rollers

7 Piece pedicure
set



complies with
INTERNATIONAL
IEC60335

m
60W

2 YEAR
GUARANTEE

Model:
46001



Foot Spa

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:

For Your Safety

Read all instructions carefully, even if you are quite familiar with the appliance.

- This appliance is not intended for use by children. Never leave an appliance unattended when it is in use.
- Children should be supervised to ensure they do not play with the appliance.
- Switch off and remove the plug from the power wall socket before undertaking any cleaning task or when it is not in use. To unplug, grasp the plug and remove from the wall socket. Never pull the power cord. Never carry the appliance by its power cord.
- Do not operate any appliance with a damaged power cord or after the appliance malfunctions, or if it has been damaged in any manner.
- Do not use an appliance for anything other than its intended use. The product is intended for household use only.
- Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.
- Do not use outdoors.
- Always unplug the appliance from the wall socket after use.
- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not use the appliance while bathing or showering.
- Do not place or store the appliance where it can fall or be pulled into a bathtub or sink.
- Do not place in or drop into water.
- Do not attempt to plug or unplug the appliance while your feet are in the water.
- Do not use attachments that have not been supplied by the manufacturer.
- Do not leave the Foot Spa unattended while it is in use.

WARNING

- Never immerse the Foot Spa in water or any

other liquids.

- Always check the temperature of the water before placing your feet into the Foot Spa.
- Do not stand in the appliance. Sit down and place your feet in the Foot Spa.
- The Foot Spa cannot be used to warm cold water. You must fill the appliance with warm water.
- Ensure that your hands are dry when operating the switch or removing the plug.
- The appliance must not be used inside a bathtub.
- The appliance has a heated surface, persons sensitive to heat must be careful when using the appliance.

CAUTION

- An appliance should never be left unattended while it is plugged into a wall socket.
- Keep the power cord away from heated surfaces.
- Never fall asleep while using the Foot Spa.
- Never drop or insert any object into any opening.
- Do not operate the appliance where aerosol (spray) products are being used or where oxygen is being administered.
- Do not operate the appliance under a blanket or pillow. Excessive heating can occur and it may cause a fire, electrical shock or injury.
- If you have any concerns regarding your health, consult your doctor before using the Foot Spa.
- Individuals with pacemakers should consult a physician before using the appliance.
- In case of pregnancy, diabetes or illness consult your doctor before using the Foot Spa.
- If you experience pain in a muscle or joint for a prolonged period of time, discontinue use and consult your doctor. Persistent pain could be a symptom of a more serious condition.
- Never use the Foot Spa on open wounds, discoloured areas, or any area of the body that is swollen, burned, inflamed or where skin eruption or sores are present.
- Massage and heat should be pleasant and





comfortable. Should pain or discomfort result, discontinue use and consult your physician.

- Don't add bath oil etc into it as it may hold back the bubble function.

WARNING

If the power cord is damaged, it must be replaced by the manufacturer in order to avoid a hazard.

How to Use Your Foot Spa

- Ensure that the appliance is unplugged before filling it with water.
- Insert the plug into a wall socket and switch on.
- Sit down and place your feet in the spa.
- Turn the function dial to indicate the massage of your choice and obtain the following functions:

0--Off

1—Vibration & Infrared

2—Bubble & Keep warming

3-- Bubble & Vibration & Infrared & Keep warming

Enjoy the deep-penetrating massage while moving your feet forward and backward over the reflex zone. The bulgy point is designed according to the point of foot, can active the cells and eliminate your fatigue. Also you can massage on the roller massager. Choose each function massage as you like.

To Empty

First, turn the control dial to the 'OFF' position, then unplug the appliance. Tip the appliance allowing the water to spill out along the drain spout. Never pour water over the control dial.

Maintenance

To Clean

Unplug the appliance and allow it to cool before undertaking any cleaning task. Clean the appliance with a soft, damp cloth.

- Never allow water or any other liquid to come into contact with the control dial.
- After cleaning, wipe surfaces the appliance with a dry cloth.
- Never use abrasives, detergents or cleaning agents.
- Periodically straighten the power cord if it becomes twisted.

To Store

Unplug the appliance from the wall socket and allow it to cool completely before storing.

- Store the appliance in its box or in a clean, dry place.
- To avoid breakage, do not wrap the power cord around the appliance.
- Do not hang the appliance by its power cord.
- This appliance is designed for household use only.

Technical data : 230V 50HZ 60W


Manicure/pedicure set

Components:

1. Appliance
2. Disc to file and shorten nails
3. Polishing disc
4. Precision head
5. Wide head for manicures
6. Slim polishing (and callus removal) head

How to use the appliance

- Insert the batteries into the specific compartment, taking care to position the polarities as shown (2 x 1.5V AA- Batteries not included)
- The manicure/pedicure set is now ready for use.
- Attach the desired accessory (depending

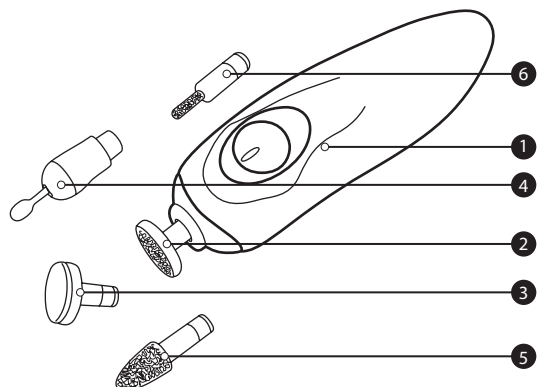



on the operation you wish to perform, as specified below).

- The switch on the appliance allows you to choose from two speeds in each direction.
- Immerse your hands/feet in warm, soapy water. Dry carefully.

Accessories

1. Disc to file and shorten nails
This accessory can shape and redefine even the thickest, hardened nails. Regular use makes nails stronger and more hard wearing. Suitable for both fingernails and toenails.
2. Polishing disc
For polishing and refining the tips of the nails after filing, and for polishing the nail surface.
3. Precision head (removal of cuticles)
For removal and raising hardened cuticles and to clean nails.
4. Wide head for manicures
For treating and polishing toenails
5. Slim polishing head (removal calluses)
Allow the accessory to slide carefully over the areas to be treated.
After treatment, immerse feet/hands in water and apply a moisturising cream or lotion (creams and lotions not supplied). For best

results, wash feet before beginning pedicure treatment

Cleaning the product

- Before clearing the product, ensure that you have removed the batteries.
- Never immerse the appliance in water or any other liquids.
- Clean the appliance and case with a soft damp cloth.
- Never use other liquids or abrasive detergents. Always dry carefully.

Cleaning the accessories

- Use a soft brush to remove any residues on the skin and nails.
- The discs and conical heads can be cleaned with a damp soft brush.

Technical characteristics

Description: Manicure and pedicure set

2 speeds

Motor: output 3V / approximately 0.87 W, approximately 290 mA

Batteries: 2 x 1.5V AA (not included)

Weight: approximately 74 g (without accessories)



creative housewares

🏠 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

✉ P.O. Box 6156 Parow East, 7501, South Africa

☎ +27 21 931 8117 📠 +27 21 931 4058

Service Centre Helpline: 086 111 5006

🌐 www.creativehousewares.co.za

