RЕЛ

user **manual** manual de usuario



EN/E

It is important to read this instruction prior to using your new product for the first time. Es importante leer este manual antes de usar por vez primera su equipe

Technical information

Power Supply: 120V ~ 60Hz

Power Consumption: 4 Watts

Product: Clock Radio

Turning on/off

selector to ON

on the top of

on the radio.

To turn off,

slide the

FM bands.

frequency.

the unit to turn

selector to OFF.

Selecting bands

Slide the BAND switch

on the side of the unit to

select between AM and

Tuning to stations

Rotate the tuning knob

on the side of the unit to

tune up and down radio

Slide the

Brand: RCA Model: RP5405

Service information This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this user manual

The descriptions and characteristics in this owner's manual are for the purpose of general reference only and not as a arantee. In order to provide you with guarantee. In order to product, we may the highest quality product, we may make changes or modifications without prior notice. The English version serves as the final reference on all product and erational details should any discrep ancies arise in other languages.



WARNING: TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Radio

۲

Antennas AM Antenna – A built-in ferrite rod antenna eliminates the need for an outside antenna for AM reception. Rotating the unit slightly may improve reception of distant AM stations.

FM Antenna – The power cord acts as your FM antenna. The power cord picks up moderate to strong stations and eliminates the need for an external antenna in most strong signal areas. Be sure the power cord is stretched out to its full length. Do not coil or bunch the cord together. Chang ing position of the power cord

Built-In AFC – The Built-In Automatic Frequency Control (AFC) works only on FM. It helps to reduce drift on FM reception and to keep the radio locked in on the FM station to which it is tuned.

may improve reception.



interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference

FCC information This device complies with Part

15 of the FCC Rules. Operation

is subject to the following two

conditions: (1) This device may not

cause harmful interference, and

(2) this device must accept any

interference received, including

Before you begin

by one or more of the following

measures:

Plugging in for power AC OUTLET POWER SUPPLY: 120V~60Hz

The AC power plug is polarized (one blade is wider than the other) <u>م</u>لا and only fits into AC power outlets one way. If the plug will not go into the outlet completely, turn the plug over and try to insert it the other way. If it still does not fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this

Power is fed to the unit even cable must be unplugged

safety feature.

Clock

AM FM

out and off the cabinet. 2. Connect a 9-volt battery (not supplied) to the connector

3. Replace the compartment door.

- between the equipment and Connect the equipment into
- an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an expe-

ing antenna. Increase the separation

receiver.

rienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

Audiovox Electronics Corp, 150 Marcus Blvd, Hauppauge, NY 11788

1-877-833-3491

For your records In the event that service should be required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number: Model No.: Date of Purchase: Place of Purchase: Serial No.:

when it is not functioning. To cut the power supply off, the power

The power failure protection circuit will not operate unless battery is installed When the battery backup

Battery back-up operation

functions, the digital display will not light, however, the wake function still occurs during the power interruption if remaining battery power is adequate.

Normal operation will resume after AC power is restored so you will not have to reset the time or wake

Install battery as follow:

- 1. Remove battery compartment door (located at the bottom of the radio) by applying thumb pressure to the tab on battery door and then lift the door
- plug.

Reorient or relocate the receiv-

Some of the following information may

not apply to your particular product; however, as with any electronic product,

precautions should be observed during

Before using the product, please

follow and adhere to all warnings, safety and operating instructions

located on the product and in the

user book. Save all instructions fo

Do not expose product to rain and do not use near water; such as, sink,

wet basement, swimming pools, etc.

Always leave sufficient space around

the product for ventilation. Do

Do not expose product to extreme

Connect power cord only to AC

power source as marked on the

Some products employ a polarized

AC line plug (one blade is wider).

This is a safety feature. The plug

one way. If the plug doesn't go into the outlet completely, turn the plug

over and put it in the other way. If

it still doesn't fit, contact a qualified

electrician to change the outlet. Do

not defeat the safety purpose of

the polarized plug.

Alkaline (NEDA 1604A/

Carbon-zinc battery may be

used but memory holding

reduced. Memory holding

battery is approximately 8

hours (if radio or alarm are

not operated) which should

take care of short, nuisance-

type AC power failures. To

preserve battery life, the unit

should remain plugged into

an AC outlet. As the battery

gets older, its voltage drops

and memory may be lost. Be

sure to replace the battery

periodically. Battery should

be removed if the unit will

month. Leaky battery can

be stored for more than one

badly damage the clock radio.

1. Press and hold WAKE on the

2. While holding WAKE, press

HR or MIN to select the hour

or minute value of the wake

top of the unit.

time for a fresh alkaline

time will be substantially

IEC 6LR61) battery

is recommended

will go in the power outlet only

parked in the Summer sun.

product.

temperatures such as found near a hot radiator or stove, or in a car

not place product in or on a bed, rug, bookcase or cabinet that may

prevent air flow through vent open-

ndling and use

future reference.

۲

IMPORTANT SAFETY INSTRUCTIONS an attempt is made to charge a bat-

Route power cord to prevent it from being pinched, or walked on, or melted by a hot stove or radiator. To clean cabinet, unplug AC power cord, then use a soft cloth dampened only with water.

Do not place lighted candles, ciga rettes, cigars, etc. on the product. Unplug AC power cord from outlet during a lightning storm or when product is left unused for a long pe-

- riod of time to prevent damage due to lightning or power line surges. Care should be taken so that objects do not fall and liquids do not spill
- into the product. Never add accessories that the product has not been designed to
- accommodate. Use only the manufacturer's approved mounting instructions and hardware when installing product Do not attempt to disassemble
- the cabinet. This product does not contain customer serviceable compo nents. Do not handle the unit or powe
- cord when your hands are wet or damp
- Carts and Stands -The appliance should be used only with a cart or stand that is recommended by the nanufacturer

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven

Power failure indicator When AC power is interrupted (disconnected) for a short period of time, both time and alarm

settings will change (unless battery is installed). After AC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time and alarm settings.



D. The product does not appear to operate normally or exhibits a marked change in performance; or . The product has been dropped, or the cabinet damaged. When service or repairs are com-pleted, ask the service technician to perform the safety check described n the service manual and to confirm that replacement parts have

the same safety characteristics as the original parts. Overloading - Do not overload the wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric

IF YOUR PRODUCT OPERATES ON BATTERIES, adhere to the following

ing precautions: A. Any battery may leak electrolyte if mixed with a different battery type, if inserted incorrectly. or if all batteries are not replaced at the same time.

B. Any battery may leak electrolyte or explode if disposed of in fire or

General controls

60)

SNOOZE

Ð.

Left view

Top view

Ø

+ VOL – – adjusts volume BAND AM/FM - selects radio

and local regulation

tery not intended to be recharged. C. Discard leaky batteries immedi-

skin burns or other personal injury.

manner, according to provincial and

When discarding batteries, be sure

to dispose of them in the proper

Any battery may present a risk of fire, explosion, or chemical burn

if abused. Do not try to charge a

battery that is not intended to be

recharged, do not incinerate, and

Non-rechargeable batteries, such as alkaline batteries, may leak if left in

your product for a long period of

time. Remove the batteries from the

product if you are not going to use it for a month or more.

If your product uses more than one

battery, do not mix types and make

Discard any leaky or deformed bat-

tery immediately. They may cause

skin burns or other personal injury.

batteries according to federal, state,

Please help to protect the environ ment by recycling or disposing of

sure they are inserted correctly. Mixing types or inserting incorrectly may cause them to leak.

Important Battery Precautions

local regulations

do not puncture.

ately. Leaking batteries can cause

FM MHz / AM kHz - adjusts radio frequency

^z – activates sleep function OFF - turns radio off, cancels the wake function

ON - turns radio on RADIO WAKE - activates wake to radio mode ALARM WAKE - activates wake

to alarm mode SNOOZE - when wake setting activates, press this button to quiet the wake alarm or radio temporarily until the snooze period (9 minutes) is over; press this button to cancel the sleep function

HR/MIN - adjusts either the hour or minute value of the clock or wake time

 \odot – adjusts the clock time (refer to Clock)

WAKE (OFF) - adjusts the wake time, turns off the wake function (refer to Wake Function)

Turning off wake function

Press SNOOZE. The wake function

snooze period (9 minutes) is over.

Silence the wake function

will activate again when the

SNOOZE

momentarily:

Setting clock time 1. Press and hold ⊗ on the top of the unit. 2. While holding ${}^{\textcircled{}}$, press HR or MIN to select the hour or

minute value of the current clock time.



the front display. 3. Release \odot and the clock time is set.

The clock time blinks if it is not set or after power interruption (without back-up battery installed)

- - - The clock is in 12 hour format. The AM or PM indicator lights to show the respective time on the front display

time.



3. Release WAKE and the wake time is set.

Checking wake time Press and hold **WAKE** on the top of the unit to show the currently set wake time. Release the button Selecting wake source You can select to be woken up by either the radio or alarm

Wake to radio: slide the selector

to RADIO WAKE.

will be activated at the set wake time.

 The last tuned frequency is the wake radio station. · Adjust the wake volume to a suitable level when selecting the wake to radio mode

Wake to alarm: slide the selector to ALARM WAKE.



OFF 1 CO

RADIO J LALARM

lights on the front display once any of the wake sources is selected. Once the wake source is selected, the wake function

The wake indicator



24

Stop the wake function: Press WAKE OFF. The wake function will activate again on the following day at the same time.

Cancel the wake function completely: Slide the selector to OFF



WAKE OFF

Wake function Setting wake time

Sleep function

In sleep function, the unit will turn off automatically after a specified time.

Setting Sleep time 1. Press z^z , the time display shows 0:59 (default time) and the radio will turn on.

2. While holding z^{z} , press **HR** or **MIN** to set the sleep time (from 0:01 to 1:59).



3. Release z^z . The sleep time is set and the display reverts to current time.

- If you decide to turn off the unit sooner, press SNOOZE. • Sleep time will be reset to
- 00:59 when z^z is pressed.

If you set Sleep function with low volume level before going to bed, we

advise using Wake to alarm mode.

J.X

For how long after your purchase:

• One year from date of purchase. The warranty period for rental units begins with the first rental or 45 days from date of shipment to the rental firm, whichever comes first.

Limited warranty

Limited Warranty (US)

What your warranty covers:

manship.

• Defects in materials or work-

What we will do:

- Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty
- period. Proof of purchase in the form of a bill of sale or receipted invoice which is evidence that the product is within the warranty period must be presented to obtain warranty service.

For rental firms, proof of first

rental is also required

How to make a warranty claim: Properly pack your unit. Include any cables, etc., which

- were originally provided with the product. We recommend using the original carton and packing materials. Include evidence of purchase date such as the bill of sale.
- Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

Thomson Inc.

- Product Exchange Center 11721 B Alameda Avenue Socorro, Texas 79927
 - Insure your shipment for loss or damage. Thomson accepts no liability in case of damage or loss en route to Thomson.
 - Pay any charges billed to you by the Exchange Center for service not covered by the warranty.
 - A new or refurbished unit will be shipped to you freight prepaid.

What your warranty does not cover:

- Customer instruction. (Your Owner's Manual provides information regarding operating Instructions and user controls. For additional information, ask your dealer.)
- Installation and set-up service adjustments. Batteries.
- Damage from misuse or neglect.
- Products which have been modified or incorporated into other products.
- Products purchased or serviced outside the USA.
- Acts of nature, such as but not limited to lightning damage.

Product Registration: • Please complete and mail

the Product registration Card packed with your unit. It will make it easier to contact you should it ever be necessary. The return of the card is not required for warranty coverage.

Limitation of Warranty: THE WARRANTY STATED

ABOVE IS THE ONLY WAR-RANTY APPLICABLE TO THIS PRODUCT. ALL OTHER WAR-RANTIES, EXPRESS OR IMPLIED (INCLUDING ALL IMPLIED WAR-RANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICU-LAR PURPOSE) ARE HEREBY DISCLAIMED. NO VERBAL OR WRITTEN INFORMATION GIVEN BY THOMSON INC., ITS AGENTS OR EMPLOYEES SHALL CREATE A GUARANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY. REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS

WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. THOMSON INC. SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES **RESULTING FROM THE USE OF** THIS PRODUCT OR ARISING OUT OF ANY BREACH OF ANY EXPRESS OR IMPLIED WAR-RANTY ON THIS PRODUCT. THIS DISCLAIMER OF WARRAN-TIES AND LIMITED WARRANTY ARE GOVERNED BY THE LAWS

OF THE STATE OF INDIANA.

EXCEPT TO THE EXTENT PRO-HIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE APPLICABLE WARRAN-TY PERIOD SET FORTH ABOVE.

How state law relates to this warranty:

- Some states do not allow the exclusion nor limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to vou.
- This warranty gives you specific legal rights, and you also may have other rights that vary from state to state.
- If you purchased your product outside the USA: This warranty does not apply. Contact your dealer for warranty information.

Note

Audiovox Electronics Corp, 150 Marcus Blvd, Hauppauge, NY 11788 ©2008 Trademark(s) ® Registered Marque(s) ® Deposée(s) Marca(s) ® Registrada(s) www.rcaaudiovideo.com