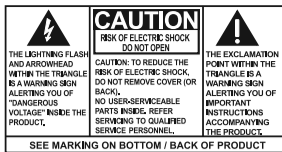 


**RCA**user manual  
guide de l'utilisateurRP5605  
RP5605R

**WARNING:** TO PREVENT FIRE OR ELECTRICAL SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

Some of the following information may not apply to your particular product; however, as with any electronic product, precautions should be observed during handling and use.

- Read these instructions.
- Keep these instructions.
- Heed all warnings.
- Follow all instructions.
- Do not use this apparatus near water.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug this apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

lightning storms or when unused for long periods of time.

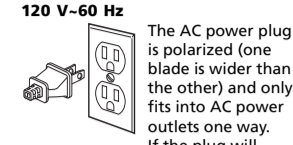 
• Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

**ADDITIONAL SAFETY INFORMATION**

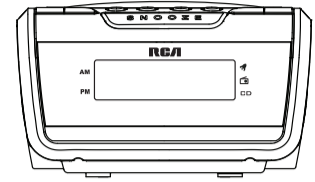 
- Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Always leave sufficient space around the product for ventilation. Do not place product in or on a bed, rug, in a bookcase or cabinet that may prevent air flow through vent openings.
- Do not place lighted candles, cigarettes, cigars, etc. on the product.
- Connect power cord only to AC power source as marked on the

- product.
- Care should be taken so that objects do not fall into the product.
- Do not attempt to disassemble the cabinet. This product does not contain customer serviceable components.
- The marking information is located at the bottom of apparatus.
- To be completely disconnect the power input, the main plug of apparatus shall be disconnected from the mains.
- Main plug is a disconnect device. The main plug should not be obstructed OR should be easily accessed during intended use.
- The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- No naked flame sources such as lighted candle should be placed on the apparatus.
- Attention should be drawn to the environmental aspects of battery disposal.
- The use of apparatus in moderate climates.

This equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.

**Plugging in for power AC OUTLET POWER SUPPLY: 120 V-60 Hz**

The AC power plug is polarized (one blade is wider than the other) and only fits into AC power outlets one way. If the plug will not go into the outlet completely, turn the plug over and try to insert it the other way. If it still does not fit, contact a qualified electrician to change the outlet, or use a different one. Do not attempt to bypass this safety feature.

**EN/F**

It is important to read this user manual prior to using your new product for the first time. *Nous vous recommandons de lire ce manuel d'instructions avant d'utiliser votre nouveau produit pour la première fois.*

**WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

**Ecology**  
Help protect the environment - we recommend that you dispose of used batteries by putting them into specially designed receptacles.

**For your records**

In the event that service should be required, you may need the model number and the serial number. In the space below, record the date and place of purchase and the serial number:  
Model No.:  
Date of Purchase:  
Place of Purchase:  
Serial No.:

**Service information**

This product should be serviced only by those specially trained in appropriate servicing techniques. For instructions on how to obtain service, refer to the warranty included in this user manual.

**Technical information**

Product: CD/Clock Radio  
Brand: RCA  
Model: RP5605, RP5605R  
Power Supply: 120V - 60Hz  
Power Consumption: 13 Watts

**FCC Information**

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not expressly approved by Audiovox could void the user's authority to operate the equipment.



Portable Cart Warning

**Before you begin****Battery back-up operation**

The power failure protection circuit will not operate unless battery is installed.

**No worry battery backup**

When the battery backup functions, the digital display will not light, however, the wake function still occurs during the power interruption if remaining battery power is adequate.

Normal operation will resume after AC power is restored so you will not have to reset the time or wake.

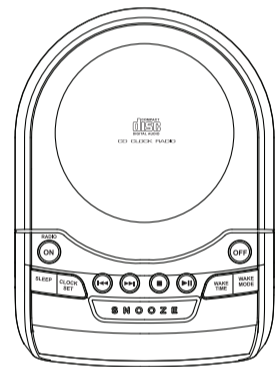 
**Install battery as follow:**

1. Remove battery compartment door (located at the bottom of the radio) by applying thumb pressure to the tab on battery door and then lift the door out and off the cabinet.
2. Connect a 9-volt battery (not supplied) to the connector plug.
3. Replace the compartment door.

**Power failure indicator**

When AC power is interrupted (disconnected) for a short period of time, both time and alarm settings will change (unless battery is installed). After AC power is restored (reconnected), the Digital Display will blink to indicate that power was interrupted and you should readjust the time and alarm settings.

Alkaline (NEDA 1604A/IEC 6LR61) battery is recommended. Carbon-zinc battery may be used but memory holding time will be substantially reduced. Memory holding time for a fresh alkaline battery is approximately 8 hours (if radio or alarm are not operated) which should take care of short, nuisance-type AC power failures. To preserve battery life, the unit should remain plugged into an AC outlet. As the battery gets older, its voltage drops and memory may be lost. Be sure to replace the battery periodically. Battery should be removed if the unit will be stored for more than one month. Leaky battery can badly damage the clock radio.

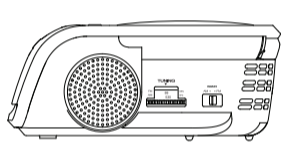 
**General controls****Top view**

- - stops CD playback
- ▶|| - turns on the unit from CD mode; pauses or resumes CD playback
- SLEEP - activates the Sleep function
- CLOCK SET - activates clock time setting mode
- WAKE TIME - activates wake time setting mode; checks current wake time
- WAKE MODE - activates wake function and changes wake mode
- SNOOZE - turns off the wake function temporarily; cancels the sleep function

**RADIO ON** - turns on the radio; selects the radio from other modes

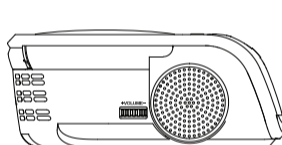 
**OFF** - turns off the unit; turns off the wake function and sleep mode

◀▶ - sets clock or wake time; skips to previous or next CD track during CD playback

**Right view**

**TUNING** - selects radio frequency

**BAND AM/FM** - selects radio band

**Left view**

+ **VOLUME** - adjusts volume

**Clock****Setting clock**

1. Press **CLOCK SET** once. The current clock time flashes on the display.
2. Press **◀** or **▶** to set the clock time. The time decrements or increments will follow by a faster rate when you press and hold the buttons. AM or PM indicator also lights beside the time on the display.
3. When finished, wait for about 5 seconds or press **CLOCK SET** to exit clock setting mode.

**Radio****Switching on**

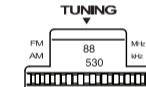 
Press **RADIO ON** to turn on the radio.

**Switching band**

Slide the **BAND/AM-FM** switch on the right of the unit to select AM or FM band.

**Tuning radio**

Rotate the **TUNING** dial on the right of the unit to select radio frequency.

**Antennas**

**AM Antenna** - A built-in ferrite rod antenna eliminates the need for an outside antenna for AM reception. Rotating the unit slightly may improve reception of distant AM stations.

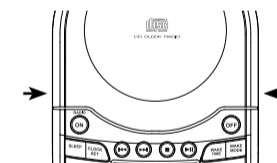 
**FM Antenna** - The power cord acts as your FM antenna. The power cord picks up moderate to strong stations and eliminates the need for an external antenna in most strong signal areas. Be sure the power cord is stretched out to its full length. Do not coil or bunch the cord together. Changing position of the power cord may improve reception.

**Built-In AFC** - The Built In Automatic Frequency Control (AFC) works only on FM. It helps reducing drift on FM reception and keeping the radio locked in on the FM station to which it is tuned.

When tuning in FM stations, you may notice that the station you are tuning can be well-tuned on two or three nearby points on the dial. Always tune carefully at the loudest and clearest point.

**CD player****Listening to CD**

1. Lift open the CD compartment door.



- If disc is paused for more than 5 minutes, the CD player will resume to stop mode automatically.
- If disc is stopped in the CD mode for more than 30 minutes without further operations, the unit will turn off automatically.

2. Insert a disc and close the door.
3. Press **▶||** to select CD mode and start CD playback.
- Press **▶||** to pause playback and press again to resume.
4. Adjust volume to your desired level.
5. Press **◀** or **▶** to skip backward or forward a track. Press and hold to search through a track.
6. Press **■** to stop playback.
7. Press **RADIO ON** to listen to the radio or **OFF** to turn off the unit.

**Wake function****Setting wake time**

1. Press **WAKE TIME** once. The current wake time flashes on the display.



2. Press **◀** or **▶** to set the wake time. The time decrements or increments will follow by a faster rate when you press and hold the buttons. AM or PM indicator also lights beside the time on the display.
3. When finished, wait for about 5 seconds or press **WAKE TIME** to exit wake time setting mode.
- The Wake to Alarm mode (read below) will be automatically activated whenever the wake time has been set.

**Selecting wake source**

1. If your desired wake source is radio or CD:
- Wake to Radio - select an AM or FM station (refer to "Radio").
- Wake to CD - insert a CD in the CD compartment.
2. Set a wake time (refer to "Setting wake time").
3. Press **WAKE MODE** repeatedly to select a wake source. The indicator lights against the wake source icons on the right of the display to indicate the currently selected wake source:



- Once the wake source is selected, the wake function will be activated at the set wake time.

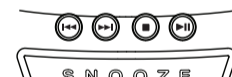 
**Checking wake time**

Press **WAKE TIME** to show the current wake time which flashes briefly on the display.

**Turning off the wake function**

**Silence the wake function momentarily:**

- With SmartSnooze™, press **SNOOZE**, **◀**, **▶**, **■** or **▶||** to turn off the wake function temporarily for extra sleep time.



- The wake function will activate again when the snooze period (9 minutes) is over.
- The snooze period is fixed and cannot be changed.

**Stop the wake function:**

Press **OFF**. The wake function will activate again on the following day at the same time.

**Cancel the wake function completely:**

Press **WAKE MODE** repeatedly until no indicator lights against the wake source icons. The set wake time will not be erased and can be used the next time when you switch on wake function again.

**Sleep function**

You can set the duration (up to 90 min) before the radio or CD player turns off automatically.

1. Press **SLEEP** repeatedly to select a duration (90, 80, 70, 60, 50, 40, 30, 20, 10min or OFF) before the radio or CD player turns off automatically.
- The default sleep time is 60 minutes.
- By default, the radio will be switched on once **SLEEP** is pressed. You may change to listen to the CD player by pressing **▶||** if a disc is loaded.
2. To check the remaining duration before the unit turns off, press **SLEEP** once.
3. To cancel the sleep function, press **SNOOZE** or **OFF**.

If you set Sleep function with low volume level before going to bed, we advise using Wake to Alarm mode.

**Warranty information****Warranty information****12 Month Limited Warranty Applies to RCA Audio/Video Products**

- AUDIOVOX ELECTRONICS CORP. (the Company) warrants to the original retail purchaser of this product that should this product or any part thereof, under normal use and conditions, be proven defective in material or workmanship within 12 months from the date of original purchase, such defect(s) will be repaired or replaced with reconditioned product (at the Company's option) without charge for parts and repair labor.
- To obtain repair or replacement within the terms of this Warranty, the product is to be delivered with proof of warranty coverage (e.g. dated bill of sale), specification of defect(s), transportation prepaid, to the Company at the address shown below.
- This Warranty does not extend to the elimination of externally generated static or noise, to correction of antenna problems, loss/interruptions of broadcast or internet service, to costs

incurred for installation, removal or reinstallation of product, to corruptions caused by computer viruses, spyware or other malware, to loss of media, files, data or content, or to damage to tapes, discs, removable memory devices or cards, speakers, accessories, computers, computer peripherals, other media players, home networks or vehicle electrical systems.

- This Warranty does not apply to any product or part thereof which, in the opinion of the Company, has suffered or been damaged through alteration, improper installation, mishandling, misuse, neglect, accident, or by removal or defacement of the factory serial number/bar code label(s). THE EXTENT OF THE COMPANY'S LIABILITY UNDER THIS WARRANTY IS LIMITED TO THE REPAIR OR REPLACEMENT PROVIDED ABOVE AND, IN NO EVENT, SHALL THE COMPANY'S LIABILITY EXCEED THE PURCHASE PRICE PAID BY PURCHASER FOR THE PRODUCT.
- This Warranty is in lieu of all other express warranties

or liabilities. ANY IMPLIED WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY, SHALL BE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. ANY ACTION FOR BREACH OF ANY WARRANTY HEREUNDER INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY MUST BE BROUGHT WITHIN A PERIOD OF 24 MONTHS FROM DATE OF ORIGINAL PURCHASE. IN NO CASE SHALL THE COMPANY BE LIABLE FOR ANY CONSEQUENTIAL OR INCIDENTAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY. No person or representative is authorized to assume for the Company any liability other than expressed herein in connection with the sale of this product.

- Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damage so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights and you may

also have other rights which vary from state to state.

**How to make a warranty claim:**

- If your product is capable of storing content (such as an mp3 player, digital voice recorder, etc.), it is recommended to make periodic backup copies of content stored on the product. If applicable, before shipping a product, make a back up copy of content or data stored on the device. Also, it is advisable to remove any personal content which you would not want exposed to others. IT IS LIKELY THAT CONTENTS AND DATA ON THE DEVICE WILL BE LOST DURING SERVICE AND REFORMATTING. AUDIOVOX ACCEPTS NO LIABILITY FOR LOST CONTENT OR DATA, OR FOR THE SECURITY OF ANY PERSONAL CONTENT OR DATA ON THE RETURNED DEVICE. Product will be returned with factory default settings, and without any pre-loaded content which may have been installed in the originally purchased products. Consumer will be responsible for reloading data and content. Consumer will

be responsible to restore any personal preference settings.

- Properly pack your unit. Include any remotes, memory cards, cables, etc. which were originally provided with the product. However DO NOT return any removable batteries, even if batteries were included with the original purchase. We recommend using the original carton and packing materials.
- Include evidence of purchase date such as the bill of sale. Also print your name and address and a description of the defect. Send via standard UPS or its equivalent to:

**Audiovox Electronics Corp. Attn: Service Department. 150 Marcus Blvd. Hauppauge N.Y. 11788 1-877-833-3491**

- Insure your shipment for loss or damage. Audiovox accepts no liability in case of damage or loss en route to Audiovox.
- Pay any charges billed to you by the Exchange Center for service not covered by the warranty.

- A new or refurbished unit will be shipped to you freight prepaid.

**What we will do:**

Provide you with a new, or at our option, a refurbished unit. The exchange unit is under warranty for the remainder of the original product's warranty period.

**For Canada Customers, please ship to:**

Audiovox Return Centre  
c/o Genco  
6685 Kennedy Road,  
Unit#3, Door 16,  
Mississauga, Ontario  
L5T 3A5

Illustrations contained within this publication are for representation only and subject to change.

The descriptions and characteristics given in this document are given as a general indication and not as a guarantee. In order to provide the highest quality product possible, we reserve the right to make any improvement or modification without prior notice.

Visit <http://store.audiovox.com> to find the best accessories for your products.

For Customer Service Visit Our Website At [www.rcaaudiovideo.com](http://www.rcaaudiovideo.com)  
Product Information, Photos, FAQs, User Manual

© 2010 Audiovox Accessories Corporation  
111 Congressional Blvd., Suite 350  
Carmel, IN 46032  
Trademark(s) \* Registered  
Printed in China