

ROBERTS

Sound for Generations

CRD-9

FM RDS/DAB digital clock radio

Gemini 9




DAB
Digital Audio Broadcasting

Please read this manual before use

Contents


<i>Controls</i>	2-3	<i>Sleep timer</i>	18
<i>Battery operation</i>	4	<i>Headphone socket</i>	19
<i>Mains operation</i>	4	<i>Display backlight</i>	19
<i>Operating your radio - DAB</i>	5	<i>Aerials</i>	20
<i>Selecting a station - DAB</i>	6	<i>Specifications</i>	20
<i>Secondary services - DAB</i>	7	<i>Circuit features</i>	20
<i>Display modes - DAB</i>	7	<i>General</i>	21
<i>Finding new stations - DAB</i>	8	<i>Mains Supply</i>	21
<i>Autoselect - DAB</i>	8	<i>Guarantee</i>	22
<i>Manual tuning - DAB</i>	9		
<i>Signal strength display - DAB</i>	9		
<i>Operating your radio - FM</i>	10		
<i>Manual tuning - FM</i>	11		
<i>Display modes - FM</i>	12		
<i>FM stereo/mono</i>	12		
<i>Presetting stations - FM</i>	13		
<i>Recalling a preset station - DAB and FM</i>	13		
<i>System reset</i>	14		
<i>Setting the alarm time</i>	15		
<i>Selecting alarm type</i>	16		
<i>Cancelling alarms</i>	17		
<i>Snooze function</i>	17		

Controls(Front)

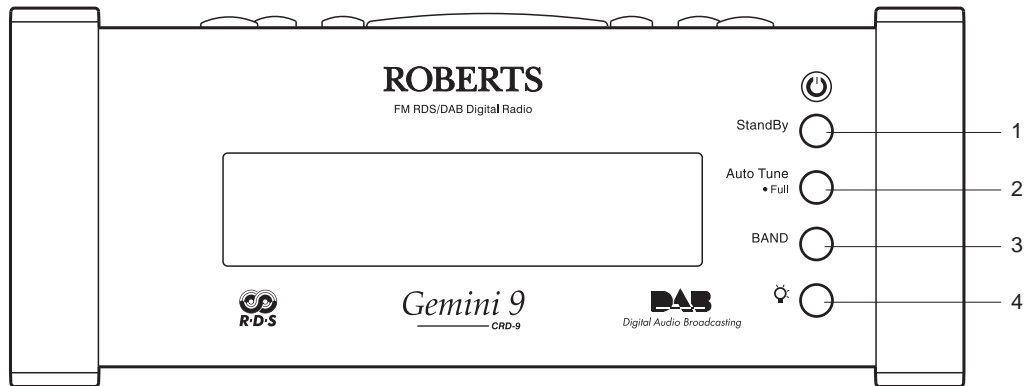

1. StandBy button
2. Autotune button
3. Waveband button
4. Light button

 
Controls(Top)

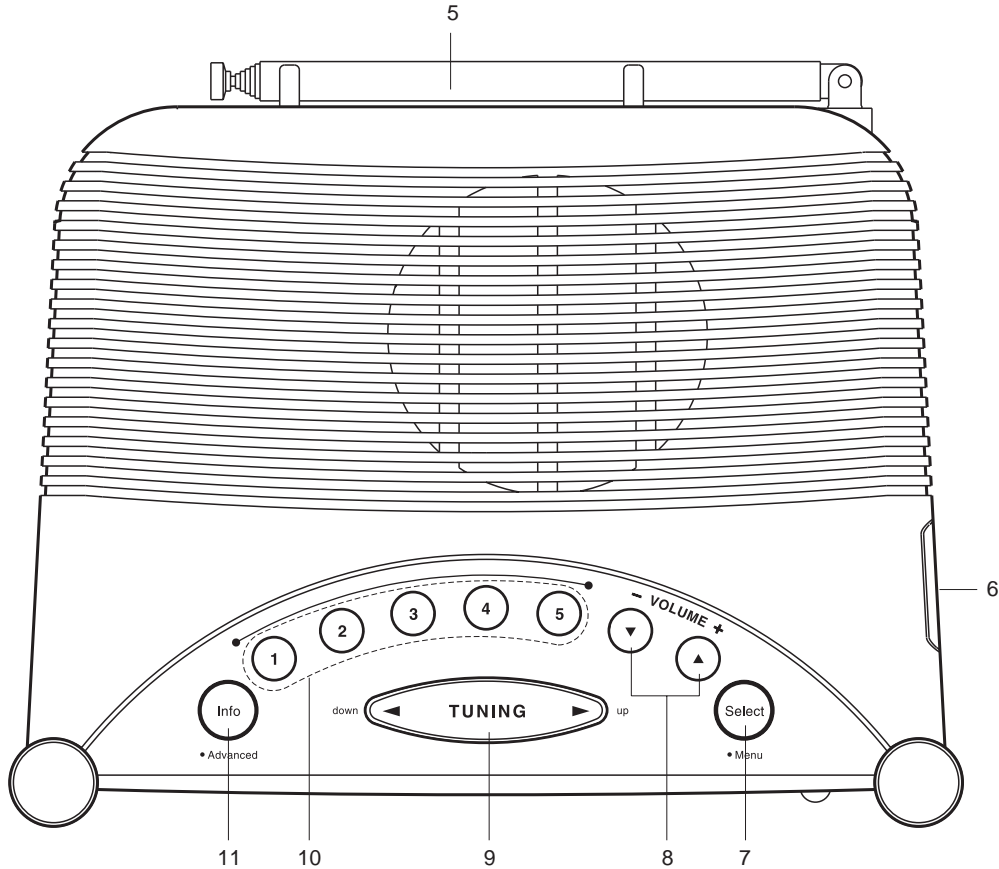

5. Telescopic aerial
6. Headphone socket
7. Select button
8. Volume up/down buttons
9. Tuning up/down buttons
10. Preset buttons
11. Info button


Mains operation

1. Place the unit on a flat surface. Plug the mains lead into a wall socket and switch on the wall socket.
2. The display will show "Roberts DAB digital radio" for a few seconds before returning to clock display.
3. The clock time will be automatically set after your clock radio has been tuned to a DAB station for a few minutes.

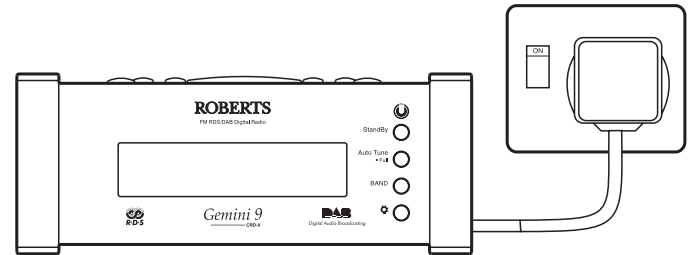

Operating your radio - DAB

1. Fully extend the telescopic aerial.
2. Press the **StandBy** button to switch on your radio.
3. If this is the first time the radio is used a quick scan of UK Band III DAB channels will be carried out. The display will show "Autotune Quick scan". If the radio has been used before the last used station will be selected.
4. During Autotune as each group of stations is detected the bottom line of the display will show its name and the station count will be updated. The top line of the display shows a bargraph indicating progress of the Autotune.
5. When the Auto tune is complete the first station (in numeric-alpha order 0...9...A...Z) will be selected.
6. If the station list is still empty after the Autotune your radio will display "No Signal".
7. If no signals are found it may be necessary to relocate your radio to as position giving better reception.

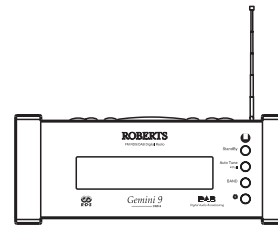

StandBy



Roberts

Autotune
Quick scan

■■■■■■■■■■■■■■■■■■■■
Searching...

■■■■■■■■■■■■■■■■■■■■ 24
BBC National DAB

1Xtra DAB
BBC National DAB

No signal DAB

Selecting a station - DAB

1. The top line of the display shows the name of the station currently selected.
2. Press the **Tuning up or down buttons** to step through the list of available stations.
3. Press and release the **Select button** to select the station. The display may show "Tuning" while your radio finds the new station.
4. Adjust the **Volume control** to the required setting.


Note: If after selecting a station the display shows "Not Available" it may be necessary to relocate your radio to a position giving better reception.



Classic DAB



BBC 7 DAB
Tuning...

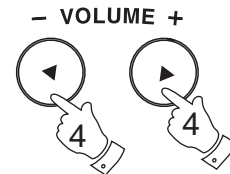

Secondary services - DAB

1. Certain radio stations have one or more secondary services associated with them. If a station has a secondary service associated with it the display will show ">" next to the station name on the station list. The secondary service will then appear immediately after the primary service as you move through the tuning list.

```
BBC5Live>      DAB
■■■■■□■■■■■
```

```
>BBC SertX     DAB
■■■■■□■■■■■
```

Display modes - DAB

Your radio has five display modes:-

1. Press the **Info button** to cycle through the various modes.



- | | |
|--------------------|---|
| a. Scrolling text | Displays scrolling text messages such as artist/track name, phone in number, etc. |
| b. Programme type | Displays type of station being listened to e.g. Pop, Classic, News, etc. |
| c. Multiplex Name | Displays name of multiplex to which current station belongs. |
| d. Signal strength | Displays signal strength for station being listened to. |
| e. Time and date | Displays current time and date. |

a

```
BBC 7          DAB
Just a Minute...
```

b

```
BBC 7          DAB
Culture
```

c

```
BBC 7          DAB
BBC National  DAB
```

d

```
BBC 7          DAB
■■■■■□■■■■■
```


e

```
BBC 7          DAB
19:17 08-06-2003
```


Finding new stations - DAB


As time passes new stations may become available. To find new stations proceed as follows:-

1. Press and release the **AutoTune button**, the display will show "Autotune Quick Scan". Your radio will perform a scan of the UK DAB frequencies. As new stations are found the station counter on the right-hand side of the display will increase and stations will be added to the list
2. To carry out a full scan of the entire DAB Band III frequencies press and hold down the **AutoTune button** for more than 2 seconds and then release. The display will show "Autotune Full scan". As new stations are found the station counter on the right-hand side of the display will increase and stations will be added to the list

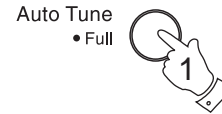

Autotune
Quick scan

24
BBC National DAB

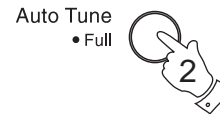

Autotune
Full scan

Autoselect - DAB

As an alternative to pressing the tuning control to select a station your radio can be set so as to automatically select a station.

1. Press either the **Tuning up or down buttons** a few times, immediately press and hold in the **Select button** until the display shows "Autoselect ON".
2. Scroll through the tuning list using the **Tuning up or down buttons** until the station you require is visible on the display, after a few seconds your radio will automatically select the station shown on the display.
3. To switch off Autoselect press either the **Tuning up or down buttons** a few times, immediately press and hold in the **Select button** until the display shows "Autoselect OFF".



Autoselect ON

BBC 7 DAB
BBC National DAB



Autoselect OFF

If you need any further advice, please call our Technical Helpline on :-
020 8758 0338 (Mon-Fri)

Manual Tuning - DAB

Manual tuning allows you to tune directly to the various DAB Band III channels. UK DAB stations located in the range 11B to 12D.

1. Press and hold in the **Select button** until the display shows "Manual tune".
2. Press the **Tuning up or down buttons** to find the required DAB channel.
3. Press and release the **Select button** to select the channel.
4. Press the **Tuning up or down buttons** to select the stations contained within the Multiplex for the selected DAB channel.
5. Press and release the **Select button** to return to normal tuning mode.



Manual tune

12B 225.648 MHz
BBC National DAB

BBC 7 MAN
BBC National DAB

BBC 7 DAB
BBC National DAB

Signal strength display - DAB



1. Repeatedly press and release the **Info button** until the lower line of the display shows signal strength.
2. Position your radio and angle the telescopic aerial for best reception using the signal strength display as a guide. Move your radio around and position so as to give maximum number of black rectangles on signal strength display.
3. The clear unfilled rectangle indicates minimum signal level required for satisfactory reception.



BBC 7 DAB
■■■■■□■■■■■



Operating your radio - FM

1. Fully extend the telescopic aerial.
2. Press the **StandBy button** to switch on your radio. The display will show "Roberts DAB digital radio" for a few seconds.
3. Press the **Band button** to select the FM band.
4. Press and immediately release the **Auto Tune button**, your radio will scan in an upwards direction (low frequency to high frequency) and stop automatically when it finds a station of sufficient strength.
5. After a few seconds the display will update and show station name.
6. To find other stations press and release the **AutoTune button** as before.
7. To scan the FM band in a downwards direction (high frequency to low frequency) press and hold down the **AutoTune button** for 0.5 seconds and then release.
8. When the waveband end is reached your radio will recommence tuning from the opposite waveband end.
9. Adjust the **Volume control** to the required settings.
10. To switch off your radio press the **StandBy button**.

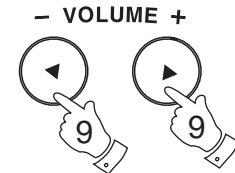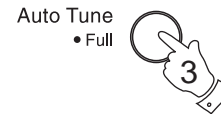

Manual tuning - FM

1. Press the **StandBy button** to switch on your radio.
2. Press the **FM/DAB button** to select the FM band. Fully extend the **Telescopic aerial** .
3. Press the **Tuning up or down buttons** to tune to a station. The frequency will change in steps of 50kHz.
4. When the waveband end is reached the radio will recommence tuning from the opposite waveband end.
5. Set the **Volume control** to the desired setting.
6. To switch off your radio press the **StandBy button**.

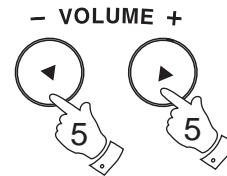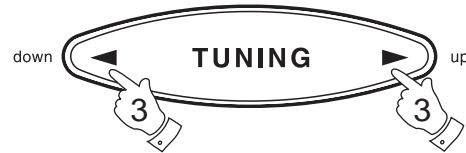


Display modes - FM

On FM the bottom line of the display can be set to any of the following modes:-

1. Press the **Info button** to cycle through the various modes.



- | | |
|--------------------|--|
| a. Scrolling text | Displays scrolling text messages such as artist/track name, phone in number etc. |
| b. Program Type | Displays type of station being listened to e.g. Pop, Classic, News, etc. |
| c. Signal strength | Displays signal strength for station being listened to. |
| d. Time and date | Displays current time and date. |
| e. Frequency | Displays frequency of the station being listened to. |
| f. Audio mode | Display shows Auto (stereo) or mono. |

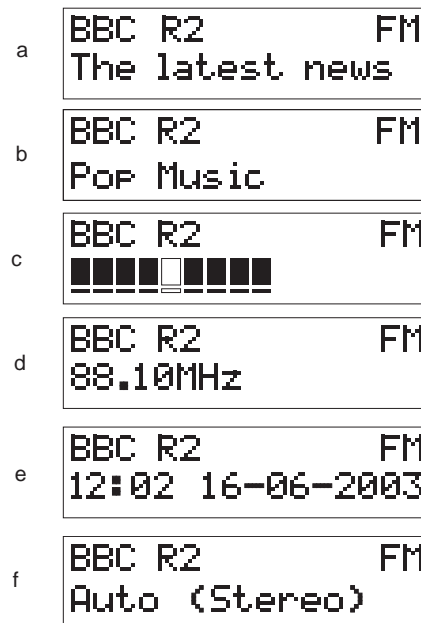

FM Stereo/Mono

1. If a station being received is weak some hiss may be audible. To reduce the hiss press and hold in the **Select button** until the display shows "Audio mode : mono" your radio will switch to mono mode.
2. To return to stereo mode press and hold in the **Select button** until the display shows "Audio mode :Auto", your radio will switch to stereo mode.

 
Note: FM stereo is only available when using earphone/headphones



Presetting stations - DAB and FM


There are 5 memory presets for each of the 2 wavebands.

1. Press the **StandBy button** switch on the radio.
2. Tune to the required station as previously described.
3. Press and hold down the required **Preset button** until the display shows e.g. "Preset 1 stored". The station will be stored under the chosen preset button. Repeat this procedure for the remaining presets.
4. Stations stored in preset memories may be overwritten by following the above procedure.

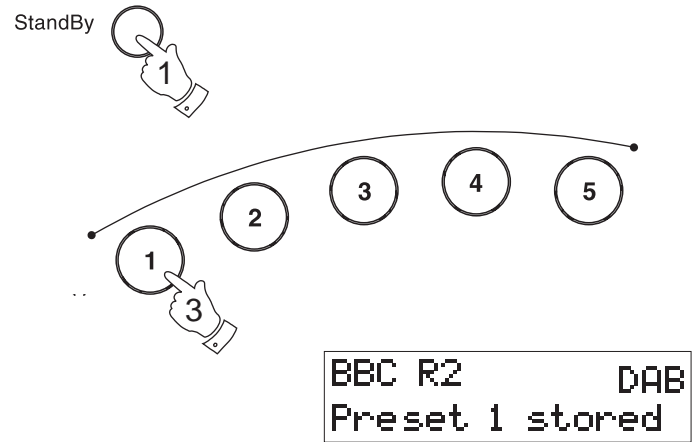

Recalling a preset station - DAB and FM

 1. Press the **StandBy button** to switch on the radio.
2. Select the required waveband by pressing the **Band button**.
3. Momentarily press the required **Preset button**, your radio will tune to the station stored in preset memory.

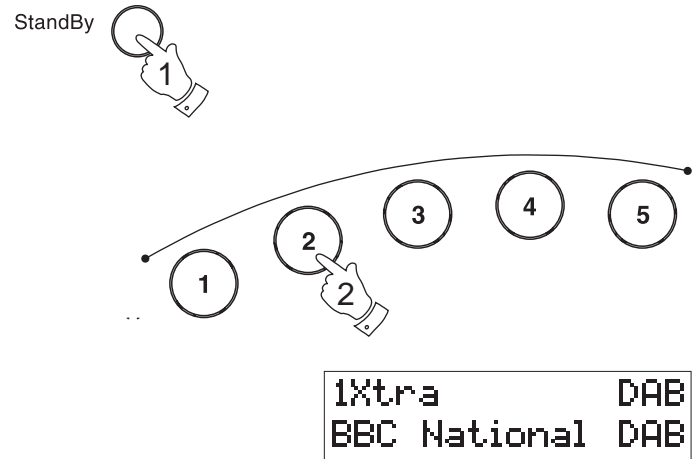

System reset

If your radio fails to operate correctly, or some digits on the display are missing or incomplete carry out the following procedure.

1. Press and hold in the **Info button** until the display shows the software version.
2. Press the **Info button** twice the display will show System reset.
3. Press in and release the **Select button** to select System reset.
4. If DAB was used last then a "Quick scan" of the DAB band will be performed, otherwise a "Quick scan" will be carried out the next time the DAB band is selected.

If a problem persists our technical staff would be pleased to help offer any assistance on operating the radio. Our technical helpline number is 020 8758 0338.



System reset

Autotune
Quick scan

■■■■■■■■■■■■■■■■■■■■
Searching...




■■■■■■■■■■■■■■■■■■■■ 24
BBC National DAB

Setting the alarm time

1. Repeatedly press and release the **Info button** until the display shows *Alarm Status*.
2. Press the **Select button** the display will show *Alarm Time Set*. The minutes digits will begin to flash in the display. Set the required minute using the **Tuning Up/Down buttons**.
3. Press the **Select button**. The hours digits will begin to flash in the display. Set the required hour using the **Tuning Up/Down buttons**.
4. Press the **Select button** to confirm the alarm setting. The display will show Alarm Status On together with the alarm time. After a few seconds the display will revert to showing real time.

A ***** symbol will appear in the display indicating that the alarm is active.

Note: Alarm times are set using 24Hr format e.g. 2:30PM is entered as 14:30

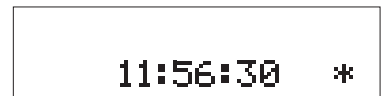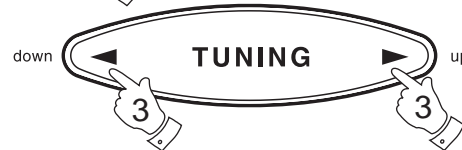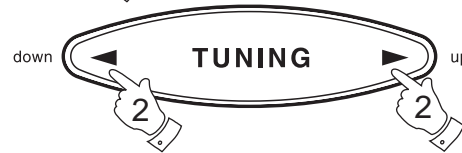

Selecting alarm type

Your clock radio can be set so as to wake you to either radio or beep type alarm.

1. Repeatedly press and release the **Info button** until the display shows *Alarm Status*.
2. Press either the **Tuning Up or Down buttons** to enter alarm type setting.
3. Press the **Select button** to change between Radio and Beep alarms.
4. Press the **Info button** to confirm the selection.

Note: when alarm is set to wake by radio your clock radio switch on to the last used station.



Cancelling alarms

1. Whilst an alarm is sounding it can be cancelled for 24hours by pressing the **Standby button**.
2. To permanently cancel an alarm proceed as follows:-
3. Repeatedly press and release the **Info button** until the display shows *Alarm Status*.
4. Press the **Select button** to change alarm status to OFF.




Alarm status
ON 06:30

Alarm status
OFF

Snooze function

1. The radio or beep alarm can be silenced for 5 minutes by pressing the **Tuning Up/Down** or **Select buttons**.

The display will show .

2. This sequence can be repeated during the 1 hour radio or 30 minute beep alarm period.



06:30:30 z *

Sleep timer

The sleep timer can only be set when the power (Standby) is on.

1. Repeatedly press and release the **Info button** until the display shows *Sleep Status*.
2. Press the **Select button** to select Sleep On.
3. Select the required sleep time (1- 99 minutes) using the **Tuning Up or Down buttons**.
4. Press the **Select button** to confirm the sleep timer setting.
5. The display will show sleep time before returning to normal radio display. The radio will switch off after the sleep time has elapsed.



Sleep status
OFF



Sleep status
ON




Sleep Timer Set
10 min



Headphone socket

A 3.5mm **Headphone Socket** located on the right-hand end of your radio is provided for use with either headphones or an earpiece. Inserting a plug automatically mutes the internal loudspeaker.

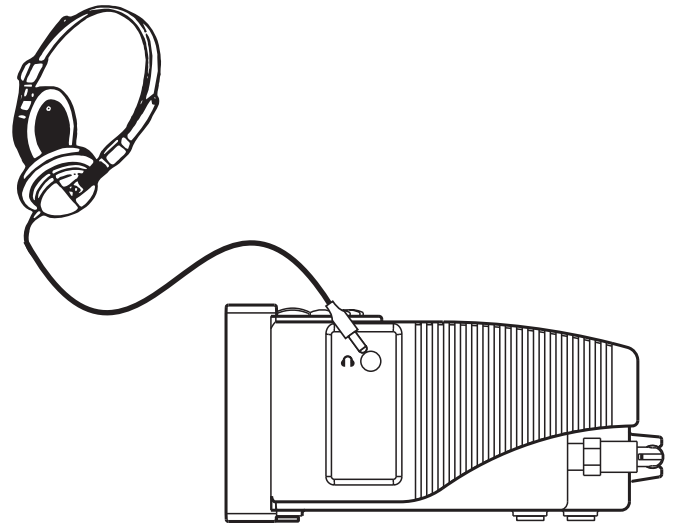

Display backlight

1. The display backlight has eight levels including off and can be set by repeatedly pressing and releasing the **Light button**.




Aerials

As supplied your clock radio is fitted with a telescopic aerial. Should this prove inconvenient a separate wire aerial can be fitted in place of the telescopic aerial.

A spanner is provided to allow removal of the telescopic aerial. The wire aerial can then be plugged in place of the telescopic aerial.

Note : In areas where signals are weak the wire aerial may not prove to be as effective as the telescopic aerial.

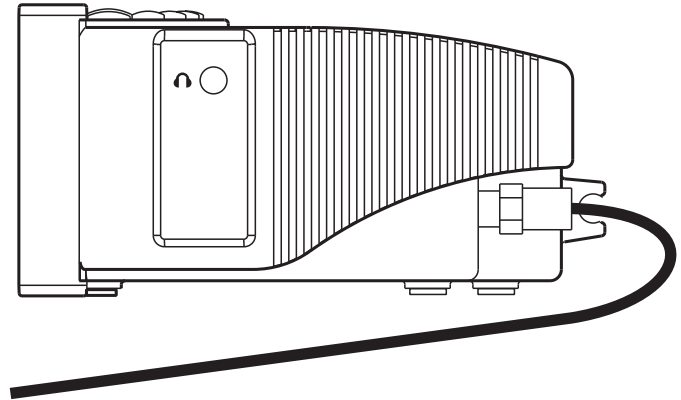

Specifications

Power Requirements

Mains AC 230 volts, 50Hz  only

Frequency Coverage

FM 87.5-108MHz
DAB 174.928 - 239.200MHz

Circuit Features

Loudspeaker 75mm 8ohms

Output Power 0.9 Watts

Headphone socket 3.5mm dia

Aerial System FM Telescopic aerial or alternative wire aerial

DAB Telescopic aerial or alternative wire aerial

General

Do not allow this unit to be exposed to moisture (e.g. dripping or splashing) or to temperatures exceeding 70 degrees centigrade. It is recommended that the DAB band be used wherever possible as better results in terms of quality and freedom from interference will usually be obtained than on the FM band.

Mains supply

The CRD-9 will operate from a supply of AC 230volts, 50Hz \sim only.

For your convenience this product is supplied with a plug which is fitted with a fuse of the appropriate rating. If the plug supplied is not suitable for your socket outlet, it should be removed by unscrewing the plug top, the terminal screws and removing the cable.

The correct style of plug to suit your household together with a correctly rated fuse should be fitted.

IF IN DOUBT - CONSULT A QUALIFIED ELECTRICIAN


IMPORTANT. DO NOT make any connection to the larger terminal which is marked with the letter E or by the safety earth symbol \perp or coloured Green or Green-and-yellow.

The wires in the mains lead are coloured in accordance with the following codes :-

BLUE - NEUTRAL

BROWN - LIVE

As these colours may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:-

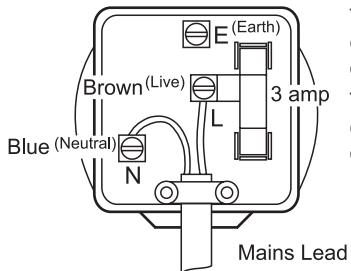

The wire coloured BLUE must be connected to the terminal marked N or coloured BLACK.

The wire coloured BROWN must be connected to the terminal marked L or coloured RED.

Fuse

This apparatus must be protected by a 3A fuse (BS1362) in a 13A plug (BS1363). If another type of plug is used a 5A fuse should be fitted in the plug, adaptor or distribution board.

IF IN DOUBT - CONSULT A QUALIFIED ELECTRICIAN.

Guarantee

This instrument is guaranteed for twelve months from the date of delivery to the original owner against failure due to faulty workmanship or component breakdown, subject to the procedure stated below. Should any component or part fail during this guarantee period it will be repaired or replaced free of charge.

The guarantee does not cover:

1. Damage resulting from incorrect use.
2. Consequential damage.
3. Receivers with removed or defaced serial numbers.

N.B. Damaged or broken telescopic aerials will not be replaced under guarantee.

Procedure:

Any claim under this guarantee should be made through the dealer from whom the instrument was purchased. It is likely that your Roberts' dealer will be able to attend to any defect quickly and efficiently, but should it be necessary the dealer will return the instrument to the company's service department for attention. In the event that it is not possible to return the instrument to the Roberts' dealer from whom it was purchased, please contact Roberts Radio Technical Services at the address shown on the rear of this manual.

ROBERTS RADIOTECHNICAL SERVICES

97-99 Worton Road

Isleworth Middlesex

TW7 6EG

Technical Helpline :- 020 8758 0338 (*Mon-Fri during office hours*)

