


morphy richards®

Filter rapide kettle

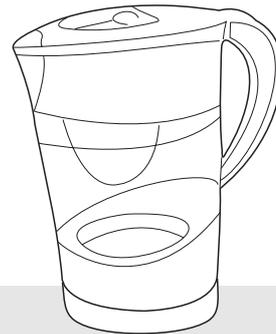

Please read and keep these instructions



getting the best from your
new kettle...

- **Empty the water out of the kettle after first boiling**

To clean away any deposits that are left in the kettle after the manufacturing process.

- **Filling your filter kettle**

*When filling your filter kettle the water must cover the element.
The minimum is 1 cup or 30cls.*

Do not overfill past the maximum mark as the filtration will be impaired.

- **Safety first**

Always pour water slowly and carefully to prevent the splashing of scalding water.

- **Cartridge**

PLEASE NOTE: It is quite normal to see black particles in the bottom of the cartridge pack and in the top compartment when in use. Please be assured that these particles are not harmful to you or your filter jug and you should not be concerned if you see any.

2year
guarantee

CE

www.morphyrichards.com

Important safety instructions

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition we offer the following safety advice.

Location

- Always locate your kettle away from the edge of the worktop.
- Ensure that the kettle is used on a firm, flat surface.
- Do not use the kettle outdoors or in a bathroom.
- **WARNING: Do not place the kettle onto a metal tray or metal surface whilst in use.**

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.

Mains lead

- The mains lead should reach from the socket to the base unit without straining the connections. Reduce the length of the lead by storing the excess in the cord storage facility in the base unit.
- Do not let the mains lead hang over the edge of the worktop where a child could reach it.

- Do not let the lead run across an open space e.g. between a low socket and table.
- Do not let the lead run across a cooker or toaster or other hot area which might damage the cable.
- Do not place the kettle where the mains lead could fall into a sink.

Your safety

- **WARNING: To protect against fire, electric shock and personal injury do not immerse cord, plug or kettle in water or any other liquid.**
- Always pour hot water slowly and carefully without tipping the kettle too fast to prevent splashing and spillage.
- Extreme caution must be used when moving a kettle containing hot water.
- Do not touch hot surfaces, use handles or knobs.
- Always close the lid securely, otherwise the kettle may not switch off automatically and may spit out boiling water.
- Avoid contact with steam from the spout when the water is boiling or just after it has switched off.
- Take care if opening the lid for re-filling when the kettle is hot.
- Do not fill above the MAX mark, otherwise boiling water may be ejected and filtration may be impaired.
- Do not hold the switch in the on position or tamper with the switch to fix it in the on position as this may cause damage to the switch-off mechanism.
- Unplug from the outlet before cleaning.
- Allow to cool before putting on or taking off parts and before cleaning.

Treating scalds

- Run cold water over the affected area immediately. Do not stop to remove clothing, get medical help quickly.

Other safety considerations

- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Ring the helpline number for advice on examination and repair.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- Do not attempt to connect any other appliance to the base unit or this appliance to another base unit.
- Do not tamper with the connector in any way.
- Do not use the kettle for any use other than to boil water.
- Do not use outdoors.
- Do not place the kettle on or near a hot gas or electric burner or in a heated oven.
- The kettle must not be on the base unit when being filled with water.
- The mains lead of the cordless base cannot be repaired. If the mains lead is damaged, the cordless base should be discarded and replaced.
- Unplug from the outlet when not in use.

Electrical requirements


Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

WARNING : The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require changing a 13 amp BS1362 fuse must be fitted.

WARNING: This appliance must be earthed.

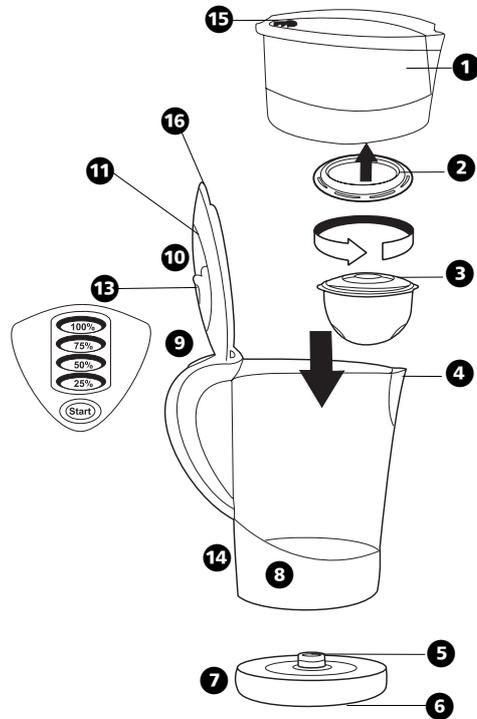

Features

- 1 Top compartment (cartridge holder)
- 2 Cartridge filter seal
- 3 Cartridge
- 4 Spout
- 5 360° connector
- 6 Cord storage
- 7 Cordless base unit
- 8 Concealed element
- 9 On off switch
- 10 Lid handle
- 11 Lid
- 12 Filling slider
- 13 Neon 'on' indicator
- 14 Easy release button
- 15 Spout cover

Certain models only

- 13 Electronic cartridge reminder

Using

Filtering your water improves the taste and appearance of beverages by reducing limescale, lead, chlorine and other impurities.

Before use

- 1 Remove cartridge from the packet, place in a bowl of water and shake.
- 2 Take the top compartment (the cartridge holder) out of the kettle by pulling the cartridge holder easy release button **15** forward and lift upwards. **A**
- 3 Ensure the filter seal is in place. **B**
- 4 Insert the cartridge into the top compartment from the bottom and twist clockwise to lock in place. **C**
- 5 Replace the cartridge holder back into the kettle and click into place.

Filling the kettle

- 1 Fill the kettle with tap water to the maximum mark either by lifting up the lid **D** or by sliding the filler slider to one side as shown. **E**

- 2 Allow water to filter through system. When using for the first time discard the water and repeat once more.








The amount of water must cover the kettle element. The minimum is 1 cup or 30 cl. Do not fill above the maximum mark or filter performance will be impaired. Always ensure the kettle is emptied before refilling.

Electronic cartridge reminder

Certain models only

After changing the cartridge and for first usage, the counter must be reset.

- 1 Hold the start button for 3 seconds (100% will show on the display and the outer ring will flash). **F** The display will then switch off due to its energy saving device after 3 minutes.
- 2 You can check the progress of your cartridge at any time by pressing the start button for 1 second. The counter will count down from 100% to 25%.
- 3 25% turns off when the cartridge needs replacing. The outer ring of the display will flash and continue to flash until the cartridge has been changed. **G**
- 4 Reset the reminder as per point 1.

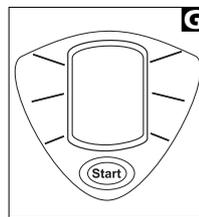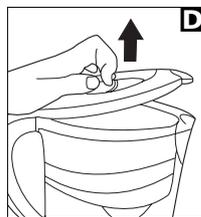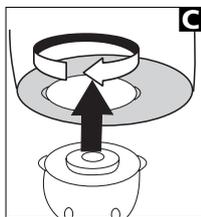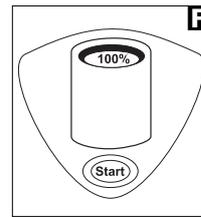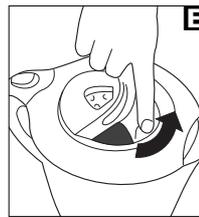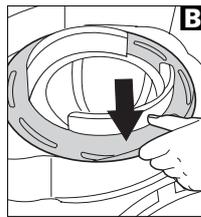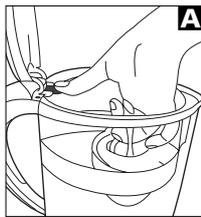

Replacing electronic cartridge reminder

When the cartridge reminder is due for renewal it can easily be removed.


- 1 Pull both tabs upwards and lift out the cartridge reminder. 
- 2 To refit your new cartridge reminder, slot tabs into the lugs provided and click into place.

Telephone our replacement parts helpline for your new cartridge reminder.

Switching on

You do not need to wait until the water has filtered through before boiling. Your Morphy Richards filter kettle, will boil and filter at the same time giving you boiled, filtered water quickly.

- Boil only as much water as you need as this saves electricity.
- 1 Place the filter kettle on the base unit, ensuring the kettle locates on to the 360° connector.
 - The 360° connector allows the kettle to be located at any position, - ideal for left and right handed users and convenient positioning on worktop.
 - 2 Plug in and switch on at the wall socket.
 - 3 Switch the filter kettle on. The 'power on' neon, will light up.

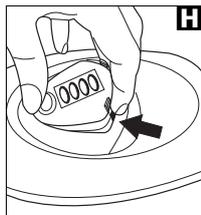

- 4 When the water boils the filter kettle will switch off automatically.
- If you are using the kettle for the first time, discard the water and repeat once more.
- To re-boil, switch to ON again. If the kettle has just switched off wait a minute or so before switching it back on again.
- If you do not put in enough water, or switch on the filter kettle when it is empty, the safety cut-out will switch off the power automatically. If this happens, refill and wait a few minutes for the element to cool, then use as normal.
- 5 Lift the filter kettle from the base unit by the handle ensuring you hold the kettle level.

WARNING: Unless the cartridge holder is fitted correctly, the filter kettle may not operate correctly and the lid may not close and lock securely.

When to change your cartridge

This depends on water quality and the improvement required. We recommend that you change your cartridge after 1 month.

The electronic reminder on your Morphy Richards water filter system will remind you when to change your cartridge.

Replacing your filter cartridge

- 1 Take the top compartment (the cartridge holder) out of the kettle by pulling the cartridge holder easy release button forward and lift upwards. **I**
- 2 Remove the old cartridge by rotating it anti-clockwise to unlock it. **J**
- 3 Remove the new cartridge from the packet, place in a bowl of water and shake.
- 4 Ensure the filter seal is in place. **K**
- 5 Insert the new cartridge into the top compartment from the bottom and twist clockwise to lock in place.
- 6 Replace the top compartment back into the kettle and click into place.
- 7 Fill with tap water. Allow the water to filter through the system. Discard the water and repeat once more.

IMPORTANT : Only use Morphy Richards cartridge filters. Telephone our replacement parts helpline for assistance.

Cleaning

WARNING: Always disconnect the plug from the mains and allow the kettle to cool before cleaning.

Wipe the outside with a damp cloth.




IMPORTANT: Do not use abrasive cleaners on the kettle which may scratch the surface.

Helpline

If you have any difficulty with your appliance, do not hesitate to call us. We're more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly:

- Name of the product
- Model number as shown on the underside of the appliance.

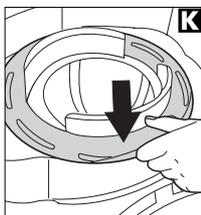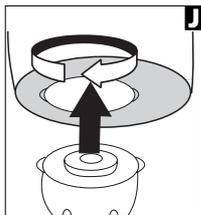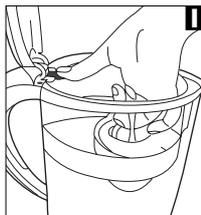

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

morphy richards[®]

Registered address
The After Sales Division
Morphy Richards Ltd, Mexborough
South Yorkshire, England, S64 8AJ

Helpline (office hours)
UK 0870 060 2611
Republic of Ireland 1800 409119

KT43550M UK Rev 5 03/05