

## Descaling

**IMPORTANT:** As this appliance is fitted with a concealed element, it must be descaled regularly. The frequency of descaling depends on usage and the hardness of the water in your area.

Excessive scale can cause the appliance to switch off before boiling and may damage the element, invalidating the warranty.

It is essential that regular descaling takes place.

Remove hard scale using a proprietary descaling product suitable for stainless steel, glass or plastic.

For stainless steel kettles, please follow the instructions carefully.

Alternatively, use citric acid crystals (available from most pharmacies) as follows:

- 1** Fill the appliance  $\frac{3}{4}$  full, boil, then unplug the appliance (remove the cordless kettle from the base unit) and stand it in an empty sink or bowl.
- 2** Gradually add 50gm of citric acid crystals to the water, then leave the kettle to stand. Do not use a more concentrated solution.
- 3** As soon as the effervescence subsides, empty the appliance and rinse it thoroughly with cold water.
- 4** Wipe the outside of the appliance thoroughly with a damp cloth to remove all traces of acid which may damage the finish.

**IMPORTANT:** Ensure that the electrical connections are completely dry before using the appliance.

## HINTS AND TIPS

### Cleaning and maintenance

**WARNING: Always disconnect the plug from the mains and allow the appliance to cool before cleaning.**

Wipe the outside with a damp cloth.

**IMPORTANT:** Do not use abrasive cleaners on the outside of the appliance which may scratch the surface.

## HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product.
- Model number as shown on the underside of the appliance.
- Serial number as shown on underside of the appliance.

**UK Helpline 0844 871 0954**

 
**Replacement Parts 0844 873 0720**

 
**Ireland Helpline 1800 409 119**

## WEBSITE

You may also contact us through our website, or visit the site to browse and purchase appliances, spare parts and accessories from the extensive Morphy Richards range.

**[www.morphyrichards.com](http://www.morphyrichards.com)**





## YOUR TWO YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

### Model no.

### Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied. For example, crumb trays should have been emptied regularly.

## EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 The appliance has been used for hire purposes or non domestic use.

- 5 The appliance is second hand.
  - 6 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
  - 7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.
  - 8 Batteries and damage from leakage are not covered by the guarantee.
- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.
  - This guarantee is valid in the UK and Ireland only.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

**morphy richards®**

 
**The After Sales Division  
Morphy Richards Ltd**  
Mexborough, South Yorkshire,  
England, S64 8AJ

Helplines (office hours)  
UK 0844 871 0954  
Spare Parts 0844 873 0720  
Republic of Ireland 1800 409 119

KT43840 MUK Rev 1 10/08

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of it's models at any time.



**morphy richards®**



## Mettalik jug kettle



Please read and keep these instructions

### **Getting the best from your new kettle...**

#### **Safety first**

*Always pour water slowly and carefully to prevent the splashing of scalding water.*

#### **Empty the water out of the kettle after first boiling**

*To clean away any deposits that are left in the kettle after the manufacturing process.*

#### **Descale as appropriate for the hardness of the water in your area**

*It is important to descale as the performance of the kettle for auto switch-off will be impaired.*

#### **Fast boil kettles perform differently**

*If your kettle is a fast boil model, it may sound louder during boiling, and switch off suddenly with no after noise - this is normal.*

#### **Models:**

43840, 43841, 43843, 43850, 43851, 43853

KT43840 MUK Rev 1



**If you have a problem or complaint, please call our dedicated UK based helpline before returning your product to the retailer from where it was purchased.**



UK Helpline: 0844 871 0954  
Replacement Parts: 0844 873 0720  
Ireland Helpline: 1800 409 119



For details of other Morphy Richards products, plus replacement parts and accessories, please see our website:

**[www.morphyrichards.com](http://www.morphyrichards.com)**

## **IMPORTANT SAFETY INSTRUCTIONS**

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

**WARNING: Danger to the person!**

**IMPORTANT:** Damage to the appliance!

In addition, we offer the following safety advice.

### **Location**

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat surface.
- Do not use the appliance outdoors, in a bathroom, or near water.
- Do not place the kettle on a highly polished surface as damage may occur.
- **WARNING: Do not place the appliance onto a metal tray or metal surface whilst in use.**

### **Mains lead**

- Do not let the mains lead hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open space, e.g. between a low socket and table.
- Do not let the lead run across a cooker or other hot area which might damage the cable.

- Do not place the kettle where the mains lead could fall into a sink.
- The mains lead should reach from the socket to the base unit without straining the connections.
- Reduce the length of the mains lead by storing the excess in the cord storage facility in the base unit.
- If the supply cord is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified persons in order to avoid a hazard.
- Take care if opening the lid of the appliance when hot.
- Do not open the lid whilst the water is boiling.
- Do not fill above the MAX mark, otherwise boiling water may be ejected.
- Do not hold the switch in the ON position or tamper with the switch to fix it in the ON position as this may cause damage to the switch-off mechanism.
- Unplug from the outlet before cleaning.
- Allow to cool before putting on or taking off parts and before cleaning.

### **Personal safety**

- **WARNING: To protect against fire, electric shock and personal injury, do not immerse cord, plug and appliance in water or any other liquid.**
- Always keep the top of the cordless base dry, especially around the connection area, disconnect the power supply before drying. Allow to dry thoroughly before reconnection to the power supply.
- Always pour hot water slowly and carefully without tipping the appliance too fast to prevent splashing and spillage.
- Extreme caution must be used when moving a appliance containing hot liquid.
- Do not touch hot surfaces, use handles or knobs.
- Always close the lid if applicable and always have the filter in place, otherwise the kettle may not switch off automatically and may spit out boiling water.
- Avoid contact with emitting steam when the water is boiling or just after it has switched off.
- Do not move the kettle when switched on.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

### **Children**


- Never allow a child to operate this appliance.
- Children are vulnerable in the kitchen, particularly when unsupervised and if appliances are being used or cooking is being carried out.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.
- Children should be supervised to ensure that they do not play with the appliance.

### Treating scalds

- Run cold water over the affected area immediately. Do not stop to remove clothing, get medical help quickly.

### Other safety considerations

- Do not leave appliance unattended whilst in use.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact Morphy Richards for advice.
- The use of attachments or tools not recommended or sold by Morphy Richards, may cause fire, electric shock or injury.
- Do not attempt to connect any other appliance to the base unit or this appliance to another base unit.
- Do not tamper with the connector in any way.
- Do not use the appliance for any use other than to boil water.
- Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
- The appliance must not be on the base unit when being filled with water.
- Morphy Richards recommends that the mains lead of the cordless base cannot be repaired. If the mains lead is damaged, the cordless base should be discarded and replaced, contact the helpline for advice.
- Unplug from the outlet when not in use.
- Caution: To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning, use a cloth and mild detergent.

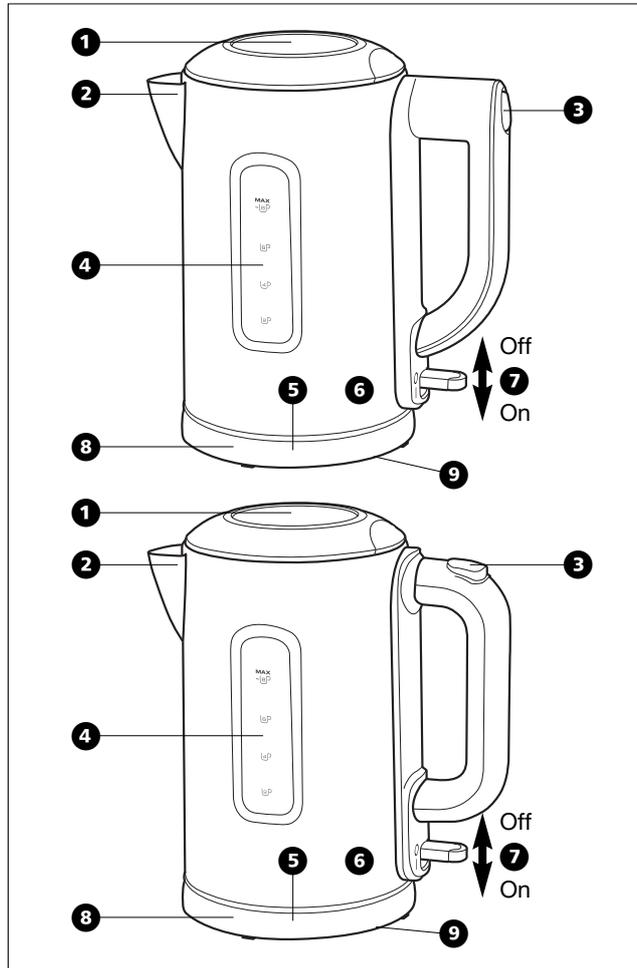

- **WARNING: The appliance must not be immersed in liquid for cleaning.**

### ELECTRICAL REQUIREMENTS

 
Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

**WARNING: The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.**

Should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

**WARNING: This appliance must be earthed.**



## FEATURES

- 1 Lid with finger pad
  - 2 Spout filter
  - 3 Lid release button
  - 4 Water level indicator x 2 with illuminating light
  - 5 360° connector (concealed)
  - 6 Concealed element
  - 7 On/off switch
  - 8 Cordless base unit
  - 9 Cord storage
- 3 Plug in and switch on at the wall socket.
  - 4 Switch the appliance on. The water level indicator will light up.
  - 5 When the water boils, the appliance will switch off automatically.
    - Depending on the model variant you have purchased, the kettle light will go off.
    - If you are using the appliance for the first time, pour away the boiled water and refill.
  - 6 Lift the appliance from the base unit by the handle, ensuring you hold the appliance level.

## BEFORE FIRST USE

Before using the appliance for the first time, fill with water, boil, pour away the boiled water, and refill.

- To re-boil, switch to ON again. If the appliance has just switched off, wait a minute or so before switching it back on again.
- If you do not put in enough water, or switch on the appliance when it is empty, the safety cut-out will switch off the power automatically. If this happens, refill and wait a few minutes for the element to cool, then use as normal.

## OPERATING THE APPLIANCE

- 1 Wherever possible, fill through the spout, as this helps to free the filter from limescale build-up.
  - The integrated water level indicators allow you to easily see the amount of water in the kettle.
  - Always ensure that the appliance is filled till the water is visible through the level indicator.
  - Boil only as much water as you need as this saves electricity.
- 2 Place the appliance on the base unit, ensuring the appliance locates on to the 360° connector.
  - The 360° connector allows the appliance to be located at any position - ideal for left and right handed users and convenient positioning on the worktop.

## Filter removal

- 1 Open the lid.
- 2 Lift the filter upwards from it's location using the tab provided.
- 3 To refit the filter, slot it into the side wall guides and press down firmly. Ensure the filter is correctly located into the central guide.

**WARNING: Make sure that the filter is put in correctly, otherwise the lid will not close.**

