


# morphy richards



## 4 slice polished chrome toaster

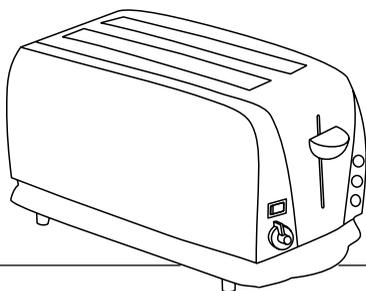

### Two year guarantee

**This guarantee is valid in the UK and Ireland only.** It is in your interest to retain the retailers receipt as proof of purchase. Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to the address below. You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase. Subject to the exclusions set out below (see 'Exclusions') the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee the appliance must have been used according to the

manufacturers instructions. For example kettles should have been regularly descaled or an iron cord should have been stored as recommended by the instructions.

#### EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the Guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non-domestic use.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
- 6 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

# Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1 Read all the instructions.
- 2 Do not touch hot surfaces. Use handles or knobs.
- 3 To protect against fire and risk of electrical shock do not immerse cord, plug or toaster itself in water or other liquid.
- 4 Ensure that this appliance is situated out of reach of children. **NEVER allow a child to use this product.**
- 5 Unplug from the socket when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- 6 Do not operate any appliance with a damaged plug, or after an appliance has malfunctioned, or has been dropped or damaged in any way. Contact Morphy Richards for advice on examination, repair or electrical or mechanical adjustment. **This appliance contains no user serviceable parts.**
- 7 The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- 8 Do not use outdoors.
- 9 **Do not** let the mains lead overhang the edge of the table or work-top, or touch hot surfaces.
- 10 **DO NOT PLACE THE APPLIANCE ON OR NEAR A HOT GAS OR ELECTRIC HOB, OR IN A HEATED OVEN.**
- 11 Do not attempt to move the appliance whilst hot.
- 12 When unplugging turn any control to off, then remove plug from wall socket.
- 13 Do not use appliance for other than intended use.
- 14 Preheating of this appliance is not required.
- 15 **DO NOT TOUCH THE METAL TOP OR SIDES OF THE TOASTER DURING OR AFTER USE AS THEY GET VERY HOT.**
- 16 **ENSURE THAT SUFFICIENT SPACE IS LEFT ABOVE AND AROUND ALL SIDES OF YOUR TOASTER TO ALLOW AIR TO CIRCULATE. PLACE THE TOASTER ON A HEAT RESISTANT SURFACE. DO WATCH YOUR TOASTER DURING USE. A FIRE MAY OCCUR IF TOASTERS ARE COVERED OR TOUCHING FLAMMABLE MATERIAL, INCLUDING CURTAINS, DRAPERIES, WALLS ETC, WHEN IN OPERATION.**

- 17 **Do not use underneath cupboards.**
- 18 Oversize foods, metal foil packages, or utensils must not be inserted into a toaster, as they may involve a risk of fire or electric shock.
- 19 Do not attempt to dislodge food when toaster is plugged in and never introduce cooking utensils into the slots.
- 20 **Do not place bread or other items on top of the bread slots as this will damage your toaster and creates a fire hazard.**  
If your toaster does not work, check the following points:
  - 21 Has the toaster been set correctly - is the plug in its socket and the switch in the 'on' position?
  - 22 Is the plug itself or the socket faulty - check this by plugging in another appliance.
  - 23 Does the fuse need replacing - if you have fitted your own plug, are the internal plug connections secure and correctly made?
  - 24 Do not lift or move the toaster by inserting fingers in bread slots.

## SAVE THESE INSTRUCTIONS

### Electrical Requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).


If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

**IMPORTANT : THE PLUG REMOVED FROM THE MAINS LEAD, IF SEVERED, MUST BE DESTROYED AS A PLUG WITH BARED FLEXIBLE CORD IS HAZARDOUS IF ENGAGED INTO A LIVE SOCKET OUTLET.**

If you use a 13 amp BS1363 plug, a 13 amp BS1362 fuse must be fitted.

**WARNING : THIS APPLIANCE MUST BE EARTHED.**

# Features of your toaster

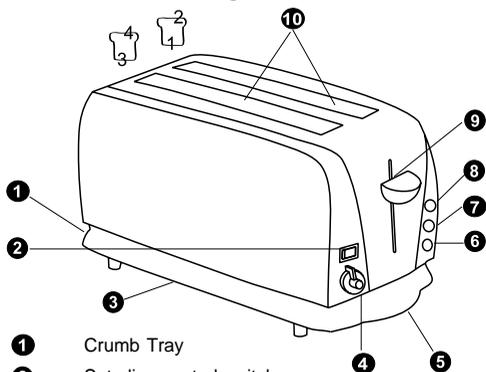

- ① Crumb Tray
- ② Set slice control switch
- ③ Cord storage
- ④ Electronic variable browning control
- ⑤ Cool touch handle
- ⑥ Cancel button with neon
- ⑦ Frozen bread button with neon
- ⑧ Re-heat button with neon
- ⑨ Bread carriage lever/high lift feature
- ⑩ Bread slots

the bread in the bread slot. Only the side of the bread facing the right hand bread slot will be toasted. Note that only two slices of one-sided toast can be made at a time.

- 2 Select the desired level of browning on the browning control ④ marked 1 to 8. The setting required will vary according to the moisture content and thickness of bread. For best results ensure that the bread slices are of even thickness, 4



freshness and size. Remember that stale bread toasts more rapidly than fresh and thin bread toasts quicker than thick. See additional points for more information.

- 3 After selecting the desired level, place your bread in the slots ⑩ and depress the bread carriage lever ⑨ downwards until it locks.
- 4 After the set degree of brownness has been reached the bread will pop-up automatically ready for removal from the slots. The bread carriage lever will have returned to its upper position and the heating element will have switched off, ready for the next toasting.

## Before first use

- Before using the toaster for the first time operate the toaster without bread with the slice control switch set to and the browning control set to 8. **Note: the bread carriage lever ⑨ will not stay down unless the toaster is plugged in and the wall switch is on.** Ventilate the room during this period.
- As with all new electric heating elements, your toaster emits a 'new' smell when it is first switched on. This is quite normal and not a cause for concern.

- Note : that the toast can be made slightly darker by using the re-heat function.
- **If the bread in your toaster becomes jammed disconnect your toaster at the socket, allow it to cool, then remove the bread.**
- When not in use, switch your toaster off at the mains and remove the plug from the socket. **DO NOT WRAP THE CABLE AROUND THE MAIN BODY OF THE APPLIANCE DURING OR AFTER USE.**

## Instructions for use

- 1 Set the slice control switch according to the number of slices to be toasted, for 1 or 2 slices for 3 or 4 slices. If both sides of one or two slices are required to be toasted then the bread must be placed in the bread slot as indicated on top of the toaster. If you require the bagels, buns or bread to be toasted on one side only set the switch to the and place

### Using the cancel setting

When the bread carriage lever is depressed, the cancel button ⑥ will illuminate. If you wish to interrupt the toasting process, press the cancel button.

### Using the frozen bread button

To toast frozen bread, do not adjust the browning control, place the bread normally in the bread slots, depress the bread carriage lever and press the frozen bread button ⑦. The button will illuminate and the toaster will automatically toast for an extended period.

### Using your re-heat button

If you toast has popped up and gone cold, the toaster offers a re-heat facility. To use, depress the bread carriage lever and press the re-heat button **immediately** . The button will illuminate and the toaster will operate for a short period re-heating the bread.

### Using the high lift release

If small bread is toasted, this may be removed more easily by lifting the bread carriage lever.

## Additional points

- In order to achieve uniform browning, we recommend you wait a minimum of 30 seconds between each toasting, so that the control can automatically be reset.
- If toasting one slice only, you may need to adjust the browning control to a slightly lower setting.
- Note you will also notice a slight variation in toast colour on one side of a single slice.
- Stale bread toasts more rapidly than fresh bread. Therefore, the browning control should be set at a lower setting than usual.
- All sorts of bread can be used as well as teacakes, small rolls etc. Slices should not however be so thick as to cause burning or jamming within the bread slots.
- When toasting 2 slices it is recommended they are of equal size and freshness. Allow the toaster to cool fully before putting away.


## Cleaning and Maintenance

- 1 After use and before cleaning, switch off at the mains, remove the plug from the wall socket and wait for the toaster to cool.
- 2 Wipe the outside of the toaster with a damp cloth only and dry with another cloth or tissue.
  - NEVER use metal polish or coarse scouring agents and never immerse your toaster in any sort of liquid.
  - NEVER use any pointed or sharp articles for cleaning the inside, otherwise the heating element will be damaged.
  - NEVER use a brush or push your fingers or metal objects down the slots.

## Crumb tray

Crumbs will accumulate in the crumb tray and could catch fire if not emptied periodically. When the toaster has cooled down completely, tap the sides of the case lightly to dislodge any crumbs lodged in the toasting chamber and pull out the crumb tray . Empty the tray and replace it.

**Never operate the toaster without the crumb tray fitted.**

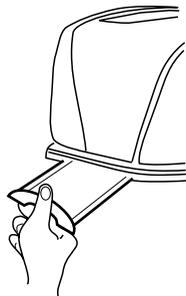

*Morphy Richards products are intended for household use only.  
Morphy Richards has a policy of continuous improvement in product quality and design.  
The Company, therefore, reserves the right to change the specification of its models at any time.*

# morphy richards