


**morphy richards®**

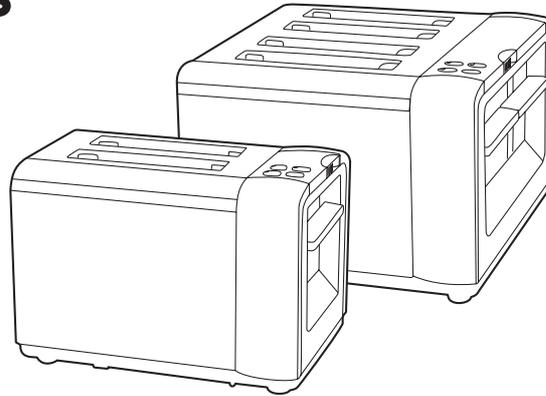

## 2 & 4 slice chrome & stainless steel toasters

 Please read and keep these instructions

### **Getting the best from your new toaster...**

#### **Safety first**

*Caution must be used when handling this appliance. Do not touch the metal top of the toaster during or after use as it gets very hot. Always switch off the unit and allow to cool before cleaning and storing.*

#### **Empty crumb tray regularly**

*To clean away any crumbs that accumulate after use.*

#### **In order to achieve uniform browning**

*Wait a minimum of 30 seconds between each toasting, so that the control can automatically reset.*

TT44415 MUK Rev 3



**If you have a problem or complaint, please call our dedicated UK based helpline before returning your product to the retailer from where it was purchased.**

 UK Helpline: 0844 871 0957  
Replacement Parts: 0844 873 0723  
Ireland Helpline: 1800 409 119

For details of other Morphy Richards products, plus replacement parts and accessories, please see our website:

[www.morphyrichards.com](http://www.morphyrichards.com)



## **IMPORTANT SAFETY INSTRUCTIONS**

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

**WARNING: Danger to the person!**

**IMPORTANT:** Damage to the appliance!

In addition we offer the following safety advice.

### **Location**

- Always locate your appliance away from the edge of the worktop.
- Ensure that the appliance is used on a firm, flat, heat resistant surface.
- Ensure that sufficient space is left above and around all sides of your appliance to allow air to circulate.
- Do not use the appliance outdoors or near water.
- **IMPORTANT:** The bread may burn, therefore, do not use the toaster near or below curtains, draperies, walls, cupboards and other flammable materials.
- **WARNING: Do not use underneath cupboards.**

### **Personal safety**

- Always watch your appliance during use.
- **WARNING: Do not touch the top of the appliance or other hot parts during or after use, use the handles or knobs.**

- **WARNING: Do not insert oversized foods, metal, foil packages or utensils into the toaster.**
- **WARNING: Do not attempt to dislodge food when the appliance is plugged in. Never insert cooking utensils into the slots.**
- **IMPORTANT:** Do not place bread or other items on top of the slots as this may damage the appliance and create a fire hazard.
- **CAUTION:** Do not immerse the cord, plug or toaster in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

### **Children**

- Never allow a child to operate this appliance.
- Children are vulnerable in the kitchen, particularly when unsupervised and if appliances are being used or cooking is being carried out.
- Teach children to be aware of dangers in the kitchen, warn them of the dangers of reaching up to areas where they cannot see properly or should not be reaching.
- Children should be supervised to ensure that they do not play with the appliance.

### **Other safety considerations**

### **Mains lead**

- The mains lead should reach from the socket to the appliance without straining the connections. Reduce the length of the excess lead by using the cord storage facility.
- Do not let the mains lead hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and a table.
- Do not let the lead run across a cooker or hot area, this might damage the cable.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been dropped or damaged in any manner. Contact Morphy Richards for advice on examination, repair or electrical or mechanical adjustment.
- Do not attempt repairs - the appliance contains no user-serviceable parts. Call our helpline for advice.
- Do not use accessories not recommended by the manufacturer.
- Do not place on or near a hot gas electric burner or in a heated oven.
- Only use for intended purpose.
- Unplug from outlet when not in use and when cleaning.

- Do not move the appliance whilst hot.
- The bread may burn, therefore do not use the appliance near or below combustible materials, such as curtains.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.

### ELECTRICAL REQUIREMENTS


Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

**WARNING: The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.**

Should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

**WARNING: This appliance must be earthed.**

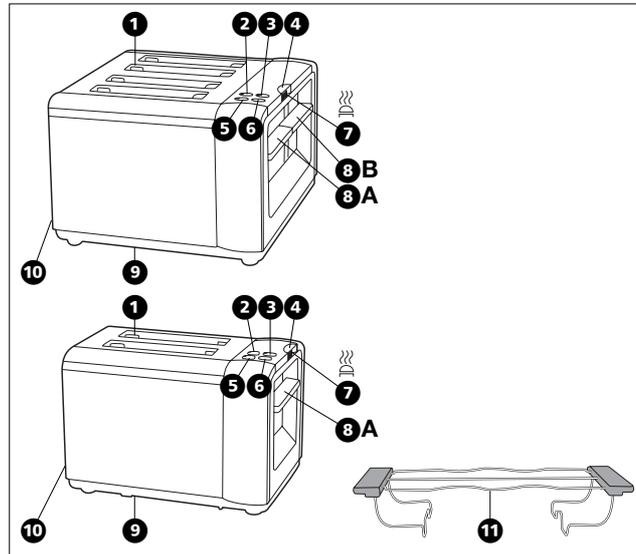

### FEATURES

- 1 Bread slots
- 2 Bagel button
- 3 Reheat button
- 4 Electronic variable browning control
- 5 Frozen bread button
- 6 Cancel button
- 7 Bun warmer setting (on browning control)
- 8 A Bread carriage lever (with high lift feature)  
B Rear bread carriage lever
- 9 Cord storage
- 10 Removable crumb tray(s)
- 11 Bun warmer(s)

### Key (depending on model)

- |  |  |                |
|--|--|----------------|
|  |  | Frozen button  |
|  |  | Re-heat button |
|  |  | Cancel button  |
|  |  | Bagel button   |

### INSTRUCTIONS FOR USE

**Please read before use, taking careful note of points 1 and 2.**

- 1 Before using the toaster for the first time, operate the toaster without bread. This will burn off any dust which may have accumulated during storage.

Ventilate the room during this period.

- As with all new electric heating elements, your toaster emits a 'new' smell when it is first switched on. This is quite normal and not a cause for concern.

- 2 Select the desired level of browning (1 to 8) on the browning control 4.

The setting required will vary according to the moisture content and thickness of the bread. For best results, ensure that the bread slices are of even thickness, freshness and size.

Remember that stale bread toasts more rapidly than fresh, and thin bread toasts quicker than thick. See the 'Hints and Tips' section for more information.

- 3** After selecting the desired level, place your bread in the slots **1** and depress the bread carriage lever **3** downwards until it locks.

Note: The bread carriage lever will not stay down unless the toaster is plugged in and the wall switch is on.

- 4** After the set time has been reached, the bread will pop-up automatically, ready for removal from the slots. The bread carriage lever will have returned to its upper position and the heating element will have switched off, ready for the next toasting.


- If the first slices are not dark enough, turn the browning control to a higher setting at next toasting.
- **WARNING: If the bread in your toaster becomes jammed, disconnect your toaster at the socket, allow it to cool, then remove the bread.**
- When not in use, switch your toaster off at the mains and remove the plug from the socket.

DO NOT WRAP THE CABLE AROUND THE MAIN BODY OF THE APPLIANCE DURING OR AFTER USE. THE CABLE STORAGE AREA UNDERNEATH THE TOASTER SHOULD BE USED.


## OPERATING THE APPLIANCE

### 2/4 slice selection

On the four slice model, a two and four slice option is available. To toast two slices of bread, place them in the front two slots, depress the front bread carriage lever **3A** .

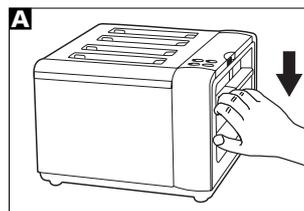

To toast four slices of bread depress the rear bread carriage lever **3B** .

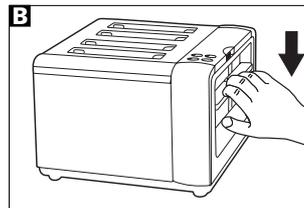

Use the front bread lever to activate the high lift function for the two and four slices.

### Using the frozen bread button

To toast frozen bread, there is no need to adjust the browning control from your preferred setting, the toaster will automatically toast for an extended time period when you use the frozen function. Place the bread normally in the slots, then depress the bread carriage lever and press the frozen bread button **5** immediately. A red light on the front panel will illuminate.

### Using the cancel button

If you wish to interrupt the toasting process, press the cancel button **6**.

### Using the re-heat button

If your toast has popped up and gone cold, the toaster offers a re-heat facility. To use, depress the bread carriage lever and press the reheat button **7** immediately. The button will illuminate. The toaster will operate for a short period re-heating the bread.

### Using the bagel button

To toast bagels, set the browning control to your preferred setting.

Cut the bagels in half. Place the bagel halves normally in the slots with the side that you would prefer to be browner towards the centre. Depress the bread carriage lever, then press the bagel button **2** immediately.

On the four slice model, the bagel button only works on the two slice option (see the '2/4 slice selection' section).

For frozen bagels, also press the frozen bread button.

### Using the bun warmer rack

Unfold the legs of the bun rack **1** and clip it onto the top of the toaster, ensuring it is securely in place **C**.



Place the buns or other items onto the bun warmer. Set the browning control to the bun warmer position **7**. Depress the bread carriage lever until it holds down. Wait for the toaster to switch off automatically or press the cancel button to switch the toaster off before removing the buns.


**WARNING: Take care not to touch the metal of the bun rack as this will be hot.**

Do not put more than two buns on the bun warmer at any one time.

### Crumb tray(s)

**WARNING: Crumbs will accumulate in the crumb tray(s) and could catch fire if not emptied regularly.**

When the appliance has cooled down completely, tap the sides of the case lightly to dislodge any crumbs lodged in the toasting chamber and remove the crumb tray(s) **10**. Empty the tray(s) and replace **D**.

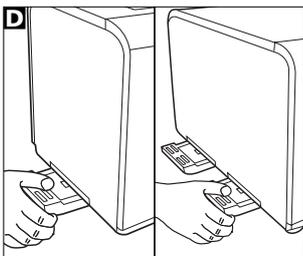

Never operate the appliance without the crumb tray(s) fitted.

### CLEANING AND MAINTENANCE

- 1 After use and before cleaning, switch off at the mains, remove the plug from the wall socket and wait for the toaster to cool.

- 2 Wipe the outside of the toaster with a damp cloth only and dry with another cloth or tissue.
  - NEVER use metal polish or coarse scouring agents and never immerse your toaster in any sort of liquid.
  - NEVER use any pointed or sharp articles for cleaning the inside, otherwise the heating element will be damaged.
  - NEVER use a brush or push your fingers or metal objects down the slots.
  - NEVER immerse your toaster in water.

### HINTS AND TIPS

- In order to achieve uniform browning, we recommend you wait a minimum of 30 seconds between each toasting, so that the control can be automatically reset.
- If toasting one slice only, you may need to adjust the browning control to a slightly lower setting.
- Note: you will also notice a slight variation in toast colour on one side of a single slice.
- Stale bread toasts more rapidly than fresh bread. Therefore, the browning control should be set at a lower setting than usual.
- All sorts of bread can be used as well as teacakes, small rolls etc. However, slices should not be so thick as to cause burning or jamming within the bread slots.
- When toasting two or more items, it is recommended they are of equal size and freshness.
- Do not lift or move the toaster by inserting fingers into the bread slots.

- If the bread in your toaster becomes jammed, disconnect your toaster at the socket, allow it to cool, then remove the bread.
- Allow the toaster to cool fully before putting away.

### TROUBLE SHOOTING

- Has the toaster been set correctly - is the plug in it's socket and the switch in the 'on' position?
- Is the plug itself or the socket faulty - check this by plugging in another appliance.
- Does the fuse need replacing - if you have fitted your own plug, are the internal plug connections secure and correctly made?

### HELPLINE

If you have any difficulty with your appliance, do not hesitate to call us.

We are more likely to be able to help than the store from where you bought it.

Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product.
- Model number as shown on the underside of the appliance.
- Serial number as shown on underside of the appliance.

**UK Helpline**  
**0844 871 0957**

**Replacement Parts**  
**0844 873 0723**

**Ireland Helpline**  
**1800 409 119**

## YOUR TWO YEAR GUARANTEE

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

### Model no.

### Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting model number and serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

If, for any reason, this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from the original purchase date. Therefore, it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee, the appliance must have been used according to the instructions supplied. For example, crumb trays should have been emptied regularly.

## EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 The appliance has been used for hire purposes or non domestic use.

5 The appliance is second hand.

6 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.

7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.

8 Batteries and damage from leakage are not covered by the guarantee.

- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.
- This guarantee is valid in the UK and Ireland only.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

**morphy richards**

**The After Sales Division  
Morphy Richards Ltd**  
Mexborough, South Yorkshire,  
England, S64 8AJ

Helplines (office hours)  
UK 0844 871 0957  
Spare Parts 0844 873 0723  
Republic of Ireland 1800 409 119

TT44415 MUK Rev 3 09/08

For details of other Morphy Richards products, plus replacement parts and accessories, please see our website:

6

[www.morphyrichards.com](http://www.morphyrichards.com)

