

- 1. MODE- ALARM SET/ OFF BUTTON
- 2. TALKING LIGHT TALKING AND BACK LIGHT WHEN PRESSED
- 3. UP TO ADJUST TIME
- 4. DOWN TO ADJUST TIME
- 5. SET HOUR AND ALARM SET BUTTON
- 6. AM/PM INDICATOR
- 7. ALARM INDICATOR
- 8. TEMPERATURE
- 9. DATE
- 10. 16/24 TALKING HOUR SETTING
- 11. TALKING CLOCK OPTION INDICATOR
- 12. SOUND INDICATOR
- 13. TIME





FUNCTIONS:

- · Talking time and temperature on every hour
- Normal time display of hour, minute, temperature, and 12/24 hour
- Alarm and snooze function
- Back light function
- · Battery back up, uses 2 "AA" batteries (not included)

SETTING INSTRUCTIONS:

Please install the battery before operating. Full screen will be displayed with sound then it returns to the normal time display.

- **Time setting**: press and hold "SET" key until you hear beep sound to enter time setting mode. When the number of "hour" and "minute" are flashing, press "UP" "DOWN" to adjust the time.
- Alarm time setting and talking on the hour setting: Press and hold "SET" key and press "MODE" twice to enter alarm time setting mode.
 "hour" "minute" are flashing. Press "UP" and "DOWN" keys to adjust the alarm time accordingly. " → 24" and " → 16" symbols are flashing when "SET" key is pressed again. Press "MODE" key to activate/deactivate the alarm. (If alarm is activated the → symbol will be displayed. If the alarm is deactivated the → symbol will disappear.) Press "MODE" key to select the hourly talking mode. (" → 24": switching on 24 hours talking; " → 16": switching on 7:00 AM- 9:00 PM talking; when both symbols are gone, the hourly talking function is deactivated). When it reaches the alarm time it will ring for one minute.
- **Snooze function**: When the time has reached the alarm time, press the "TALK LIGHT" to snooze, it will ring in 10 minutes intervals, six times maximum.
- Power: The clock uses 2 AA (DC1.5V) batteries(not included).