

Owner's Manual



www.pyleaudio.com


PPG460A Guitar Amplifier

www.pyleaudio.com



 \in

4

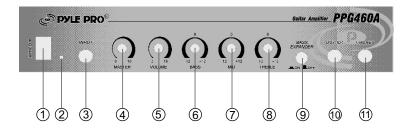

- 1) Power Switch: Switches amplifier on/off.
- 2) Power LED: Illuminates when power is switched on.
- 3) Input Jack: Connect your instrument to this jack.
- 4) Master: Adjusts overall volume.
- 5) Volume: This sets the volume gain level.
- 6) Bass: This control adjusts the low frequency level.
- 7) Mid: This control adjusts the middle frequency level.
- 8) Treble: This control adjusts the high frequency level.
- 9) Bass Expander: Toggles an extra bass effect.
- 10) Output Jack: Lets you output a line level signal (non-amplified). Internal speaker is not disabled.
- 11) Phones: This is your headphone connection. Inserting the headphones disables the internal speaker (great for practicing).



- 1) Voltage Selector: AC 110/220 Volt Selectable Switch.
- 2) Power Cord: Connect cord to an AC outlet.

Troubleshooting

Distorted Sound:

Check if the amplifier is overdriven. If it is, you will have to turn the level down.

Check signal source.

Try disabling Bass Expander.

Signal sounds discolored:

Check and adjust the EQ settings.

Ensure you are using quality cables.

Check signal source.

No Sound:

Check connections.
Try a different cable.
Check level on amplifier.

Confirm amplifier is getting a signal.

Make sure nothing is plugged into the Phones jack.

Intermittent Output:

Check connections.
Try a different cable.

Specifications

Model	Driver	RMS	Peak	Dimensions	Weight
PPG460A	8" High Definition Speaker	30W	150W	W=13" H=16" D=9 3/4"	18.3 lbs