

REMINGTON®
TITANIUM
MICROSCREEN™ **300 & 500**



*Use and
Care Guide*

MS2-280
MS2-290
MS2-390

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be observed, including the following. Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- Do not reach for an appliance that has fallen into water. Unplug it immediately.
- Do not place or store this appliance where it can fall or be pulled into a tub or sink while it is plugged in.
- Except when charging, always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning it.
- Do not use an extension cord or a voltage converter with this appliance.

WARNING

To reduce the risk of burns, fire, electric shock or injury to persons:

- This appliance is for household use only.
- An appliance should never be left unattended when it's plugged in, except when charging a rechargeable appliance.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended use as is described in this manual. Do not use attachments not recommended by manufacturer.
- Keep the cord away from heated surfaces.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. If any of these things happen, return the appliance to an authorized service center for examination and repair.

- Never drop or insert any object into any of the appliance's openings.
- Do not use outdoors or operate where aerosol (spray) products are being used, or where oxygen is being administered.
- Always store this appliance and cord in a moisture-free area. Do not store it in temperatures exceeding 140°F (60°C).
- Do not plug or unplug this appliance when your hands are wet.
- Do not wrap the cord around the appliance.
- Always attach the plug to the appliance, then to the outlet. To disconnect, turn all controls to OFF, then remove plug from outlet. Detach removable power cords from appliances for storage.
- Do not use this appliance with a damaged or broken screen or cutters, as injury may occur.

SAVE THESE INSTRUCTIONS


Contents

English1
 Spanish13
 French25

Product Features

Titanium MICROSCREEN™ 300 & 500

 Congratulations on your purchase of a premium Remington® shaver. The MicroScreen™ 300 & 500 have Revolutionary Titanium Shaving Technology.

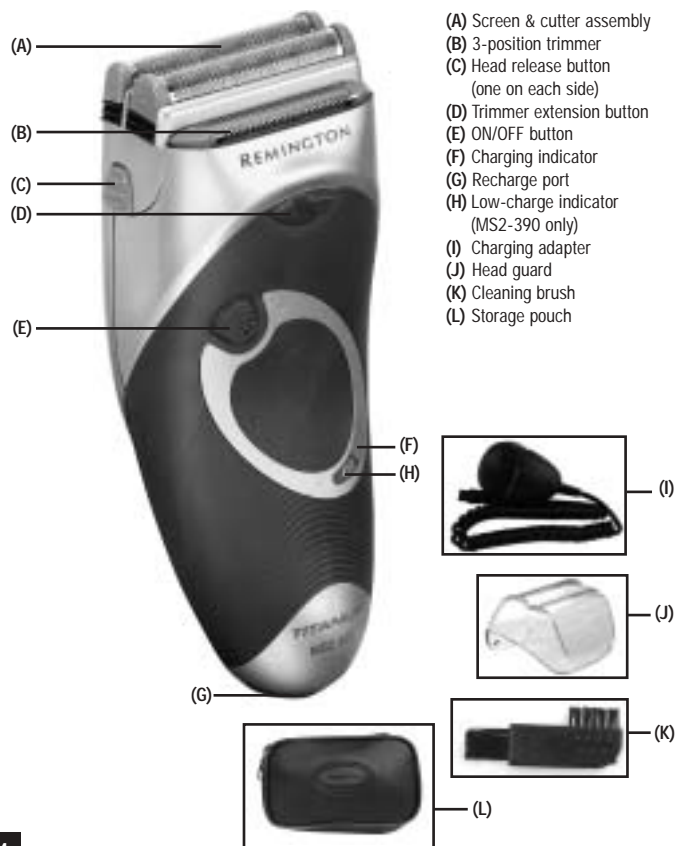

- (A) Screen & cutter assembly
- (B) 3-position trimmer
- (C) Head release button
(one on each side)
- (D) Trimmer extension button
- (E) ON/OFF button
- (F) Charging indicator
- (G) Recharge port
- (H) Low-charge indicator
(MS2-390 only)
- (I) Charging adapter
- (J) Head guard
- (K) Cleaning brush
- (L) Storage pouch

Which model is yours?

	Power system	Run time	Quick charge	Washable under water	Indicator lights		Worldwide voltage	Titanium coated trimmer blade
					Charging	Low-charge		
MS2-280	Rechargeable	60 min		x	1		x	x
MS2-290	Rechargeable	60 min		x	1		x	x
MS2-390	Cord/Cordless	60 min	x	x	1	1	x	x

Power System

- **Rechargeable** shavers can only be used without the cord.
- **Cord/cordless rechargeable** shavers can be used with or without the cord. They do not recharge during use, however, and frequent corded use will result in reduction of battery life.

Quick Charge (MS2-390 only)

Quick Charge shavers fully recharge in one hour. Five minutes gives you enough power for a single shave. Quick charge is not advised to be done on a regular basis.

Indicator Lights

Charging

The charging indicator is a green light that glows when the shaver is charging or fully charged.

Low-charge (MS2-390 only)

The low-charge indicator is a red light that glows when the shaver needs recharging. You have approximately 5 minutes of shaving time left when the red indicator first comes on.

Worldwide Voltage

Your shaver can be used almost anywhere in the world, because it has automatic dual voltage conversion, providing AC current between 100-240 volts AC, 50-60 Hz. Just plug it in to the local outlet (you may need an adapter plug) and use it as usual.

How to Use

Charging

Before using your shaver for the first time, put it on charge for 24 hours.

NOTE: It may take up to 3 cycles for the battery to reach full capacity.

To charge your shaver:

- Push the power button to the OFF position.
- Connect the supplied AC power cord to the shaver's recharge port and then to an electrical outlet.
- Your shaver cannot be overcharged, so you can leave it plugged in and charging between shaves.
- To preserve the life of the batteries, allow them to fully discharge every six months, then recharge them for 24 hours.

Removing the Headguard

Before operating your shaver, remove the headguard, which protects the screen and cutter assembly. It is important to remove the headguard correctly to avoid damaging the clips that hold it to the shaver.



 
1. Press lightly on the top of the headguard.
2. Lift the lower rear edge.
3. Pull the headguard away from the shaver.

! Always keep the protective head guard on the shaver head and keep the trimmer in the OFF position when the shaver is not in use.

Operating the Trimmer

Your shaver is equipped with a 3-position trimmer.

1. Completely retracted (down), the trimmer is out of the way and off, for when you want to use the screens alone. Press the trimmer down with your thumb to get it into this position.
2. In the middle position, the trimmer works with the screens, cutting the longer, hard-to-shave hairs so the screens can get in extra close. Push the LEFT side of trimmer button for this position.
3. Fully extended (up), the trimmer can be used to trim your sideburns and mustache. Push the RIGHT side of trimmer button for this position.

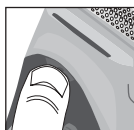

How it works

Titanium-coated trimmer blades work in concert with the shaver's dual-screen system, cutting the longer, difficult-to-shave hairs. Titanium coating protects the trimmer blades as they take the brunt of the shaver wear and tear, so you get a close comfortable shave, time after time.

Adjusting to your new shaver

As with every shaver, your shave will improve over time. So allow about three weeks to develop an effective shaving style and for your beard to adjust to the new shaver. The adaptation period may take a little longer if your skin is sensitive, or if you alternate between shaving methods.

To help smooth the transition to your new shaver, Remington® has applied a special lubricant to the shaver's screens and cutters. The lubricant looks like fine, white or gray powder, and disappears with use.

Before you begin:

- Wait at least 15 minutes after getting up before shaving, to ensure the face is free of puffiness that may be present from sleeping.
- Make sure your face is clean and dry before starting.
- Always use a clean, dry shaver.

 


To shave


Push the ON/OFF button. Hold the shaver so both foils touch your face at the same time. This allows the shaver to work the way it was designed for the closest shave and minimum wear. Avoid holding the shaver at an angle so only one screen touches the skin at a time. This will distort the screen and could cause skin irritation.



Shave with short, circular strokes. Use your free hand to stretch your skin. This encourages your whiskers to stand out, making it easier for them to enter the cutting chamber.

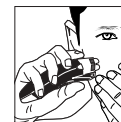

 Never press hard. Pressing only flattens your whiskers, making it harder for them to enter the cutting chamber. It will also wear out the cutting surface more quickly.

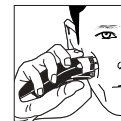

For an even better shave...

Remington® Pre-Shave Powder Stick (SP-5) can help maximize your shaver's performance. Just rub the product over your beard. Its absorbs moisture and facial oils, helping set up the hairs so they enter the cutting chamber more easily. It makes shaving quicker and more comfortable.

Cleaning & Maintenance

Cleaning Your Shaver

Remington® recommends cleaning your shaver after every use for optimal performance.

1. Turn shaver OFF.
2. Remove the head assembly by squeezing on both release buttons and pulling up from the body of the shaver.
3. **Screens**-Do not use the brush to clean the screens. Instead, blow the shavings out or rinse the screens under cold or warm water.
4. **Cutters and trimmer**-Use the cleaning brush to sweep any loose hairs from the cutters and trimmers, or rinse/dunk them in cold or warm water. Do NOT use hot water.
5. After cleaning, return the foils and head assembly to their original position on the shaver.
6. If the shaver was rinsed with water hold it facing downward into the sink, and turn it on for a few seconds to dispel additional water. A gentle shake will also help.
7. To clean the external surfaces of the shaver, use a damp cloth. Do NOT use strong detergents or other chemicals.
8. To dry, wipe the surface of the overall shaver with a dry towel. Do NOT use a hairdryer or heater to dry the shaver.



 
Screens and Cutters

To assure smooth, efficient performance, it is important to clean your shaver.

Daily

Blow out the stubble after each shave.

1. Turn the shaver off.
2. Remove the head assembly by squeezing on both release buttons and pulling up from the body of the shaver.
3. Thoroughly blow out the stubble from the screen and cutters.
4. Replace head assembly.



Weekly

Brush out the cutters and trimmer at least once a week.

1. Turn the shaver off.
2. Remove the head assembly by squeezing on both release buttons and pulling up from the body of the shaver.
3. Use the cleaning brush to sweep out the cutters and trimmer. DO NOT USE THE CLEANING BRUSH ON THE SCREENS. Damage may occur to the holes in the screens.
4. Replace head assembly. Remington® Shaver Saver® Lubricant (SP-4) lubricates and cleans your shaver's cutters and head assembly. The lubricant helps remove hair clippings while reducing wear. A quick spray after each shave keeps your shaver operating at peak performance.

Cleaning Cautions

- Shaver can be placed under running water for cleaning only.
- Do not use an aggressive cleansing agent as this may destroy the shaver coatings.
- Do not remove or replace the head assembly while shaver is running as it may cause damage to the unit's screens or cutters.
- Replace worn or damaged parts with Remington® replacement parts only.

Trimmer Care

Cleaning

1. Turn the shaver off.
2. Extend the trimmer to its maximum height by pressing the right trimmer button.
3. Use the cleaning brush to sweep off any clippings that may have accumulated around the trimmer assembly. Using the supplied brush will enable you to get into the area between the trimmer and the shaver.

Lubricating

 
1. Every six months apply a drop of light machine oil one-third and two-thirds of the way along the blade.
2. Using your fingertip, spread the oil along the teeth.
3. Run the trimmer for a few seconds to distribute oil.

Replacing Cutters and Screens

To prevent inadvertent damage to the cutters and screens, do not attempt to remove them from the head assembly unless you are replacing them. Removal instructions are included with the cutter and screen replacement packages.

To replace a cutter assembly that is removed unintentionally:

1. Hold the assembly in the middle of the "T".
2. Gently slide the plastic portion of the cutter assembly over the top of the oscillator tip.
3. Do not push downward on the ends of the cutters, as you may bend the cutter, reducing its ability to operate smoothly.
4. Do not remove cutters from the plastic pieces they are attached to, as you may damage the assembly.



When is it time to replace your screens and cutters?

Because they are subject to daily use, the cutters and screens of your shaver will wear and eventually require replacement to maintain a close, comfortable shave. It is very important to replace your screens and cutters when necessary to ensure a close, comfortable shave without irritation.

Depending on your shaving technique and habits, the screens will usually last 6 months; the cutters, 12 months. If you are replacing the cutters, it's a good idea to replace the screens at the same time.

Here are some signs that your foils and cutters need replacing:

Irritation: As screens get worn, you may notice that your skin feels more sensitive after a shave, particularly when you apply aftershave.

Pulling: As cutters wear, your shave may not feel as close and you may feel your shaver is pulling at your whiskers.

Wear-through: You may notice that the cutters have worn through the screens.

The replacement for this shaver is model SP-67 (screens) and SP-69 (screens and cutters).

U.S. residents:
To order shaver accessories call 800-736-4648, visit www.remington-products.com, or visit your local retailer.

Canadian residents:
To order shaver accessories, please call 800-268-0425, visit www.remington-products.com or visit your local retailer.

Disposal

Battery Removal

When your rechargeable shaver reaches the end of its useful life, the batteries must be removed from the shaver and be recycled or disposed of properly in accordance with your state and local requirements. If this is not required by law, you may elect to dispose of the shaver without removing the batteries.

CAUTION: DO NOT PUT IN FIRE OR MUTILATE YOUR BATTERIES WHEN DISPOSING AS THEY MAY BURST OR RELEASE TOXIC MATERIALS. DO NOT SHORT CIRCUIT AS IT MAY CAUSE BURNS. DISPOSE PROPERLY IN ACCORDANCE WITH YOUR LOCAL AND STATE REQUIREMENTS.

! To avoid a possible electric shock hazard, unplug cord (if used) from electric outlet and shaver.

1. Remove head assembly by first pressing the two side buttons.
2. Remove cutters.
3. Remove (4) screws holding metal plate on.
4. Remove housing assembly.
5. Remove (2) screws holding top housing in place
6. Pry off cover on bottom of shaver.
7. Remove (5) screws holding housing together.
8. Cut or break the wire straps on both ends of the batteries, pry the batteries from the foam adhesive tape on the PCB.

Only follow these instructions when you are ready to dispose your shaver, as your shaver will no longer be operable.

Performance Guarantee

Full Two-Year Warranty

Spectrum Brands, Inc. warrants this product against any defects that are due to faulty material or workmanship for a two-year period from the original date of consumer purchase. This warranty does not include damage to the product resulting from accident or misuse.

If the product should become defective within the warranty period, we will repair it or elect to replace it free of charge. Return your product and sales receipt with your name, address and day time phone number to: Spectrum Brands, Inc., Attention: Consumer Services, 601 Rayovac Drive, Madison, WI 53711. For more information call 800-736-4648 in the US or 800-268-0425 in Canada.

Warranty excludes:

- Screens and cutters

KEEP ORIGINAL SALES RECEIPT AS PROOF OF PURCHASE FOR WARRANTY PURPOSES.

This warranty does not cover products damaged by the following:

- Accident, misuse, abuse or alteration of the product
- Servicing by unauthorized persons
- Use with unauthorized accessories
- Connecting it to incorrect current and voltage
- Wrapping cord around appliance causing premature wear & breakage
- Any other conditions beyond our control

SPECTRUM BRANDS, INC. SHALL NOT BE RESPONSIBLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES RESULTING FROM THE USE OF THIS PRODUCT. ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE

LIMITED IN DURATION TO TWO YEARS FROM DATE OF ORIGINAL PURCHASE.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province. Some states do not allow the exclusion or limitation of incidental, special or consequential damages.

Spectrum Brands, Inc. Money-back Offer

If within 30 days after you have purchased your Remington® branded product, you are not satisfied and would like a refund, return it with the sales slip indicating purchase price and date of purchase to the retailer from whom it was purchased. Spectrum Brands, Inc. will reimburse all retailers who accept the product within 30 days from the date of purchase. If you have any questions concerning the money-back guarantee, please call 800-736-4648 in the US or 800-268-0425 in Canada.

100-240 VAC 50/60 Hz

Questions or comments:

Call 800-736-4648 in the US or 800-268-0425 in Canada. or visit www.remington-products.com

Dist. by: Spectrum Brands, Inc., Madison, WI 53711

Dist. by: Rayovac Canada Inc., Mississauga, ON L4W 2T7

 
 
REMINGTON, MICROSCREEN and SHAVER SAVER are registered trademarks of ROVICAL, INC.

©2005 ROVICAL, INC.
07/05 Job# CS27659

T22-16898

MADE IN CHINA





REMINGTON®

