

USE AND CARE OF YOUR



HOME MODEL COFFEE WARMER



Keep this booklet
for future reference.

Durable, scratch-resistant, porcelain warmer with lighted switch keeps an extra decanter of coffee, tea, hot chocolate, or soups at perfect temperature. The deep, dark brown color blends with the Bunn Pour-Omatic® coffee brewer.

USING THE WARMER

1. Plug the cordset into any convenient 120 volt A.C. outlet.
2. Set a decanter on the warmer.
3. Place the lighted on/off switch in the "ON" position.

NOTE – Turn the warmer "OFF" when not in use.

CLEANING

Periodic cleaning with a soft damp cloth will keep your warmer looking new for years. Do not use cleaners that scratch. Do not immerse any part of the warmer.

BUNN-O-MATIC CORPORATION

1400 STEVENSON DRIVE

POST OFFICE BOX 3227

SPRINGFIELD, ILLINOIS 62708-3227

If you need any assistance, please call us
at (217) 529-6601, extension 520.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. The BCW coffee warmer is intended for household use.
3. Do not touch hot surfaces. Use handles or knobs.
4. To protect against electrical hazards, do not immerse cord, plugs, or any other part of the appliance in any liquid.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting-on or taking-off parts and before cleaning appliance.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
8. The use of accessory attachments not recommended by the appliance manufacturer may cause hazards.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. To disconnect the cord from a wall outlet, place the lighted switch in the "OFF" position, then remove the plug from the wall outlet.
13. Do not use appliance for other than intended use.
14. **SAVE THESE INSTRUCTIONS.**

NOTE

A short power-supply cord is provided with the warmer in accordance with Underwriters' Laboratories requirements to reduce the hazards resulting from becoming entangled-in or tripping-over a longer cord. An extension cord can be used, but care should be exercised in its use. If an extension cord is used, be sure that:

- a. The molded electrical rating of the extension cord should be at least as great as the electrical rating of the warmer.
- b. The extension cord should be arranged so it will not drape over the counter top where it can be pulled by children or tripped-over accidentally.

LIMITED WARRANTY

Bunn-O-Matic warrants the Bunn® Coffee Warmer (“Warmer”) to be free from defects in material and workmanship existing at the time of manufacture and appearing within three (3) years from the date of original purchase. If such a defect appears during the warranty period, we will (at our sole option) repair or replace the defective unit with no charge for service or parts, provided that the unit is delivered at the customer’s expense to one of the authorized service centers listed below.

This warranty does not cover claims resulting from misuse, failure to follow instructions on installation and use, neglect, use of unauthorized attachments, commercial use, use on a current or voltage other than specified on the warmer, or unauthorized service during the warranty period on conditions otherwise covered by warranty.

THIS WARRANTY SHALL BE EXCLUSIVE AND SHALL BE IN LIEU OF ANY OTHER EXPRESS WARRANTY, WRITTEN OR ORAL, INCLUDING BUT NOT LIMITED TO ANY EXPRESS WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS EXPRESSLY LIMITED TO THE THREE YEAR PERIOD OF DURATION OF THIS LIMITED WARRANTY.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

THE CUSTOMER’S EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY OR OF ANY IMPLIED WARRANTY OR OF ANY OTHER OBLIGATION ARISING BY OPERATION OF LAW OR OTHERWISE SHALL BE LIMITED AS SPECIFIED HEREIN TO REPAIR OR REPLACEMENT, AT OUR SOLE OPTION. IN ANY EVENT, RESPONSIBILITY FOR SPECIAL, INCIDENTAL AND CONSEQUENTIAL DAMAGES IS EXPRESSLY EXCLUDED.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

For service (whether or not warranty is still in effect), carefully pack the warmer so it is fully protected against breakage and send it to one of the authorized Bunn-O-Matic facilities listed below.

Bunn-O-Matic Corporation
Home Division
1400 Stevenson Drive
Springfield, Illinois 62703
(217) 529-6601

Bunn-O-Matic Corporation
Home Division
16431 Carmenita Road
Cerritos, California 90701
(213) 926-0764