

Congratulations on your purchase of a high-quality Insignia product. This two-piece system is designed to deliver superior audio performance to laptops, netbooks, and home computers.

PACKAGE CONTENTS

- Speakers (2)
- Travel pouch
- USB power/audio cable
- *Quick Setup Guide*

Caution

- Read all safety and operating instructions before using these speakers.
- Keep speakers out of extreme heat, and away from sources producing extreme heat, such as space heaters, radiators, stoves, and other devices emitting heat.
- Keep speakers out of the rain and humid conditions to avoid electric shock. Keep speakers away from devices containing water, such as sinks and bathtubs.
- Use a dry cloth for cleaning. Do not wipe any part of the system with cleaning solvents, such as furniture wax, bleach, benzene, or ammonia.

SPEAKER PLACEMENT


- Place the speakers on opposite sides of the sound source, as far apart as possible. When connected to the speakers, the cables become the speaker stands.

Front view




SPEAKER CONNECTION

- 1 Connect the 3.5 mm cable plug to the headphone jack or external speaker jack of your sound source (laptop, smartphone, iPod, MP3 player, or computer).
- 2 Connect the USB connector to a USB port on your laptop, computer, or USB wall charger (a wall charger is not included).
- 3 Connect the other ends of the cables (the ends with the matching molded plug casings) to the speakers.
- 4 Turn on your sound source.
- 5 Use your sound source (i.e. computer, MP3 player) to adjust the volume and other audio settings.

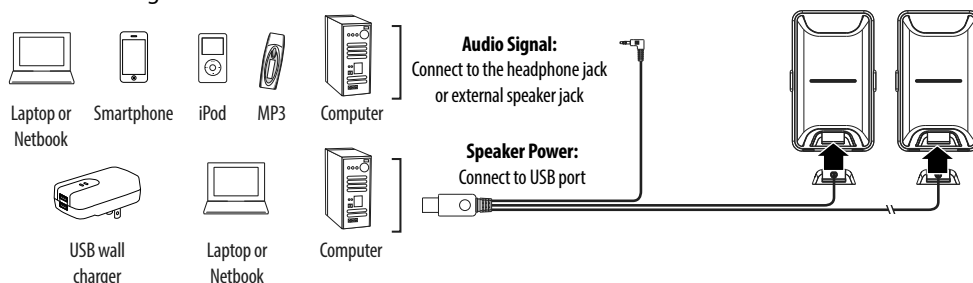

STORING YOUR SPEAKERS

- Speakers click together magnetically

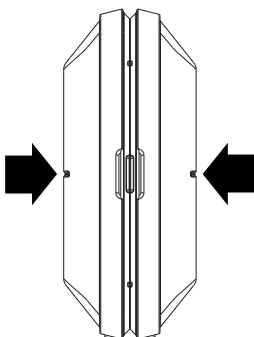

TROUBLESHOOTING

Problem:	Solution:
No power.	<ul style="list-style-type: none">• Make sure that the computer or netbook is turned on and the USB connector is plugged in correctly.
No sound.	<ul style="list-style-type: none">• Make sure that the speakers are getting power. Check above steps.• Make sure that all cables are securely plugged into the correct jacks; the speaker jack is used for the audio source and the USB jack is for speaker power only. The USB jack will not provide the sound signal.• Make sure that the speakers are connected to the audio/line output jack from your computer sound card. This jack is usually green.• Make sure that your sound source is playing and the volume is turned up and not muted.• Try connecting the speakers to a different sound source to verify if the issue is with the speakers or the sound source.• Make sure the cables are not broken or damaged.
Sound plays only out of one speaker.	<ul style="list-style-type: none">• Adjust the volume balance setting on the sound source until it is centered.• Make sure the connectors are inserted fully at the sound source and at the speakers themselves.
Poor sound quality.	<ul style="list-style-type: none">• Make sure that all cables are securely plugged into the correct jacks.• Make sure the cables are not broken or damaged.• Adjust the audio settings on the sound source (i.e. computer, MP3 player, smartphone).

SPECIFICATIONS

Visit www.insigniaproducts.com for details.

ONE-YEAR LIMITED WARRANTY

Visit www.insigniaproducts.com for details.

CONTACT INSIGNIA:

For customer service, call 877-467-4289 (U.S. and Canada) or

01-800-926-3000 (Mexico)

www.insigniaproducts.com

INSIGNIA is a trademark of Best Buy and its affiliated companies.

Registered in some countries.

Distributed by Best Buy Purchasing, LLC

7601 Penn Ave South, Richfield, MN 55423 U.S.A.

©2014 Best Buy. All rights reserved.

Made in China