


BU

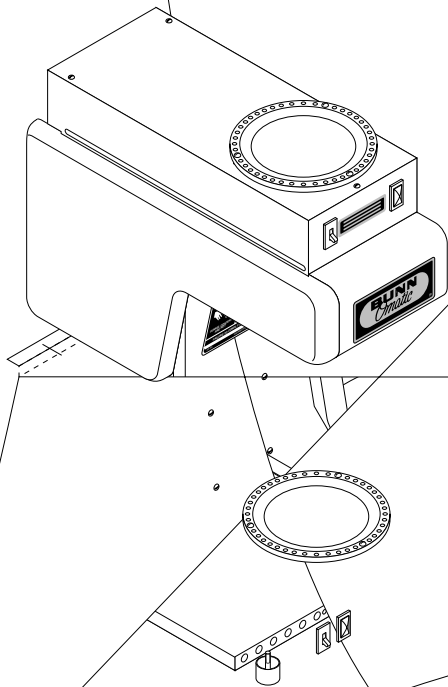

OPERATING & SERVICE MANUAL

BUNN-O-MATIC CORPORATION

POST OFFICE BOX 3227

SPRINGFIELD, ILLINOIS 62708-3227

PHONE: (217) 529-6601 FAX: (217) 529-6644

CONTENTS

Introduction	2
User Notices	3
Electrical Requirements	4
Plumbing Requirements	4
Initial Set-Up	5
Adjusting Brew Volumes	6
Operating Controls	6
Coffee Brewing	7
Cleaning	7
Troubleshooting	8
Service	12
Wiring Diagrams	26

INTRODUCTION

This equipment will brew a half-gallon batch of coffee into an awaiting decanter at the press of a button. The OT has two and the RT has five warmers to keep the beverage at the right temperature, on the RT one of which is capable of heating water to boiling. The brewer is only for indoor use on a sturdy counter or shelf.

WARRANTY

Bunn-O-Matic Corp. (“Bunn”) warrants the equipment manufactured by it to be commercially free from defects in material and workmanship existing at the time of manufacture and appearing within one year from the date of installation. In addition:

- 1.) Bunn warrants electronic circuit and/or control boards to be commercially free from defects in material and workmanship for two years from the date of installation.
- 2.) Bunn warrants the compressor on refrigeration equipment to be commercially free from defects in material and workmanship for two years from the date of installation.
- 3.) Bunn warrants that the grinding burrs on coffee grinding equipment will grind coffee to meet original factory screen sieve analysis for three years from date of installation or for 30,000 pounds of coffee, whichever comes first.


This warranty does not apply to any equipment, component or part that was not manufactured by Bunn or that, in Bunn’s judgement, has been affected by misuse, neglect, alteration, improper installation or operation, improper maintenance or repair, damage or casualty.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER WARRANTY, WRITTEN OR ORAL, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF EITHER MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. The agents, dealers or employees of Bunn are not authorized to make modifications to this warranty or to make additional warranties that are binding on Bunn. Accordingly, statements by such individuals, whether oral or written, do not constitute warranties and should not be relied upon.

The Buyer shall give Bunn prompt notice of any claim to be made under this warranty by telephone at (217) 529-6601 or by writing to Post Office Box 3227, Springfield, Illinois, 62708-3227. If requested by Bunn, the Buyer shall ship the defective equipment prepaid to an authorized Bunn service location. If Bunn determines, in its sole discretion, that the equipment does not conform to the warranty, Bunn shall repair the equipment with no charge for parts during the warranty period and no charge for labor by a Bunn Authorized Service Representative during the warranty period. If Bunn determines that repair is not feasible, Bunn shall, at its sole option, replace the equipment or refund the purchase price for the equipment.


THE BUYER’S REMEDY AGAINST BUNN FOR THE BREACH OF ANY OBLIGATION ARISING OUT OF THE SALE OF THIS EQUIPMENT, WHETHER DERIVED FROM WARRANTY OR OTHERWISE, SHALL BE LIMITED, AS SPECIFIED HEREIN, TO REPAIR OR, AT BUNN’S SOLE OPTION, REPLACEMENT OR REFUND.

In no event shall Bunn be liable for any other damage or loss, including, but not limited to, lost profits, lost sales, loss of use of equipment, claims of Buyer’s customers, cost of capital, cost of down time, cost of substitute equipment, facilities or services, or any other special, incidental or consequential damages.

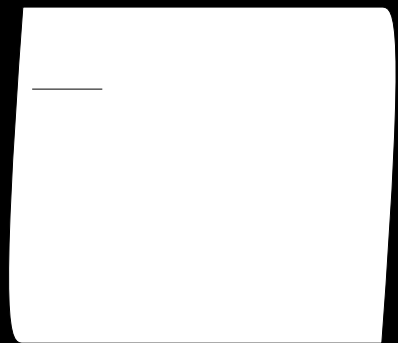


ELECTRICAL REQUIREMENTS


CAUTION - Do not connect the brewer to the power source until specified in Initial Set-Up.

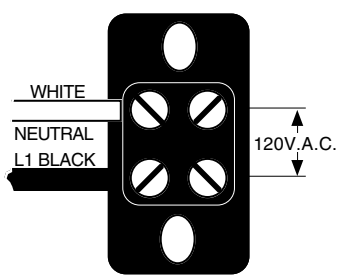


MODELS OT15 & 20 require 2-wire, grounded service rated 120 volts ac, 15 or 20 amp respectively, single phase, 60 Hz. Model 15 has an attached cordset.

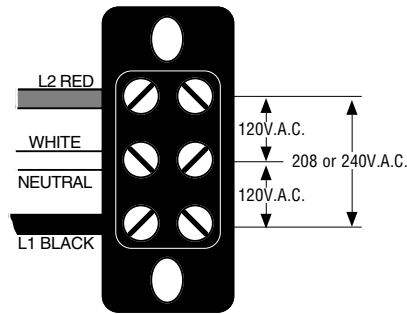

MODELS OT35 & RT35 require 3-wire, grounded service rated 120/208 or 120/240 volts ac, 20 amp, single phase, 60 Hz.

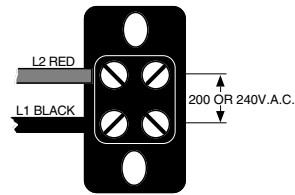

MODELS OTA, RTA & RT35B require 2-wire, grounded service rated 240 volts ac or 200 volts ac, 20 amp single phase, 50 Hz.

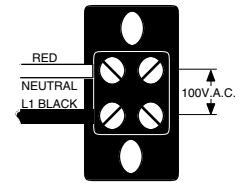

MODEL RT25B requires 2-wire, grounded service rated 100 volts ac, 20 amp single phase, 50 Hz.

Electrical Hook-Up


Model OT15 has an attached cordset.
Models OT20, OT35, & RT35, proceed as follows:

CAUTION – Improper electrical installation will damage electronic components.

1. An electrician must provide electrical service as specified.
2. Using a voltmeter, check the voltage and color coding of each conductor at the electrical source.
3. Remove the front panel beneath the sprayhead and rotate the control thermostat knob fully counterclockwise to the "OFF" position and replace the panel.
4. Remove the rear panel, feed the cord through the strain relief, and connect it to the terminal block.
5. Connect the brewer to the power source and verify the voltage at the terminal block before proceeding. Replace the rear panel.
6. If plumbing is to be hooked-up later be sure the brewer is disconnected from the power source. If Plumbing has been hooked-up, the brewer is ready for Initial Set-Up.

PLUMBING REQUIREMENTS

This brewer must be connected to a **cold** water system with operating pressure between 20 and 90 psi from a 1/2" or larger supply line. A shut-off valve should be installed in the line before the brewer. Install a regulator in the line when pressure is greater than 90 psi to reduce it to 50 psi. The water inlet fitting is 1/4" flare.

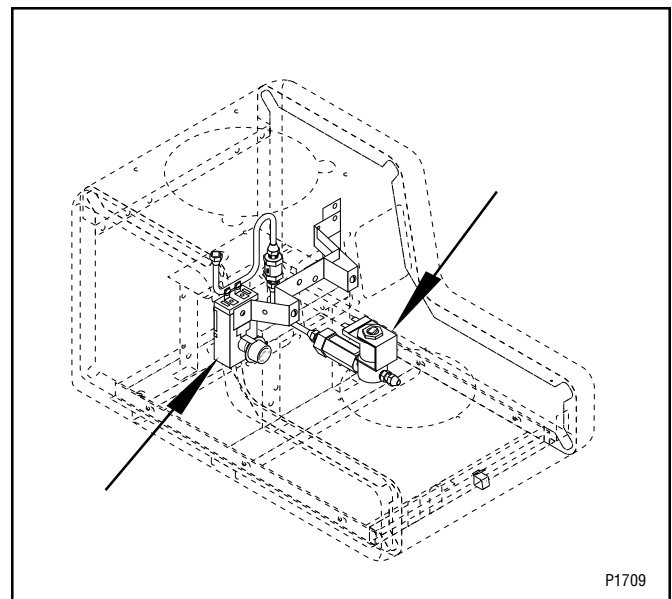

NOTE - Bunn-O-Matic recommends 1/4" copper tubing for installations of less than 25 feet and 3/8" for more than 25 feet from the 1/2" water supply line. A tight coil of copper tubing in the water line will facilitate moving the brewer to clean the counter top. Bunn-O-Matic does not recommend the use of a saddle valve to install the brewer. The size and shape of the hole made in the supply line by this type of device may restrict water flow.

This equipment must be installed to comply with the Basic Plumbing Code of the Building Officials and Code Administrators International, Inc. (BOCA) and the Food Service Sanitation Manual of the Food and Drug Administration (FDA).

PLUMBING REQUIREMENTS (Cont.)

Plumbing Hook-Up

Model OT15 has an attached water strainer, proceed to step 2.

Models OT20, OT35, & RT35, proceed as follows:



1. Remove the rear panel and bottom pan. Run the long piece of tubing from the strainer (supplied) under the brewer and attach it to the water inlet fitting on the solenoid. Reinstall the bottom pan and rear panel.
2. Flush the water line and securely attach it to the 1/4" flare fitting on the strainer.
3. Turn on the water supply.

INITIAL SETUP

CAUTION - The brewer must be disconnected from the power source throughout the initial set-up, except when specified in the instructions.

1. Remove the front panel.
2. Rotate the control thermostat knob fully counterclockwise to the "OFF" position and replace the panel.
3. Insert an empty funnel into the funnel rails.
4. Place a decanter containing a small amount of water on the warmer beneath the funnel.
5. Connect the brewer to the power source, place the On/Off brew station warmer switch the upper position, and momentarily press the start switch. Water will begin flowing into the tank. When water stops flowing into the tank, initiate a second and a third brew cycle. During this third brew cycle the tank will fill to its capacity and the excess will flow from the sprayhead, out of the funnel, and into the decanter.
6. Place the On/Off brew station warmer switch in the lower position.
7. Disconnect the brewer from the power source.
8. Remove the front panel.
9. Rotate the control thermostat knob fully clockwise to the "ON" position and replace the front panel.
10. Connect the brewer to the power source and wait approximately twenty minutes for the water in the tank to heat to the proper temperature. Some water will drip from the funnel during this time; this is due to expansion and should not occur thereafter.
11. Place an empty decanter under the funnel.
12. Place the On/Off brew station warmer switch in the upper position and momentarily press the start switch. Empty the decanter after water has stopped flowing from the funnel.
13. Allow the water in the tank to reheat to the proper temperature.
14. Place an empty decanter on the warmer and press the start switch. Check the water volume in the decanter after water has stopped flowing from the funnel. It should be 64 ounces.
15. If not, adjust the Timer as described in Adjusting Brew Volumes (Page 6).
16. Repeat steps 13-15 until 64 oz. water volume is achieved.

NOTE - The On/Off brew station warmer switch must be in the upper position to initiate and complete a brew cycle.

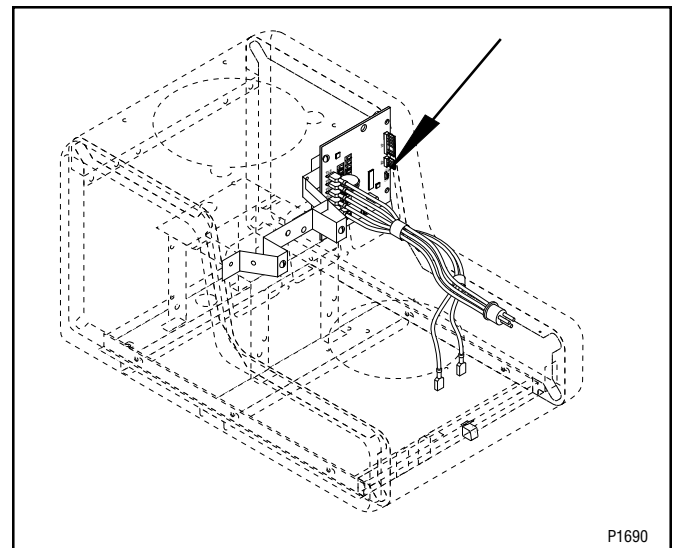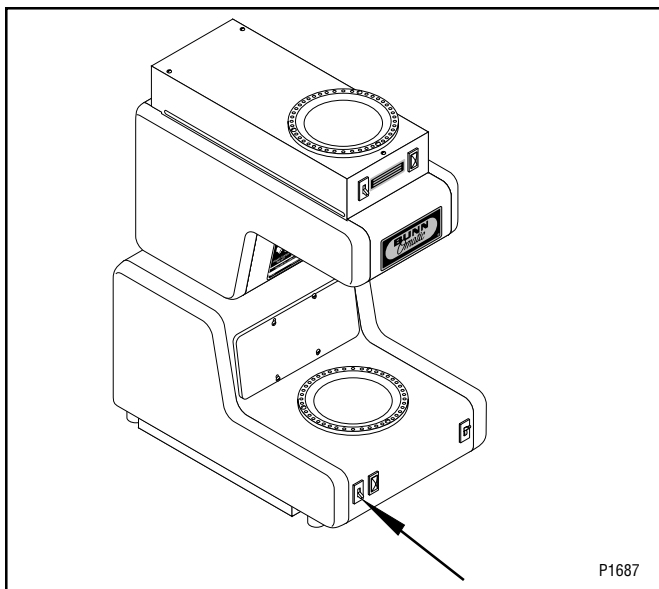

ADJUSTING BREW VOLUMES

CAUTION - Disconnect the power source from the brewer prior to the removal of any panel for the replacement or adjustment of any component.

NOTE: Prior to setting or modifying batch sizes, check that the brewer is connected to water supply, the tank is properly filled, and a funnel and server are in place.

1. **Modifying batch sizes.** To modify a batch volume, first check that the SET/LOCK switch is in the “SET” position on the circuit board.

To increase a batch size. Press and hold the START or BREW switch until three clicks are heard. Release the switch (Failure to release the switch within two seconds after the third click causes the volume setting to be aborted and previous volume setting will remain in memory) and press it again one or more times. Each time the switch is pressed, two seconds are added to the brew time period. Allow the brew cycle to finish in order to verify that the desired volume has been achieved.

To decrease a batch size. Press and release the START or BREW switch once for every two-second interval to be removed from the total brew time period; then immediately press and hold down the START or BREW switch until three clicks are heard. Release the switch. (Failure to release the switch within two seconds after the third click causes the volume setting to be aborted and previous volume setting will remain in memory). Allow the brew cycle to finish in order to verify that the desired volume has been achieved.


2. **Setting batch sizes.** To set a batch volume, first check that the SET/LOCK switch is in the “SET” position on the circuit board. Press and hold the START or BREW switch until three distinct clicks are heard, and then release the switch. (Failure to release the switch within two seconds after the third click causes the volume setting to be aborted and previous volume setting will remain in memory). View the level of the liquid being dispensed. When the desired level is reached, turn the ON/OFF switch to “OFF” (lower). The brewer remembers this volume and will continue to brew batches of this size until the volume setting procedure is repeated.

NOTE: When brewing coffee, batch volumes will decrease due to absorption by the coffee grounds.


3. **Setting programming disable feature.** If it becomes necessary to prevent anyone from changing brew times once programmed, you can set the SET/LOCK switch to the “LOCK” position. This will prevent any programming to be done until switch is once again placed in the “SET” position.

OPERATING CONTROLS

MODEL OT

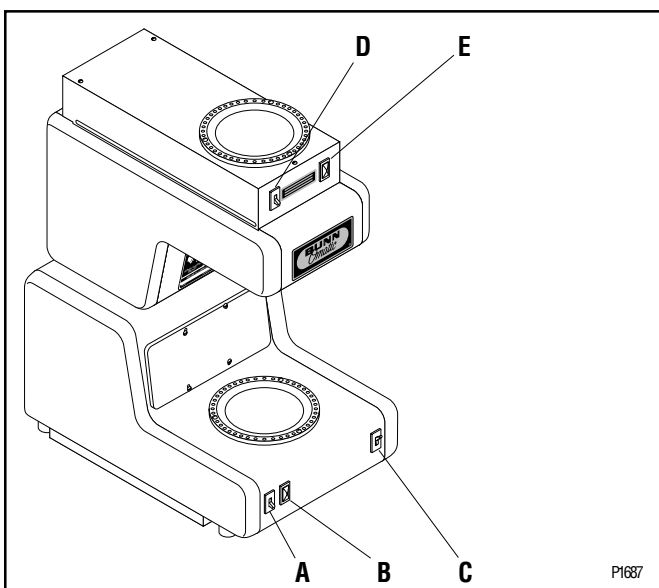

MODEL RT

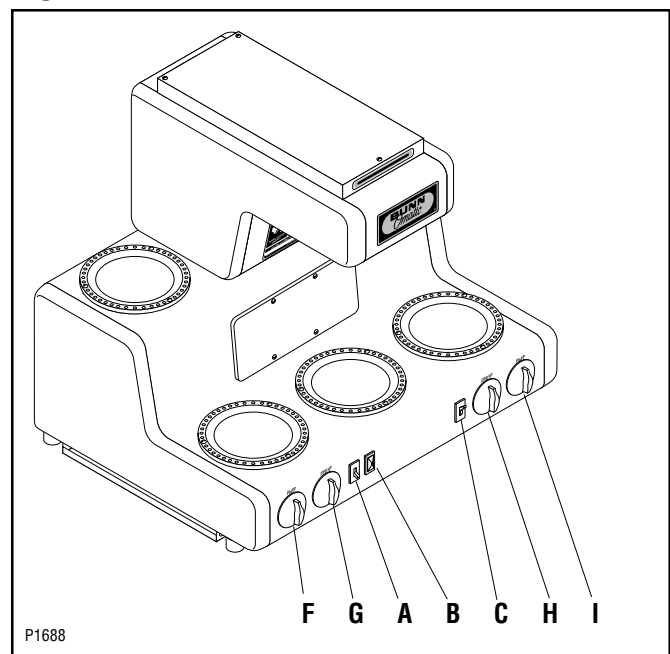

MODELS OT & RT

A. On/Off Brew Station Warmer Switch

Placing the switch in the upper position supplies power to the brew station warmer and enables brewing. Placing the switch in the lower position cuts power to the brew station warmer and stops brewing. Stopping a brew cycle after it has been started will not stop the flow of water into the funnel until the tank syphons down to its proper level.

NOTE - The On/Off brew station warmer switch must be in the upper position to initiate and complete a brew cycle.

B. On/Off Brew Station Warmer Indicator Lamp

Glows whenever the On/Off brew station warmer switch is in the upper position showing that the warmer is on and that the automatic brew cycle can be started.

C. Start Switch

Starts a brew cycle when the On/Off brew station warmer switch is in the upper position.

D. Upper Warmer Switch

Placing the switch in the upper position supplies power to the upper warmer. Placing the switch in the lower position cuts power to the upper warmer.

E. Upper Warmer Indicator Lamp

Glows whenever the upper warmer switch is in the upper position showing that the warmer is on.

F. Left Rear Warmer Rotary Switch

Rotating the knob to the "ON" position supplies power to the left rear warmer. Rotating the knob to the "OFF" position cuts power to the left rear warmer.

G. Left Front Warmer Rotary Switch

Rotating the knob to the "ON" position supplies power to the left front warmer. Rotating the knob to the "OFF" position cuts power to the left front warmer.

H. Right Front Warmer Rotary Switch

Rotating the knob to the "ON" position supplies power to the right front warmer. Rotating the knob to the "OFF" position cuts power to the right front warmer.

I. Right Rear Warmer Three Heat Rotary Switch

Rotating the knob to the "LO", "MED", or "HIGH" positions supply power to the right rear warmer. Rotating the knob to the "OFF" position cuts power to the right rear warmer. The "HIGH" position of this switch makes the warmer capable of boiling water.

COFFEE BREWING

Start each brew cycle with an empty, clean, half-gallon decanter.

1. Insert a BUNN® filter into the funnel.
2. Pour the fresh coffee into the filter and level the bed of grounds by gently shaking.
3. Slide the funnel into the funnel rails.
4. Place the On/Off brew station warmer switch in the upper position.
5. Momentarily press the start switch.
6. When brewing is completed, simply discard the grounds and filter.

CLEANING

1. The use of a damp cloth rinsed in any mild, non-abrasive, liquid detergent is recommended for cleaning all surfaces on Bunn-O-Matic equipment.
2. Check and clean the sprayhead. The sprayhead holes must always remain open.
3. With the sprayhead removed, insert the delimiting spring (provided) all the way into the sprayhead tube. When inserted properly, no more than two inches of spring should be visible. Saw back and forth five or six times. Then, repeat this step for the air vent tube.

NOTE - In hard water areas, this may need to be done daily. It will help prevent liming problems in the brewer and takes less than a minute.

TROUBLESHOOTING

A troubleshooting guide is provided to suggest probable causes and remedies for the most likely problems encountered. If the problem remains after exhausting the troubleshooting steps, contact the Bunn-O-Matic Technical Service Department.

- Inspection, testing, and repair of electrical equipment should be performed only by qualified service personnel.
- All electric components have 120 volt ac voltage on their terminals. Shorting of terminals or the application of external voltages may result in equipment failure.
- Intermittent operation of electronic equipment is unlikely. Component failure will normally be permanent. If an intermittent condition is encountered, the cause will likely be a switch contact or a loose connection at a terminal or crimp.
- Solenoid removal requires interrupting the water supply to the valve. Damage may result if solenoids are energized for more than ten minutes without a supply of water.
- The use of two wrenches is recommended whenever plumbing fittings are tightened or loosened. This will help to avoid twists and kinks in the tubing.
- Make certain that all plumbing connections are sealed and electrical connections tight and isolated.
- This brewer is heated at all times unless disconnected from the power source. Keep away from combustibles.

WARNING

- Exercise extreme caution when servicing electrical equipment.
- Disconnect the brewer from the power source when servicing, except when electrical tests are specified.
- Follow recommended service procedures
- Replace all protective shields or safety notices

Problem	Probable Cause	Remedy
Equipment will not operate.	1. No power or incorrect voltage	(A) Connect the brewer to the power source. (B) Check the terminal block for the proper voltages. (C) Check circuit breaker/fuse.
	1. No water	Check plumbing and shut-off valves.
	2. Water Strainer	(A) Direction of flow arrow must be pointing towards brewer. (B) Remove the strainer and check for obstructions. Clear or replace.
Brew cycle will not start.	3. Flow Control	(A) Direction of flow arrow must be pointing away from the solenoid. (B) Remove the control and check for obstructions. Clear or replace.

TROUBLESHOOTING (cont.)

Problem	Probable Cause	Remedy
Brew cycle will not start. (cont.)	4. On/Off Brew Station Warmer Switch	Refer to Service - On/Off Brew Station Warmer Switch for testing procedures. See page 19.
	5. Start Switch	Refer to Service - Start Switch for testing procedures. See page 25.
	6. Brew Timer	Refer to Service - Brew Timer for testing procedures. See page 13 or 14.
	7. Solenoid Valve	Refer to Service - Solenoid Valve for testing procedures. See page 24.
Water flows into tank continuously (On/Off brew station warmer switch "OFF").	1. Solenoid Valve	Refer to Service - Solenoid Valve for testing procedures. See page 24.
Water flows into tank continuously (On/Off brew station warmer switch "ON").	1. Brew Timer	Refer to Service - Brew Timer for testing procedures. See page 13 or 14.
Water is not hot.	1. Limit Thermostat CAUTION: Do not eliminate or bypass limit thermostat. Use only B.O.M. part #29329.1000	Refer to Service - Limit Thermostat for testing procedures. See page 23.
	2. Control Thermostat	Refer to Service - Control Thermostat for testing procedures. See page 16.
	3. Tank Heater	Refer to Service - Tank Heater for testing procedures. See page 26.
Decanter warmer is not hot.	1. Warmer Switches	(A) The Warmer Switch(es) must be in the "ON" position for the warmer to operate. (B) Refer to Service - Warmer Switch(es) for testing procedures. See pages 19,20, & 21.
	2. Decanter Warmers	Refer to Service - Warmers for testing procedures. See pages 17 & 18.

TROUBLESHOOTING (cont.)

Problem	Probable Cause	Remedy
Spitting or unusual steaming from sprayhead.	1. Control Thermostat	Refer to Service - Control Thermostat for testing procedures. See page 16.
	2. Lime build-up CAUTION: Tank and tank components should be delimed regularly depending on local water conditions. Excessive mineral build-up on stainless steel surfaces can initiate corrosive reactions resulting in serious leaks.	Inspect the tank assembly for excessive lime deposits. Delime as required.
Inconsistent beverage level in decanter.	1. Flow control	(A) Direction of flow arrow must be pointing away from the solenoid. (B) Remove the control and check for obstructions. Clear or replace.
	2. Improper water pressure	Check the operating water pressure to the brewer. It must be between 20 and 90 psi (138 and 620 kPa).
	3. Syphon system	Water should flow freely from the sprayhead for approximately twenty seconds after the brew solenoid has shut-off and then stop flowing abruptly. The brewer must be level from front-to-back to syphon properly.
Consistently high or low beverage level in decanter.	1. Brew Timer adjustment	Adjust the brew timer as required to achieve the recommended 64 oz for each brew cycle.
Dripping from sprayhead.	1. Syphon system	Water should flow freely from the sprayhead for approximately twenty seconds after the brew solenoid has shut-off and then stop flowing abruptly. The brewer must be level from front-to-back to syphon properly.
	2. Solenoid Valve	Refer to Service - Solenoid Valve for testing procedures. See page 24.

TROUBLESHOOTING (cont.)

Problem	Probable Cause	Remedy
Beverage overflows decanter.	1. Beverage left in decanter	The brew cycle should be started only with an empty decanter under the funnel.
Weak beverage.	1. Type of paper filters	BUNN® paper filters should be used for proper extraction.
	2. Coffee	A sufficient quantity of fine or drip grind coffee should be used for proper extraction.
	3. Sprayhead	B.O.M. sprayhead #01082.0000 should be used to properly wet the bed of ground coffee in the funnel.
	4. Funnel loading	The BUNN® paper filter should be centered in the funnel and the bed of coffee leveled by gentle shaking.
	5. Water temperature	Place a funnel over an empty decanter on the warmer beneath the sprayhead. Place the On/Off brew station warmer switch in the upper position, press the start switch, and check the water temperature immediately below the sprayhead with an accurate thermometer. The reading should not be less than 195° F. Adjust the control thermostat slightly clockwise to increase the water temperature.
Brewer is making unusual noises.	1. Solenoid Valve	The nut on top of the solenoid valve must be tight or it will vibrate during operation.
	2. Plumbing lines	Plumbing lines should not rest on the counter top.
	3. Water supply	(A) The brewer must be connected to a cold water line. (B) Water pressure to the brewer must not be higher than 90 psi (620 kPa). Install a regulator if necessary to lower the working pressure to approximately 50 psi (345 kPa).

SE

show
proc
pro

Com

WAR

sourc
ment

cat
the b
screw

The
start sw
and sole
gained
with two

The
on the tar
lid, FIG.

screws. O
and associ
movable to

WARNING

cal equipm
service pers
from the pow
electrical tes
specifically st
source.

s proce
cessa

used in this brewer
ing the cause of any

.....	13
.....	14
.....	16
.....	17
.....	17
.....	18
.....	19
.....	19
.....	20
.....	21
.....	22
.....	23
.....	24
.....	25

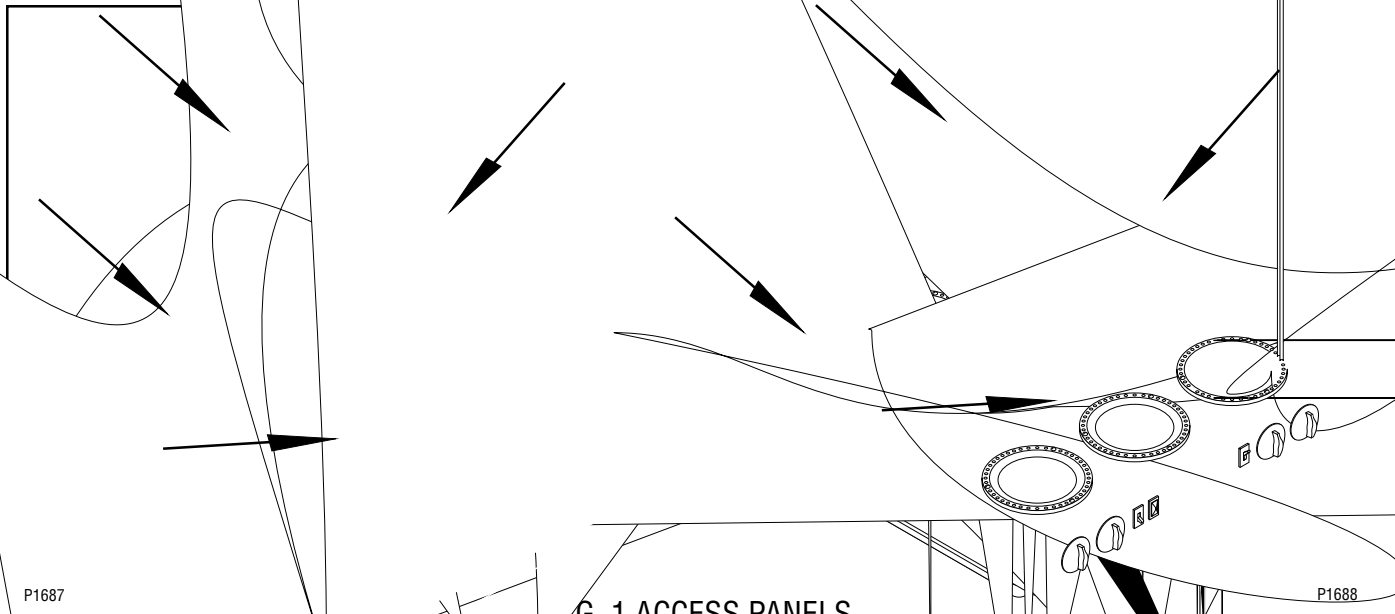


FIG. 1 ACCESS PANELS

SERVICE (cont.)

Brew Timer (Early Models)

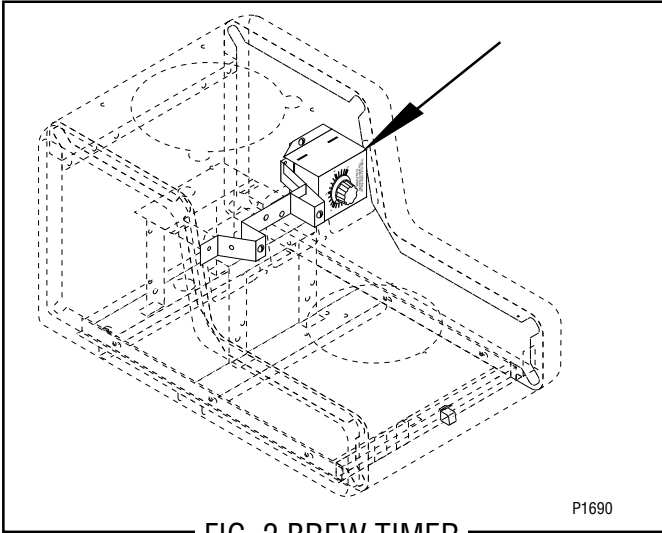


FIG. 2 BREW TIMER

Location:

The brew timer is located behind the front panel to the right of the tank, FIG. 2.

Test Procedure:

1. Disconnect the brewer from the power source and separate the polarized, three-pin connectors between the timer and brewer wiring harness and rotate the brew timer dial fully counterclockwise.
2. Check the voltage across sockets 2 & 3 (white or red and black wires) of the female connector with a voltmeter when the On/Off brew station warmer switch is in the upper position. Connect the brewer to the power source. The indication must:
 - a) 120 volts ac for two wire 120 volt models.
 - b) 200 or 240 volts ac for two wire 200 volt or 240 volt models and three wire 120/240 volt models.
 - c) 100 volts ac for two wire 100 volt models.
3. Disconnect the brewer from the power source.

If voltage is present as described, proceed to #4.

If voltage is not present as described, refer to the Wiring Diagrams and check the brewer wiring harness.

4. Check the voltage across sockets 1 & 2 (blue and white or red wires) of the female connector with a voltmeter when the On/Off brew station warmer switch is in the upper position and the start switch is pressed to the lower position and held. Connect the brewer to the power source. The indication must be as described in step 2, until the start switch is released.
5. Disconnect the brewer from the power source.

If voltage is present as described, reconnect the polarized, three-pin connectors, and proceed to #6. If voltage is not present as described, refer to the Wiring Diagrams and check the brewer wiring harness.

6. Disconnect the in-line connectors on the black and white wires from the timer to the solenoid.
7. Check the voltage across the black and white wires with a voltmeter when the On/Off brew station warmer switch is in the upper position and the start switch is pressed to the lower position and released. Connect the brewer to the power source. The indication must be as described in step 2, for approximately 20 seconds and then return to its previous indication.
8. Disconnect the brewer from the power source.

If voltage is present as described, the brew timer is operating properly. Reset the timer dial as required, to obtain the desired brew volume.

If voltage is not present as described, replace the brew timer.

Removal and Replacement:

1. Separate all connectors between the brewer wiring harness and the timer.
2. Remove the two 8-32 slotted-head screws holding the timer to the bracket.
3. Install the new timer to the bracket.
4. Refer to FIG.3 when reconnecting the wires.
5. Readjust the timer dial as required.

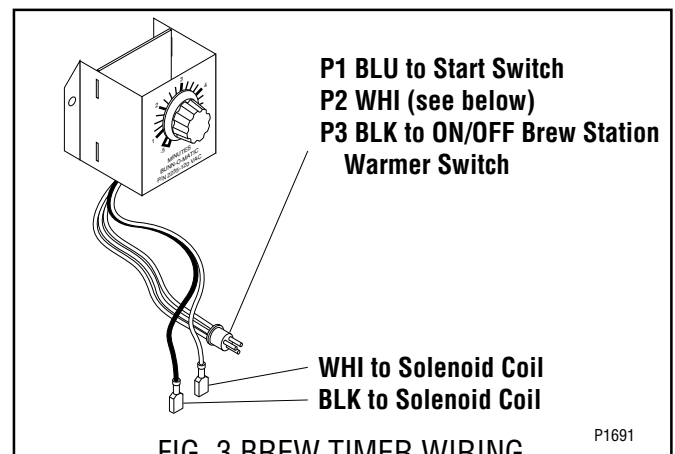


FIG. 3 BREW TIMER WIRING

MODEL

OT WHI to Indicator Lamp

RT WHI to Brew Station Warmer

SERVICE (cont.)

DIGITAL BREW TIMER (Late Models)

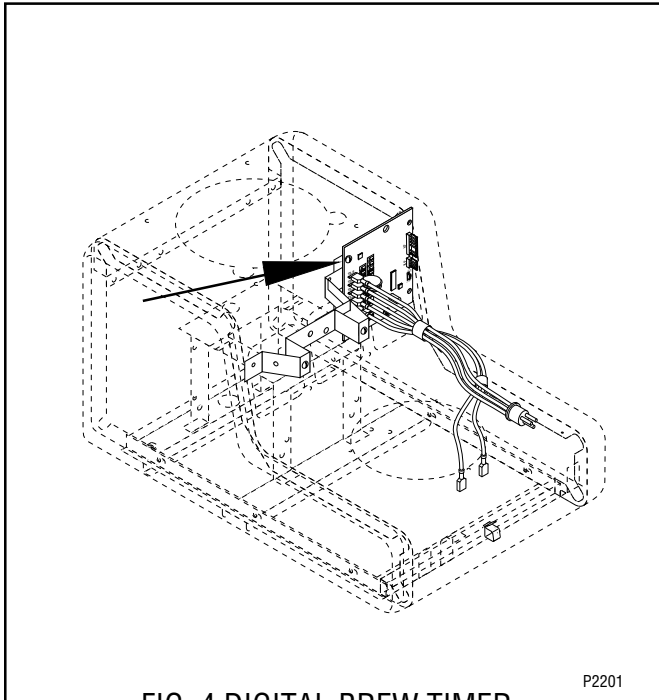


FIG. 4 DIGITAL BREW TIMER

Location:

The timers are located inside the front of the trunk on the upper right side of the component brackets.

Test Procedure.

NOTE: Do not remove or install wires while timer board is installed. Pressure applied to one side may cause damage to the board.

1. Disconnect the brewer from the power source and remove the front access panel.
2. Remove the one #8-32 screw securing circuit board to the mounting bracket.
3. Remove circuit board and spacers (as required).
4. With a voltmeter, check the voltage across terminals TL1 and TL2 when the "ON/OFF" switch is in the "ON" position. Connect the brewer to the power source. The indication must be:
 - a) 120 volts ac for two wire 120 volt models.
 - b) 200 or 240 volts ac for two wire 200 or 240 volt models and three wire 120/240 volt models.
 - c) 100 volts ac for two wire 100 volt models.
5. Disconnect the brewer from the power source.

If voltage is present as described, proceed to #6.
If voltage is not present as described, refer to the *Wiring Diagrams* and check the brewer wiring harness.

6. Disconnect the white/blue wire from terminal TL3 and the blue/black wire from terminal TL5. With a voltmeter, check for continuity across the two wires when the "ON/OFF" switch is in the "ON" position (upper) and the START switch is pressed. Connect the brewer to the power source. The indication must be:
 - a) 120 volts ac for two wire 120 volt models.
 - b) 200 or 240 volts ac for two wire 200 or 240 volt models and three wire 120/240 volt models.
 - c) 100 volts ac for two wire 100 volt models.

If continuity is present as described, reconnect the wires and proceed to #7.

If continuity is not present as described, refer to the *Wiring Diagrams* and check the brewer wiring harness.

7. With a voltmeter, check the voltage across terminals TL1 and TL4 when the "ON/OFF" switch is in the "ON" position. Connect the brewer to the power source. The indication must be 0 volts.

If voltage is as described, proceed to #8.

If voltage is not as described, disconnect the brewer from the power source and replace the timer.

8. With a voltmeter, check the voltage across terminals TL1 and TL4 when the "ON/OFF" switch is in the "ON" position. Connect the brewer to the power source and press the "START" switch. The indication must be as follows:
 - a) 120 volts ac for two wire 120 volt models.
 - b) 200 or 240 volts ac for two wire 200 or 240 volt models and three wire 120/240 volt models.
 - c) 100 volts ac for two wire 100 volt models.

If voltage is present as described, the brew timer is operating properly. Reset the timer as required, to obtain the desired brew volume.

If voltage is not present as described, disconnect the brewer from the power source and replace the timer.

Removal and Replacement:

1. Remove the one #8-32 screw securing circuit board to the mounting bracket.
2. Remove circuit board and spacers (as required).

SERVICE (cont.)

DIGITAL BREW TIMER (Late Models)(cont.)

3. Remove all wires from the timer.
4. Attach all wires to the replacement timer board prior to installation to the component mounting bracket. Refer to FIG. 5 when reconnecting the wires.
5. Install new circuit board with spacers (as required) to the component mounting bracket.
6. Adjust the timer as described below.

Timer Setting:

NOTE: Prior to setting or modifying volumes, check that the brewer is connected to water supply, the tank is properly filled, and a funnel and server are in place.

NOTE: All volume settings must be done with the sprayhead installed.

1. **Modifying brew volumes.** To modify a brew volume, first check that the SET/LOCK switch is in the “SET” position on the circuit board.

To increase a brew volume, place the ON/OFF switch in the “ON” position, press and hold the START switch until three clicks are heard. Release the switch and press it again one or more times. (Failure to release the switch within two seconds after the third click causes the volume setting to be aborted and previous volume setting will remain in memory.) Each time the switch is pressed, two seconds are added to the brew time period. Allow the brew cycle to finish in order to verify that the desired volume has been achieved.

To decrease a brew volume, place the ON/OFF switch in the “ON” position, press and release the START switch once for every two-second interval to be removed from the total brew time period; then immediately press and hold down the START switch until three clicks are heard. Release the switch. (Failure to release the switch within two seconds after the third click causes the volume setting to be aborted and previous volume setting will remain in memory). Allow the brew cycle to finish in order to verify that the desired volume has been achieved.

2. **Setting brew volumes.** To set a brew volume, first check that the SET/LOCK switch is in the “SET” position on the circuit board. Place the ON/OFF switch in the “ON” position, press and hold the START switch until three distinct clicks are heard and then release the switch. (Failure to release the switch within two seconds after the third click causes the volume setting to be aborted and previous volume setting will remain in memory.)

View the level of the liquid being dispensed. When the desired level is reached, turn the ON/OFF switch to “OFF”.

NOTE: Several ounces of water will continue to syphon from the tank after turning the switch “OFF”. The brewer remembers this volume and will continue to brew batches of this size until the volume setting procedure is repeated.

NOTE: When brewing coffee, volume will decrease due to absorption by the coffee grounds.

3. **Setting programming disable feature.** If it becomes necessary to prevent anyone from changing brew time once programmed, you can set the SET/LOCK switch to the “LOCK” position. This will prevent any further programming until switch is once again put into the “SET” position.


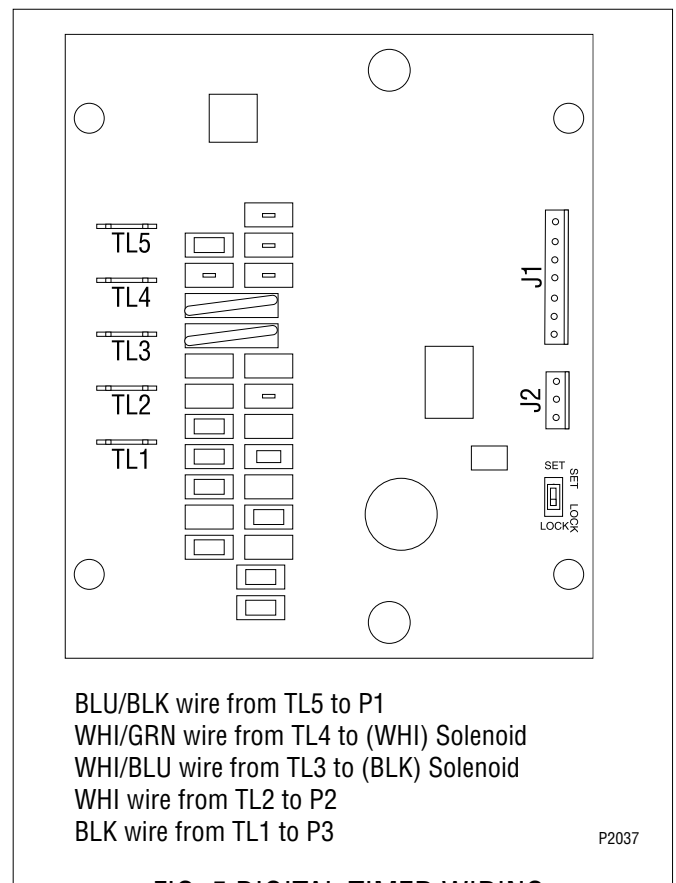


FIG. 5 DIGITAL TIMER WIRING

SERVICE (cont.)

Control Thermostat

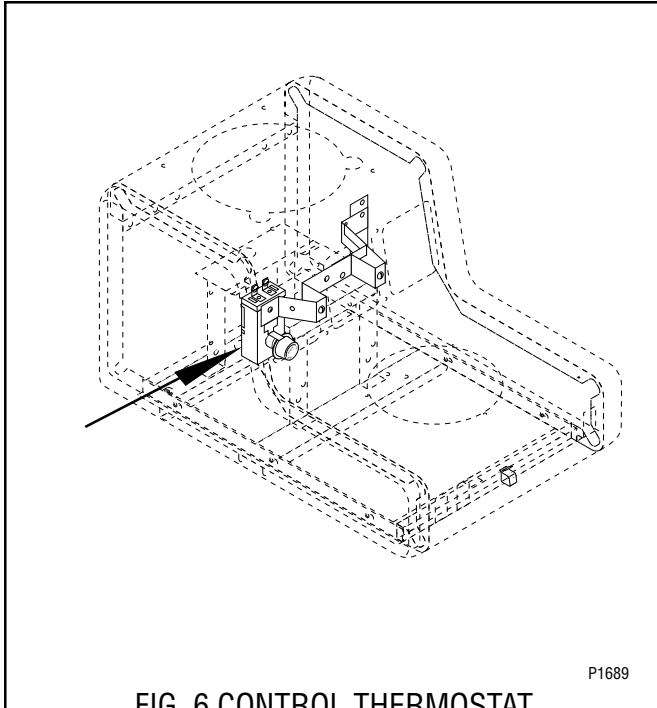

Location:

The control thermostat is located behind the front panel, FIG. 6 to the left of the tank.

To test the control thermostat, access will also be needed to the tank heater located in the top of the brewer.

Test Procedure:

1. Disconnect the brewer from the power source.
2. Check the voltage across the blue wire on the control thermostat and the white or red wire on the tank heater with a voltmeter. Connect the brewer to the power source. The indication must be:
 - a) 120 volts ac for two wire 120 volt models.
 - b) 200 or 240 volts ac for two wire 200 volt or 240 volt models and three wire 120/240 volt models.
 - c) 100 volts ac for two wire 100 volt models.
3. Disconnect the brewer from the power source.

If voltage is present as described, proceed to #4.
If voltage is not present as described, refer to the Wiring Diagrams and check the brewer wiring harness.

4. Check the voltage across the black wire terminal of the control thermostat and the white or red wire on the tank heater when the control thermostat is turned "ON" (fully clockwise). Connect the brewer to the power source.

The indication must be as described in step 2. Voltage must not be indicated across these terminals when the thermostat is turned "OFF" (fully counterclockwise).

5. Disconnect the brewer from the power source.

If voltage is present as described, the control thermostat is operating properly.


If voltage is not present as described, replace the control thermostat.




Removal and Replacement:

1. Remove both wires from the control thermostat terminals.
2. Remove the top lid from the brewer to gain access to the thermostat bulb.
3. Remove the thermostat bulb by firmly pulling-up on the capillary tube at the tank lid. This will disengage the grommet from the tank lid.
4. Remove the two #8-32 screws holding the control thermostat to the bracket.
5. Fasten the new control thermostat to the brewer housing.
6. Route the capillary tube up through the brewer trunk.

NOTE - Make sure that the capillary tube is away from any electrical termination and is not kinked.

7. Slide the grommet to the red mark on the capillary tube.
8. Insert the bulb through the hole in the tank lid and press the grommet firmly and evenly so that the groove in the grommet fits into the tank lid.
9. Carefully bend the capillary tube so that the tube and bulb inside the tank are in a vertical position.
10. Refer to FIG. 7 when reconnecting the wires.
11. Readjust the control thermostat dial as required.

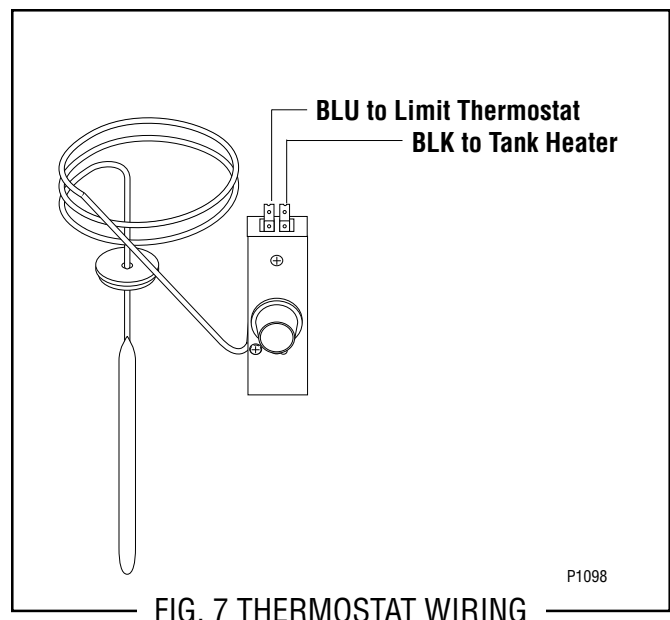

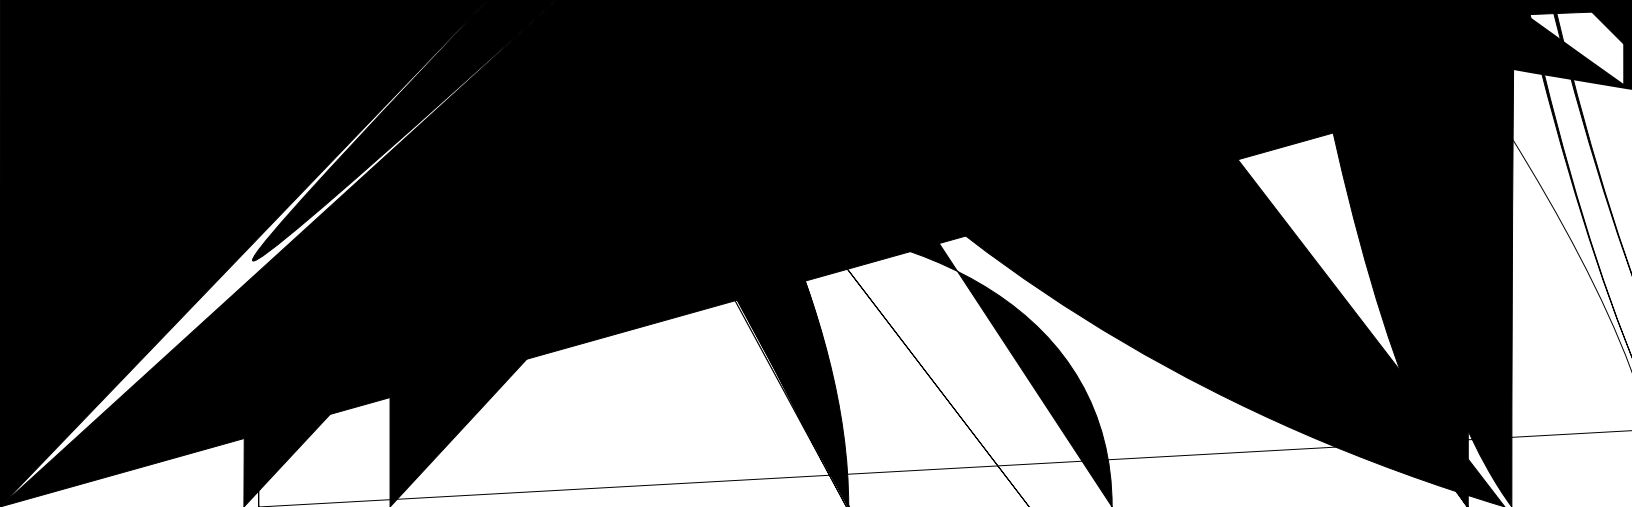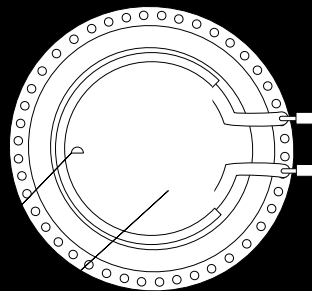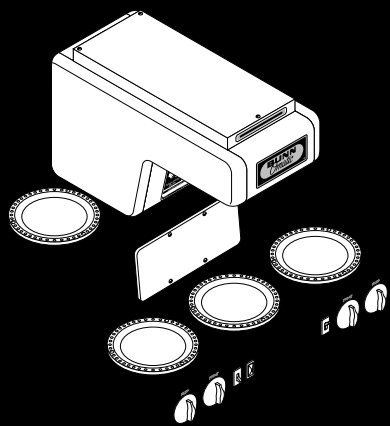

SERVICE (cont.)

Warmer Switch(es)

OT: On/Off Brew Station & Upper

RT: On/Off Brew Station

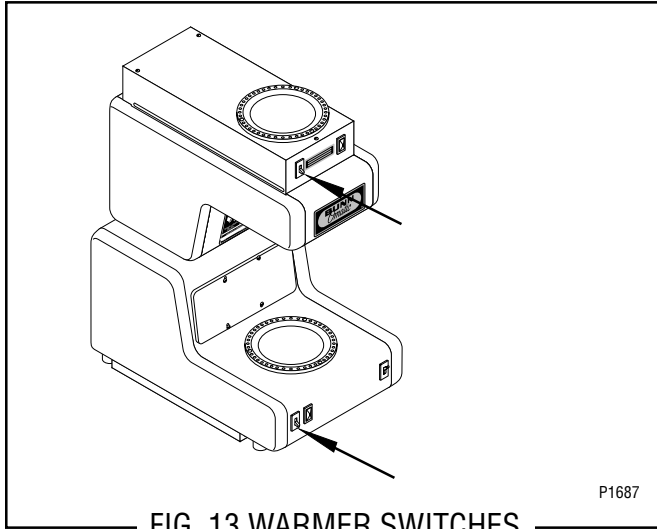


FIG. 13 WARMER SWITCHES

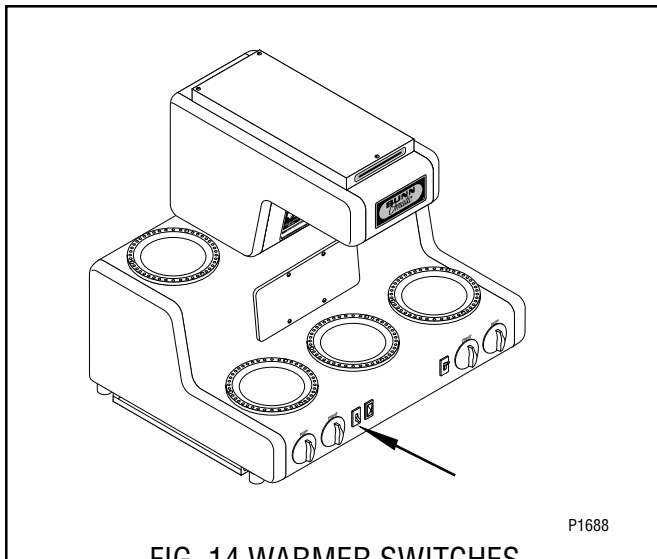


FIG. 14 WARMER SWITCHES

Location:

These switches are located beneath and to the left of their associated warmers as viewed from the front, FIG.s 13 and 14.

Test Procedure:

1. Locate the switch terminal with black wires that do not go to the nearby indicator lamp.
2. Check the voltage across this terminal and the terminal on the indicator lamp with white or red wires with a voltmeter. Connect the brewer to the power source. The indication must be:
 - a) 120 volts ac for two wire 120 volt models.
 - b) 200 or 240 volts ac for two wire 200 volt or 240 volt models and three wire 120/240 volt models.
 - c) 100 volts ac for two wire 100 volt models.
3. Disconnect the brewer from the power source.

If voltage is present as described, proceed to #4. If voltage is not present as described, refer to the Wiring Diagrams and check the brewer wiring harness.

4. Check the voltage across the other switch terminal and the terminal on the indicator lamp with white or red wires with a voltmeter when the switch is in the upper position. Connect the brewer to the power source. The indication must be as described in step 2. Voltage must not be present across these terminals in the lower position.
5. Disconnect the brewer from the power source.

If voltage is present as described the switch is operating properly.

If voltage is not present as described, replace the switch.

Removal and Replacement:

1. Compress the clips inside the housing and gently push the switch through the opening.
2. Remove the wires from the switch terminals.
3. Refer to FIG. 15 when reconnecting the wires.
4. Push the new switch firmly into the opening.

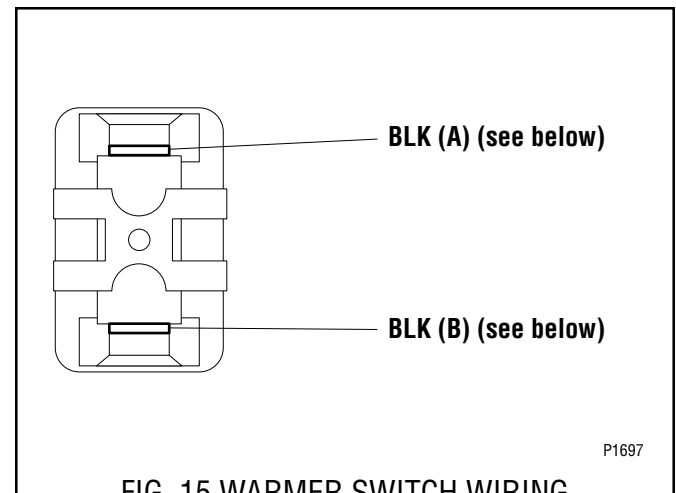


FIG. 15 WARMER SWITCH WIRING

MODEL


OT Upper	BLK A	to Warmer
		to Indicator Lamp
	BLK B	to Harness P3

OT On/Off Brew Station

BLK A	to Indicator Lamp
	to Brew Station Warmer
	to Timer P3
BLK B	to Terminal Block

RT On/Off Brew Station

BLK A	to Indicator Lamp
	to Timer P3
	to Brew Station Warmer
BLK B	to Left Front Warmer Switch
	to Right Front Warmer Switch

 

SERVICE (cont.)

Warmer Switch(es)

RT: Right Rear Three Heat Rotary

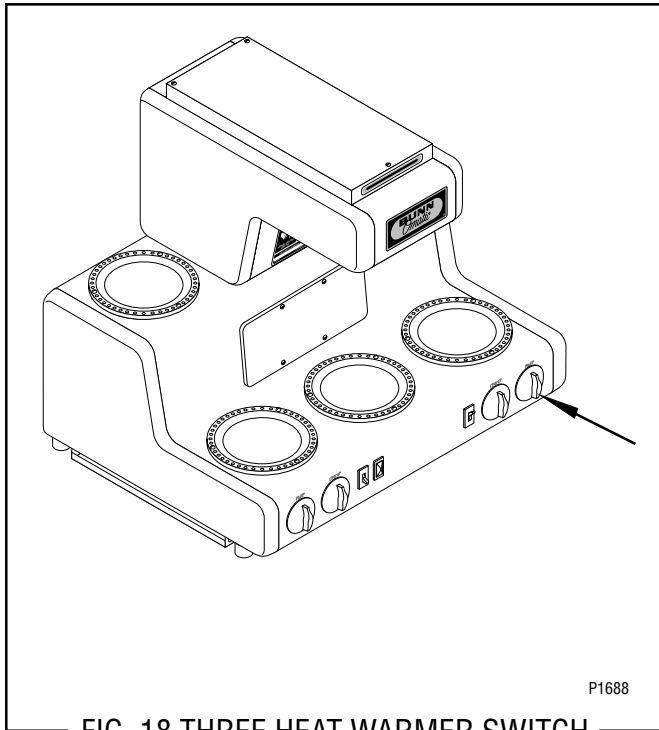


FIG. 18 THREE HEAT WARMER SWITCH

Location:

This switch is the farthest on the right of the base as viewed from the front, FIG. 18. Its knob is marked Off/Low/Med/High.

Test Procedure:

1. Check the voltage across terminals L1 and N with a voltmeter. Connect the brewer to the power source. The indication must be:
 - a) 120 volts ac for two wire 120 volt models.
 - b) 200 or 240 volts ac for two wire 200 volt or 240 volt models and three wire 120/240 volt models.
 - c) 100 volts ac for two wire 100 volt models.
2. Disconnect the brewer from the power source.

If voltage is present as described, proceed to #3.
If voltage is not present as described, refer to the Wiring Diagrams and check the brewer wiring harness.

3. Check the voltage across terminals L1 and 3 with a voltmeter when the switch is in the "Low", "Med", or "High" positions. Connect the brewer to the power source. The indication must be as described in step 1. Voltage must not be present across these terminals in the "Off" position.
4. Disconnect the brewer from the power source.

5. Check the voltage across terminals L1 and 2 with a voltmeter when the switch is in the "High" position. Connect the brewer to the power source. The indication must be as described in step 1. Voltage must not be present across these terminals in the "Off", "Low", or "Med" positions.
6. Disconnect the brewer from the power source.
7. Check the voltage across terminals N and 1 with a voltmeter when the switch is in the "Med" or "High" positions. Connect the brewer to the power source. The indication must be as described in step 1. Voltage must not be present across these terminals in the "Off" or "Low" positions.
8. Disconnect the brewer from the power source.
9. Check the voltage across terminals N and 2 with a voltmeter when the switch is in the "Low" position. Connect the brewer to the power source. The indication must be as described in step 1. Voltage must not be present across these terminals in the "Off", "Med", or "High" positions.
10. Disconnect the brewer from the power source.

If voltage is present as described, the switch is operating properly.

If voltage is not present as described, replace the switch.

Removal and Replacement:

1. Remove the knob from the switch.
2. Loosen the 5/8" nut on the switch shaft and push the switch through the opening.
3. Remove the wires from the switch terminals.
4. Refer to FIG. 19 when reconnecting the wires.
5. Securely mount the new switch onto the housing and reinstall the knob.

NOTE: Switch must be installed right side up.


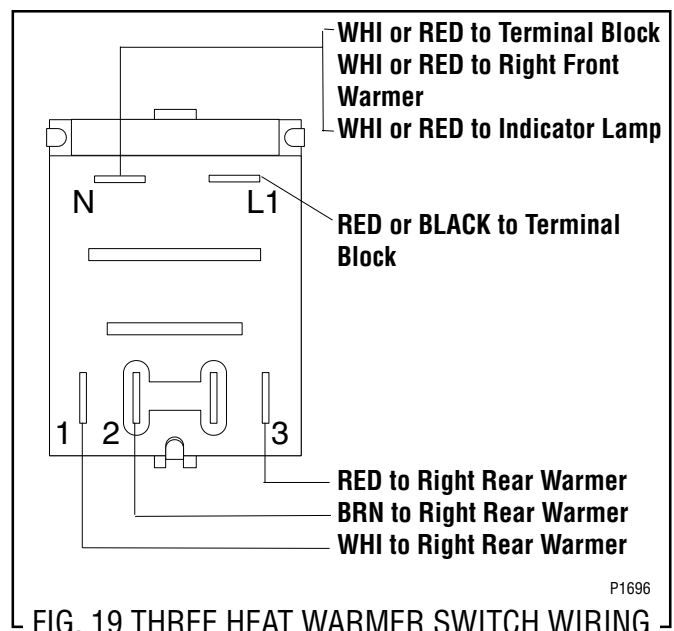


FIG. 19 THREE HEAT WARMER SWITCH WIRING

SERVICE (cont.)

Indicator Lamp(s)

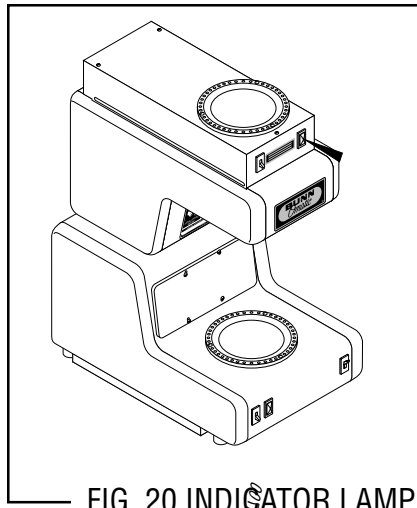

c) 100 volts ac for two wire 100 volt models.

- 4. Disconnect the brewer from the power source.

If voltage is present, the indicator lamp is operating properly.
If voltage is not present, replace the indicator lamp.

Removal and Replacement:

- 1. Compress the clips inside the housing and gently push the indicator lamp through the opening.
- 2. Remove the wires from the indicator lamp terminals.
- 3. Refer to FIG. 22 when reconnecting the wires.
- 4. Push the new indicator lamp firmly into the opening.

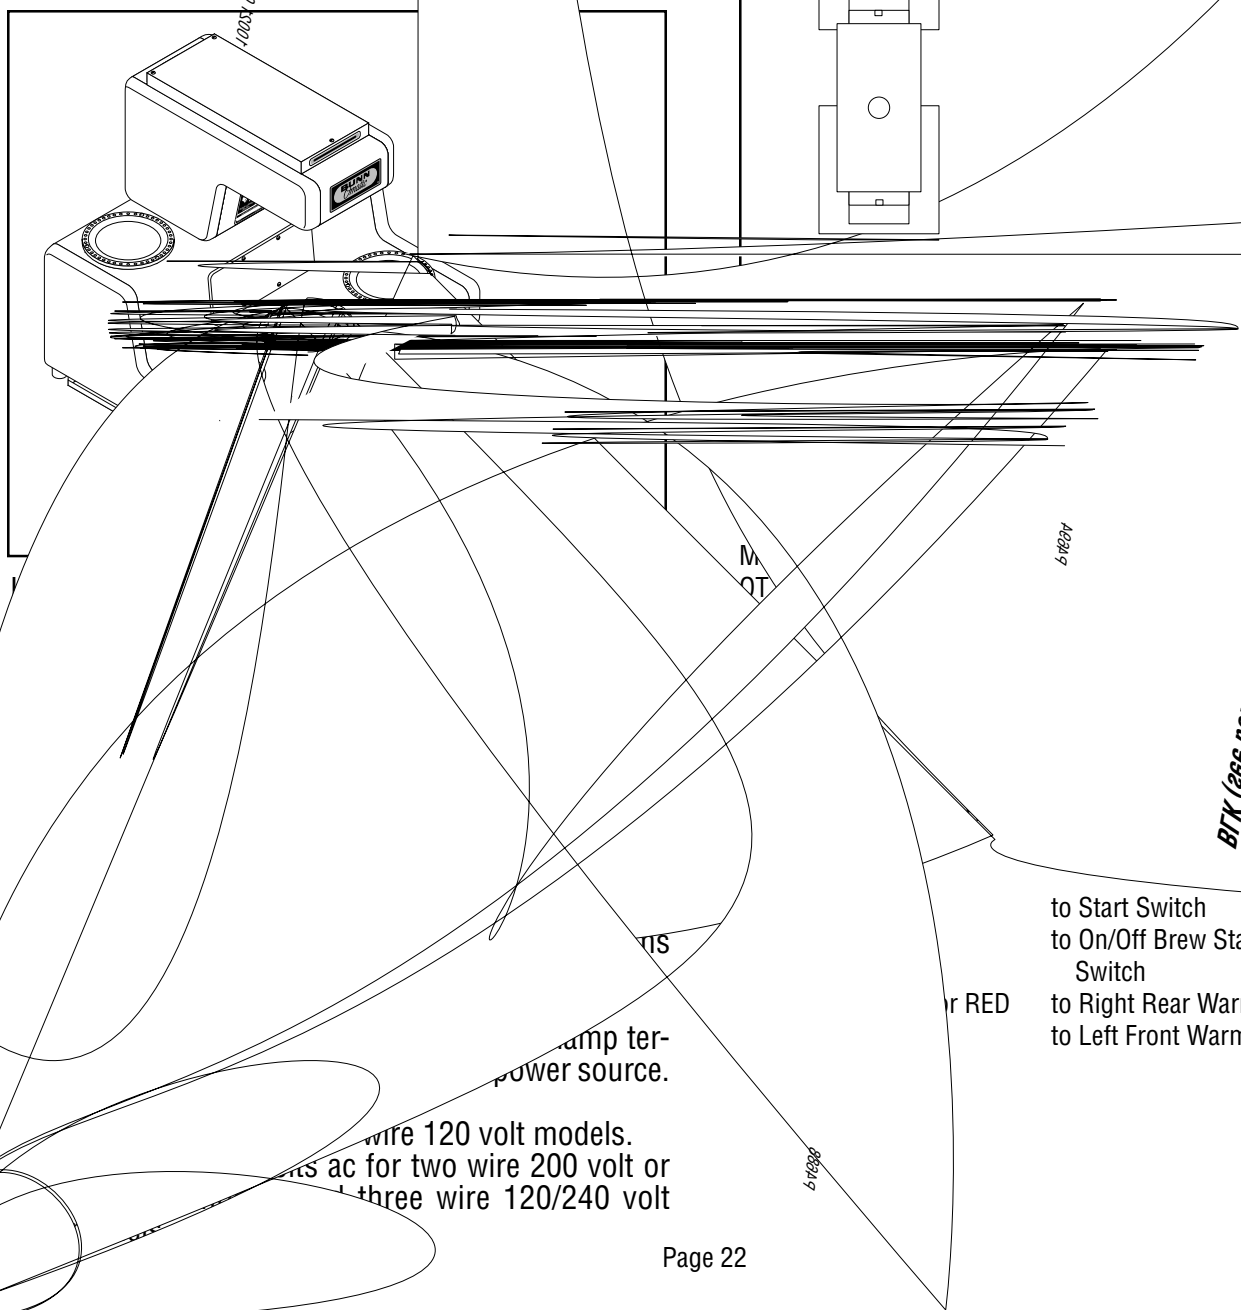
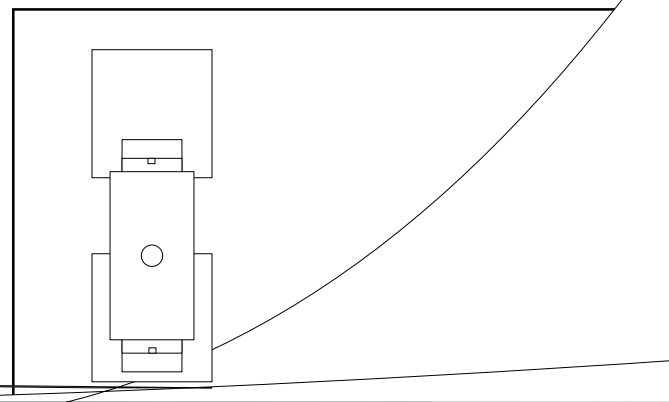


FIG. 20 INDICATOR LAMP

402149


*BTX (see pg 10M)
(see pg 10M)
MHI of BED*

to Start Switch
to On/Off Brew Station Warmer Switch
to Right Rear Warmer Switch
to Left Front Warmer

wire 120 volt models.
100 volts ac for two wire 200 volt or
120/240 volt three wire

SERVICE (cont.)

Limit Thermostat

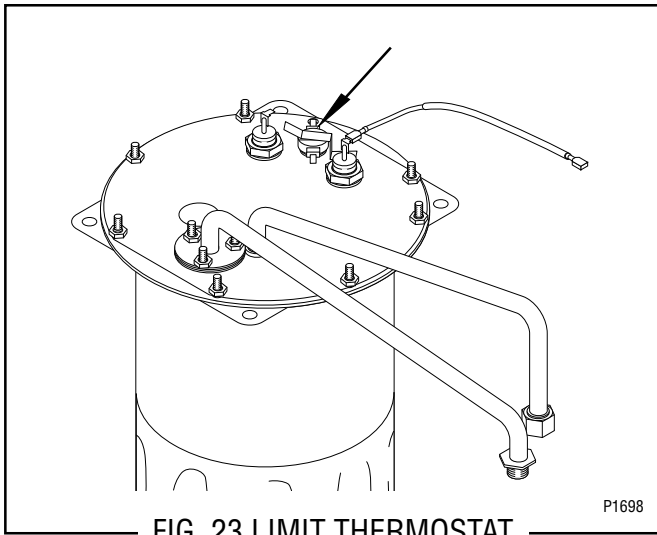

Location:

The limit thermostat is located on the tank lid between the tank heater terminals, FIG. 23.

Test Procedure:

1. Disconnect the brewer from the power source.
2. Check voltage across the black wire from the limit thermostat and the white or red wire on the tank heater terminal. Connect the brewer to the power source. The indication must be:
 - a) 120 volts ac for two wire 120 volt models.
 - b) 200 or 240 volts ac for two wire 200 volt or 240 volt models and three wire 120/240 volt models.
 - c) 100 volts ac for two wire 100 volt models.
3. Disconnect the brewer from the power source.

If voltage is present as described, proceed to #4.

If voltage is not present as described, refer to the Wiring Diagrams and check the brewer wiring harness.


4. Check for continuity across the limit thermostat terminals.

If continuity is present as described, the limit thermostat is operating properly.

If continuity is not present as described, replace the limit thermostat.

Removal and Replacement:

1. Remove both wires from the limit thermostat terminals.
2. Carefully slide the limit thermostat out from under the retaining clip.
3. Carefully slide the new limit thermostat into the retaining clip.
4. Refer to FIG. 24 when reconnecting the wires.

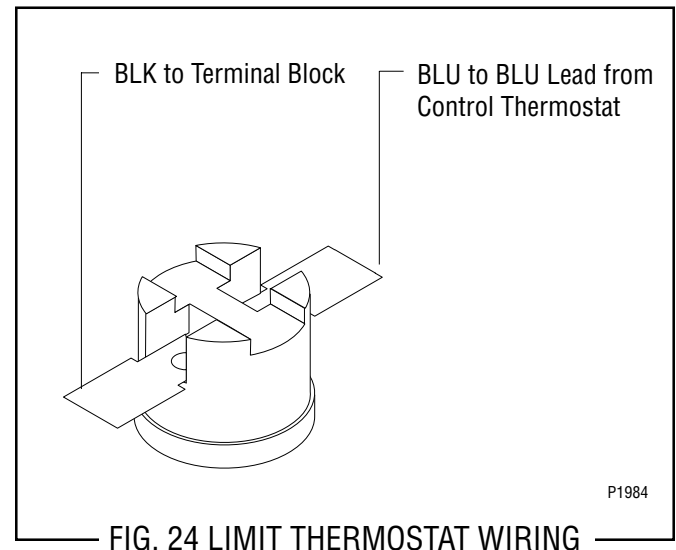

SERVICE (cont.)

Solenoid Valve

4. Check the solenoid valve for coil action. Connect the brewer to the power source, place the On/Off brew station warmer switch in the upper position, press and release the start switch. Listen carefully in the vicinity of the solenoid valve for a "clicking" sound as the coil magnet attracts and after the approximate setting on the brew timer dial, repels the plunger.
5. Disconnect the brewer from the power source.

If the sound is heard as described and water will not pass through the solenoid valve, there may be a blockage in the water line before or after the solenoid valve or, the solenoid valve may require inspection for wear, and removal of waterborne particles.

If the sound is not heard as described, replace the solenoid valve.

Removal and Replacement:



1. Disconnect all wires from the solenoid valve coil.
2. Turn off the water supply to the brewer.
3. Remove the cover pan attached with one or two screws and screw(s) beneath the

by ins

in the
ing the wires.

SERVICE (cont.)


Start Switch

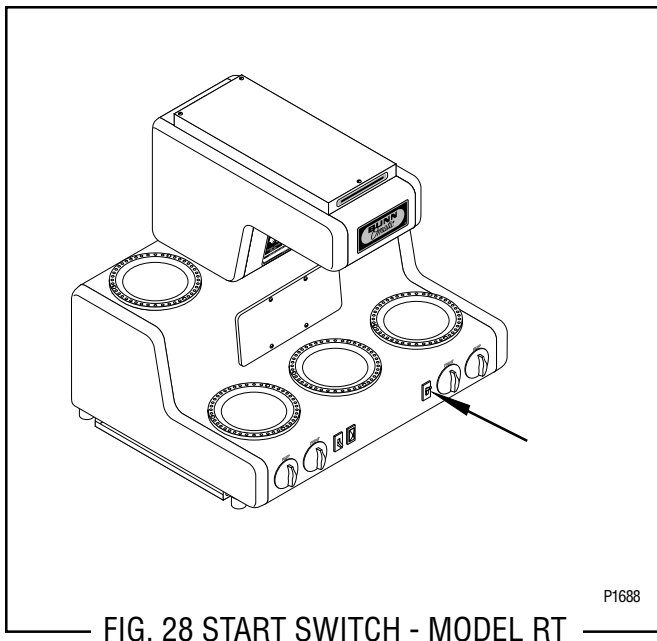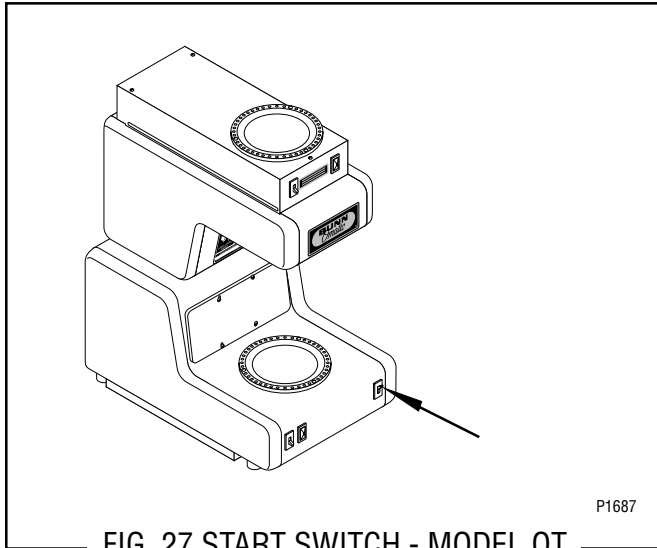

If continuity is present as described, reconnect the wires, the switch is operating properly. If continuity is not present as described, replace the switch.

Removal and Replacement:

1. Remove all wires from the switch terminals.
2. Compress the clips inside the housing and gently push the switch through the opening.
3. Push the new switch into the opening and spread the clips to hold the switch captive in the housing.
4. Refer to FIG. 29 when reconnecting the wires.

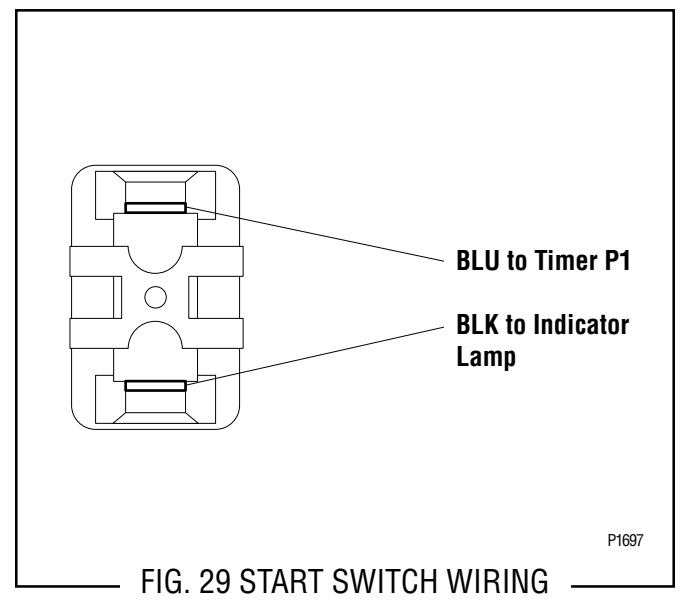

Location:

The start switch is located in the base, below and to the right of the brew station, FIG.s 27 & 28.

Test Procedure:

1. Disconnect the brewer from the power source and remove the wires from both terminals of the start switch.
2. Check for continuity across the two terminals on the switch when it is held in the lower position. Continuity must not be present across these terminals in the upper position.

Removal and Replacement:

1. Remove the wires to the tank heater and limit thermostat terminals.
2. Gently pull the thermostat tube with grommet out of the tank lid.
3. Remove the sprayhead and sprayhead nut from the panel on the bottom of the hood.
4. Disconnect the air vent tube from the fitting above the sprayhead panel.
5. On units with faucet, disconnect the inlet and outlet tubes from the faucet coil fittings.
6. Loosen the eight 8-32 nuts on the tank lid and remove the tank lid.
7. Remove the two nuts from the tank heater fittings.
8. Remove the tank heater.
9. Install the new tank heater with new sealing washers on the underside of the tank lid.
10. Securely tighten the nuts to be certain of a watertight seal.
11. Reinstall the tank lid and tighten the eight nuts.
12. Reconnect the air vent tube to the fitting above the sprayhead panel.
13. Reconnect the inlet and outlet tubes to the faucet coil fittings on units with faucet.
14. Reinstall the sprayhead tube nut and sprayhead.
15. Reinstall the thermostat into the tank lid.
16. Refer to FIG. 31 when reconnecting the wires.


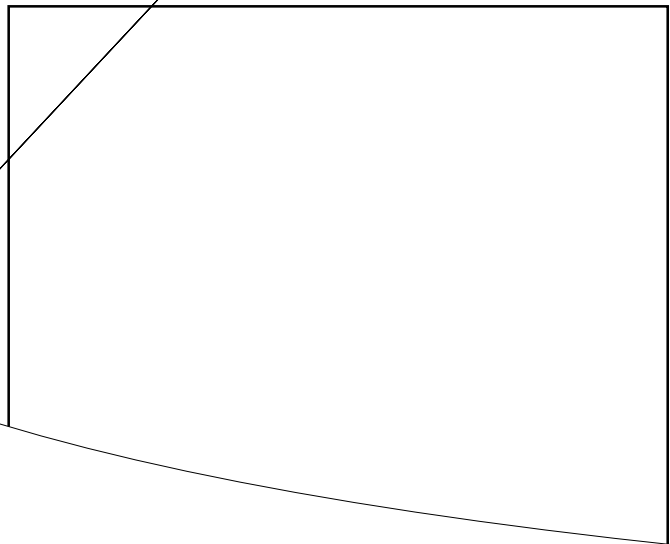


FIG. 31 TANK HEATER WIRING

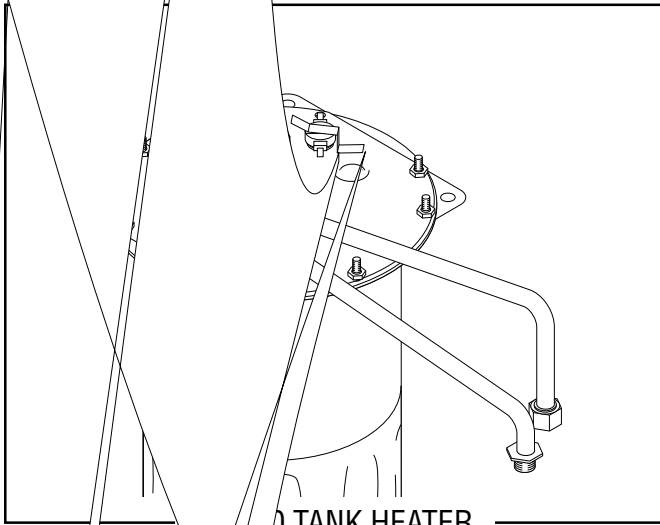

TANK HEATER

Location:

The tank heater is located on the tank lid, FIG. 30.

Test Procedure:

1. Check the voltage across the black and white or red wires on the tank heater with a voltmeter when the control thermostat is turned "ON" (fully clockwise). Do not start the brewer to the power source. The incoming voltage must be:
 - a) 170 volts ac for two wire 120 volt models.
 - b) 240 volts ac for two wire 200 volt or 240 volt models and three wire 120/240 volt models.
 - c) 100 volts ac for two wire 100 volt models.
2. If the voltage is correct, disconnect the power from the power source.


If the voltage is not correct, proceed to #3. If the voltage is correct, refer to the Wiring Diagram for the wiring harness.

SERVICE (cont.)

Thermal Cut-off

Location:

The thermal cut-off is located on the tank heater, FIG. 32.

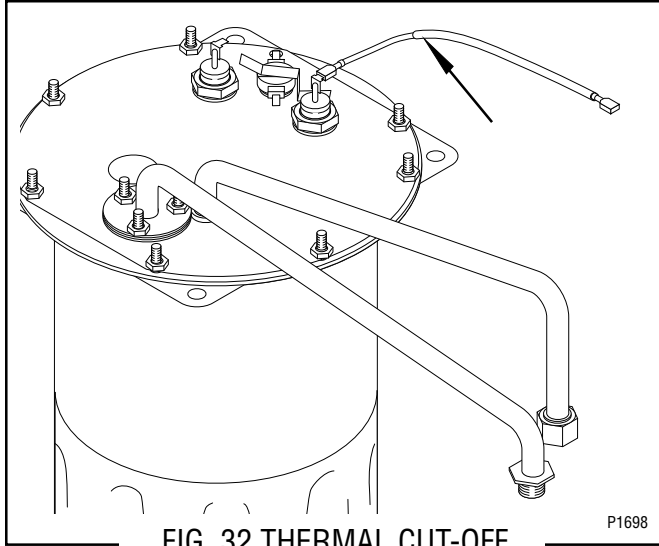

Test Procedures:


1. Disconnect the brewer from the power source.
2. Disconnect the thermal cut-off from the tank heater terminal and the wiring harness.
3. Check for continuity across the thermal cut-off terminals using an ohmmeter.

If continuity is present, the thermal cut-off is operating properly. If continuity is not present as described, replace the thermal cut-off.


Removal and Replacement:

1. Disconnect the thermal cut-off from the tank heater terminal and the wiring harness.
2. Remove thermal cut-off and discard.
3. Connect new thermal cut-off to the tank heater terminal and the wiring harness.
4. Refer to FIG. 32 when reconnecting wires.


SCHEMATIC WIRING DIAGRAM OT

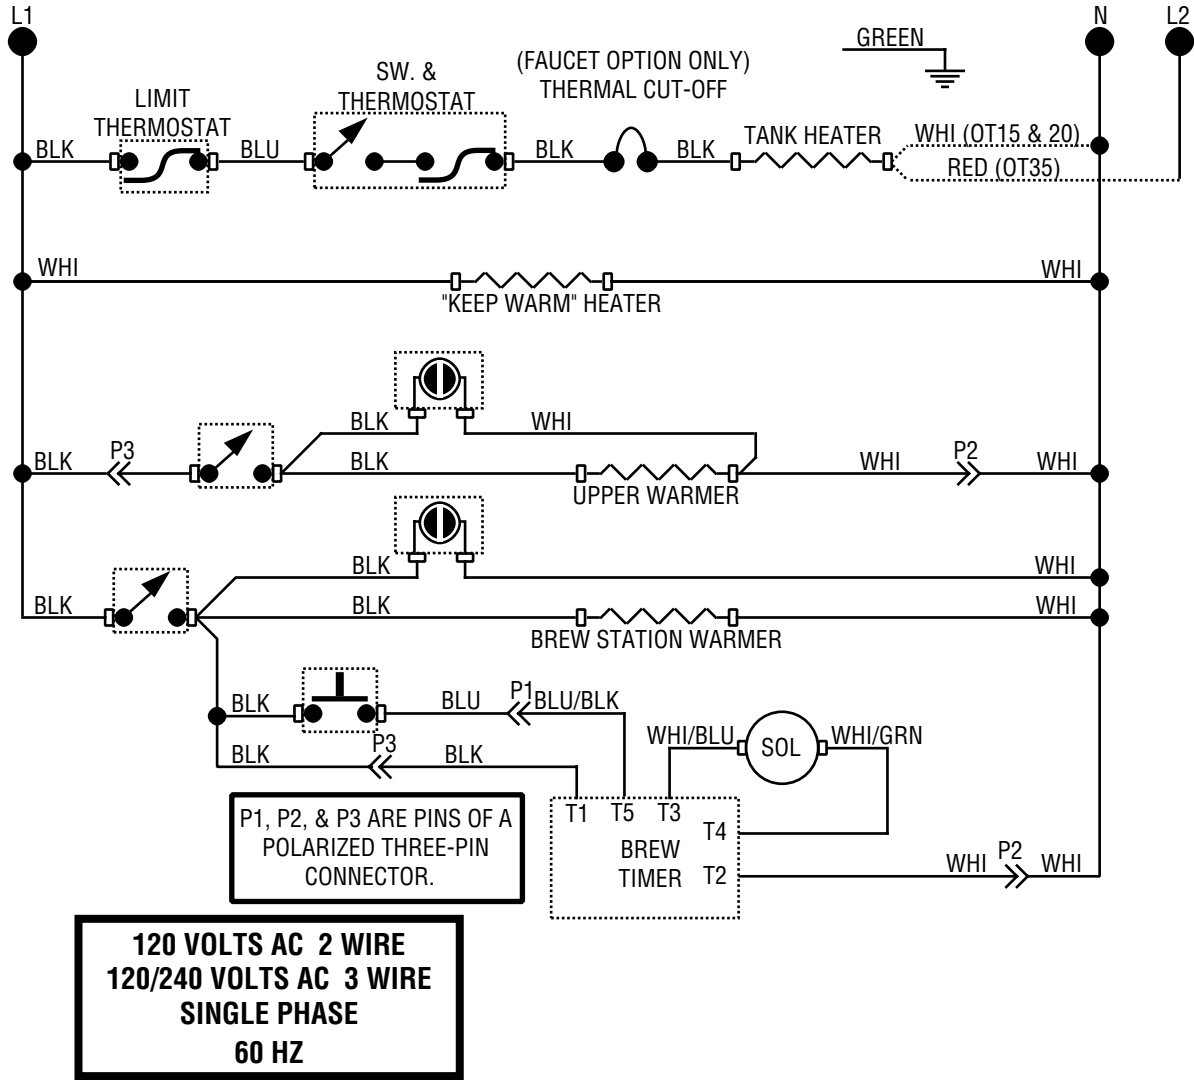


SCHEMATIC WIRING DIAGRAM OT

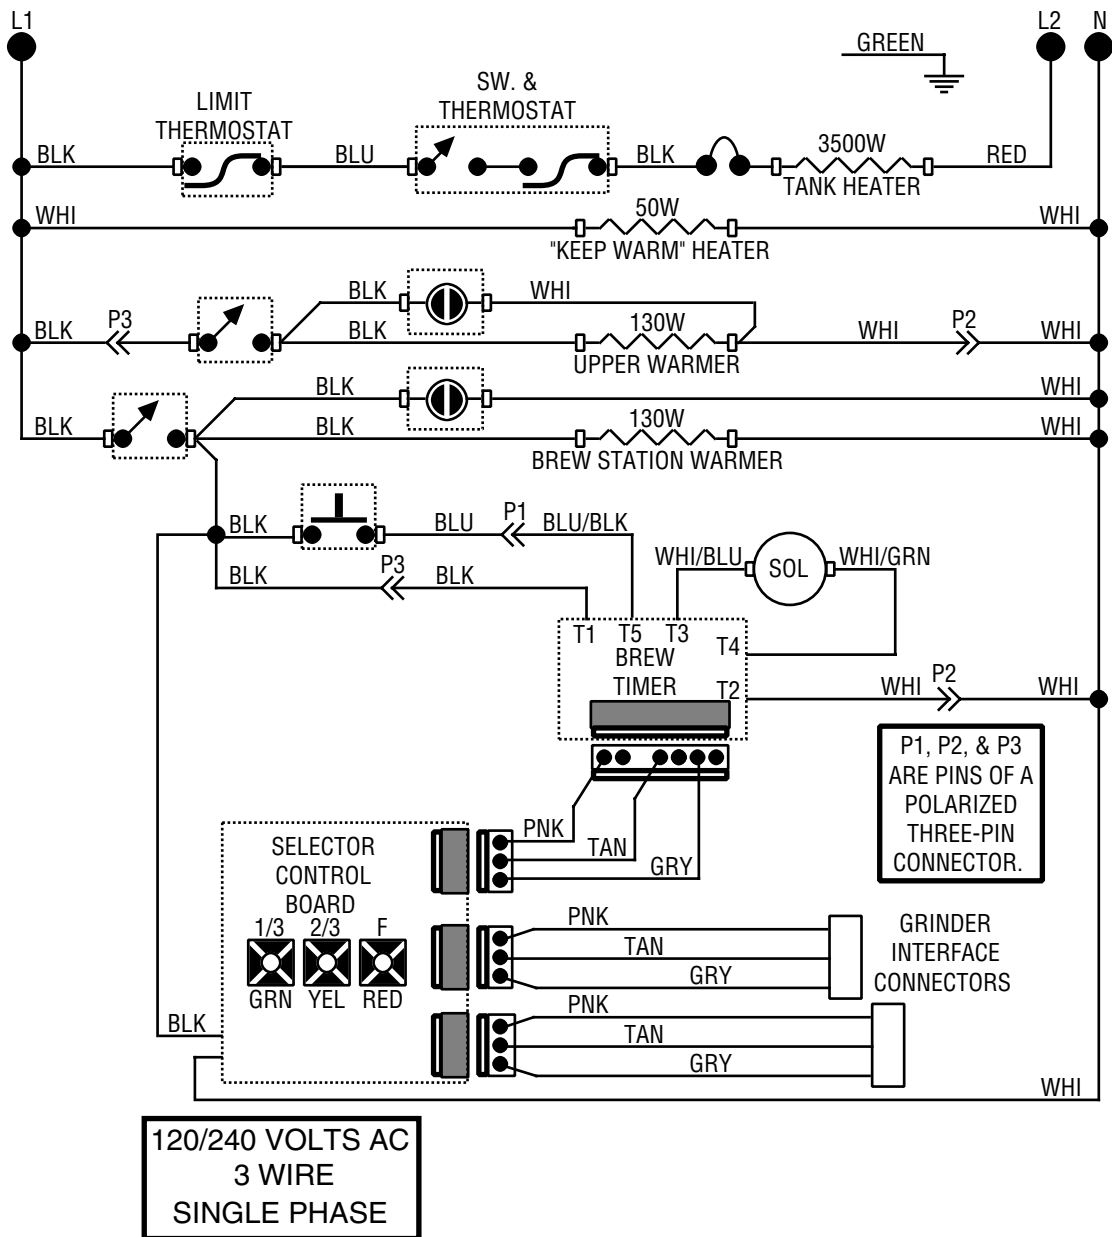


SCHEMATIC WIRING DIAGRAM OTA

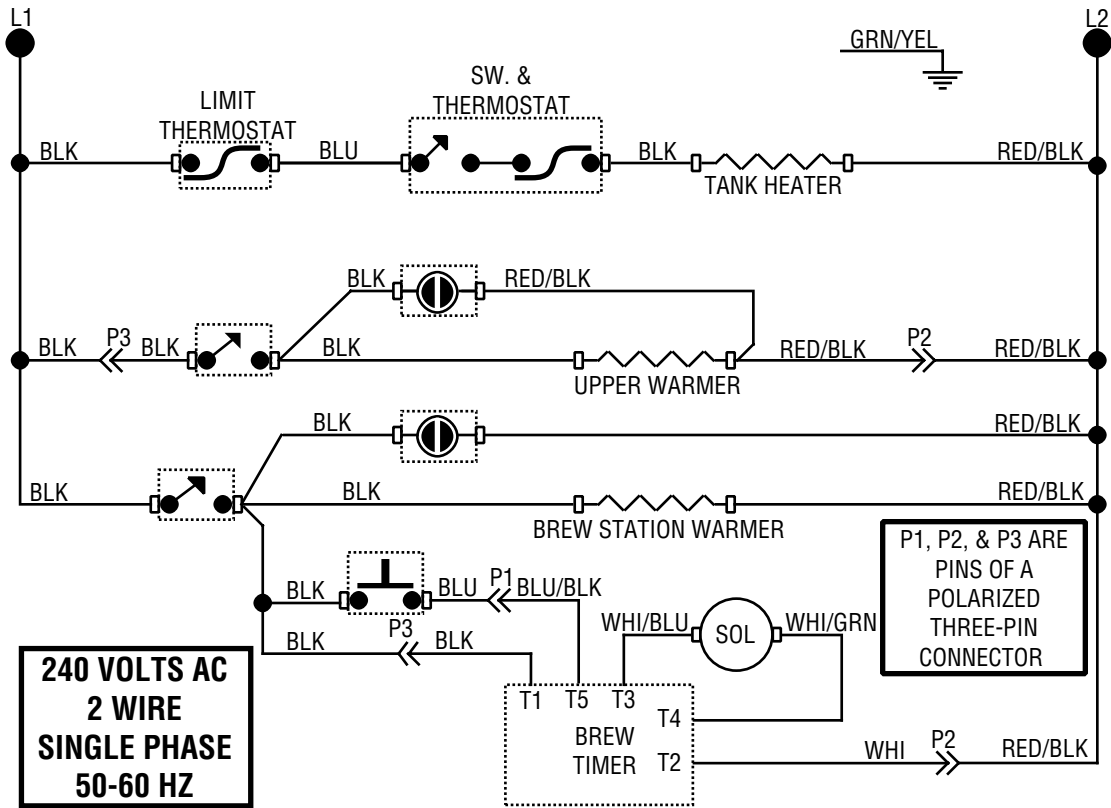


SCHEMATIC WIRING DIAGRAM OT25B

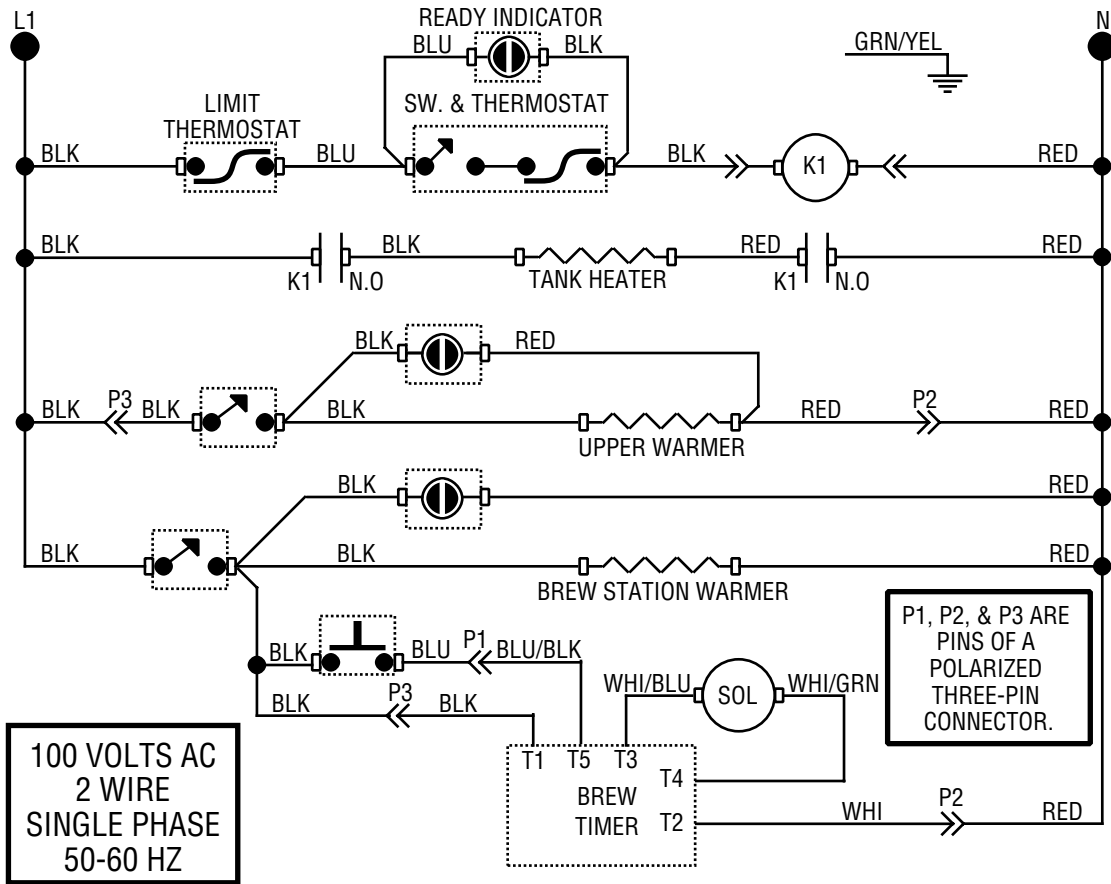


SCHEMATIC WIRING DIAGRAM OT35B

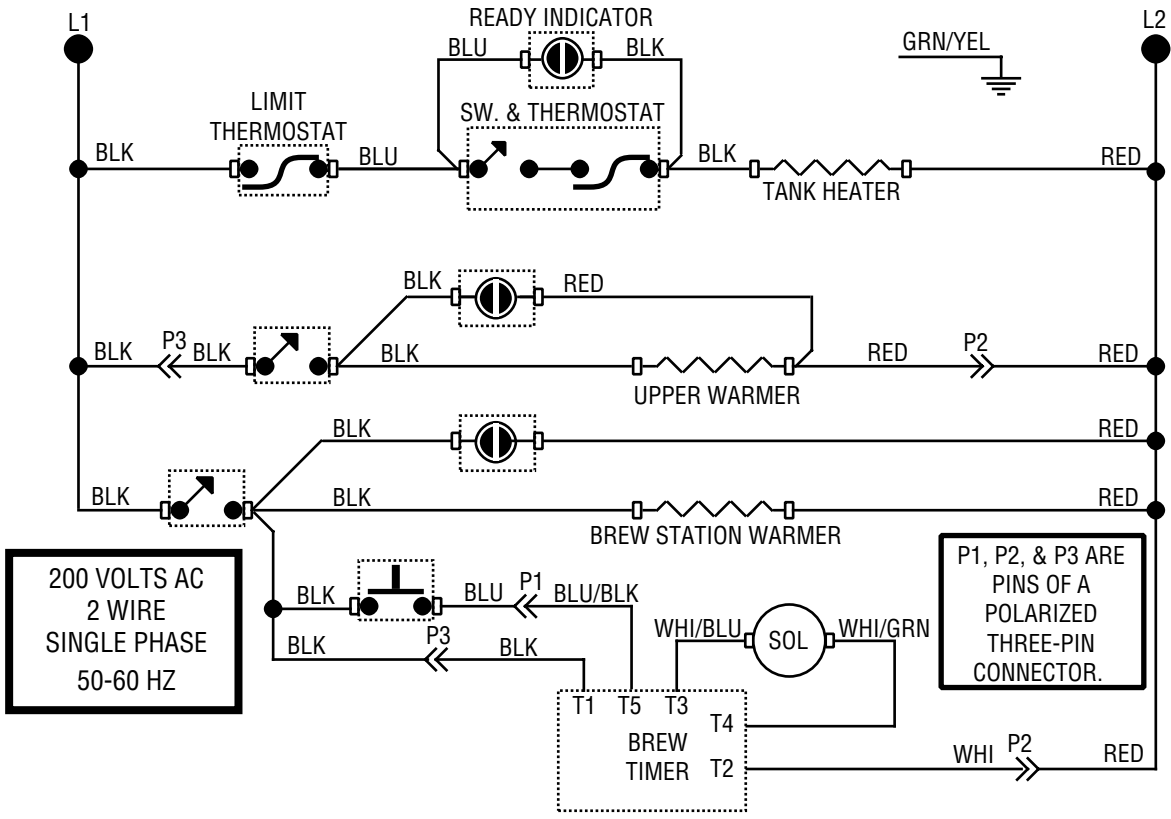

SCHEMATIC WIRING DIAGRAM RT

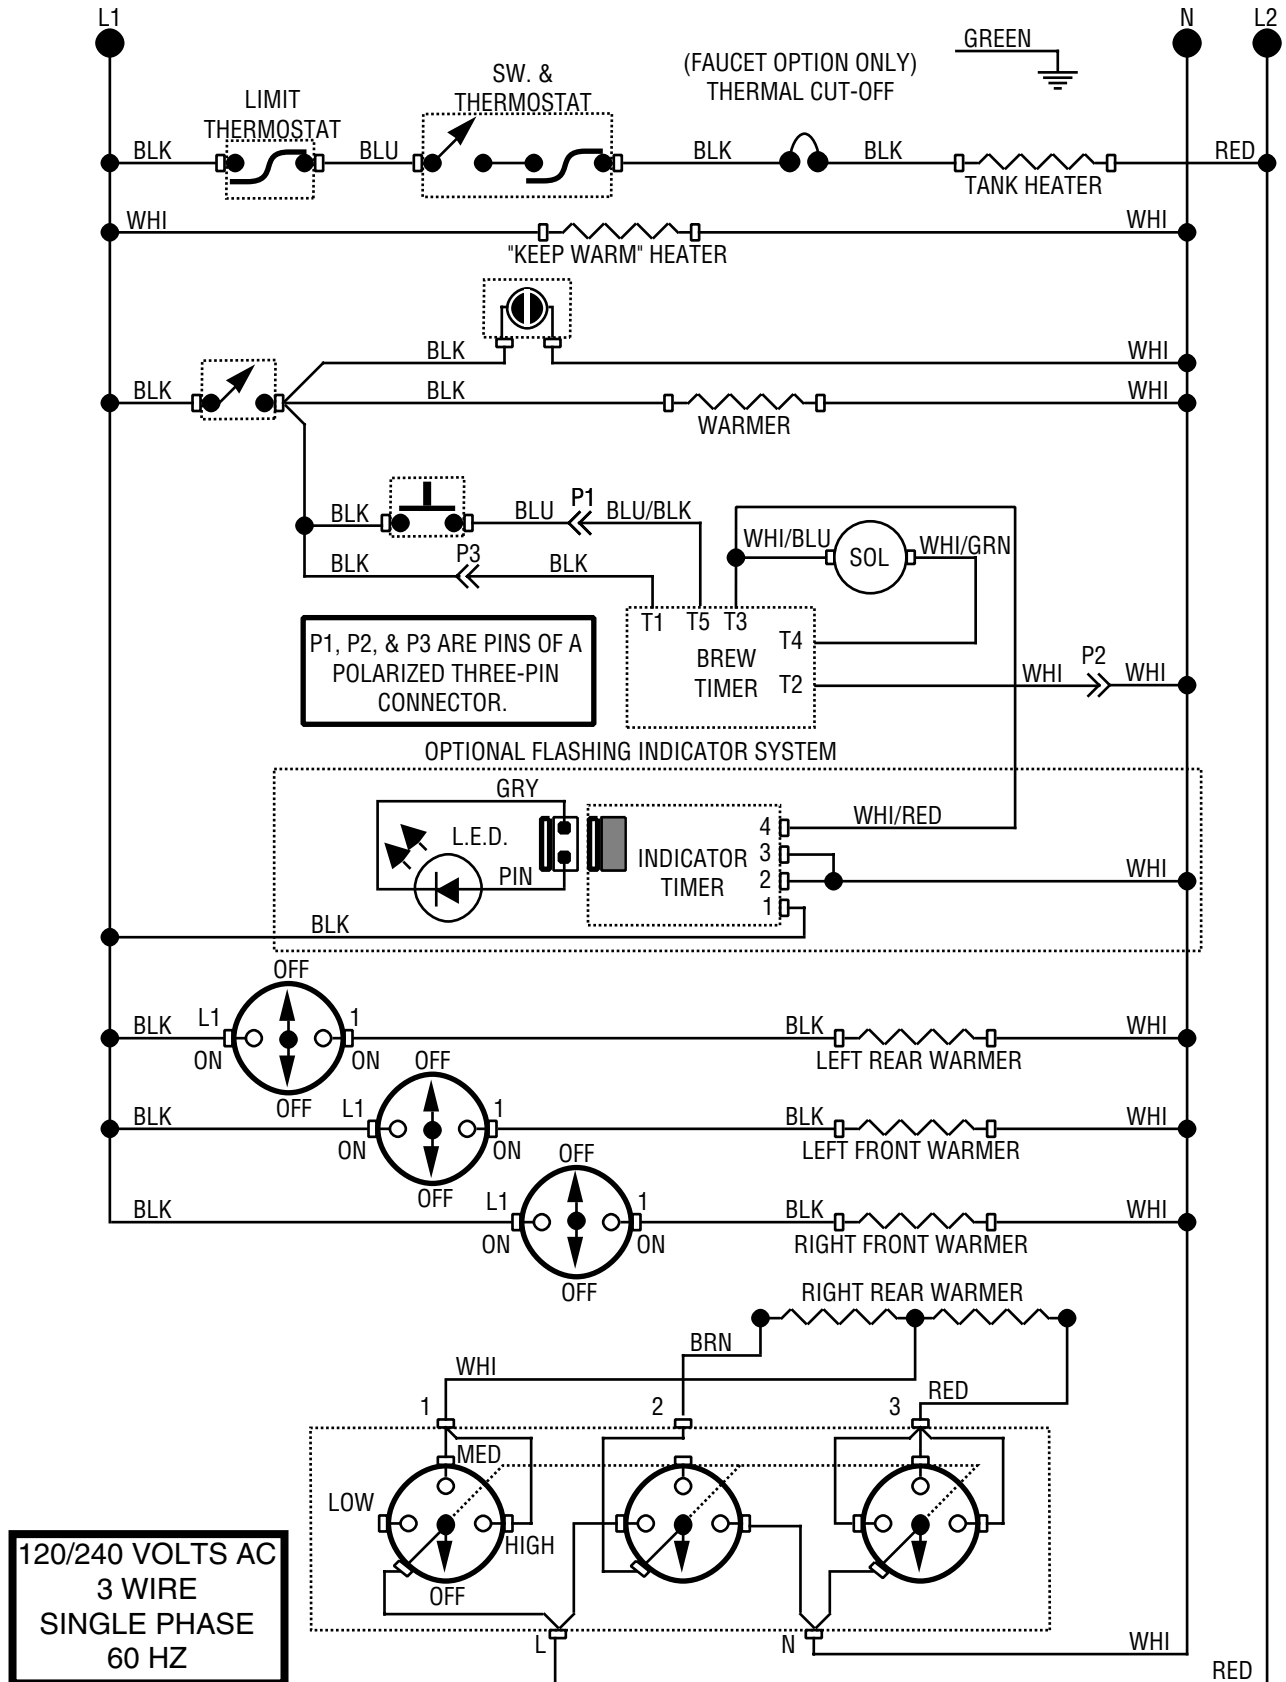


SCHEMATIC WIRING DIAGRAM RTA

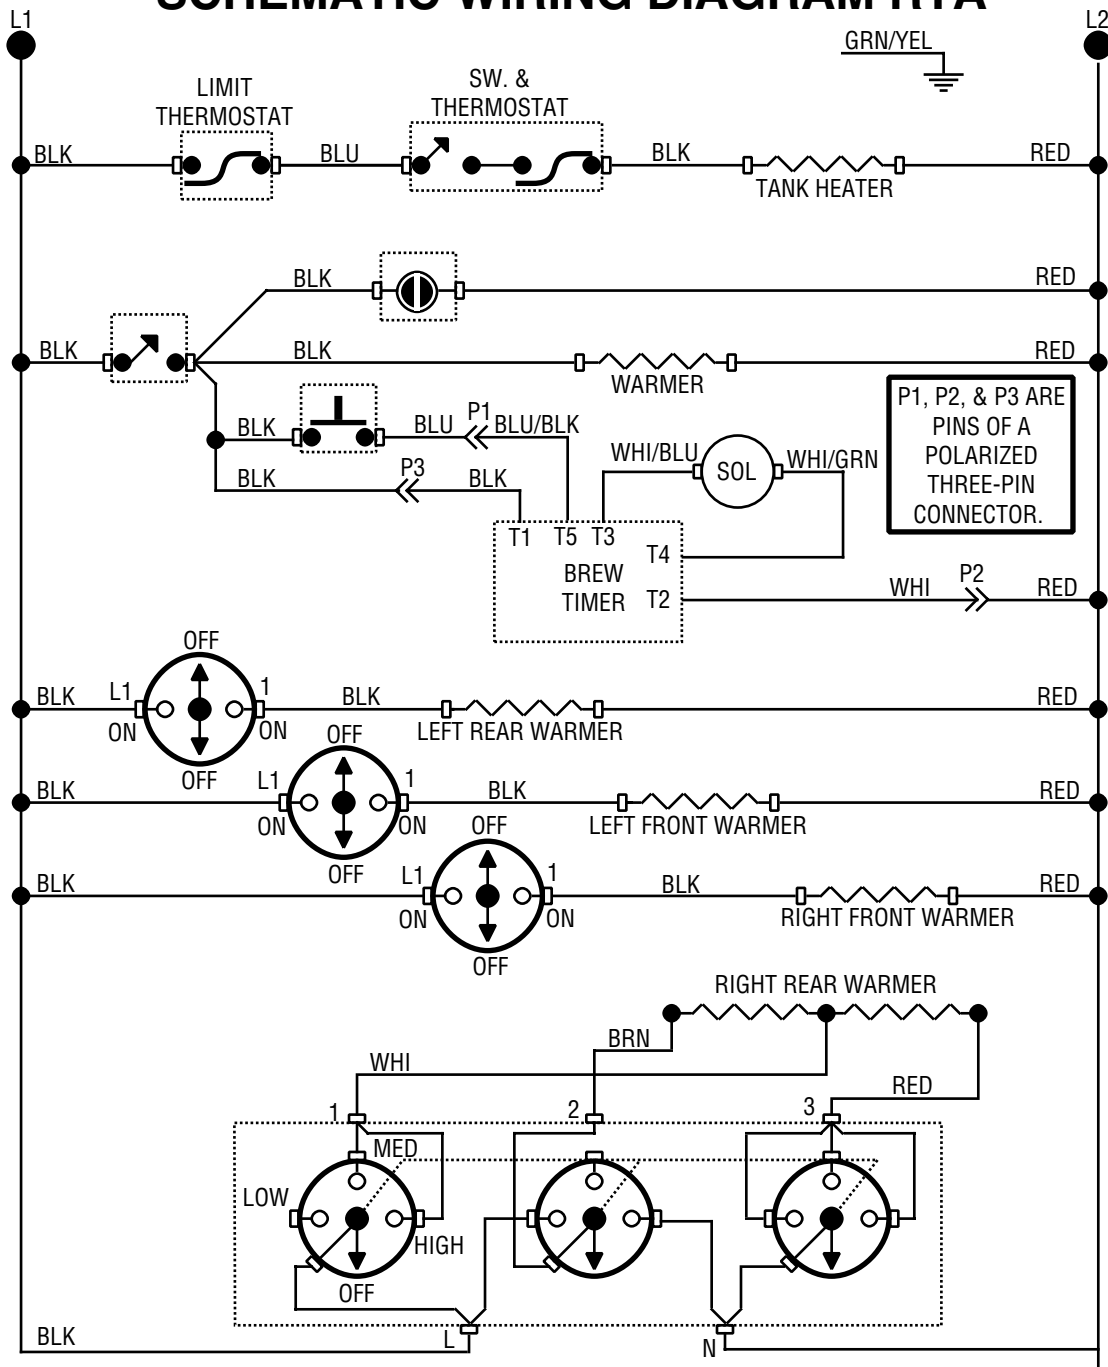

P1, P2, & P3 ARE PINS OF A POLARIZED THREE-PIN CONNECTOR.

**240 VOLTS AC
2 WIRE
SINGLE PHASE
50-60 HZ**


SCHEMATIC WIRING DIAGRAM RT25B

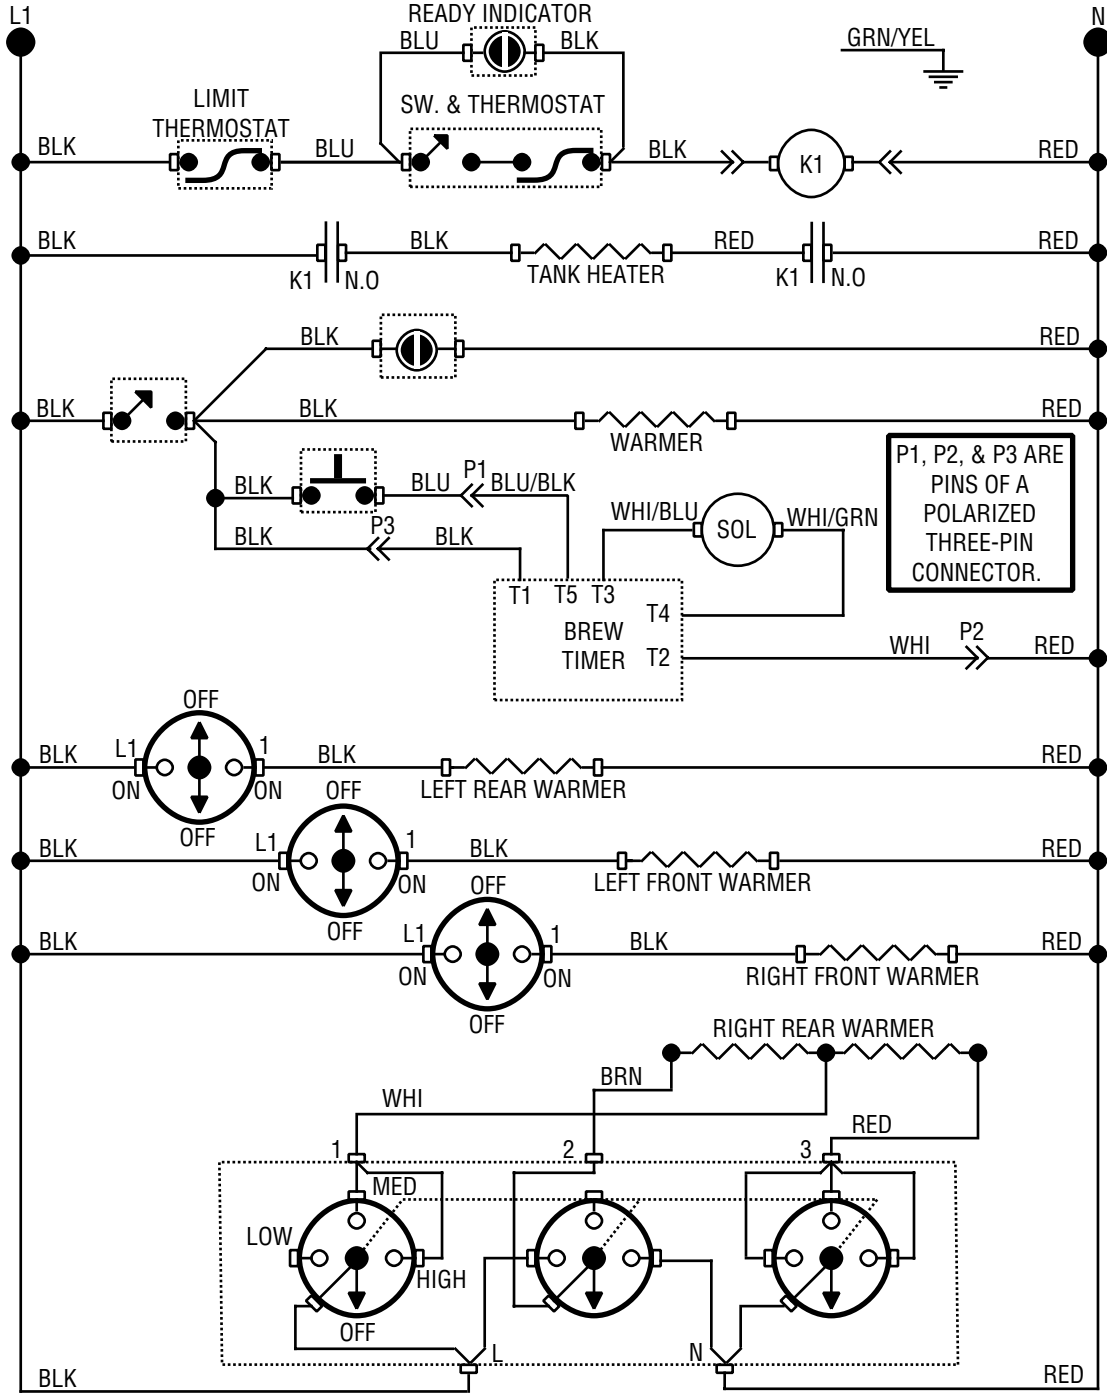

P1, P2, & P3 ARE PINS OF A POLARIZED THREE-PIN CONNECTOR.

100 VOLTS AC
2 WIRE
SINGLE PHASE
50-60 HZ

SCHEMATIC WIRING DIAGRAM RT35B

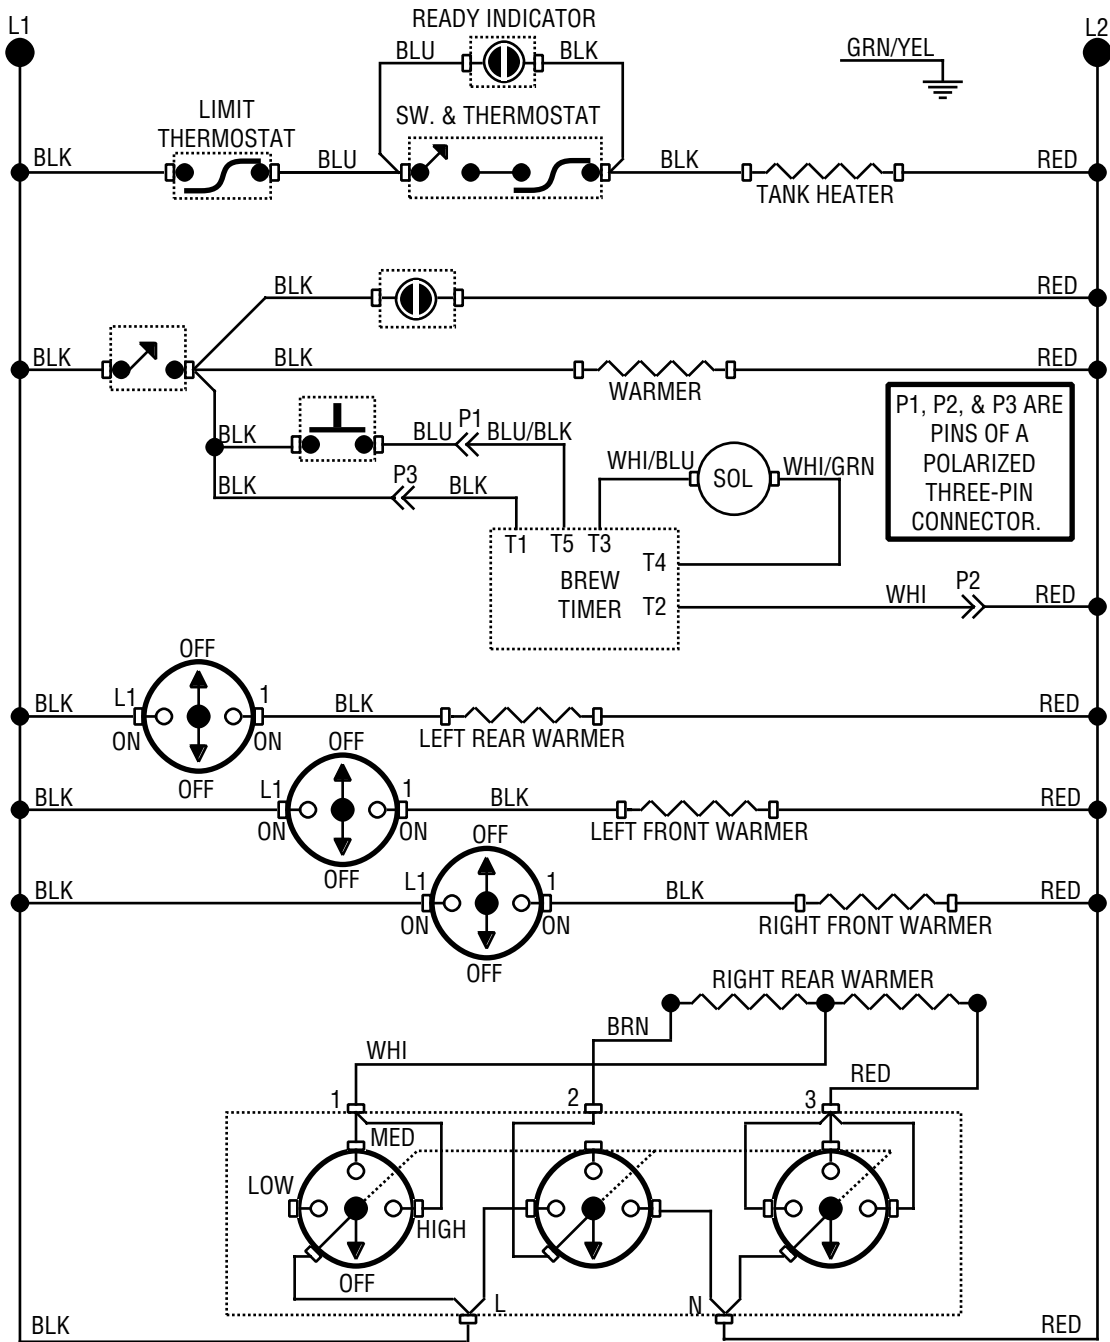

200 VOLTS AC
 2 WIRE
 SINGLE PHASE
 50-60 HZ