



Cord/ Cordless Steam Iron Operating Instructions Model No. ST-2000

Safety Information

PRECAUTIONS	2
IMPORTANT SAFETY INSTRUCTIONS	3,4

Operation

COMPONENTS IDENTIFICATION	5
HELPFUL IRONING TIPS	6
HOW TO FILL	7
HOW TO USE THE SPRAY FEATURE	8
HOW TO USE AS A DRY IRON	8
HOW TO USE AS A STEAM IRON	8
HOW TO USE CORD AND CORDLESS	9
HOW TO SET THE TEMPERATURE CONTROL	11

Maintenance

HOW TO CARE FOR YOUR IRON	10
---------------------------	----

General Information

SPECIFICATIONS	12
FABRIC IRONING CHART	12
READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE IRON	

SAFE USE OF THE IRON

Your safety and the safety of others are very important

We have provided important safety messages in this manual. Always read and obey all safety messages.



This is the safety alert symbol. It is used to alert you to potential hazards that can kill or injure you and others. The safety messages will follow the safety alert symbol and either the word “WARNING” or “CAUTION”. These words mean



WARNING

You can be seriously injured if you don't follow instructions.

You can be exposed to a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



CAUTION

The safety messages will tell you what the potential hazard is, how to reduce the chance of injury, and what can happen if the instructions are not followed.

Thank You for purchasing a Smartek Iron

Your iron is an appliance to be used only for ironing fabrics on an ironing board.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of burns, electric shock, fire, or injury to persons, when using your iron, basic safety precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THE IRON

1. Use the iron only for its intended purpose, for ironing fabrics on board.
2. To protect against burns or injury to persons, do not iron or steam fabrics while being worn on the body.
3. The iron should always be turned “OFF” before plugging or unplugging from outlet. Never yank cord to disconnect from outlet, instead, grasp plug and pull to disconnect.
4. Do not allow cord to touch hot surface. Allow the iron to cool completely before storing.
Retract cord into cord reel unit when storing
5. Always disconnect iron from electrical outlet when filling or emptying water and when not in use.
6. To avoid risk of electric shock, do not operate iron with a damaged cord or if the iron has been dropped or damaged. Do not disassemble the iron. Incorrect reassembly can cause a risk of electric shock when the iron is used. For repair, take it to a qualified serviceman.
7. Close supervision is necessary for this appliance being used by or near children. Do not leave iron unattended while connected or on an ironing board.
8. Burns can occur from touching hot metal parts, hot water, or steam. Hot water may leak from the iron. Use caution when filling or turning the steam iron upside down.
9. To protect against burns or injury to persons, do not direct steam toward the body when ironing.
10. The iron must be used and rested on a stable surface. When placing the iron on its stand, ensure that the surface on which the stand is placed is stable.

SPECIAL INSTRUCTIONS



WARNING

To reduce the risk of electric shock or fire:

1. Do not operate another high wattage appliance on the same circuit, to avoid a circuit overload.
2. If an extension cord is absolutely necessary, use a cord rated a minimum of 10 amperes.
- Cord rated for less amperage may overheat, and should not be used. Care should be taken to arrange the cord so that it can not be accidentally pulled or tripped.




CAUTION

To reduce risk of personal injury and damage to your iron:

1. Never use steam iron cleaning products in the iron, as they may damage working parts of the iron.
2. Do not use the water additives or substitute water such as linen or scented water in the steam iron. They can stain fabrics.

COMPONENTS IDENTIFICATION

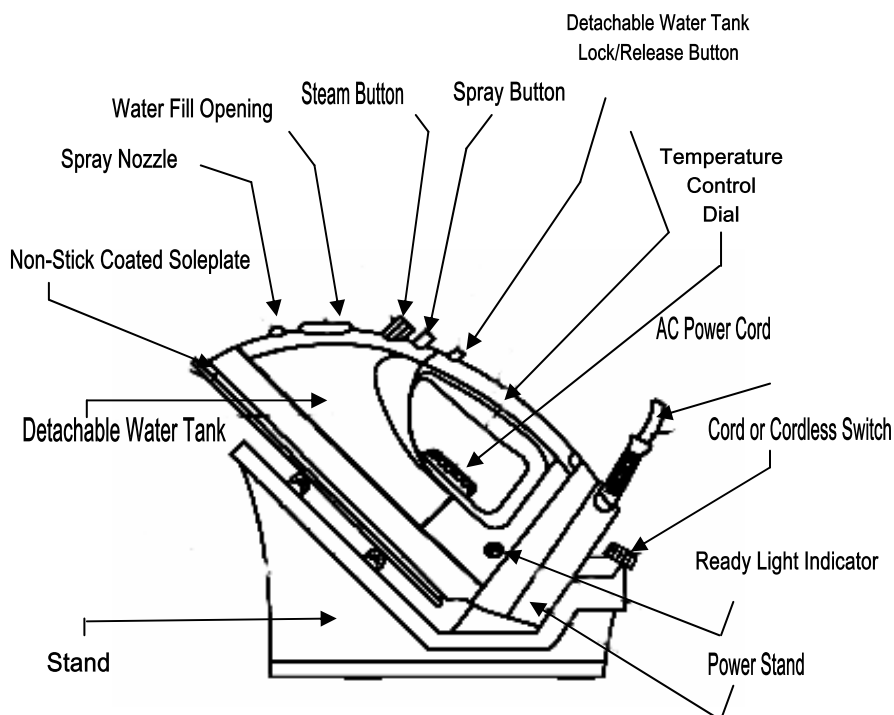

READ THIS INSTRUCTION BOOK THOROUGHLY BEFORE USING YOUR SMARTEK IRON TO BECOME FAMILIAR WITH THE IRON FEATURES.

HELPFUL IRONING TIPS

The Temperature Selector Dial of the Smartek iron has dots.
The dots are symbols for 3 temperature ranges:

- Low Temperature
- Medium Temperature
- High Temperature

Some fabrics are labeled with these dots as a guide for selecting the proper ironing temperature setting.

As a guide to the Fabric Care Symbols, the following symbols are printed for your information.

Fabric Care Symbols



A symbol crossed out indicates that the article of clothing must not be subjected to the particular treatment.

EXAMPLE :(DO NOT IRON)



Before ironing, sort the garments according to the different heat settings required, iron fabrics that require a lower temperature first.

Do not touch plastic buttons with a hot iron because they may melt.

Be careful around zippers and similar items to prevent the soleplate from scratching

HOW TO FILL WITH WATER

Make sure the iron is turned off and the AC Power Cord is unplugged from the electrical outlet. The iron can be filled with the Detachable Water Tank in place or removed. Set the Cord Switch to “Cordless” Remove the iron from the stand.

1. When the iron is sitting up on the Heel Rest, press the Tank Lock/Release Button down and the tank will be released.
2. Grasp the tank and lift it off the iron.
3. Open the Water Fill Opening and fill the Tank up to the “MAX” Line on the tank. To check the level of water, grasp the tank vertically.
4. To re-install the tank, set the tank onto the main body and press into place until a click sound is heard.
5. The water level can be observed through the transparent part of the tank, when iron placed vertically. When the water level becomes low, refill the tank, following the procedure described in steps 1 to 4 above.

NOTE:

Most tap water can be used in this iron. Do not use water additives or substitute water such as linen or scented water in the steam iron, they can stain fabrics or damage the iron. Do not fill the water more than the “MAX” position

HOW TO USE AS A STEAM IRON

1. Fill the iron as described in “HOW TO FILL WITH WATER”.
2. Position the iron vertically and turn the Temperature Control Dial to the steam position.
3. Plug the AC Cord into the electrical outlet.
4. Set the Temperature Control Dial to the steam position.
5. Preheat the iron until the indicator light goes out, usually about 1-2 minutes.

Now steam ironing can begin.

HOW TO USE THE SPRAY

Before using the spray feature, check the fabric label for ironing instructions because some fabrics may be spotted or stained with moisture.

The spray feature is particularly helpful for removing stubborn wrinkles and where extra dampening is needed.

The spray may be used with steam or dry ironing.

Simply pump the Spray Mist Button when spray is desired.

HOW TO USE AS A DRY IRON

1. Position the iron vertically.
2. Plug in the iron.
3. Set the Temperature Control Dial to “MIN” position
Refer to the Fabric Ironing Chart in this manual on page # 12
4. Preheat the iron until the indicator light goes out, usually about 1-2 minutes.

Now dry ironing can begin.

Cord Ironing

1. Turn the cord switch to “Cord”
 2. Lift the iron (with cord) from the stand
- **NOTE:** The indication light will turn on and off from time to time during the cord ironing.

Cordless Ironing

1. Turn the Cord to switch to “Cordless”
2. Lift the iron (without the cord) from the stand.

To assure that the iron reaches the present temperature:

1. Place the iron in its suitable position on the stand for heating.
2. Do not lift the iron until the indication light turns off.
3. To reheat the iron place it back onto the stand
4. Do not use cordless ironing longer than two minutes.

Note: When using a lot of cordless ironing the soleplate temperature will go down very quickly. The ironing result may not be so good. Thus we suggest cord ironing when ironing thick clothes



CAUTION



Fig1

CORRECT



Fig2

INCORRECT

Placing the iron on the stand

The correct way is indicated in Fig. #1

The incorrect way is indicated in Fig. # 2

AFTER EACH USE

1. Turn the iron off and unplug.
2. Empty the iron immediately after using. Do not store the iron with water in it.
3. Wait until the iron has cooled before storing it, and always set it on the Heel Rest to protect the soleplate from scratches, corrosion or stains.
4. After letting iron cool completely, store the iron vertically in a safe place. Please see Important Safety Instructions.

OUTSIDE SURFACE OF THE IRON

After unplugging and cooling the iron, simply wipe off with a damp cloth and if necessary, use a mild detergent.

NEVER USE ANY HARSH CLEANERS.

SOLEPLATE

Starch and other residue may be easily removed from the Soleplate with a damp cloth.

To avoid scratching the finish never use a metallic pad to clean the Soleplate, and never place the iron on a rough surface.

If synthetics are ironed at too high temperature not only is the fabric usually ruined, but the iron Soleplate is often covered with the melted remains of the synthetic fabric.

The best way to remove synthetic residue from the Soleplate is to heat the iron and to iron over an old cotton rag.



CAUTION

Never Use steam iron cleaners in the iron, since they may damage the working parts of the iron.

SPECIFICATIONS:

Power Source	120V, 60 Hz
Power Consumption	10 A, 1200W
Net Weight	4 lb

FABRIC IRONING CHART

1. Check fabric for specific ironing instructions, always follow manufacturer's instructions.
2. Iron blended fabrics at setting for lower-temperature fiber or for the highest –percentage fibers
3. Use caution, some synthetics may melt at high temperature.

Temperature Selector Setting	Fabric	Ironing Recommendations
<p>LOW</p> <p>●</p>	<p>*Nylon</p> <p>*Silk,</p> <p>*Acrylic,</p> <p>*Suede,</p> <p>*Metallic,</p> <p>*Perm. Press</p> <p>*Rayon's,</p> <p>*Polyester</p>	<p>Dry iron on wrong side, or use a press cloth on top of fabric. Don't sprinkle water directly on fabric to avoid spots.</p> <p>To iron suede, cover ironing board with brown paper and use it as a press cloth.</p>
<p>MEDIUM</p> <p>● ●</p>	<p>*Wool, Velvet</p>	<p>Steam ironing is suggested. Never iron completely dry. To iron velvet, steam iron holding the iron slightly above the fabric.</p>
<p>HIGH</p> <p>● ● ●</p>	<p>*Cotton, Linen</p>	<p>Steam Ironing is suggested. Sprinkle water on the fabric, depending on its thickness. Iron dark fabrics on wrong side to avoid unwanted sheen.</p>



Distributed By
Smartek USA Inc.,
Brooklyn, NY 11206
www.smartekusa.com