Lady Garden

BY Snapper




PARTS MANUAL for

19" L.G. SINGLE STAGE SNOW THROWER **ELECTRIC START MODEL 80426**

MODEL IDENTIFICATION

MODEL 80426: 19" Single Stage Snow Thrower 3 HP 110 Volt Electric Start

INDEX-GROUP	PAGE(S)
HANDLES, AUGER CONTROL	
DISCHARGE CHUTE, DEFLECTOR, CONTROL HANDLE	3
AUGER HOUSING, DRIVE SYSTEM, CHASSIS	4, 5
COVERS, ENGINE	6, 7
DECALS	·
ACCESSORIES	-

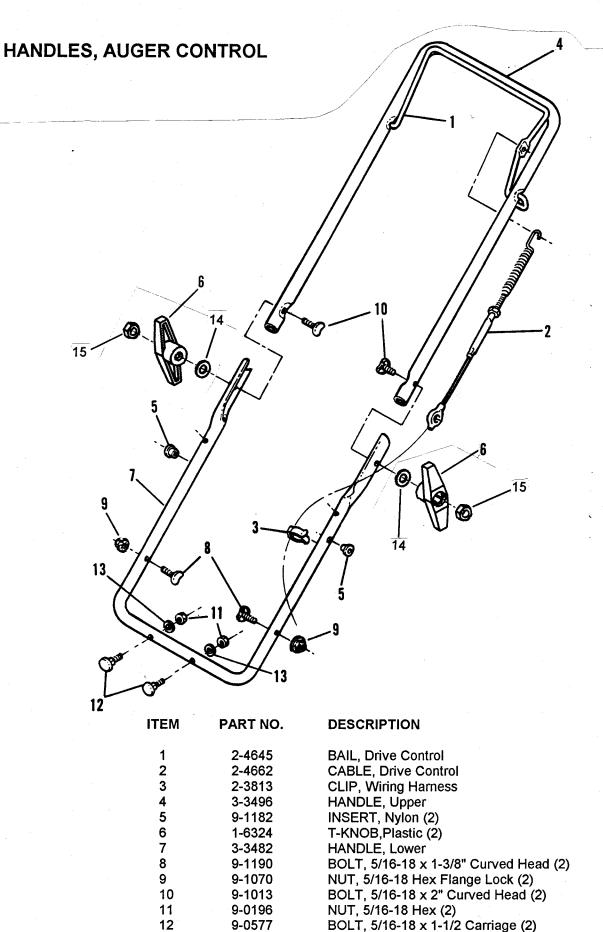

13

14

15

9-0187

9-1076


9-1069

WASHER, 5/16 Split Lock (2)


WASHER, 5/16 Flat (2)

NUT, 5/16-18 Hex (2)

DISCHARGE CHUTE, DEFLECTOR, CONTROL HANDLE

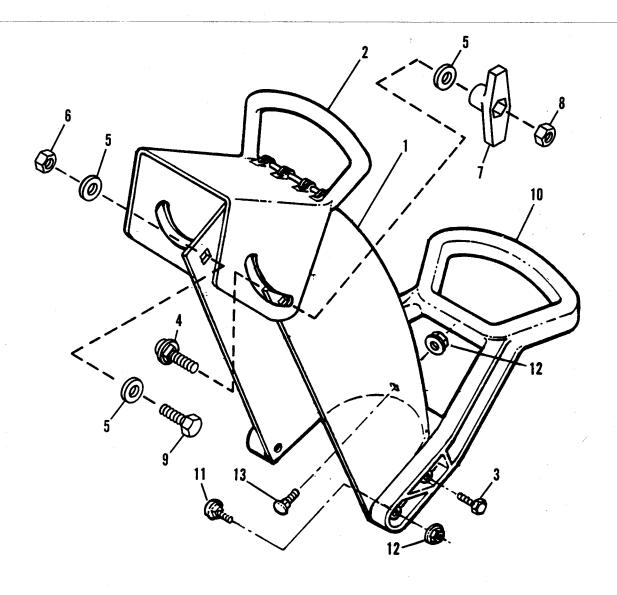


ITEM	PART NO.	DESCRIPTION
1	5-2967	CHUTE, Discharge (Includes Decal #2-4845)
2	5-2975	DEFLECTOR, Chute (Includes Decal #2-4844)
3	9-0206	SCREW, 5/16-18 x 3/4" Hex Cap (2)
4	9-1072	BOLT, 5/16-18 x 1" Short Neck Carriage (Gr. 5)
5	9-1076	WASHER, 5/16 Flat (3)
6	9-1074	NUT, 5/16-24 Hex Center Lock
7	1-6324	T-KNOB, Plastic
8	9-1069	NUT, 5/16-18 Hex
9	9-1021	SCREW, 5/16-24 x 3/4" Hex Cap
10	2-4485	HANDLE, Chute Control
11	9-0978	BOLT, 5/16-18 x 1-1/4" Short Neck Carriage (Gr. 5) (2)
12	9-1070	NUT, 5/16-18 Hex Flange Lock, Grade 5 (3)
13	9-1097	BOLT, 5/16-18 x 3/4" Short Neck Carriage

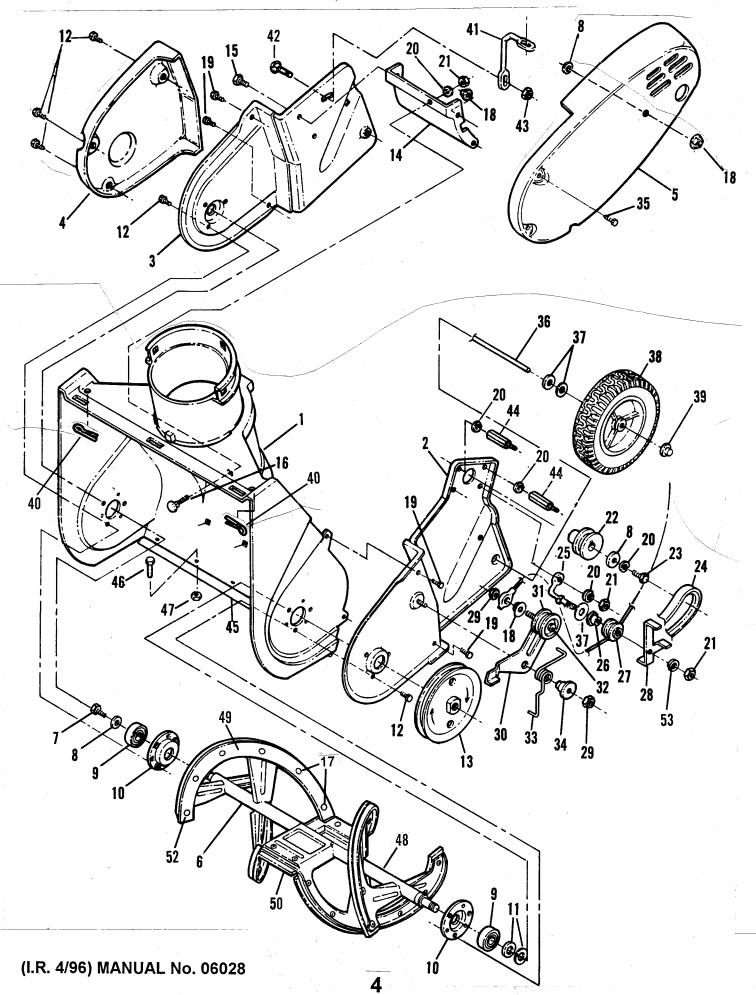


AUGER HOUSING, DRIVE SYSTEM, CHASSIS


ITEM	PART NO.	DESCRIPTION
1	5-2969	ASSEMBLY, Auger Housing
2	5-2964	ASSEMBLY, End Frame (Left Hand)
3	4-1333	FRAME, End (Right Hand)
4	2-6117	COVER, Side
5	3-4327	GUARD, Belt Drive (Fits All Models. See Note Below)
6	5-2940	ASSEMBLY, Auger (Includes Items 48 Thru 52)
7	9-0361	SCREW, 5/16-18 x 5/8" Self-Tapping
8	1-4098	WASHER, 5/16 Flat (4)
9	1-4608	BEARING, Ball (2)
10	3-4385	RETAINER, Bearing (2)
11.	1-0935	WASHER, 3/4 Shim
12	9-1012	SCREW, #10-24 x 1/2" Self-Tapping (Torx) (9)
13	1-8635	PULLEY
14	3-3457	BRACE, Engine
15	9-1084	SCREW, 1/4-20 x 3/8" Self-Tapping (2)
16	9-1097	BOLT, 5/1618 x 3/4" Carriage (Gr. 5)
17	9-0307	SCREW, #10-24 x 1/2" (4)
18	9-1070	NUT, 5/16-18 Hex Flange Lock (4)
19	9-1081	SCREW, 1/4-15 x 1" Self-Tapping (4)
20	9-0187	WASHER, 5/16 Split Lock (7)
21	9-0196	NUT, 5/16-18 Hex (5)
22	2-2179	PULLEY, Engine
23	9-0233	SCREW, 5/16-24 x 3/4" Hex Cap (Gr. 5)
24	2-4618	V-BELT
25	2-4743	GUIDE, Cable
26	1-2306	BUSHING, Flange
27	2-4228	PULLEY, Nylon
28	3-3729	GUIDE, Belt
29	9-1067	NUT, 5/16-18 Hex Center Lock (2)
30	3-3695	BRACKET, Idler Pivot
31	2-4626	PULLEY, Idler
32	9-0669	SCREW, 5/16-18 x 1-3/4" Hex Cap (Gr. 5)
33	2-4621	SPRING, Idler Torsion
34	2-4620	BUSHING, Pivot
35	9-1195	SCREW, #10-16 x 3/4" Self-Tapping (3)
36	3-3692	AXLE, 3/8" Dia. Wheel
37	1-4098	WASHER, 3/8 Flat (4)
38	2-6160	WHEEL, 7 x 1.50 (2)
39	1-4667	NUT, 3/8 Push (2)
40	9-1597	PIN, Cotter 3/32 x 3/4" (2)
41	2-4852	SUPPORT, Fuel tank
42	9-0666	BOLT, 1/4-20 x 5/8" Short Neck Carriage (Gr. 5)
43	9-0372	NUT, 1/4-20 Hex (Nyloc)
44	2-7925	SPACER, Hex (3.69" Long) (2)
45	3-5948	BLADE, Scraper
46	9-1148	SCREW, 1/4-20 x 1/2" Machine (4)
47	9-1065	NUT, 1/4-20 Hex Flange Lock (4)
48	4-1139	STRUCTURE, Auger
49	1-8638	SHOE, Flite (4)
50	1-4612	SHOE, Center Flite (2)
51	9-1286	SCREW, #10-24 x 1/2" Self-Tapping (20)

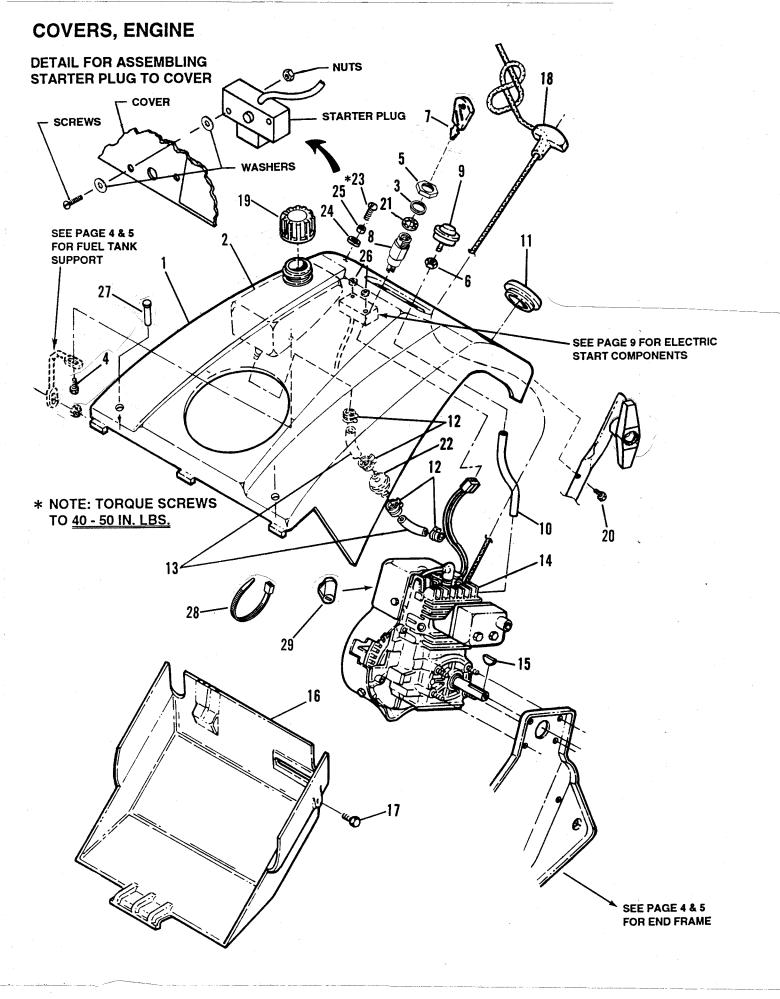

ITEM	PART NO.	DESCRIPTION
1	5-4282	COVER, Top (Includes Eyelet #2-4636)
2	5-2974	ASSEMBLY, Fuel Tank (Includes #2-4495 Cap)
2 3	1-6132	SPACER
4	9-1148	SCREW, 1/4-20 x 1/2" Machine
5	1-2685	NUT, 5/8-32 Hex
- 6	9-1065	NUT, 1/4-20 Hex Flange Lock
7	1-1138	KEY
8	1-7817	SWITCH, Ignition
9	1-4638	PRIMER
10	1-4639	HOSE, Primer
11	9-1183	PLUG, Hole
12	1-2222	CLAMP, Fuel Hose (2)
13	7-6272	HOSE, Fuel 8-1/2" Long
14	2-8598	ENGINE, 3 HP Tecumseh
15	1-0783	KEY, 5/32 x 5/8" Woodruff
16	2-4923	COVER, Bottom
17	9-0913	SCREW, #10-24 x 1/2" Hex Washer Face Self-Tap (2)
18	2-4478	HANDLE, Pull Rope
19	2-4495	CAP, Fuel Tank
20	9-1196	SCREW, #8-18 x 1-1/2" Self-Tapping (2)
21	9-0880	WASHER, 5/8 Internal Tooth Lock
22	1-4359	FILTER, In-Line
23	9-1246	SCREW, 1/4-20 x 3/4" Self-Tapping (Torx)
24	2-7910	ISOLATOR, Fuel Tank/Cover
25	2-7911	SPACER
26	9-0010	WASHER, #10 Flat (4) (Electric Start Models Only)
27	9-1708	PIN, Clevis 1/4 x 5/8" (2)
28	1-2080	CABLE TIE
29	2-8599	KNOB, Red (For Engine Choke Lever)

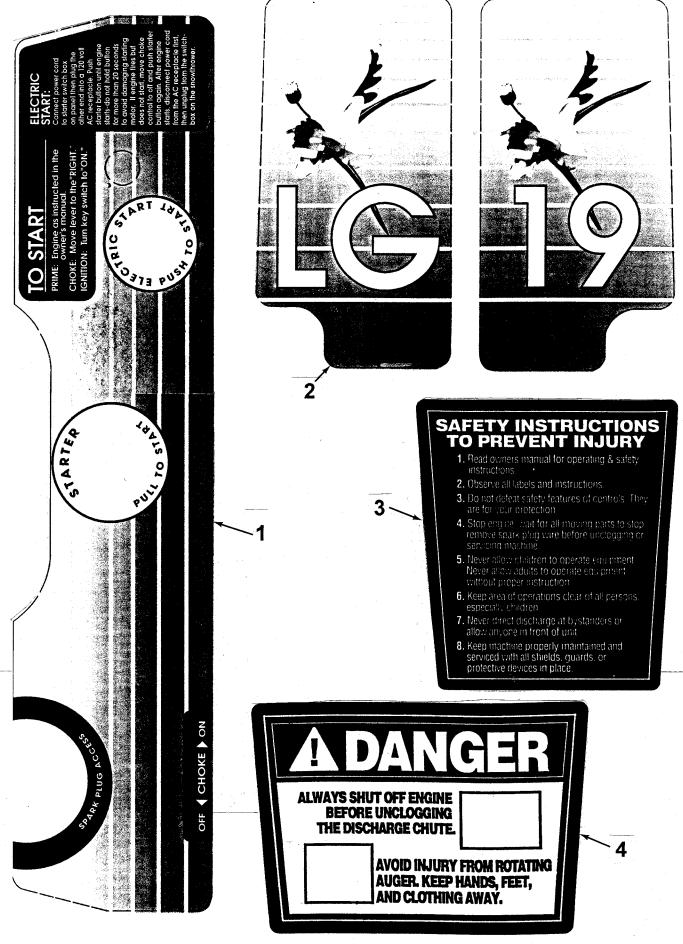



(I.R. 4/96) MANUAL No. 06028

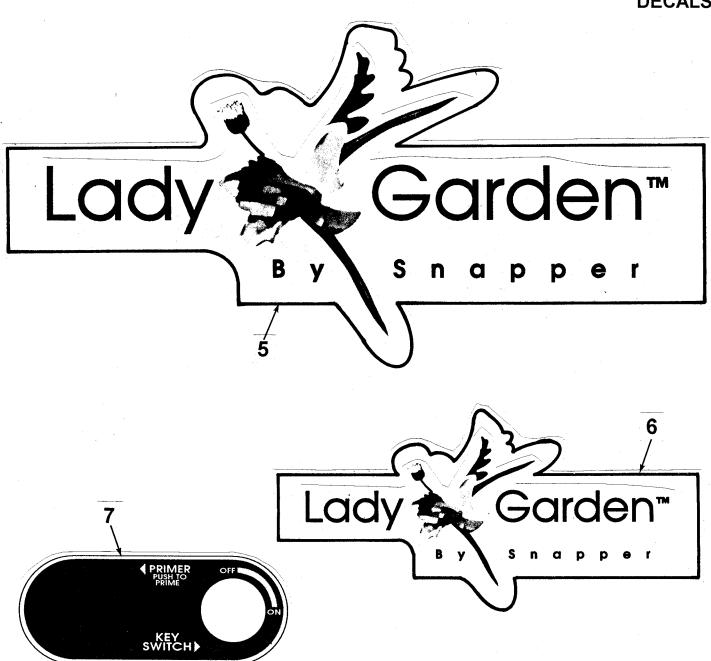

ITEM	PART NO.	DESCRIPTION
1	3-6572	DECAL, Panel/Instructions- Electric Start
2	3-6574	DECAL, Model/I.D.
3	2-4845	DECAL, Safety Instruction
4	2-4844	DECAL, Danger, Chute/Deflector
5	3-6570	DECAL, Lady Garden Logo (Large)
6	3-6571	DECAL, Lady Garden Logo (Small)
7	3-6573	DECAL, Instructions, Primer/Key Switch
3 4 5 6	2-4845 2-4844 3-6570 3-6571	DECAL, Safety Instruction DECAL, Danger, Chute/Deflector DECAL, Lady Garden Logo (Large) DECAL, Lady Garden Logo (Small)

ELECTRIC START KIT

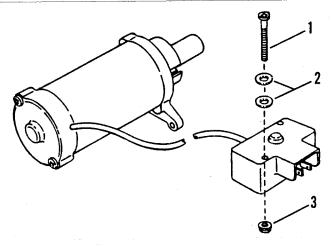

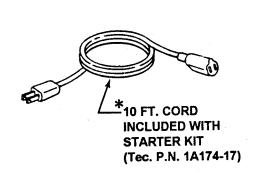

ITEM	PART NO.	DESCRIPTION
	1-4769	KIT, Electric Start (Tecumseh)
1	9-0866	SCREW, #10-24 x 1-3/4" Phillips Pan Head (2)
2	9-0623	NUT, #10-24 Hex Flange Lock (2)
3	-	CORD, 10 Foot Extension
4	-	MOTOR, Starter
5	-	SCREW, 1/4-20 x 7/8" Hex Washer Machine (2) (Not Shown)

*Parts Available <u>Only</u> From Engine Manufacturer.

		19" FLITE SHOE KIT
ITEM	PART NO.	DESCRIPTION
	6-1213	KIT, Flite Shoe (Includes Items 1 Thru 4)
1	1-8638	SHOE, 19" Flite Auger
2	1-4612	SHOE, Flite Center
3	9-1148	SCREW, 1/4-20 x 1/2" Machine (4)
4	9-0372	NUT, 1/4-20 Hex Center Lock, Grade B or 5 (24)
		19 SCRAPER BLADE KIT
ITEM	PART NO.	DESCRIPTION
	6-1236	KIT, 19" Blade (Includes Items 1, 2, 3)
1	2-8426	BLADE, 19" Blade
2	9-1148	SCREW, 1/4-20 x 1/2" Machine (4)
3	9-0372	NUT, 1/4-20 Hex Center Lock, Grade B or 5 (4)

	NOIES
	:
 · ·	
and the second	
	<u> </u>
,	

. 	
·	
	<u> </u>
	·
	

Lady Garden

BY Snapper

PARTS MANUAL for

19" L.G. SINGLE STAGE SNOW THROWER ELECTRIC START MODEL 80426