



## **SHABU-SHABU & B.B.Q. PAN**

**MODEL: ST-360**



## **INSTRUCTIONS MANUAL**

*Please read carefully before use and keep in safe place for future reference.*

**NOTE:** When using this product for the first time, please be advised that some slight smoke and/or odor may be produced. Please be advised that this is not a defect in the unit, but is normal with many heating appliances and will not recur after a few uses.


## **IMPORTANT SAFEGUARDS**

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. Do not use appliance for other than intended use.
3. After use, slide control to OFF position and remove plug from outlet.
4. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
5. Do not touch hot surfaces. Use handles, knobs and oven gloves when removing the lid, or handling the cookware.
6. Close supervision is necessary when any appliance is used by or near children. This appliance is not to be used by children.
7. To protect against electrical shock, do not immerse cord, plug, or main body in water or other liquid.
8. Do not place on or near a hot gas or electric burner, or in a heated oven.
9. Do not use outdoors (unless this appliance is specifically intended for outdoor use).
10. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to Sunpentown (see warranty) for examination, repair, or adjustment.
11. The use of accessory attachments not recommended by Sunpentown may cause injuries.
12. Do not let cord hang over edge of table or counter, or touch heated surfaces.
13. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
14. A short power-supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.
15. Extension cords may be used if care is exercised in their use.
16. If an extension cord is used, the electrical rating should have at least the electrical rating of the appliance. The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled on by children or unintentionally tripped over.
17. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact Sunpentown, or a qualified electrician. Do not attempt to modify the plug in any way.
18. To reduce the risk of electric shock, do not cook in the main body directly.
19. If the supply cord is damaged, it must be replaced by Sunpentown, an authorized service agent or an equally qualified electrician in order to avoid a hazard.
20. The temperature of accessible surfaces may be high when the appliance is operating. Use with extreme caution and do not touch hot surfaces.

# SAVE THESE INSTRUCTION!

## PARTS IDENTIFICATION

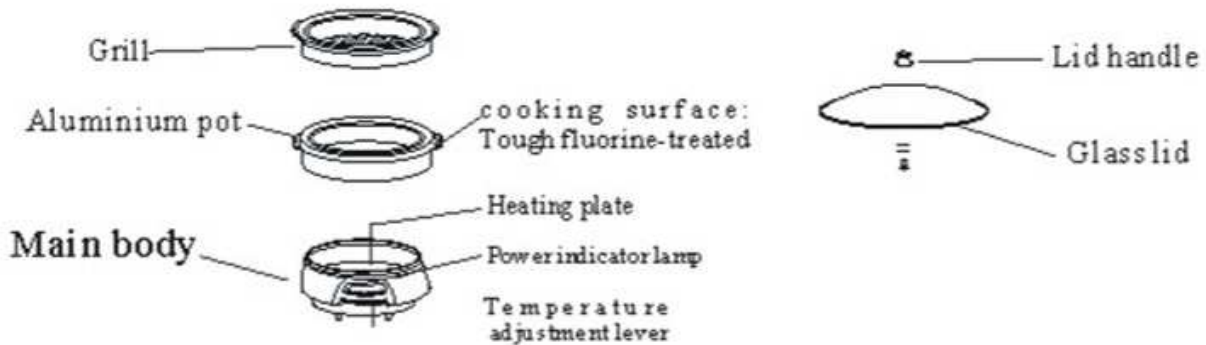

### A. BEFORE USE

\* Carefully read this instruction manual before use.

1. Place pan into the body.

\*\* When re-using this pan, please remove all leftovers that may be attached to the surface of the hot plate or on the bottom of the pan. Any leftovers not removed will cause the temperature control to not perform properly.

\*\* Unit must be placed on a flat and even surface.

2. Make sure the switch knob is turned to OFF position.

3. Plug the AC power plug into a wall outlet.

\*\* Unit will not turn on if pan is not properly placed into body.

### B. USAGE

1. Fill pan with water, soup or oil and turn the switch knob to the suitable position. Cover lid. (Caution: pan will not work if empty)

2. Indicating light will blink when in use.

3. Adjust temperature accordingly.

\*\* To use the grill, simply remove the pan from the body and replace with the grill. Adjust temperature accordingly.

### C. AFTER USE

Turn switch knob to OFF position, unplug AC power plug from outlet.

### PRECAUTIONS

1. Do not use a metallic spatula or any sharp edged tools – which may damage the non-stick fluorine coating; if scratched, the coating may peel off.

2. Do not place unit on any low heat resistant surface.

3. When cooking and removing the lid, be careful of hot steam.

4. Do not place unit on the following:

- Uneven surface

- Unstable surface

- Next to, or nearby, anything producing high heat, such as the gas range

5. When in use, do not let the body plastic or pan fall and collide.

6. After use, wait until the unit cools down before removing the pans for cleaning.
7. Pan can be used and cooked separately on a gas range. NOTE: do not place empty pan on a burning gas range, this will destroy the pan.
8. Do not place and use any other equipment on the body, including pans from other brands or kettles.
9. To avoid an electric shock, do not wash or immerse the body in water or any liquid.
10. When in use, dedicate only one outlet for the electric multi cooker. Do not use extension cord with multiple outlets or share one outlet with other appliances or devices.
11. Do not bend or manipulate the power cord, which may damage the wires inside.
12. When unplugging the power cord, pull by the plug.
13. If the AC power cord included with this unit is damaged, do not use. And do not substitute with an unknown cord, please contact the manufacturer for a replacement cord.

## TROUBLE SHOOTING

Before requesting for service, please inspect the situations as follows:

Problem	Check if:
Temperature does not get hot	<ul style="list-style-type: none"> <li>▪ Power cord is firmly plugged in</li> <li>▪ Temperature control knob is still at OFF position</li> <li>▪ Pan is securely placed in body</li> <li>▪ Any leftovers attached to the surface of the pan or hot plate</li> <li>▪ Wall outlet is functioning (change to another outlet and test)</li> </ul>

If the problem is not resolved, do not disassemble or attempt to repair the unit yourself! Contact your nearest service agent.

## CLEANING AND MAINTAINENCE

- After use, unplug power cord from outlet and wait for unit to completely cool before cleaning.
- Clean pan or grill with soft sponge and regular kitchen detergent.
- Do not use abrasive cleaners such as thinner, polishing powder, etc.
- Do not wash or immerse body in water or any type of liquid. Wipe clean with a soft, damp cloth.
- After using the pan or grill, do not leave uncleaned. Delay in cleaning may lead to discoloration and adhering.

### A. PAN

- Remove pan, when cool, clean with sponge and regular detergent.
- After wash, wipe dry and apply a thin layer of cooking oil.
- After a period of use, it is normal that pan's coloration will change a little.

### B. BODY

- Wipe clean with damp cloth. Do not wash with water, which will damage the body.
- If any food residues fall in frame lock or plastic body's crack, invert and tilt to one side to remove.

## SUGGESTED USE

<b>Temperature</b>	330°F	220°F	180°F	230°F
<b>Cooking Method</b>	Fry	Steam	Roast / Bake	Keep Warm

## SPECIFICATIONS

<b>Model</b>	<b>Voltage</b>	<b>Power</b>	<b>Accessory</b>
ST-360	120V/60Hz	1200W	Grill

# SUNPENTOWN

## Shabu Shabu and Barbecue Pan Model No. ST-360

### Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired or replaced free of charge.

This guarantee is subject to the following terms:

Sunpentown must be notified of the fault.

Proof of purchase must be presented to Sunpentown's nominated representative.

The warranty will be void if the product is modified, misused or repaired by an unauthorized person.

The guarantee after repair or replacement will not be extended beyond the original one-year period.

All replacement parts or units will be new or reconditioned.

Parts or units, which are replaced, become the property of Sunpentown.

The warranty applied for the use of the product in the USA

Warranty does not include freight charges.

This GUARANTEE is in addition to your Statutory Rights.

Dear Customer: Please keep this warranty for your record. **DO NOT** return it.

SUNPENTOWN INT'L INC.  
21415 Baker Parkway, City of Industry, CA 91789  
Tel: 909-468-5288 / [service@sunpentown.com](mailto:service@sunpentown.com)