



Instruction Manual

Automatic Dispensing Hot Water Pot with Reboil Function

Image of
SP-3015
&
SP-3815



SP-3015: 3.0L
SP-3815: 3.8L

SP-3017: 3.0L
(Stainless Steel)

Thank you for purchasing Sunpentown Hot Water Pot. Please read this manual thoroughly and keep for future reference.

Important Safeguards


READ ALL INSTRUCTIONS BEFORE USE.

When using electrical appliances, basic precautions should always be followed, including the following:

- Please plug in dedicated outlet of 120V, with a minimum of 10 amps.
- Do not immerse unit in water, wash under running water or spray water onto the unit and control panel.
- Do not place unit in a damp and humid area. Do not place where unit may come in contact with water.
- Keep away from the reach of children.
- Do not touch the steam outlet and be extra cautious of children nearby.
- Do not add water above the FULL line.
- Do not tilt or turn unit upside-down. Hot water may escape from the steam outlet and cause scalding.
- Never cover the steam outlet.
- Ensure the lid is securely closed before operation.
- Open and close lid with caution, do not use force.
- When opening lid, be cautious of hot steam.
- Be cautious when moving the unit. Always unplug from power source and use the handle to transport.
- Do not tilt or move the unit with lid open.
- This appliance is intended to boil water only. Do not place tea, coffee, milk, etc. inside.
- Do not use as a cooler. Do not place ice in the unit.
- When emptying water, do not hold by the lid, as the lid may come loose.
- Do not use other than the supplied power cord.
- Make sure the power cord (magnetic end) is free of foreign objects and dust.
- Do not operate unit with a damaged cord or plug.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Household use only! Do not use outdoors.
- Unplug from power source when not in use, when moving the unit and before maintenance.
- To disconnect, grip and pull plug from the wall outlet. Do not pull by the cord.
- Locate unit away from direct sunlight and sources of heat (oven, stove, etc.).
- Place unit on a flat, level and heat resistant surface.
- Place unit at least 1 foot away from wall, cabinet or furniture.
- Do not disassemble or attempt to repair. Must contact Sunpentown for repair/service issues.

Control Panel & Lid

Control Panel

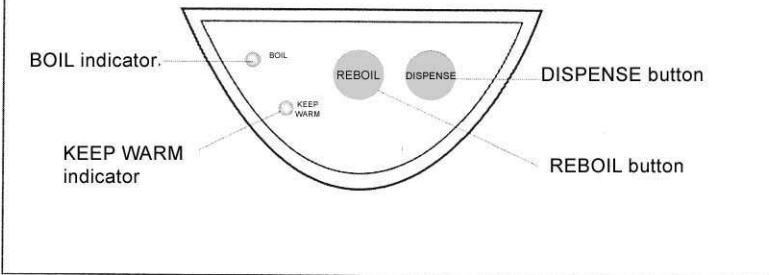


To open lid:






- Press down and pull latch upwards to open lid.

To remove/install lid:

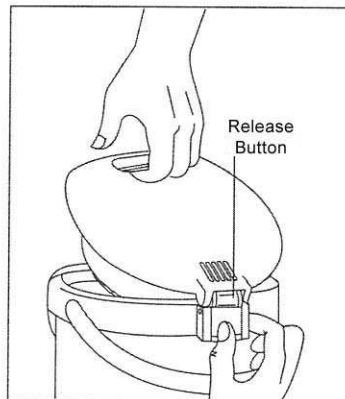

- To remove:
- Open lid to 45°.
 - Press the Release button.
- To install:
- Press the Release button.
 - Align and place lid in the groove.

Parts Identification

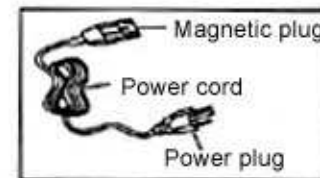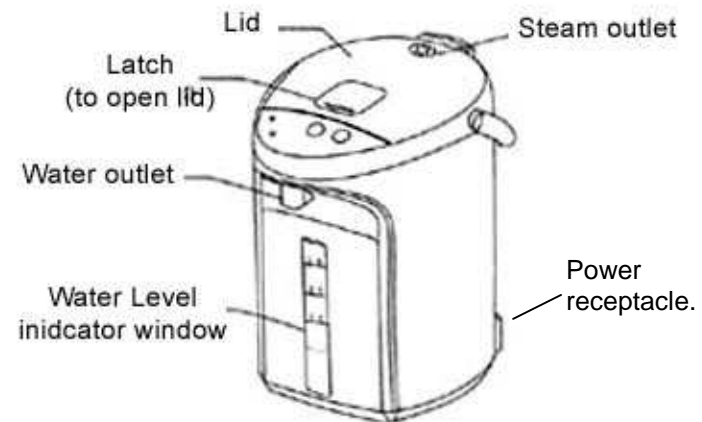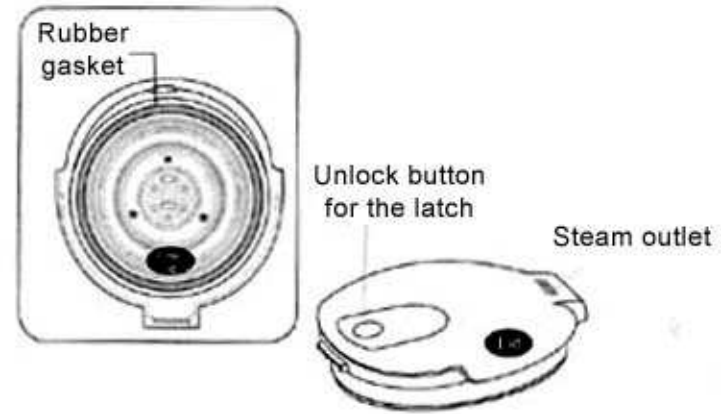


Operating Instructions

1. Adding Water

- Open lid and add water.

Note:

- Do not add water directly under faucet, to prevent wetting the control panel or power receptacle and cause malfunction.
- Do not add water above the FULL line.
- Do not wet the control panel.
- When closing the lid, ensure a “click” is heard.
- Before initial use or after a long period of storage, boil a full tank of water and discard.

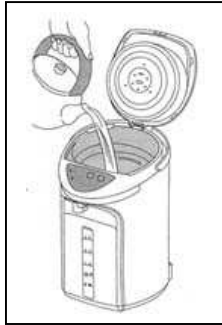


2. Connect Power and Boil

- Connect the power cord to unit’s receptacle first, then to outlet.
- Once power is connected, unit will begin boiling water. Boil indicator will light.

Note:

- Do not open lid while boiling. Hot steam/vapor may cause scalding.

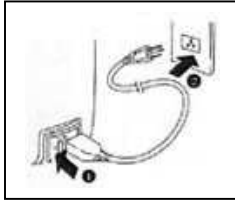

3. Keep Warm


- Once water is boiled, unit will automatically switch to Keep Warm mode.
- Keep Warm indicator will light
- Water temperature will be maintained around 208°F (suitable for instant coffee, tea, instant noodle, etc).

4. Re-Boil

- To reboil water, press the REBOIL button, Boil button will light.

5. Dispensing Water

- Place cup under spout and press DISPENSE.

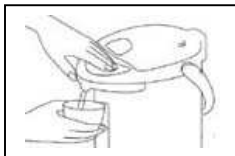

6. Dry-Boil Protection

- Unit automatically shuts off (all indicator lights off) when there’s no water in the tank or when water level falls within the red mark.
- Add water immediately.

Cleaning, Maintenance and Storage

Minerals in tap water may cause white residues to attach to the surface of the inner tank or sometimes change the inner tank reddish or black in color. Clean the interior frequently to avoid this problem.

- Unplug unit from power source and allow unit to cool down.
- Do not wash under running water.
- Do not immerse unit in water or any other liquid.
- Do not spray water onto the control panel.
- Do not use bleach, alcohol or other harsh chemicals.
- Do not scrub with metal pads or sharp objects.

Lid and Body

- Wipe clean with damp cloth.

Power Cord

- Wipe clean with dry, soft cloth.

Filter (located on bottom of inner tank)

- Remove and clean with soft brush and lukewarm water.
- If extremely dirty, use Citric Acid.
- Ensure filter is properly re-installed before operation.

Inner tank and Inner Lid

- Wipe with clean soft sponge and rinse clean.
- If the interior is excessively dirty, clean with Citric Acid:
 - a) Add approx. 1 oz of Citric Acid.
 - b) Add water to the Full line.
 - c) Close lid and connect power.
 - d) Allow solution to boil and soak for 30~60 minutes.
 - e) Press DISPENSE button to dispense a few cups of solution to clean the piping.
 - f) Disconnect power and allow unit to cool.
 - g) Remove lid and dump out solution, rinse clean.

Storage

When planning not to use unit for a period of time, clean unit and allow unit to dry completely. Place unit back in original box or cover with cloth/bag and store in a cool, dry place.

Note:

- When dumping water, best to remove lid. Never hold the unit by the open lid.
Dump water through the rear corners, so not to wet the control panel.




Replacing Worn Parts

The rubber gasket on the inner lid will wear over time and will need to be replaced periodically. Contact Sunpentown (www.spt-usa.com / 909-468-5288) to purchase replacement gaskets or for instructions to send in for repair.

Instructions on replacing the gasket:

1. Remove lid.
2. Loosen the 3 screws and remove inner lid. Do not lose the screws.
3. Remove old rubber gasket.
4. Insert new gasket according to image.
5. Replace inner lid and tighten screws.

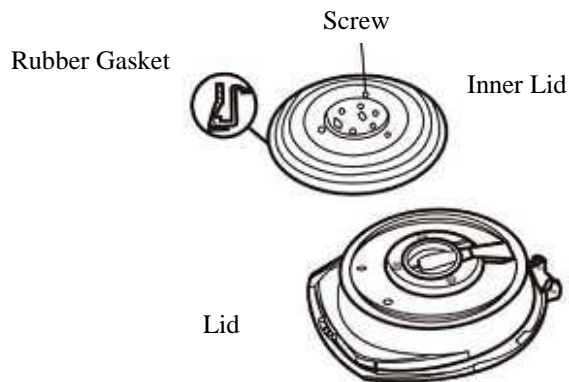

Troubleshooting

PROBLEM	POSSIBLE CAUSE
No power	Loose power connection.
Will not switch to boil / reboil	Water level is too low.
Cannot dispense water or not dispensing smoothly	Loose power connection.
	Unit just finished boiling and air bubbles are trapped inside. Wait a few minutes or open lid ajar to release air.
	The interior is dirty and needs cleaning.
	Water level is low.
Water is flowing out from unit	Water is filled over the FULL line.
White residues in water	These are mineral deposits. Clean the interior with Citric Acid.
Boiling sound is excessively loud	Interior is dirty, clean with Citric Acid.

Specifications

MODEL	SP-3015	SP-3815	SP-3017
Capacity	3.0L	3.8L	3.0L
Input power	120V / 60Hz		
Power consumption	Heating (boiling) 700W / Keep warm 35W		
Cord length	4.9 ft.		

Unit may not function properly if used in high elevation or in very cold or hot conditions. In such conditions, unit may keep boiling or not reach boiling point.



Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

Sunpentown Int'l Inc.
21415 Baker Parkway, City of Industry, CA 91789-5236
Tel: 909-468-5288 · Fax: 909-468-5279
service@sunpentown.com
www.sunpentown.com