




myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for CUISINART DGB-600BC. You'll find the answers to all your questions on the CUISINART DGB-600BC in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual CUISINART DGB-600BC
User guide CUISINART DGB-600BC
Operating instructions CUISINART DGB-600BC
Instructions for use CUISINART DGB-600BC
Instruction manual CUISINART DGB-600BC

Cuisinart®

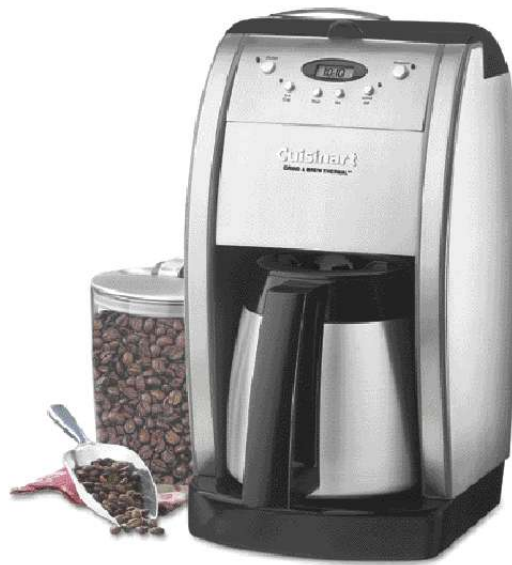

Grind & Brew Thermal™ 10-Cup Automatic Coffeemaker **DGB-600**

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.



[Your user manual](#)
[CUISINART DGB-600BC](#)

Manual abstract:

If water/coffee is not draining from the filter basket during the brewing cycle, unplug the unit and wait 10 minutes before opening and checking the filter basket. **SPECIAL CORD SET INSTRUCTIONS** A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use. If a long extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REPAIR SHOULD BE DONE BY AUTHORIZED SERVICE PERSONNEL ONLY** 2 **INTRODUCTION** Get ready to savor hot, fresh, flavorful coffee all day long! The Cuisinart® Grind & Brew Thermal™ 10-Cup Automatic Coffeemaker is Cuisinart technology at its best. This fully programmable deluxe Premier Series model integrates the best coffee making technology, streamlined European design, and smooth brushed stainless steel to create the perfect coffeemaker. The Grind & Brew Thermal™ makes it easy to enjoy delicious gourmet coffee at home. Simply place whole beans into the separate grinding chamber, add water, set the flavor control to 1-4 or 5+ cups, and program starttime up to 24 hours in advance. Coffee brews through and, pours through a self-sealing lid into a double-wall insulated thermal carafe to keep it fresh and hot for hours. A charcoal water filter and a permanent commercial-style gold tone coffee filter let only pure coffee flavor flow through, and the popular Brew Pause™ feature even lets you sneak a cup before the cycle is finished. Cuisinart is famous for its ease of use.

The Grind & Brew Thermal™ 10-Cup Automatic Coffeemaker has a separate grinding assembly and filter chamber to make beans easy to add and used grounds easy to remove. A convenient "grind off" control lets you turn the grinder off when using preground coffee. Cuisinart is also famous for easy cleanups. Dishwasher safe parts. Separate grind and filter chambers, and a spectacular brushed stainless steel housing that wipes clean in seconds. Get ready to savor the good life! **TABLE OF CONTENTS** Important Safeguards Page 1 Unpacking Instructions . Page 3 Introduction Page 3 The Quest for the Perfect Cup of Coffee Page 4 Features and Benefits Page 5 Control Panel Page 7 Programming Your Coffeemaker Page 8 Setting the Time Page 8 Programming the Auto On . Page 8 Changing the Water Filter . Page 9 Making Coffee Page 9 Cleaning and Maintenance Page 11 Warranty Page 12 **IMPORTANT UNPACKING INSTRUCTIONS** 1. Place the box on a large, sturdy, flat surface.

2. Remove the instruction book and any other literature. 3. Remove "Starter Kit" (paper filters, scoop and charcoal water filter) located in front of box. 4. Turn the box so that the back side of the coffeemaker is down and slide the coffeemaker from the box. 5. After the coffeemaker has been removed, place the box out of the way and lift off the top polyfoam insert. 6. Remove cardboard insert from carafe handle.

7. Remove the cardboard insert between the carafe lid and Brew Pause™ mechanism by sliding it out of the unit. 8. Grasp the carafe by its handle, remove it from the resting plate, and remove the polybag. 9. Remove the polybag covering the coffeemaker. We suggest you save all packing materials in the event that future shipping of the machine is needed. Keep all plastic bags away from children. **3 THE QUEST FOR THE PERFECT CUP OF COFFEE** It is generally agreed that there are four basic elements critical to the perfect cup of coffee: Element 1: Water Coffee is 98% water. Often overlooked, the quality of the water is as important as the quality of the coffee.



[Your user manual](#)
[CUISINART DGB-600BC](#)