

Sunbeam

AutoGrinder

Automatic coffee grinder

Instruction Booklet
EM0415

Please read these instructions carefully
and retain for future reference.



Contents

Sunbeam's Safety Precautions	1
Features of your AutoGrinder	2
Handy hints for grinding coffee beans with the Sunbeam AutoGrinder	4
Using your Sunbeam AutoGrinder	5
Care and Cleaning of your AutoGrinder	6

Important instructions – retain for future use.

تأكد من تفهم احتياطات السلامة المذكورة اعلاه

請務必理解上述的安全預防措施。

Assurez-vous que les précautions ci-dessus relatives à la sécurité sont bien comprises

Versichern Sie sich, dass die obenstehenden Sicherheitsmaßnahmen verstanden werden

Βεβαιώστε πως οι παραπάνω προφυλάξεις ασφαλείας γίνονται κατανοητές

Pastikan bahwa tindakan-tindakan keselamatan seperti di atas dimengerti anda

Accertatevi che le suddette norme di sicurezza siano comprese a dovere

上記の注意事項をよくお読みになり、安全を御確認ください

Уверете се дека погоре споменатите мерки на претпазливост се добро разбрани

Asegúrese de que las precauciones de seguridad precedentes sean bien comprendidas

کاری یکنید کہ احتیاط‌های بالا حتماً درک بشوند

ต้องแน่ใจว่า ข้อควรระวังเรื่องความปลอดภัยข้างต้น เป็นที่เข้าใจกันดี

Yukarda belirtilen güvenlik önlemlerinin anlaşıldığından emin olunuz

Xin kiểm chắc rằng những biện pháp làm an toàn kể trên được hiểu rõ

Sunbeam's Safety Precautions

SAFETY PRECAUTIONS FOR YOUR SUNBEAM AUTO GRINDER.

- Always place the unit on a flat, level surface.
 - The grinder cannot operate without the lid in position.
 - Switch off and unplug at power point before cleaning.
-
- Sunbeam is very safety conscious when designing and manufacturing consumer products, but it is essential that the product user also exercise care when using an electrical appliance. Listed below are precautions which are essential for the safe use of an electrical appliance:**
- Read carefully and save all the instructions provided with an appliance.
 - Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug - do not pull on the cord.
 - Turn the power off and remove the plug when the appliance is not in use and before cleaning.
 - Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
 - Always use your appliance from a power outlet of the voltage (A.C. only) marked on the appliance.
 - This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - The temperature of accessible surfaces may be high when the appliance is operating.
 - Never leave an appliance unattended while in use.
 - Do not use an appliance for any purpose other than its intended use.
 - Do not place an appliance on or near a hot gas flame, electric element or on a heated oven.
 - Do not place on top of any other appliance.
 - Do not let the power cord of an appliance hang over the edge of a table or bench top or touch any hot surface.
 - Do not operate any electrical appliance with a damaged cord or after the appliance has been damaged in any manner. If damage is suspected, return the appliance to the nearest Sunbeam Appointed Service Centre for examination, repair or adjustment.
 - For additional protection, Sunbeam recommend the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to your appliances.
 - Do not immerse the appliance in water or any other liquid unless recommended.
 - Appliances are not intended to be operated by means of an external timer or separate remote control system.
 - This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments; farm houses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.

If you have any concerns regarding the performance and use of your appliance, please visit www.sunbeam.com.au or contact the Sunbeam Consumer Service Line.

Ensure the above safety precautions are understood.

Features of your AutoGrinder

Transparent cover

For ease of use the cover of the AutoGrinder also doubles as a measuring cup and being transparent the user is able to observe the coffee beans being ground.

Stainless steel grinding bowl

As coffee beans are oily and aromatic, the stainless steel grinding bowl surface ensures minimal transfer of flavours and odours.

One touch power button

Easy to operate, simply press the power button and your work is done, the grinder will automatically stop when the selected grind is achieved.

 
Storage container

The storage container is ideal for storing excess coffee grounds.

Cleaning brush

For easy cleaning use the small brush to remove stubborn coffee grinds quickly and with no fuss to ensure quality, fresh grinding results every time.



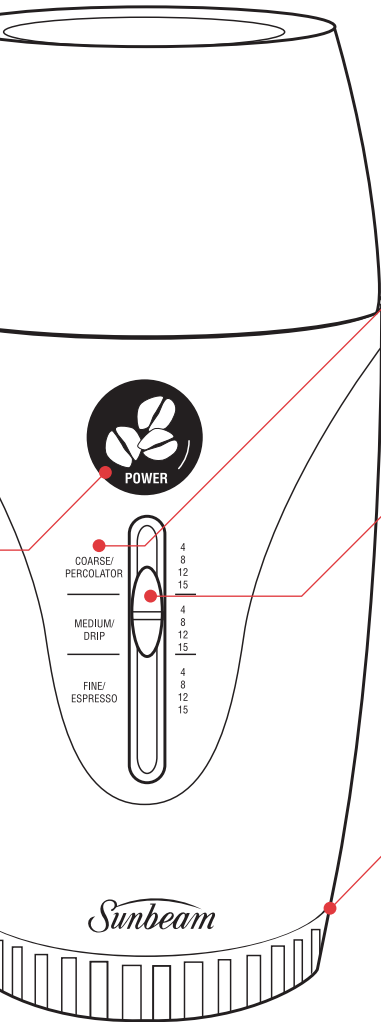

Style of coffee grind

The AutoGrinder gives you 3 choices of grind; coarse for percolated coffee, medium for drip filtered coffee and fine for espresso coffee.

Sliding grind selector

Decide on the style of coffee grind and slide the grind selector to the quantity of ground coffee desired.

Cord storage

Convenient and clever cord storage, turn the base of the grinder to retract the cord and simply pull the cord out for use.

Handy hints for grinding coffee beans with the Sunbeam AutoGrinder

- For a good cup of coffee only grind the amount you need for immediate use, as ground coffee quickly loses its flavour and aroma.
- With the Sunbeam AutoGrinder coffee beans can be ground from a range of coarse to a very fine grind. The required coffee grind will be determined by the brewing method used or style of coffee desired. The different brewing methods include;
- Do not leave coffee beans or grounds in the open air, for best flavour always store them in an airtight container.
- Excess coffee beans or grounds can be stored in the refrigerator or freezer as by doing so will slow down the rate at which the coffee reacts with the moisture in the air.
- When grinding more than 12 scoops of coffee beans, pour beans into cover, then turn the grinder upside down and lock onto the cover. Be sure to align the arrow on the lid/cover with the 'unlock' graphic on the rear of the grinder and turn the cover to the left/lock position.


BREWING METHOD	GRIND
Espresso Machines	Fine grind
Stove top Espresso	Medium grind
Drip Filtered	Medium grind
Plunger or Percolator	Coarse grind

Using your Sunbeam AutoGrinder


Before using your Sunbeam AutoGrinder, wipe the stainless steel grinding bowl and blades clean with a damp cloth and wash the transparent cover in warm soapy water. Dry thoroughly.

Note: Allow to dry completely before using.

 
1. Place the AutoGrinder on a dry, level surface.
2. Remove the cover of the AutoGrinder by turning it to the right/unlock position, then lift straight up.

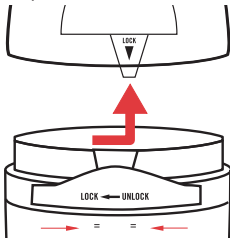

 3. Using the measurements on the cover/lid, fill with the desired amount of coffee beans and pour into the grinding bowl. Alternatively scoop the beans directly into grinding bowl.
4. Replace and lock the cover onto the AutoGrinder. Align the arrow on the lid/cover with the 'unlock' graphic, on the rear of the grinder, and turn the cover to the

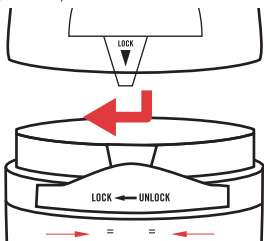

 - left/lock position.
5. Hold the plug and pull slowly to release the stored cord. Plug the power cord into a 230-240V AC power outlet and turn the power 'ON'.
6. Select the style of coffee (Percolator, Auto Drip, Espresso) and slide the grind selector

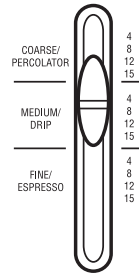

- to the quantity of ground coffee desired.
7. Press the 'Power' button to commence grinding and then remove finger. The Sunbeam AutoGrinder will stop automatically when the selected grind is achieved. To stop the grind cycle at anytime, push the 'Power' button. When the 'Power' button is pressed again, the grinder will start from the beginning of the timed cycle.

Important: Do not remove the cover before the blades have stopped moving.

8. Once the blades have stopped rotating unplug the cord from the power outlet and remove the cover. Gently tap the base of the AutoGrinder to loosen the freshly ground coffee from the stainless steel grinding bowl.

Note: The AutoGrinder will only operate when the cover is in the locked position.

Care and Cleaning

Do not immerse the motor base of the AutoGrinder in water.

 
Do not place the AutoGrinder in the dishwasher.

1. When you have finished grinding, unplug your AutoGrinder from the power outlet.
2. Use the soft cleaning brush to clean around the blades. Carefully wipe the grinding bowl with a soft, damp cloth.

Important: Use care around sharp blades.

3. Wash the cover in warm soapy water. Rinse and dry thoroughly. Wipe the exterior of the AutoGrinder with a damp cloth.

4. Hold the AutoGrinder and turn the base in a clockwise direction to retract the power cord.

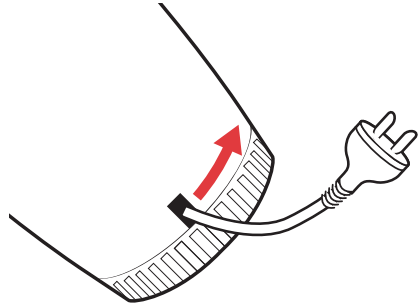

5. The storage container and brush should be washed in hot, soapy water. Rinse and let dry.

Notes

Notes

12 Month Replacement Guarantee

In the unlikely event that this appliance develops any malfunction within 12 months of purchase (3 months commercial use) due to faulty materials or manufacture, we will replace it for you free of charge.

Should you experience any difficulties with your appliance, please phone our customer service line for advice on 1300 881 861 in Australia, or 0800 786 232 in New Zealand. Alternatively, you can send a written claim to Sunbeam at the address listed below. On receipt of your claim, Sunbeam will seek to resolve your difficulties or, if the appliance is defective, advise you on how to obtain a replacement or refund.

Your Sunbeam 12 Month Replacement Guarantee naturally does not cover misuse or negligent handling and normal wear and tear.

Similarly your 12 Month Replacement Guarantee does not cover freight or any other costs incurred in making a claim. Please retain your receipt as proof of purchase.

The benefits given to you by this guarantee are in addition to your other rights and remedies under any laws which relate to the appliance.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law and under the New Zealand Consumer Guarantees Act.

In Australia you are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should your appliance require repair or service after the guarantee period, contact your nearest Sunbeam service centre.

For a complete list of Sunbeam's authorised service centres visit our website or call:

Australia

www.sunbeam.com.au

1300 881 861

Units 5 & 6, 13 Lord Street
Botany NSW 2019 Australia

New Zealand

www.sunbeam.co.nz

0800 786 232

26 Vestey Drive, Mt Wellington
Auckland, New Zealand

Need help with your appliance?

Contact our customer service team or visit our website for information and tips on getting the most from your appliance.

In Australia

Visit www.sunbeam.com.au

Or call 1300 881 861

In New Zealand

Visit www.sunbeam.co.nz

Or call 0800 786 232

 is a registered trademark.

Made in China.

Due to minor changes in design or otherwise, the product may differ from the one shown in this leaflet.

© Copyright. Sunbeam Corporation Limited 2011.

ABN 45 000 006 771

Units 5 & 6, 13 Lord Street
Botany NSW 2019 Australia

Unit 3, Building D
26 Vestey Drive
Mt Wellington Auckland
New Zealand

Sunbeam Corporation is a division of GUD Holdings Ltd.