
Tanaka.

Parts Catalog

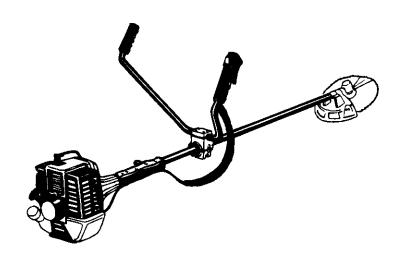

Brush Cutter

Model: TBC-373

Part # 10928 03-10-98

TBC-373

OPTIONS AND ACCESSORIES

NYLON LINE



746157 .105, Box, 50 ft.

746161 .105, 1/2 lb. Box, 110 ft

746162 .130, 1/2 lb. Box, 75ft.

746166 .105, 1 lb. Box, 235 ft.

746167 .130, 1 lb. Box, 150 ft.

746170 .105, 3 lb. spool, 705 ft.

746171 .130, 3 lb. spool, 450 ft.

746174 .105, 5 lb. spool, 1175 ft.

746175 .130, 5 lb. spool, 750 ft.

SEMI-AUTO HEAD



746153 PNH-180

746253 PNH-181

27325 ET-1201 **Body** 27324 ET-1206 Cap

27318 ET-1225 Adapter 27323

ET-1205 Spool ET-1207 Eyelet

27319 ET-1208 Spring

ET-1209 Bump Disk

BLADES

746105 Weed Blade, 10"X4T

746106 Weed Blade, 10"X8T

746108 Saw Blade, 10"X80T 746192 Carbide Blade, 9"X36T

ALUMINUM MANUAL HEAD



PCH-100 (746180)


PCH-300 (746190)

<u>Perfect Mix*</u> 2-Cycle Engine Oil



700109 2.8 oz. Bottle, 1 Gallon Size (24*) 700108 16 oz. Self-measuring Bottle (24*) 700110 1 Gallon Jug Commercial Size (6*) * Case Quantity

SHOULDER STRAPS

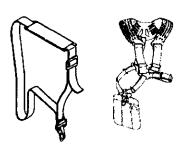

PSS-175

SS-400

MANUALS/CATALOGS

Owner's Manual 19486 10928 **Parts Catalog**


SPECIAL TOOLS

006-29326-000 Flywheel Remover 001-29000-000 **Tachometer** 070-2000W-500 Pressure Tester Piston Pin Remover 009-29326-000 **Gear Shaft Remover** 070-2000W-501 Carb. Tool Kit 015-29338-000 **Pinion Remover** 016-29371-000





FIG.1 ENGINE

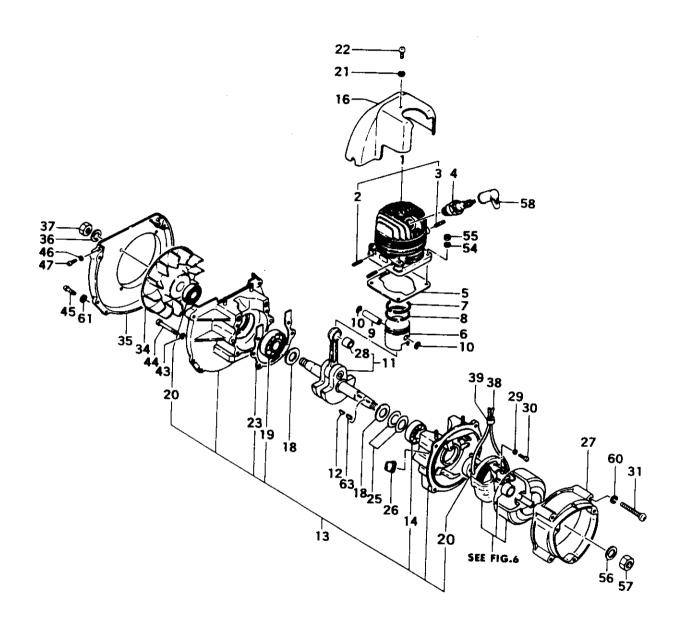

	DASTIL	IBC-3/3 F/	_	_	_		
REF.	<u> </u>	PART DESCRIPTION		-	-	SERIAL NO	REMARKS
1	002-04007-803		1		D		
2	1	STUD,6X26	2		D		
3	100-02100-200	BOLT,STUD,6X22	2		C		
4	018-01805-200	PLUG,SPARK	1		В		
5	017-04001-200	GASKET,CYLINDER	1		В		
6	031-04000-200	PISTON	1	ŀ	Ы		
			1				
7	040-04007-200	RING.PISTON	1		D		
8	041-04000-200	RING, PISTON	1		В		
9		PIN,PISTON	1		D		
10	039-01000-200	CIRCLIP, PISTON PIN	2		D		
11	046-04000-812	CRANKSHAFT	4		D		
1	068-02000-200				D		
12	068-02000-200	KEY,WOODRUFF,3X13X5			וטו		
. مد	070 04004 055						licated as beautiful as
1		CRANKCASE,ASS'Y	1		D		Includes bearings, seals & gasket
1	999-61620-200	BEARING,BALL,#6202	1		В		
16	016-04007-202	SHROUD,CYLINDER	1		D		
18	070-02401-201	WASHER,CRANKSHAFT 15X22	2		D		
19	999-61630-200	BEARING,BALL,#6302	1		D		
20	999-66153-000	SEAL,OIL,#15307	2		В		
21	992-01060-011	WASHER,6	1		Α		
22	990-11060-081	SCREW,6X8	1		D		
23	090-04000-200	GASKET, CRANKCASE	1		اما		
25	071-02007-200	SHIM,15.2X20X.05	ΙvΙ		D		Shims are "as needed" to obtain
	071-02007-210	·	١v	i	D		correct c/s side clearance.
25	071-02007-220	SHIM,15.2X20X.15	١٠̈١		D		control c, c cido dicarance.
25	071 02007 220	01 mai, 13.27207. 13					
ا م	074 44600 000	CLUM 46V04V 00	١.,		ام		
I I		SHIM,16X21X.20	l V		D		
<i>i</i> 1		SHIM,16X21X.30	ارا	l	D		
		GROMMET,SECONDARY CORD	1		D		
I .	806-04007-200		1		D		
I .		BEARING,NEEDLE,F1010B	1		В		
29	992-01040-011	WASHER,4	2		디		
30	990-11040-121	SCREW,4X12	2		В		
31	990-11050-451	SCREW,5X45	4		디		
34	113-02000-803	FAN	1		D		
35	112-04001-201	CASE,FAN	1		D		
36	992-01100-011	WASHER,10	1		В		
37	991-01100-011	NUT,10	₁		в]	
		·					
38	178-04021-810	CORD.STOP	₁		D		,
I I	173-01500-800	CORD,PRIMARY		I			
38	173-04024-810	CORD,PRIMARY		l	D		
~	170 04024-010	COLLO,I THINKITI	│		7		
L		L					


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 1 cont.

		1000.0.			_		
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
39	199-04021-200	PIPE,RUBBER	1		D		
43	992-10060-012	WASHER,S,6	4		Α		
44	990-11060-351	SCREW,6X35	4		В		
45	990-11060-251	SCREW,6X25	4		С		
46	992-01050-011	WASHER,5	2		Α		
47	990-11050-101	SCREW,5X10	2		В		
54	992-10060-012	WASHER,S,6	4		Α		
55	991-01060-013	NUT,6	4		В		
56	992-01100-011	WASHER,10	1		В		
57	066-02300-201	NUT,FLYWHEEL	1		D		
58	157-01570-900	CAP,SPARK PLUG,ASS'Y	1		С		
60	992-10050-012	WASHER,S,5	4		Α		
61	992-10060-012	WASHER,S,6	4		Α		
63	069-04000-201	KEY,WOOD-RUFF,3X3X7	1		D		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.2 ENGINE COMPONENTS

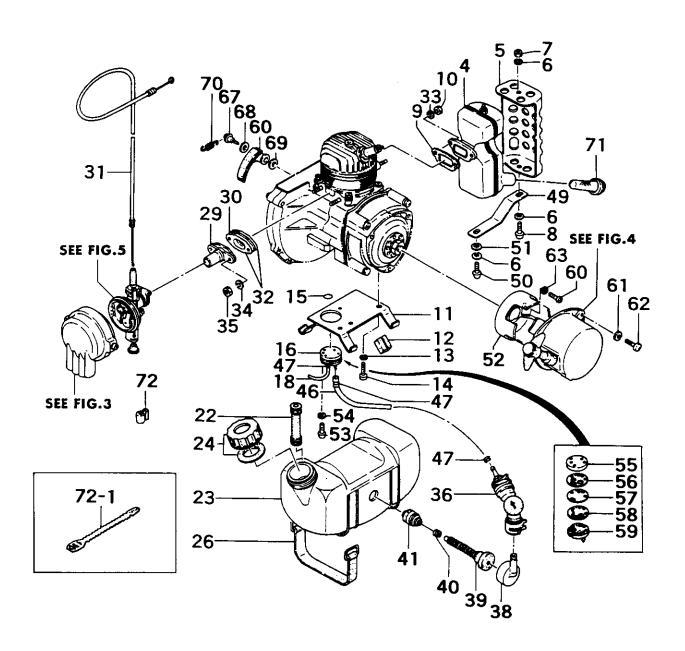

REF.	PART NO.	PART DESCRIPTION				SERIAL NO	REMARKS
4	706-04001-804		Ť	Ť	D		
5	1	PROTECTOR, MUFFLER	1	ļ	D		
1	992-10060-012		3		Α		
1 -		l ' '	1		Α		
1	991-01060-011	· ·	4		C		
		SCREW,6X12	١,		D		
9	737-04000-201	GASKET,MUFFLER	•		וטו		
1			_				
	991-01060-011		2		A	!	
		BRACKET, TANK HOLDING			D		
		CUSHION, TANK HOLDING METAL			C		
	992-10060-012		2		Α		
14	990-11060-121		2		C		
15	999-67004-000	O-RING,P4	1		C		
16	593-04001-910	PUMP,ASS'Y	1		D		
18	700-03005-160	PIPE,FUEL,3X5X160	1	ŀ	C		
22	530-04001-201	PIPE,RETURN	1		D		
23	591-04021-200	TANK	1		D		
24	628-04021-900	CAP,TANK ASS'Y	1		D		•
26	603-02101-803	BAND, TANK HOLDING	2		C		
29	393-04001-201	MANIFOLD, INLET	1		D		
30	404-04000-200	INSULATOR, CARBURETOR	1		D		
31	885-01553-820	WIRE,THROTTLE	1		C		
32	403-04000-200	GASKET,INLET MANIFOLD	2		D		
33	992-10060-012	1	2		Α		
34		WASHER,S,6	2]	A		
"		, ,					
35	991-01060-013	NUT.6	2		В		
36	1	PUMP,PRIMER ASS'Y	1		В		
38		CAP,RUBBER PIPE	1		lΑ		
39	678-00206-203		1		c		
40	680-04019-210		1	1	В	1	
41	675-0608A-900	FILTER,FUEL	1		A		
"'	0,00000,000						
46	700-03005-055	PIPE,FUEL,3X5X55	1		D		
47	f	STOPPER, FUEL PIPE	3		C	1	
49		STAY, MUFFLER	1		D		
50	990-11060-141	SCREW,6X14	1		C	1	
51	992-01060-011	WASHER,6	1	1	A	1	
52	798-04000-200		1		D	1	
32	7 30-04000-200	I GEELT, GTAINTEN	Ι΄				
53	990-11040-181	SCREW 4X18	3		D		
54	992-10040-012	1	3		D		
55		PUMP, DELIVERY SIDE	1	1	D	1	
35	000-01550-212	J. Sivil ,DELIVERT SIDE	1 '				
L		<u> </u>	1		Щ.		<u> </u>

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 2 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
56	671-04001-213	GASKET,PUMP	1		С		
57	670-04001-211	DIAPHRAGM,PUMP	1		C		
58	674-04001-211	VALVE,FREE	1		C		
59	667-00539-801	PUMP, SUCTION SIDE	1		D		
60	990-11060-141	SCREW,6X14	3		C		
61	992-10050-012	WASHER,S,5	3		Α		
62	990-11050-161	SCREW,5X16	3		В		
63	992-10060-012	WASHER,S,6	3		Α		
66	290-02110-802	SHOE,CLUTCH	3		В		
67	357-02110-202	BOLT,CLUTCH,STEP	3		C		
68	358-02103-200	WASHER,CLUTCH A	3		Α		
69	359-02103-200	WASHER,CLUTCH,B	3		В		
70	342-04004-200	SPRING,CLUTCH	3		C		
71	732-04001-800	ARRESTER,SPARK	1		С		
72-1	903-32201-200	HOLDER,THROTTLE WIRE	2		D	~C154793	
72	778-36100-200	CLAMP,CORD	2		D	C154794~	

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.3 AIR CLEANER

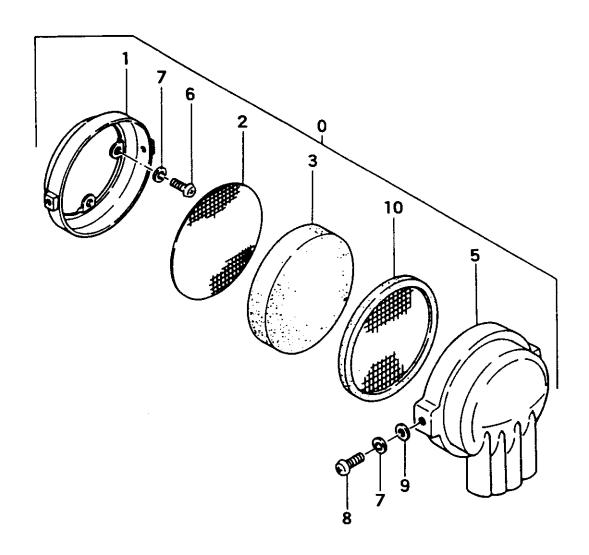


FIGURE 3

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
0	410-00731-900	CLEANER,AIR ASS'Y	1		С		
1	423-00700-800	BODY,AIR CLEANER	1		D		
2	426-00700-210	HOLDER, CLEANER	1		D		
3	446-00700-220	ELEMENT, CLEANER	1		С		
5	424-00731-201	COVER,AIR CLEANER	1		C		
6	990-11040-101	SCREW,4X10	2		Α		
				Н			
7	992-10040-012	WASHER,S,4	4		D		
8	990-11040-101	SCREW,4X10	2		Α		
9	992-01040-011	WASHER,4	2		C		
10	425-00700-200	HOLDER, CLEANER, A	1		D		

FIG.4 RECOIL STARTER


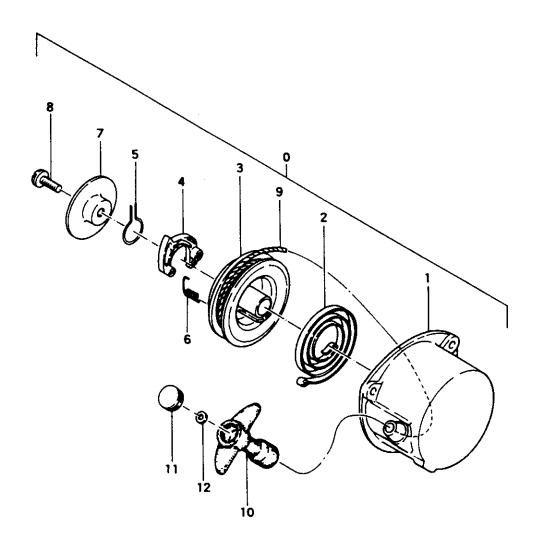


FIGURE 4

	<u>r — — — · · · </u>	Y		_			
REF.	PART NO.	PART DESCRIPTION	Q	C	S	SERIAL NO.	REMARKS
0	762-03131-900	STARTER,RECOIL ASS'Y	1		D		
1	772-03131-200	BODY,RECOIL STARTER	1		D		
2	779-03131-200	SPRING,RECOIL	1		D		
3	769-03131-200	PULLEY,STARTER	1		D		
4	788-01250-200	PAWL,STARTER	1		D		
5	836-06092-200	SPRING, FRICTION	1		D		
6	832-01250-200	SPRING,RETURN	1		D		
7	837-06092-200	PLATE, FRICTION	1		D		
8	990-15050-121	SCREW,5X12	1		D		
9	783-03131-200	ROPE,STARTER	1		D		
10	785-10118-200	HANDLE,STARTER	1		С		
11	835-10246-200	CAP,STARTER HANDLE	1		С		
12	992-01040-011	WASHER,4	1		С		

FIG.5 CARBURETOR

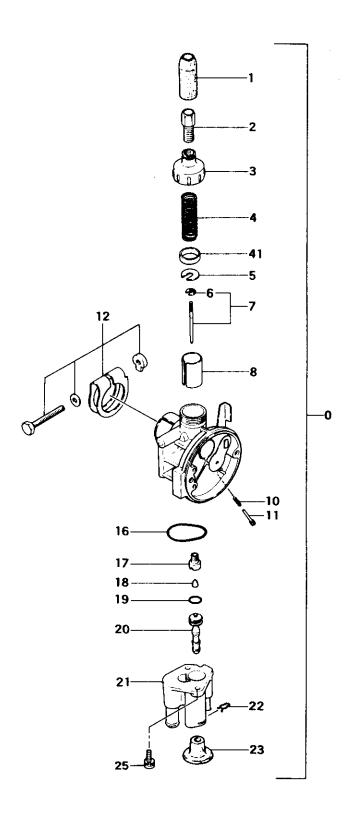

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
0	455-22000-910	CARBURETOR,ASS'Y	1		D		
1	560-22602-200	CAP,RUBBER	1		D		
2	597-22904-200	ADJUSTER,THROTTLE CABLE	1		D		
3	595-22602-200	CAP,BODY	1		D		
4	594-22000-200	SPRING,THROTTLE VALVE	1		D		
5	619-22912-200	RECEIVER, THROTTLE SPRING	1		D		
6	593-22000-200	CLIP,NEEDLE,JET	1	ŀ	D		
7	592-22000-910	NEEDLE,JET,ASS'Y	1		D		
8	591-22005-200	VALVE,THROTTLE	1		D		
10	623-22000-200	SPRING,ADJUSTER SCREW	1		D		
11	622-22000-200	SCREW,ADJUSTER	1		D		
12	561-22602-900	CLAMP,CARB.	1		D		
	1						•
1		GASKET,FLOAT CHAMBER	1		C		
1	599-22000-260		1		D		
18	587-22000-200	CAP,CHECK VALVE	1		D		
19	999-67004-000	O-RING,P4	1		С		
20	586-22000-200	VALVE,CHECK	1		D		
21	580-22000-800	CHAMBER,FLOAT	1		D		
1		CLIP,FLOAT CHAMBER	1		D		
1	560-22602-200		1		D		
25	994-34040-101	SCREW,PS,4X10	2		D		
41	510-04001-201	COLLAR	1		D		
1	I		ı	ı			

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.6 MAGNETO


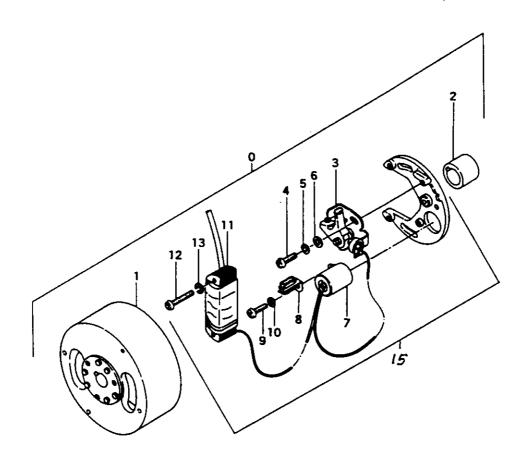


FIGURE 6

		I DU-010 F					
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
0	150-20102-900	MAGNETO, ASS'Y	1		D		
1	155-20001-800	ROTOR,MAGNETO	1		D		
2	246-20102-200	CAM,MAGNETO	1		D		
3	160-20001-900	BREAKER,CONTACT B	1		C		
4	990-11040-101	SCREW,4X10	1		A		
5	992-10040-012	WASHER,S,4	1		ם		
6	992-01040-011	WASHER,4	1		С		
7	177-20001-800	CONDENSER	1		C		
8	185-20001-800	FELT,LUBE	1		D		
9	990-11040-101	SCREW,4X10	1		Α		
10	992-01040-011	WASHER,4	1		С		
11	167-20001-800	COIL,IGNITION	1		D	~A283774	
11	167-20102-800	COIL,IGNITION	1		D	A283775~	
12	990-11040-281	SCREW,4X28	2		D		
13	992-10040-012	WASHER,S,4	2		D		
15	156-20102-900	STATOR,MAGNETO ASS'Y	1		D		


FIG.7 CLUTCH CASE

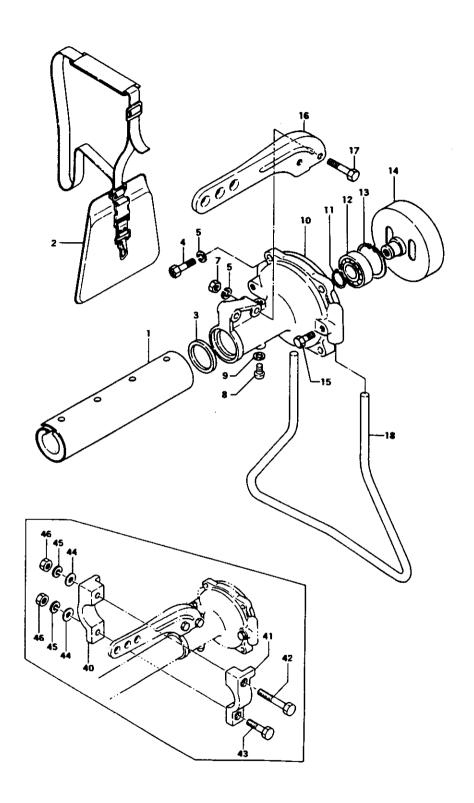


		1 DO OTOTATTO EIGHT										
	REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS				
ľ	1	336-33411-811	PAD,CUSHION	1		D						
	2	SS-250	STRAP,SHOULDER	1		С		Also can use SS-400 STRAP				
	3	999-66283-560	SEAL,OIL	1		D						
	4	990-23060-221	BOLT,PLUS,6X22	4		С						
	5	992-10060-012	WASHER,S,6	6		Α						
	7	991-01060-011	NUT,6	2		A						
Į												
-		990-11060-101		1		D						
1	9	317-33411-201	GASKET,OIL	1		D						
			HOUSING,CLUTCH	1		D	~A283374					
		1	HOUSING,CLUTCH	1		D	A283375~					
		993-50015-002	RING,STOP,C-15 EX	1		С						
	12	999-61620-201	BEARING,BALL,#6202ZZ	1		С						
				١.		_						
			RING,STOP,C-32 IN	1		С						
			DRUM,CLUTCH	1		D						
		990-21060-151	BOLT,6X15	2		C						
			METAL,LIFTING	1		D						
		990-21060-301	BOLT,6X30	2		D						
	18	741-33411-200	STAND	1		D	~A283774					
						_	1000775					
		741-33576-200	1	1		D	A283775~					
		380-33577-201	HOLDER, CLUTCH CASE A			D						
	41		HOLDER, CLUTCH CASE B			D						
		990-21060-401	BOLT,6X40			D						
		990-21060-251	BOLT,6X25	1		D						
	44	992-01060-011	WASHER,6	2		Α						
ļ	45	000 10000 010	WASHED O A	٦								
		992-10060-012	, ,	2		A						
	46	991-01060-011	NUT,6	2		Α						
Į		I		1	1	ı	I					

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.8 HANDLE

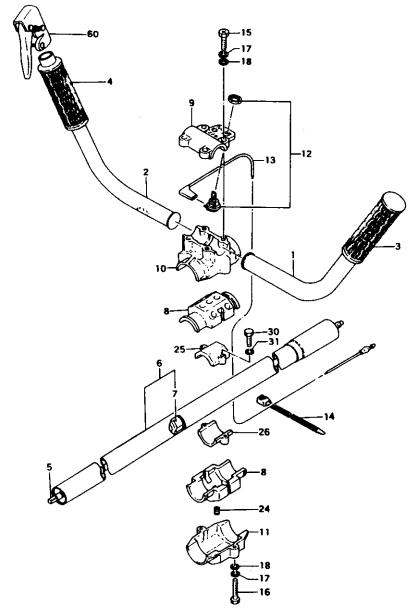


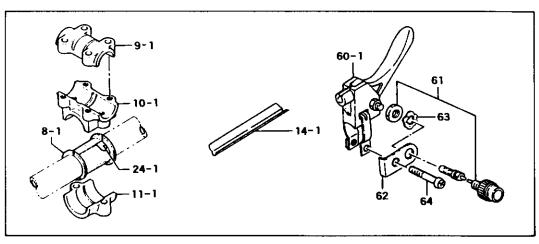

, ,	IUNE O	1BC-3/3 P/	,	ו כ			
REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
1	500-33411-202	HANDLE	1		D		
2	500-33576-200	PIPE,HANDLE	1		С		
3	503-33411-200	GRIP,HANDLE	2		D		
4	503-33576-200	GRIP,HANDLE	1		D		
5	343-33411-202	SHAFT,DRIVE	1		C		
6	341-33413-800	PIPE,DRIVE SHAFT	1		D		
7	347-33411-912	BUSHING,DRIVE SHAFT	5		D		
8-1	510-33411-201	CUSHION, HANDLE BRACKET	1		D	~C161900	
8	319-33576-200	CUSHION	2		D	C161901~	
9-1	506-33411-200	BRACKET,HANDLE A	1		D	~C161900	
9	506-33576-210	BRACKET,HANDLE,A	1		D	C161901~	
10-1	507-33411-201	BRACKET,HANDLE B	1		D	~C161900	
10	507-33576-200	BRACKET,HANDLE B	1		D	C161901~	
11-1	508-33411-20	BRACKET,HANDLE,C	1		D	~C161900	<u>.</u>
11	508-33576-200	BRACKET,HANDLE,C	1		D	C161901~	'
12	162-01300-900	SWITCH,STOP	1		Α		
13	178-33680-800	CORD,STOP	1		ם		
14-1	198-33578-200	CLAMP,CORD	1		D	~D107499	
14	198-33576-200	CLAMP,CORD	2		D	D107500~	
15	990-23060-221	BOLT,PLUS,6X22	4		C		
16	990-21060-301	BOLT,6X30	2		D		
17	992-10060-012	WASHER,S,6	6		Α		
18	992-01060-011	WASHER,6	6		Α		
24-1	176-0062W-201	TERMINAL, GROUNDING	1		С	~C161900	
24	176-33576-200	TERMINAL, EARTH	1		D	C161901~	
	448-33576-200	BRACKET,A	1		D		
26	449-33576-200	BRACKET,B	1		D		
30	990-21050-201	BOLT,5X20	2		D	•	
31	992-10050-012	WASHER,S,5	2		Α		
60-1	870-01560-910	LEVER,THROTTLE ASS'Y	1		С	~C161900	
60	870-04031-901	LEVER,THROTTLE ASS'Y	1		C	C161901~	
61	170-01004-801	BUTTON,STOP	1		C		
62	640-0062M-201	BRACKET,STOP BUTTON	1		D		!
63	992-04080-030	WASHER,8	1		С		
64	990-11060-301	SCREW,6X30	1		D		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.9 GEAR CASE

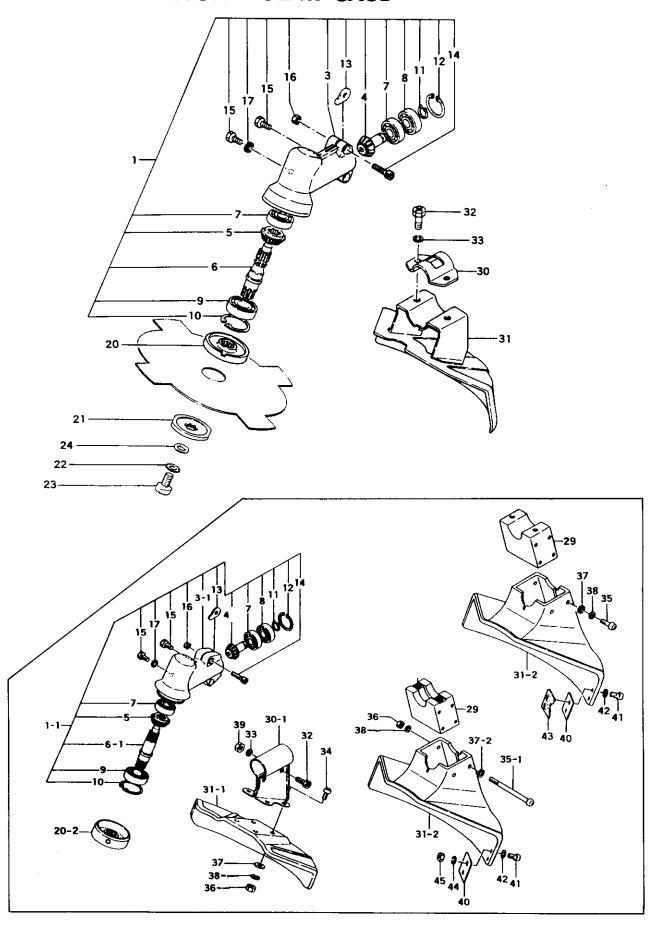

	UNL 9	1BC-3/3 F/	_	_	_		
REF.		PART DESCRIPTION	Q	С		SERIAL NO.	REMARKS
1-1	300-37000-000	SET,GEAR CASE	1		D	~D229061	Includes cutter holder
1	300-37000-920	CASE,GEAR,ASS'Y	1		С	D229062~	
3-1	300-33410-000	SET,GEAR CASE	1		D	~D179760	Includes cutter holder
3	300-33410-220	CASE,GEAR	1		С	D179761~	
4	301-33411-00	SET,GEAR/PINION	1		С		
5	301-33411-00	SET,GEAR/PINION	1		С		
6	304-37000-200	SHAFT,GEAR	1		D		
7		BEARING,BALL,#6000	2		С		
8	999-61600-004	BEARING,BALL,#6000DD	1		c		
9	1	BEARING,BALL,#6002D	1		С		
10	1	RING,STOP,C-32 IN	1		С		
11	1	RING,STOP,C-10 EX	1	:	С		
12	993-51026-002	RING,STOP,IN,C-26	1		D		
		WASHER,GEAR CASE	2		С		
		BOLT,HEX.HOLE,5X20	2		С		
	990-23060-121	BOLT,PLUS,6X12	2		C		
	991-01050-011	NUT,5	2		Α		
	317-33411-201	GASKET,OIL	1		D		
''	017 00411 201						
20-2	310-33410-202	HOLDER, CUTTER	1		F	~D179760	
4	310-33524-20	HOLDER, CUTTER	انا			D179761~	
1	311-33411-201	CAP, CUTTER HOLDER			В	5170701-	
1		WASHER, TOOTHED LOCK, 8			В		
		BOLT, CUTTER FIXING (LEFT)			Ā		
	992-01080-011	WASHER,8	ا ا		Δ		
~~	332-01000-011	TYASTICIT,0			$^{\prime}$		
29	445-33578-200	SPACER,BRACKET	1		D		
		BRACKET, SAFETY GUARD				~C161900	
1	442-33671-201		'			C161900 C161901~	
	441-33700-220	1		ļ		~C161901~	
		GUARD,SAFETY				~C161900 ~D107499	
	441-37003-802	l '		J		D107499	
ادا	1-0/000-002	GUARD,SAFETY			미	~ 000C/DIU	
32	990-23060-151	BOLT,PLUS,6X15	ارا	ŀ			
	992-10060-012	i '	2		A		,
	990-11050-151	WASHER,S,6	2		A		
		SCREW,5X15	4		D	D011000	
	990-11050-751	SCREW,5X75	2			~D011380	
	990-11050-161	SCREW,5X16	4		. 1	D107500~	
36	991-01050-011	NUT,5	2		Α		
27	002 01050 011	WACHED E	ٍ				
		WASHER,5	4		Å		
		WASHER,S,5	4		Å		
39	991-01060-011	NUT,6	2		Α		
L							


^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 9 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO.	REMARKS
40	800-33005-201	BLADE	1		C		
41	990-11040-161	SCREW,4X16	2		Α	~D107499	
41	990-11040-121	SCREW,4X12	2		В	D107500~	
42	992-01040-011	WASHER,4	2		C		
43	799-33005-200	GUIDE,BLADE	1		C		
44	992-10040-012	WASHER,S,4	2		D		
45	991-01040-011	NUT,4	2		c		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.10 TOOLS & NYLON HEAD

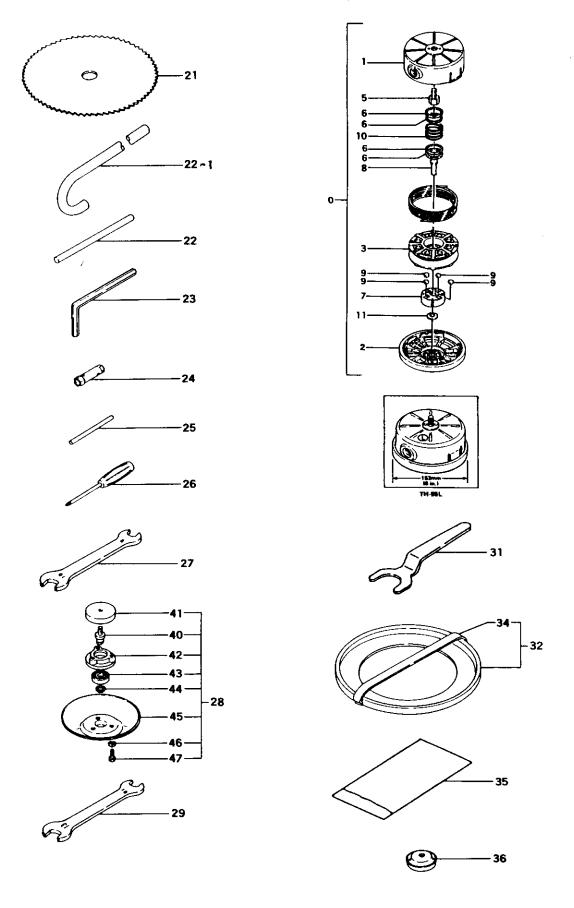

THORE TO THE STATE LISTING											
REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS				
0	783-33670-93	IR487/AUTO HEAD (L)	1		В						
1	786-33670-92	BODY,CUTTING	1		C						
2	789-33670-23	CAP,BODY	1		В						
3	787-33670-210	REEL,(L)	1		C						
5	314-33670-20	BOLT,8X1.25 LH GOLD	1		Α						
6	792-33004-200	WASHER,REEL	4		Α						
7	790-33004-200	SLIDER,REEL	1		Α						
8		HOOK,REEL SLIDER	1		Α						
1	673-35600-20	BALL,STEEL	4		Α						
1	793-33910-20	SPRING,REEL,SILVER	1		Α						
I	358-02103-200	WASHER,CLUTCH A	1		Α						
21	746108	BLADE,10X80,1R489,(PSB-180)	1		Α						
1		STOPPER,HANDLE	1			~D179760					
1	752-33900-200		1		С	D179761~					
1	813-20000-200	T .	1		D	;					
I .	1	SPANNER,BOX,17X19	1		D						
25	951-20000-200	HANDLE,8X120	1		D						
26	862-20000-200	SCREW DRIVER,PHILLIPS	1		D						
	801-20000-200		1	İ	D						
I .		DISK,BLADE SAFETY ASS'Y	1		C		<u> </u>				
1		SPANNER,10X13	1		D						
I .	809-20000-202	· ·	1		D						
		PROTECTOR,BLADE,9/10"	1		D						
34	616-33411-200	BAND,CUTTER COVER	1		D						
_											
	948-32310-200		1		D						
		PROTECTOR,BOLT	1		Α						
		BOLT,DISK FIXING	1		D						
		COVER,FREE WHEELING DISK	1		D						
	602-33411-201	METAL, FREE WHEELING DISK	1		D						
43	999-61600-203	BEARING,BALL,#6002D	1		C		<u> </u>				
ا 🛴 ا	000 50045 000	DINO STOR O 45 TV			اہ						
			[C						
		DISK,BLADE SAFETY	[D						
1 1	992-10060-012	WASHER,S,6	3		D						
47	990-21060-151	BOLT,6X15	3		디						

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.11 MARKS

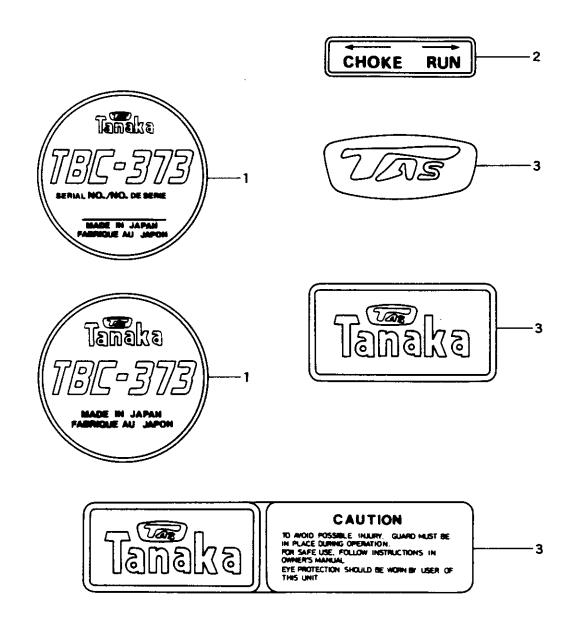


FIGURE 11

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
1	906-33512-220	DECAL	1		D		
2	908-04021-200	DECAL,CHOKE	1		D		
3	929-33576-201	DECAL,SYMBOL	1		D		