

READ AND SAVE THESE INSTRUCTIONS

WARNING: A risk of fire and electrical shock exists in all electrical appliances and may cause personal injury or death. Please follow all safety instructions.



Toaster

Use and Care Guide Model B675

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electrical shock and injury to persons, including the following:

- Read all instructions before using this toaster.
- Do not touch hot surfaces. Use handles or knobs.
- Do not place any part of this toaster under water or other liquid. See instructions for cleaning.
- This toaster is not for use by children. Close supervision is necessary when this appliance is used near children.
- Do not use toaster unattended.
- Do not insert oversized foods, metal foil packages, or metal utensils. Remove all protective wrapping prior to placing in toaster.
- Avoid using items with “runny” frostings, fillings, icings or cheese. This includes pre-buttered foods. When these substances melt, they cause a sticky buildup and may result in a risk of fire.
- Use toaster in an open area with a minimum of 4 inches air space on all sides. A fire may occur if toaster is covered or touching flammable materials including curtains, draperies, towels, walls and toaster covers, etc., while in operation.
- Do not attempt to dislodge food when toaster is plugged in.
- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning. See instructions for cleaning.
- Do not operate any damaged appliance.
- Do not operate with a damaged cord or plug, or after the toaster malfunctions, or has been dropped or damaged in any manner. Return toaster to the nearest authorized service center for examination, repair, electrical or mechanical adjustment.
- Use attachments only if recommended by Toastmaster Inc.
- Do not use outdoors or when standing in a damp area.
- Do not use toaster for other than intended use.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Failure to clean crumb tray may result in a risk of fire. (Refer to cleaning instructions.)

SAVE THESE INSTRUCTIONS

THIS PRODUCT FOR HOUSEHOLD USE ONLY

CAUTION: A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised. The cord must be: (1) marked with an electrical rating of at least 15 A., 125 V., 1875 W., and (2) the cord must be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.

Thank You

The Opera Collection is a set of sophisticated kitchen tools created by German product designer, Wolfgang Puck. We are certain that while you will enjoy the unique style of the toaster, you will also find a convenient and reliable appliance. Enjoy!

BE SURE TO LOOK FOR THE COMPLETE OPERA LINE OF PRODUCTS



Be sure to fill out warranty service information.

TOASTING INSTRUCTIONS

1. Plug cord into any 120V ~ 50-60 Hz outlet. The unit may emit an odor and/or smoke during first few uses from oils used in manufacturing. This is normal for a new appliance.
2. The electronic toaster must be plugged in and the toast color control knob must be set between color 1 and 6 in order for toaster to operate. For first use, set color midway between Light (1) and Dark (6) toast color settings. Toast thin-sliced bread on lighter toast color settings.
3. Insert bread or toaster food into slots and slowly push toast lever down. The self-adjusting bread slots hold food upright for uniform toasting. Raise lever at any time to check toast color.
4. When toast is done, it will pop up and the current will shut off automatically.
5. Unplug and allow to cool before cleaning or moving.

Note: Many varieties of packaged convenience foods are available which can be toasted in your toaster. Refer to food package for heating instructions.

After constant use, or changing to a lighter setting, the lever may not lock down. Allow toasting mechanism to cool until it will lock down.

CRUMB TRAY

Your toaster features a completely removable crumb tray located at the bottom of the front of the toaster. Slide the tray out to empty crumbs. When you replace the crumb tray, it will click into place.

CLEANING INSTRUCTIONS

1. Unplug toaster and allow to cool.
2. Wipe outside with soft, damp cloth. Polish with soft, dry cloth.
3. Slide the crumb tray out and empty the crumbs; replace crumb tray until it clicks into place.

ELECTRIC POWER: If electric circuit is overloaded with other appliances, your toaster may not operate properly. When possible, toaster should be operated on a separate electric circuit than other operating appliances.

Any servicing requiring disassembly other than the above cleaning should be performed by an authorized service center.

SERVICE INFORMATION

Please refer to warranty statement to determine if in-warranty service applies. This appliance must be serviced by a Toastmaster authorized service center. Unauthorized service will void warranty. Consult your phone directory under "Appliances-Household-Small-Service and Repair", or call 1-800-947-3744 in the U.S. and Canada, 52-5-397-2848 in Mexico.

If an authorized service center is not available locally, your appliance may be returned postage prepaid to our National Service Center at the address shown on the back of this booklet.

Products must be adequately protected to avoid shipping damage. Surround your appliance with three inches of protective padding and include a note explaining the problem you have experienced. We recommend insuring your package. No CODs accepted.

ONE YEAR LIMITED WARRANTY

Toastmaster Inc. warrants this product, to original purchaser, for one year from purchase to be free of defects in material and workmanship.

This warranty is the only written or express warranty given by Toastmaster Inc. This warranty gives you specific legal rights. You may have other rights which vary from state to state. ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Defective product may be brought or sent (freight prepaid) to an authorized service center listed in the phone book, or to Service Department, 708 South Missouri St., Macon, MO 63552, for free repair or replacement at our option.

Your remedy does not include: cost of inconvenience, damage due to product failure, transportation damages, misuse, abuse, accident or the like, or commercial use. IN NO EVENT SHALL TOASTMASTER BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, or allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

For information, write Consumer Claims Manager, at the Macon address. Send name, address, zip, telephone area code and daytime number, serial number, and purchase date.

KEEP DATED SALES RECEIPT FOR WARRANTY SERVICE.

Keep this booklet. Record the following for reference:

Date purchased _____

Model number _____

Date code (on bottom of toaster) _____