

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this Andis Trimmer.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Close supervision is necessary when this appliance is used by, on or near children or individuals with certain disabilities.
2. Do not use attachments not recommended by Andis.
3. Do not use this appliance with a damaged or broken blade or comb as injury may occur.
4. **Caution:** Dispose of used batteries properly. Do not incinerate; batteries may explode if overheated.
5. Do not use this appliance with a damaged or broken blade or comb, as injury to the skin may occur.
6. Do not immerse trimmer in water. Use a soft bristled brush to remove any hair from blade.

SAVE THESE INSTRUCTIONS
THIS PRODUCT IS INTENDED FOR
HOUSEHOLD USE

OPERATING INSTRUCTIONS

BATTERIES

Your cordless beard and mustache trimmer uses two "AA" batteries (**not included**). Insert batteries as shown on inside of trimmer.



Requires two AA batteries.

DO NOT MIX old and new batteries.

DO NOT MIX alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

PROPER BATTERY DISPOSAL

Batteries may contain heavy metals such as mercury, lead, cadmium, and nickel, which can be harmful to the environment when improperly disposed of. Remove dead batteries from the unit and dispose of properly. Some communities offer recycling or collection of batteries – contact your local government for disposal practices in your area.

USING TRIMMING COMBS

Your trimmer comes complete with six trimming guides. They are 1/2", 3/8", 1/4", 7 day, 5 day and a 3 day for even closer trimming (Diagram A).

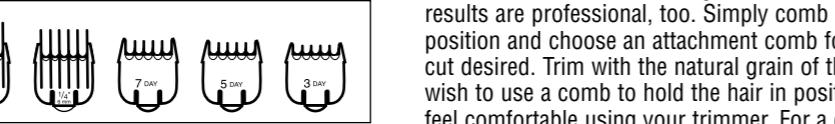


Diagram A

ATTACHING THE TRIMMING COMBS

Slide front of comb over the teeth of the blade. Snap comb down over back of blade (Diagram B).

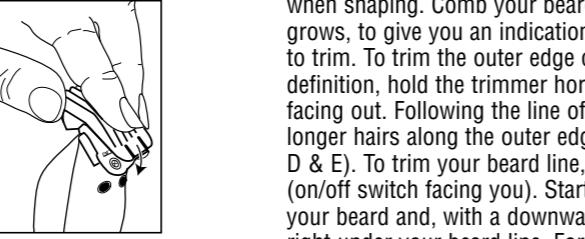


Diagram B

USER MAINTENANCE

BLADES: When trimming is complete, slide on/off switch to off position and remove the trimming comb (if being used). Lightly brush out blades with the blade cleaning brush provided. For best results put a drop of Andis clipper oil on

the blade when necessary. Motor bearings are permanently lubricated—do not attempt to oil. Blades should be handled carefully and never bumped or used to cut dirty or abrasive material. Do not use while bathing or in the shower, as damage to batteries and product may occur. Other than the recommended maintenance described in this manual, no other maintenance should be performed, except by Andis Company or an Andis Authorized Service Station. To find an Andis Authorized Service Station near you log on to www.andis.com or contact our customer service department: 1-800-558-9441 (U.S.) or 1-800-335-4093 (Canada).

TRIMMING NECKLINE

Your trimmer makes trimming the neckline easier. The results are professional, too. Simply comb hair into natural position and choose an attachment comb for the length of cut desired. Trim with the natural grain of the hair. You may wish to use a comb to hold the hair in position until you feel comfortable using your trimmer. For a closer trim, you may wish to select one of the closer cutting comb attachments (Diagram C).

TRIMMING BEARD

Always begin with a slightly damp beard for more control when shaping. Comb your beard in the direction the hair grows, to give you an indication of what areas you need to trim. To trim the outer edge of your beard and add definition, hold the trimmer horizontally with on/off switch facing out. Following the line of your jawbone, cut away longer hairs along the outer edge of your beard (Diagrams D & E).

To trim your beard line, hold the trimmer vertically (on/off switch facing you). Start at the trimmed edge of your beard and, with a downward motion, trim the area right under your beard line. For added definition of your beard line, use the horizontal position to trim any stray hair (Diagram F).

TRIMMING MUSTACHE

Always begin with a slightly damp mustache. When trimming your mustache the first few times you may wish to use a comb to hold in place while you trim. As the hair is

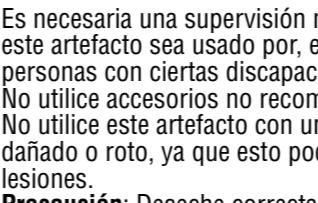


Diagram C

Diagram D

Diagram E

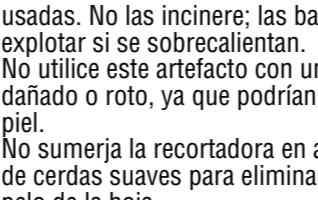


Diagram F

Diagram G

1. Es necesaria una supervisión muy de cerca cuando este artefacto sea usado por, en o cerca de niños o personas con ciertas discapacidades.
2. No utilice accesorios no recomendados por Andis.
3. No utilice este artefacto con una hoja o peine dañado o roto, ya que esto podría producir lesiones.

4. **Precaución:** Deseche correctamente las baterías usadas. No las incinere; las baterías pueden explotar si se sobrecalientan.

5. No utilice este artefacto con una hoja o peine dañado o roto, ya que podrían ocurrir lesiones a la piel.

6. No sumerja la recortadora en agua. Use un cepillo de cerdas suaves para eliminar cualquier resto de pelo de la hoja.

Saque las baterías agotadas de la unidad y elimínelas adecuadamente. Algunas comunidades ofrecen el reciclaje o la recolección de baterías; comuníquese con el gobierno de su localidad para informarse sobre las prácticas de desecho de su área.

USO DE LOS PEINES DE RECORTE

Su recortadora incluye seis guías de recorte. Son de 1/2", 3/8", 1/4", para 7 días, 5 días y 3 días, para un recorte incluso más a ras (Diagrama A).

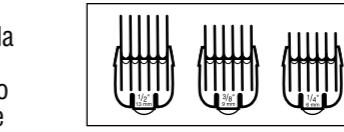


Diagrama A

GUARDE ESTAS INSTRUCCIONES

ESTE ARTEFACTO ESTÁ DESTINADO PARA USO EN EL HOGAR

INSTRUCCIONES DE OPERACIÓN

BATERÍAS

Su recortadora inalámbrica para barba y bigote utiliza dos baterías "AA" (**que no se incluyen**). Inserte las baterías tal como se muestra en el interior de la recortadora.



Diagrama B



Diagrama B



Diagrama B



Diagrama B



Diagrama B



Diagrama B



Diagrama B



Diagrama B



Diagrama B



Diagrama B



Diagrama B



Diagrama B



Diagrama B

Diagrama B

