

Sno-Thro®

Parts Manual

Models


938015 - 322

938017 - 522

938018 - 722

938019 - 522

938300 - 522

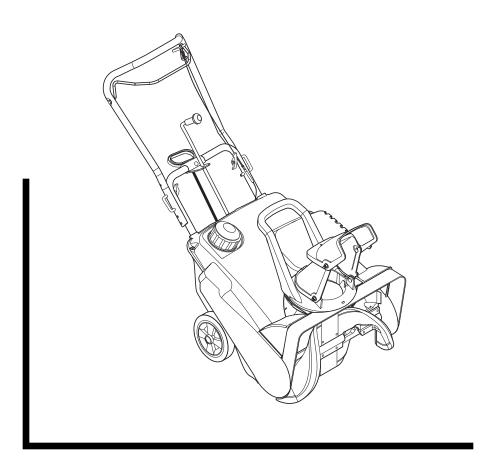

THE MANUAL

Before you operate your unit, carefully and completely read manuals supplied with the unit. The contents will provide you with an understanding of safety instructions and controls during normal operation and maintenance.

For your safety and the safety of others always read, understand, and follow all DANGER, WARNING, and CAUTION messages found in manuals and on safety decals.

Hardware descriptions are given in decimals.

Decimals to Fractions			
.063	1/16	.563	9/16
.125	1/8	.625	5/8
.188	3/16	.688	11/16
.250	1/4	.750	3/4
.313	5/16	.813	13/16
.375	3/8	.875	7/8
.438	7/16	.938	15/16
.500	1/2	1.00	1

SERVICE AND REPLACEMENT PARTS

When ordering replacement parts or making service inquiries, know the Model and Serial numbers of your unit and engine.

Numbers are located on the product registration card in the unit literature package. They are printed on a serial number label, located on the frame of your unit.

- Record Unit Model and Serial numbers here:
- Record Engine Model and Serial numbers here:

UNAUTHORIZED REPLACEMENT PARTS

Use only Ariens replacement parts. The replacement of any part on this vehicle with anything other than an Ariens authorized replacement part may adversely affect the performance, durability, or safety of this unit and may void the warranty. Ariens disclaims liability for any claims or damages, whether warranty, property damage, personal injury or death arising out of the use of unauthorized replacement parts.

PRODUCT REGISTRATION

The Gravely dealer must register the product at the time of purchase. Registering the product will help the company process warranty claims or contact you with the latest service information. All claims meeting requirements during the limited warranty period will be honored, whether or not the product registration card is returned. Keep a proof of purchase if you do not register your unit.

Customer Note: If Dealer does not register your product, please fill out, sign and return the product registration card to Gravely.

YOUR SATISFACTION IS IMPORTANT

Questions? Please follow these helpful steps:

- 1. Refer to the manuals supplied with your unit.
 - They will guide you through safe and proper operation and maintenance.
 - They contain specifications on your unit.
 - If your questions are not answered in these manuals, go to step number two.
- 2. Contact Your Dealer.

Our dealers will be happy to supply any service or advice required to keep your unit operating at peak efficiency.

A factory trained staff is available to support your equipment needs. They stock genuine Ariens parts and lubricants manufactured with the same precision and skill as the original.

If your questions are not resolved by the support staff, ask for the manager or owner.

When contacting your Dealer supply your model and serial numbers.

TO SPEED PARTS ORDERING:

- 1. Know the model and serial numbers of your unit.
- 2. Know the part number required.
- Know the quantity required.
- 4. Know the part description.

MODELS

938015 (SS322)

3 HP 22" Single Stage Sno-Thro Serial No. 003000 and up

938017 (SS522)

5 HP 22" Single Stage Sno-Thro Serial No. 000101 and up

938018 (SS722)

7HP 22" Single Stage Sno-Thro Serial No. 000101 and up

938019 (SS522)

5HP 22" Single Stage Sno-Thro Serial No. 000101 and up

938300 (SS522)

5 HP 22" Single Stage Sno-Thro Serial No. 000101 and up

TABLE OF CONTENTS

DECALS

POWER PLANT


Engine and Drive 4

OPERATORS CONTROLS

Chassis, Cowl, Wheels and Supports	6
Auger and Discharge Chute	8
Handlebars and Controls	0

DECALS

Model 938015, 017, 018, 019, 300

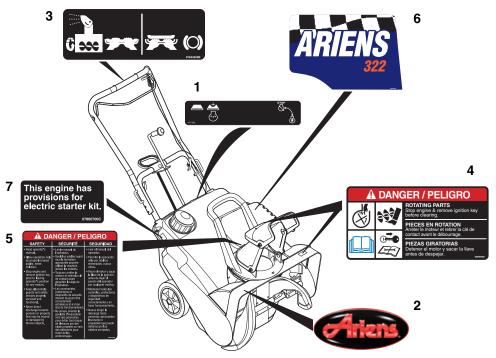

Item Part No. Qty. Description

1	07718200	1	Decal, Panel
2	07746400	1	Decal, Ariens
3	07843500	1	Decal, Auger Bai
1	08005500	2	Docal Safety-Au

4 08095500 2 Decal, Safety-Auger and Chute, Single Stage


5 07753100 1 Decal, Danger Chute 6 08083700 1 Decal, 322 (015)

08083800 1 Decal- 522 (017, 019, 300) 08093800 1 Decal, 722 (018)

7 07860700 1 Decal, Electric Start (019, 300)

PS0017

ENGINE AND DRIVE

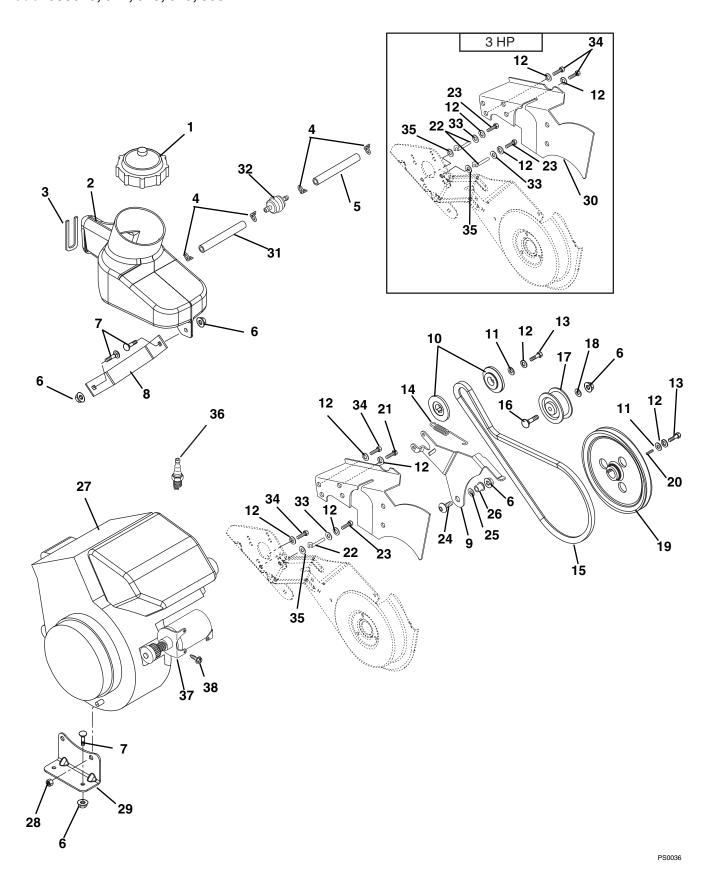


ENGINE AND DRIVE

Item	Part No.	Qty.	Description
1	07525300	1	Cap-Fuel
2	53802500	1	Kit, 938 Fuel Tank (Includes Item 31 and 32
3	03807800	1	Tape Foam, Neoprene 6.0"
4	06939100		Clamp-Hose Wire .49/.51 x .116
5	03807900		Gas Line .25" I.D. x 9.5 (017, 018, 019, 300)
	03328000		Gas Line .25" ID x 11.0 (015)
6	06527600		Nut-Locking-Center-Flange .25-20
7	06219900		Bolt-Round Head Square Neck .25-20 x .75
8	03802600		Bracket-Fuel Tank Mounting
9	03810800		Idler Arm
10	03801200		Pulley-Drive 3L x 1.80 Diameter (017, 018, 019, 300)
	03801100		Pulley-Drive 3L x 1.52 Diameter (015)
11	06435700		Washer-Flat-Steel .38 x .875 x .083
12	06307400		Washer-Locking .312 x .097 Heavy
13	05947300		Bolt-Hex .31-24 x .75
14	08334000		Spring, Extension
15	07236300		V-Belt 3L-Section 32.53 x .38 (017, 018, 019, 300)
	07236400		V-Belt 3L-Section 32.04 x .38 (015)
16	06219700	1	Bolt-Round Head Square Neck .25-20 x 1.25
17	07321900	1	Idler-Flat 1.75 x .27
18	06426600	1	Washer-Flat-Steel .28 x 1.00 x .063
19	07325900	1	Pulley-V, Impeller Shaft 5.50 x .67 with Key
20	06606100	1	Key-Square .188 x .75 x .188
21	05933100	1	Screw-Cap .31-18 x .75 (017, 018, 019, 300)
22	03805500	1	Finger-Belt (017, 018, 019, 300)
	03805500	2	Finger-Belt (015)
23	05946900	1	Bolt-Hex .31-18 x 1.00 Grade 5 (017, 018, 019, 300)
	05946900	2	Bolt-Hex .31-18 x 1.00 Grade 5 (015)
24	06114400	1	Screw-Machine .25-20 x .75
25	06436000	2	Washer-Flat-Steel .51 x .88 x .024
26	05513400	1	Bushing-Flange .27 x .44 x .25 x .75
27	08249100	1	Engine-HSK850 5 HP 2 Cycle (017, 019, 300)
	08249000	1	Engine-HSK 3 HP 2 Cycle (015)
	08264700	1	Engine, 7HP 2 Cycle Tecumseh (018)
28	06529800	2	Nut-Locking-Center .31-18
29	03801600	1	Bracket, Engine Mounting
30	03810751	1	Baffle
31	03813600	1	Gas Line .25 I.D. x 2.5
32	02910800	1	Fuel Filter
33	06437200	1	Washer-Flat-Steel .344 x .688 x .065(017, 018, 019, 300)
	06437200	2	Washer-Flat-Steel .344 x .688 x .065 (015)
34	05947000	2	Bolt-Hex .31-18 x .75 Grade 5 (017, 018, 019, 300)
35	06307200	1	Washer-Locking-External .326 x .599 x .031 (017, 018, 019, 300)
	06307200	2	Washer-Locking-External .326 x .599 x .031 (015)
36	21533600	1	Plug, Spark
37			Motor-Starting (017, 018)
38	07029500	3	Screw-Hex Flange Washer Head .25-20 x .49 (017, 018)

Chassis, Cowl, Wheels and Supports

Model 938015, 017, 018, 019, 300

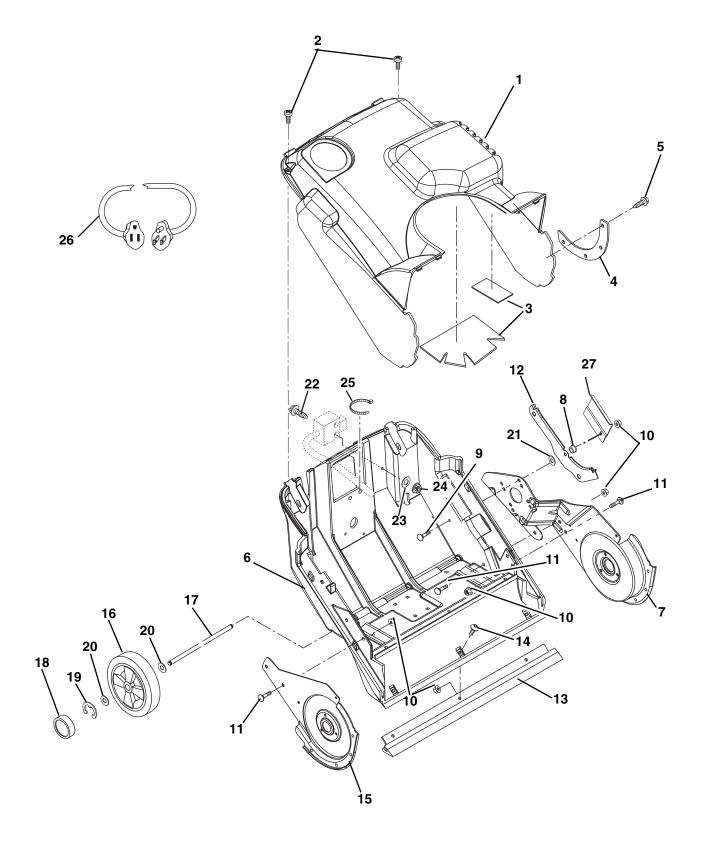


PS0515

Chassis, Cowl, Wheels and Supports


Item	Part No.	Qty.	Description
1	53801800	1	Cowl-Assembly (Includes Item 3)
2	07412300	2	Screw-Special-Tapping #10 x 1.0 with #12 Head
3	03805000	1	Sheet-Heat Reflective (017, 018, 019, 300)
	03805200	1	Sheet-Heat Reflective 3 x 5 (015)
4	03810451	2	Plate-Cowl Retainer
5	07413300	8	Screw-Tapping 12-24 x .50
6	03810500	1	Chassis
7	03807151	1	Support-Bearing, Left Hand
8	05513400	1	Bushing-Flange .27 x .44 x .25 x .75
9	06219700	1	Bolt-Round Head Square Neck .25-20 x 1.25 Grade 5
10	06527600	9	Nut-Locking-Center-Flange .250-20
11	06219900	5	Bolt-Round Head Square Neck .25-20 x .75 Grade 5
12	03811400	1	Guide-Cable
13	03813800	1	Blade-Scraper
14	06114400	3	Screw-Machine .25-20 x .75
15	03807200	1	Support-Bearing, Right Hand
16	07139400	2	Tire/Wheel Assembly 7.0 x 1.5
17	03802300	1	Axle
18	03802400	2	Cap-Hub
19	05710600	2	Ring-Retaining-External .38 x .035 Type E
20	06436200	4	Washer-Flat-Steel .41 x .81 x .065
21	06435800	1	Washer-Flat-Steel .31 x .73 x .065
22	06116600	2	Screw-Machine 8-32 x 2.75 (017, 018)
23	06442700	2	Washer- Flat Steel .219 x .50 x .49 (017, 018)
24	06531300	2	Nut, Lock Nylon 8-32 (017, 018)
25	07517300	1	Cable Tie (017, 018)
26	02483100	1	Cord, Extension (017, 018)
27	03808900	1	Deflector-Exhaust (015)

AUGER AND DISCHARGE CHUTE

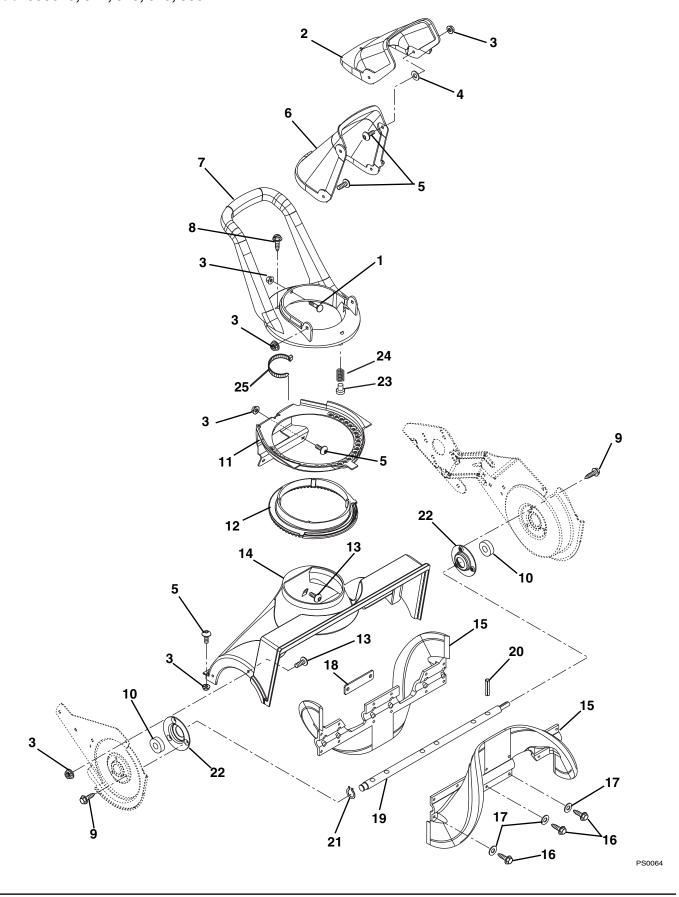

Auger and Discharge Chute

Item	Part No.	Qty.	Description
1	06219900	1	Bolt-Round Head Square Neck .25-20 x .75 Grade 5
2	53800400	1	Deflector-Discharge Chute Assembly
3	06527600	13	Nut-Locking-Center-Flange .25-20
4	06437800	2	Washer-Flat-Rubber .31 x 1.25 x .06
5	06114400	9	Screw-Machine .25-20 x .75
6	53801700	1	Chute-Discharge
7	03801800	1	Handle
8	07409500	4	Screw-Tapping 8-18 x 1.50
9	07412000	6	Screw-Tapping .25 x .50 Hex Washer Head
10	05418800	2	Bearing Ball .699 x 1.58 x .47
11	03801700	1	Bracket-Discharge Chute Rotation
12	03804000	1	Gear-Discharge Chute Segment
13	06114300	5	Screw-Machine .25-20 x .50
14	53800300	1	Housing-Auger Assembly
15	03807000	2	Auger Half
16	07412400	12	Screw-Tapping .25-20 x 1.00
17	06426600	12	Washer-Flat-Steel .28 x 1.00 x .063
18	03803000	6	Plate, Bolt, Self-Tapping
19	03806900	1	Shaft-Auger
20	05809200	6	Pin-Roll .25 x 1.75
21	05706100	1	Ring-Retaining-External .67 x .035
22	03800800	2	Cup-Bearing
23	06816700	1	Rivet .25 x 1.13 Truss Head (015, 019)
24	08329800	1	Spring-Compression .045 x .36 x 2.75 (015, 019)
25	07517300	1	Cable Tie (017, 018, 300)

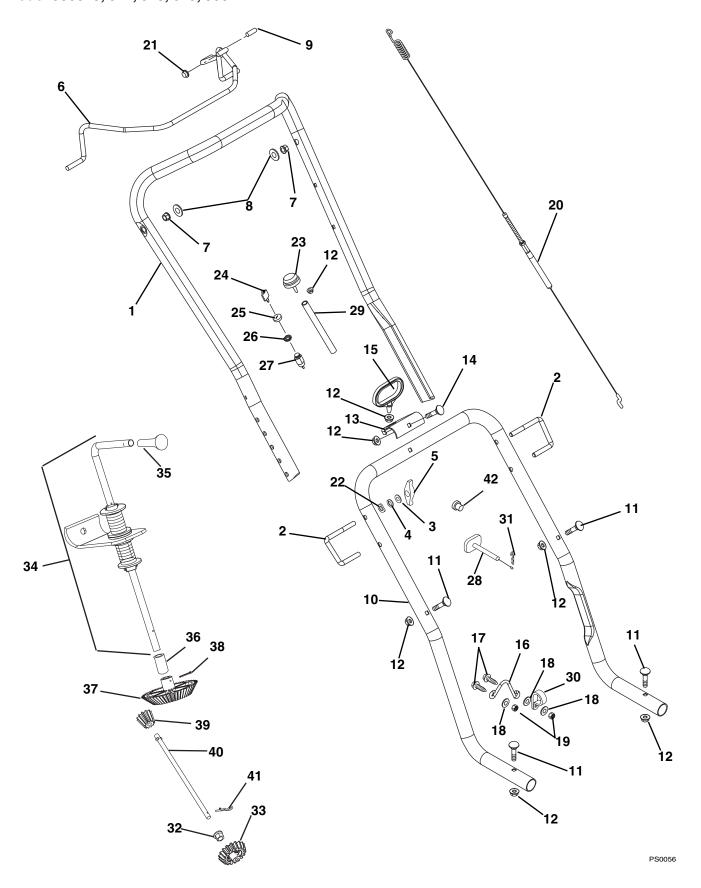

HANDLEBARS AND CONTROLS

Item	Part No.	Qty.	Description
1	03804451	1	Handle Bar-Upper
2	03802700	2	J Bolt .31-18
3	06439400	2	Washer-Flat-Steel .33 x .88 x .062
4	06307400	2	Washer-Locking .31 x .097 Heavy
5	07531700	2	Knob, Wing .31-18
6	03809051	1	Bail, Single Stage
7	05514500	2	Bushing-Flange .33 x .44 x .44 x .56
8	06437200	2	Washer-Flat-Steel .34 x .69 x .065
9	07517000	1	Cap
10	03802151	1	Handle Bar-Lower
11	06220000	4	Bolt-Round Head Square Neck .25-20 x 1.75
12	06527600	6	Nut-Locking-Center-Flange .25-20
13	03802900	1	Bracket-Starter-Handle
14	06206000	1	Bolt-Round Head Square Neck .25-20 x 1.50
15	01157100	1	Recoil Start Handle
16	03803800	1	Guide-Rope
17	06118500	2	Screw-Machine 10-24 x 1.00 Hex Washer Head
18	06442700	3	Washer-Flat-Steel .22 x .50 x .049
19	06536000	2	Nut-Locking Nylon with Insert 10-24
20	06943300	1	Cable-Clutch Control
21	02215300	1	Nut, Push .25
22	06446800	2	Washer, Saddle32 x .94 x .062
23	07518200	1	Primer Assembly
24	02460700	1	Key-w/Cap
25	07517700	1	Cap-Ignition Switch
26	06517300	1	Nut-Panel .63-32
27	52406900	1	Assembly, Switch
28	06949200	1	Control, Choke 5HP and 7HP Tecumseh 2 Cycle
	06929000	1	Control-Choke 3 HP (015)
29	03803300	1	Line-Primer
30	00539800	1	Clamp, Nylon .5 Hose
31	06714800	1	Pin-Hair
32	05514500	1	Bushing-Flange .33 x .44 x .56 (017, 018, 300)
33	03804100	1	Pinion-Discharge Chute 18T
34	53800100	AR	Crank-Chute Assembly (017, 018, 300)
35	07514500	1	Knob (017, 018, 300)
36	03803900	1	Spacer-crank Transfer Pinion (017, 018, 300)
37	03804300	1	Pinion-Crank Transfer 48T (017, 018, 300)
38	06701100	1	Pin, Cotter .16 x 1.25 (017, 018, 300)
39	03804200	1	Gear, Crank Transfer 12T (017, 018, 300)
40	03803600	1	Shaft, Chute Crank Transfer (017, 018, 300)
41	06701000	1	Pin-Hair Internal .08 x .38 x 1.42 (017, 018, 300)
42	07527800	1	Plug-Hole .50 Diameter (015, 019, 300)



Ariens Company 655 West Ryan Street P.O. Box 157 Brillion, WI 54110-0157 920-756-2141 Fax 920-756-2407 www.ariens.com