



NOW YOU'RE READY TO TRIM YOUR BEARD

1. Your trimmer adjusts to five positions so you can have a beard length from 1/8" (shortest) to 5/8" (longest).



2. To use the 5-position comb, slide it over the trimmer blades and snap down into position. At first, until you become familiar with the adjustments, use the longest trim setting (5/8"). (You can always go back and make your beard a little shorter.)

3. Begin trimming your beard using smooth, even strokes. Start with your sideburns and work downward toward your chin. (Never attempt to trim against the natural growth of your beard, because the hair will be cut too short.)

4. If you decide you want a closer trim, you can now adjust the 5-position comb to a shorter setting (such as 1/2" or 3/8") and go over your beard again until you achieve the desired length.

INSTRUCCIONES DE MANEJO DE SU RECORTADOR

1. Quite la tapa del compartimiento de pilas presionando hacia adentro y abajo de la parte inferior de su recortador.


2. Alinee las dos pilas AA* con las posiciones positiva y negativa indicadas dentro del compartimiento de pilas. Cuidando de no doblar los clips, inserte en primer lugar el extremo negativo de cada pila para que éstas se deslicen fácilmente a su posición.

3. Vuelva a colocar la tapa del compartimiento en su posición original presionándola hacia adentro y arriba hasta escuchar un clic que indica que se ha trabado en su posición.

4. Para usar su recortador, deslice el interruptor ENCENDIDO/PAPAGADO hacia arriba a la posición ENCENDIDO.

5. Luego de usarlo, apague el recortador deslizando el interruptor ENCENDIDO/PAPAGADO hacia abajo a la posición APAGADO.

6. Para guardarlo más cómodamente, el recortador viene con un soporte que sostiene el aparato y los accesorios.

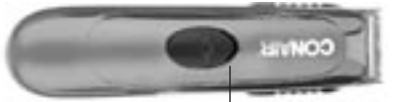

Interruptor ENCENDIDO/APAGADO

* Requiere 2 pilas AA (no incluidas). Recomendamos usar pilas alcalinas en su recortador, porque son de mayor duración.

For the best trimming results, your beard should be slightly damp (not wet) before using the trimmer. This will prevent the trimmer from removing more hair than desired.

GETTING STARTED OUTLINING YOUR BEARD


1. It is always best to begin with a clean, slightly damp beard.

2. After you have combed through your beard in the direction it grows naturally, you will want to outline the desired shape, beginning under your jawline.

3. Begin defining your beard's shape under your chin and work upward on each side of your face toward your ears. Then define the upper outline of your beard across your cheeks, past your sideburns and toward your hairline.



TYPES OF BEARDS/MUSTACHES

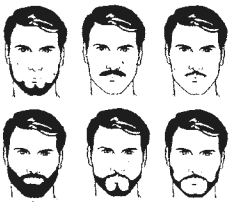

Once your beard or mustache has been styled, it is essential that you maintain its appearance. To do this, use your shaper to trim your beard/mustache weekly.

There are three key factors that determine which beard or mustache style is most suitable for your face:

1. The shape and dimensions of your face.
2. The natural growth of your beard/mustache.
3. The thickness of your beard/mustache.

If you are unsure of the type of beard or mustache that most suits your face, speak with a professional hair stylist and ask for an opinion on what style would be best.

LA BARBA Y EL BIGOTE APROPIADOS

Una vez que le ha dado forma a su barba o bigote, es esencial que mantenga su aspecto. Para ello, use su modelador para recortarlo/semanalmente.

Para obtener los mejores resultados, debe humedecer (no mojar) ligeramente su barba. Este evitará que el recortador quite más pelo que el deseado.

Tenga especial cuidado cuando cambie o ajuste el recortador en su soporte hasta que vuelva a utilizarlo.

Cada vez que termine de usar el recortador, tome el cepillo de limpieza provisto y quite cualquier pelo suelto que se haya acumulado en las hojas. A continuación, guarde el recortador en su soporte hasta que vuelva a utilizarlo.

Be especially careful when changing or adjusting blades. When you have your trimmer serviced, be sure that all blades are sharpened or replaced at the same time.

To promote the long life of the appliance, use your trimmer only for the purpose intended by the manufacturer- to trim your beard and mustache.


GROWING A BEARD AND MUSTACHE

There are three key factors that determine which beard or mustache style is most suitable for your face:

1. The shape and dimensions of your face.
2. The natural growth of your beard/mustache.
3. The thickness of your beard/mustache.

If you are unsure of the type of beard or mustache that most suits your face, speak with a professional hair stylist and ask for an opinion on what style would be best.

TIPOS DE BARBAS Y BIGOTES

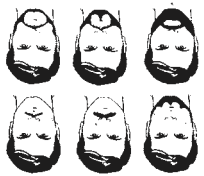

Si no está seguro respecto a qué tipo de barba o bigote es el más adecuado para su cara, hable con un peluquero y pídale su opinión sobre el estilo que más le conviene.

1. La forma y dimensiones de su rostro.

Existen tres factores clave que determinan que estilo de barba y bigote es el más apropiado para su rostro.

2. Una vez que la ha peinado en la dirección de su crecimiento natural, querrá delinear la forma deseada, comenzando bajo la línea de la mandíbula.

3. Comience definiendo la forma de su barba bajo la barbilla y trabaje hacia arriba a ambos lados de la cara en dirección hacia sus orejas. Luego defina el contorno superior a lo largo de sus mejillas, más allá de sus patillas y hacia el nacimiento del cabello.

Una vez que le ha dado forma a su barba o bigote, es esencial que mantenga su aspecto. Para ello, use su modelador para recortarlo/semanalmente.

Para obtener los mejores resultados, debe humedecer (no mojar) ligeramente su barba. Este evitará que el recortador quite más pelo que el deseado.

PRIMEROS PASOS DELINEACIÓN DE SU BARBA

1. Siempre es mejor comenzar con la barba limpia y ligeramente humedecida.

2. Una vez que la ha peinado en la dirección de su crecimiento natural, querrá delinear la forma deseada, comenzando bajo la línea de la mandíbula.

3. Comience definiendo la forma de su barba bajo la barbilla y trabaje hacia arriba a ambos lados de la cara en dirección hacia sus orejas. Luego defina el contorno superior a lo largo de sus mejillas, más allá de sus patillas y hacia el nacimiento del cabello.



4. Si decide que quiere la barba más corta, ahora puede ajustar el peine guía de 5 posiciones a una opción más corta (12 mm ó ½" ó bien 9 mm ó 3/8") y pasarlo nuevamente hasta alcanzar el largo deseado.

1. Su recortador se ajusta en cinco posiciones, por lo que puede obtener longitudes de barba entre 3 mm (1/8") (la más corta) y 16 mm (5/8") (la más larga).

2. Para usar el peine guía de 5 posiciones, deslicelo sobre las hojas de su recortador y trabelo hacia adentro y trabelo hacia abajo en su posición.

3. Comience a recortar su barba mediante pasadas suaves y parejas. Empiece por las patillas y siga hacia abajo en dirección hacia la barbilla. (Nunca intente recortar en sentido contrario a la dirección natural de crecimiento, dado que cortará el pelo demasiado corto).

4. Si decide que quiere la barba más corta, ahora puede ajustar el peine guía de 5 posiciones a una opción más corta (12 mm ó ½" ó bien 9 mm ó 3/8") y pasarlo nuevamente hasta alcanzar el largo deseado.

OPERATING INSTRUCTIONS FOR YOUR TRIMMER

1. Remove the battery compartment cover by pushing in and down toward the bottom of the trimmer.

2. Align the two "AA"* batteries with the positive and negative positions indicated inside the battery compartment. Being careful not to bend the clips, insert the negative end of each battery first so it will slip easily into position.

3. Return the battery cover to its original position by pushing it in and up until you hear a small click as it locks into place.

4. To use your trimmer, push ON/OFF switch upwards to ON position.

5. After you finish using your trimmer, push down on the ON/OFF switch to turn the trimmer off.

6. For your convenience, the trimmer comes with a storage base to hold the trimmer and accessories.



On/Off Switch

*Requires 2 AA batteries (not included). We recommend using alkaline batteries in your trimmer because they last longer.

Conair wants to thank you for choosing our beard/mustache trimmer. We know it will provide you with years of reliable service. For your safety and continued enjoyment of this product, always read the instruction booklet carefully before using.

Model GMT100RQCS Instruction Booklet



Beard & Mustache Trimmer

Cordless Battery Operated

PARA RECORTAR SU BIGOTE

1. Para obtener los mejores resultados, comience con un bigote limpio, ligeramente humedecido.
2. Peine el bigote en la dirección de su crecimiento.
3. Coloque el peine guía de 5 posiciones sobre las hojas del recortador y trábelo hacia abajo en su posición. Es una buena idea comenzar con el ajuste de recorte más largo. (Siempre tiene la posibilidad de acortarlo con un ajuste más corto).



RECORTE SIEMPRE SU BIGOTE DESDE ARRIBA HACIA ABAJO

Una vez que su bigote ha sido recortado al largo deseado, remueva el peine de 5 posiciones y, usando las navajas solamente, defina la línea exterior de la parte baja del bigote.



CORTAR EL PELO DE LA NARIZ Y DE LOS OÍDOS

Asegúrese que el aparato esté apagado ("OFF"). Saque las cuchillas (véase la sección de mantenimiento de las cuchillas). Coloque la lengüeta ubicada en la parte trasera del accesorio para el pelo de la nariz y los oídos en la hendidura ubicada en la parte posterior de la cortadora. Oprima el accesorio para el pelo de la nariz y de los oídos hacia adelante hasta sujetarlo. Encienda el aparato ("ON"). Corte el pelo de la nariz o de los oídos suavemente,

Glendale, AZ 85307
Service Department
Conair Corporation
7475 North Glen Harbor Blvd.

Service Center:

©Conair 2006

state to state.

You may also have other rights which vary from state to state. This warranty gives you specific legal rights, and some states do not allow the exclusion or limitation of special, incidental, or consequential damages for breach of this or any other warranty, express or implied, whatsoever. In no event shall Conair be liable for any implied warranties, obligations, or liabilities, including but not limited to the fitness for a particular purpose, shall be limited in duration to the 24 month duration of this warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

ANY IMPLIED WARRANTIES, OBLIGATIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 24 MONTH DURATION OF THIS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

To obtain service under this warranty, return the defective product to the service center nearest you, together with your sales slip and \$3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-3-CONAIR for shipping instructions. In the absence of a receipt, the warranty period shall be 24 months from the date of manufacture.

Conair will repair or replace, at our option, your appliance free of charge for 24 months from the date of purchase if the appliance is defective in workmanship or materials.

LIMITED TWO YEAR WARRANTY

teniendo cuidado de no introducir mucho el aparato en el orificio nasal o en el canal del oído. No lo introduzca más allá del borde de la nariz o del oído. Para remover el accesorio para la nariz y los oídos, asegúrese que el interruptor de encendido/apagado esté frente suyo y deslice el accesorio lejos de usted.

GUARDE ESTAS INSTRUCCIONES RESOLUCIÓN DE PROBLEMAS

Si su recortador deja de funcionar, haga lo siguiente:

1. Asegúrese que su recortador está encendido.
2. Asegúrese que las pilas estén correctamente instaladas en el compartimiento. Pruebe las mismas para asegurarse que funcionen. (Reemplace siempre las dos pilas AA al mismo tiempo para el correcto funcionamiento del recortador).
3. Revise las hojas para ver si están obstruidas con restos de pelo; si es así, use el cepillo de limpieza para eliminar el cabello.
4. Si el recortador aún falla, llévelo o envíelo a un Centro de Servicio Técnico Conair (ver los procedimientos y direcciones de la garantía).



BEARD/MUSTACHE TRIMMER GMT100RQCS

GMT100RQCS RECORTADOR DE BARBA Y BIGOTE



4. If the trimmer still fails to operate, take or send it to a Conair Service Center (see warranty procedure and addresses).

3. Check the blades to see if they are clogged with hair clippings; if so, use the cleaning brush to remove hair.

2. Make sure that the batteries are properly placed in the battery compartment. Test the optimum trimmer operation, always replace batteries to be sure they are working. (For all two AA batteries at the same time.)

1. Be sure the trimmer is turned ON. Make sure the trimmer on/off switch is in the "on" position. Gently use the trimmer to trim away long nose hairs and ear hairs being very careful not to insert the trimmer too far into the ear or nose. The

There are several things to look for if your trimmer fails to operate:

3. Place the 5-position comb over the trimmer blades and snap it into position. It is a good idea to start with the longest trim setting adjust-

2. Comb through your mustache in the direction it grows.

1. For best results, start with a clean, slightly damp mustache. After your mustache has been trimmed to the desired length, remove the 5-way trimming attachment and, using the blades only, define the outline of the bottom of your mustache.

2. Comb through your mustache in the direction it grows.

3. Place the 5-position comb over the trimmer blades and snap it into position. It is a good idea to start with the longest trim setting adjust-

1. Be sure the trimmer is turned ON. Make sure the trimmer on/off switch is in the "on" position. Gently use the trimmer to trim away long nose hairs and ear hairs being very careful not to insert the trimmer too far into the ear or nose. The

2. Comb through your mustache in the direction it grows.

3. Check the blades to see if they are clogged with hair clippings; if so, use the cleaning brush to remove hair.

4. If the trimmer still fails to operate, take or send it to a Conair Service Center (see warranty procedure and addresses).

5. Make sure that the batteries are properly placed in the battery compartment. Test the optimum trimmer operation, always replace batteries to be sure they are working. (For all two AA batteries at the same time.)

6. Make sure the trimmer is turned ON. Make sure the trimmer on/off switch is in the "on" position. Gently use the trimmer to trim away long nose hairs and ear hairs being very careful not to insert the trimmer too far into the ear or nose. The

7. Comb through your mustache in the direction it grows.

8. Place the 5-position comb over the trimmer blades and snap it into position. It is a good idea to start with the longest trim setting adjust-

9. Check the blades to see if they are clogged with hair clippings; if so, use the cleaning brush to remove hair.

Make sure the trimmer on/off switch is in the "off" position. Detach the normal trimming blade (see section on Blade Care). Fit the tab on the back of the nose trimmer into the notch inside the trimmer head. Push the nose trimmer towards the front of the trimmer until it snaps into place. Turn the on/off switch to the "on" position. Gently use the trimmer to trim away long nose hairs and ear hairs being very careful not to insert the trimmer too far into the ear or nose. The

USING THE NOSE AND EAR TRIMMER ATTACHMENT

Make sure the trimmer on/off switch is in the "off" position. Detach the normal trimming blade (see section on Blade Care). Fit the tab on the back of the nose trimmer into the notch inside the trimmer head. Push the nose trimmer towards the front of the trimmer until it snaps into place. Turn the on/off switch to the "on" position. Gently use the trimmer to trim away long nose hairs and ear hairs being very careful not to insert the trimmer too far into the ear or nose. The



ALWAYS TRIM YOUR MUSTACHE FROM THE TOP DOWN

1. For best results, start with a clean, slightly damp mustache.

2. Comb through your mustache in the direction it grows.

3. Place the 5-position comb over the trimmer blades and snap it into position. It is a good idea to start with the longest trim setting adjust-

4. If the trimmer still fails to operate, take or send it to a Conair Service Center (see warranty procedure and addresses).

5. Make sure that the batteries are properly placed in the battery compartment. Test the optimum trimmer operation, always replace batteries to be sure they are working. (For all two AA batteries at the same time.)

6. Make sure the trimmer is turned ON. Make sure the trimmer on/off switch is in the "on" position. Gently use the trimmer to trim away long nose hairs and ear hairs being very careful not to insert the trimmer too far into the ear or nose. The

7. Comb through your mustache in the direction it grows.

8. Place the 5-position comb over the trimmer blades and snap it into position. It is a good idea to start with the longest trim setting adjust-

9. Check the blades to see if they are clogged with hair clippings; if so, use the cleaning brush to remove hair.

10. If the trimmer still fails to operate, take or send it to a Conair Service Center (see warranty procedure and addresses).

11. Make sure that the batteries are properly placed in the battery compartment. Test the optimum trimmer operation, always replace batteries to be sure they are working. (For all two AA batteries at the same time.)

12. Make sure the trimmer is turned ON. Make sure the trimmer on/off switch is in the "on" position. Gently use the trimmer to trim away long nose hairs and ear hairs being very careful not to insert the trimmer too far into the ear or nose. The

13. Comb through your mustache in the direction it grows.

14. Place the 5-position comb over the trimmer blades and snap it into position. It is a good idea to start with the longest trim setting adjust-

15. Check the blades to see if they are clogged with hair clippings; if so, use the cleaning brush to remove hair.

16. If the trimmer still fails to operate, take or send it to a Conair Service Center (see warranty procedure and addresses).

©Conair 2006

Centros de Servicio Técnico:
Conair Corporation
Service Department
7475 North Glen Harbor Blvd.
Glendale, AZ 85307
06PG10117