

# GRACO®


## Recliner Swing

### OWNER'S MANUAL

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

Dear Customer,

Please fill in the model and serial numbers above from the label beneath the motor of your new swing.

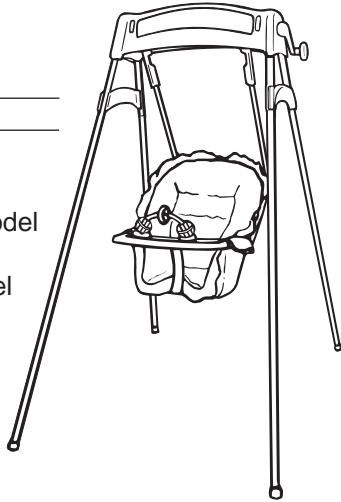

**Models 1131, 1132, 1141**

### Congratulations on your purchase of a Graco® swing!

Graco is the recognized leader in the design and manufacture of quality baby swings. We believe your new Graco® swing is a wise choice, promising many hours of enjoyment for your baby.

Before using your swing, please take a few minutes to read this Owner's Manual. The short time you spend reading these instructions will help you use your swing properly.

**Please save your Owner's Manual for future use.**

### Customer Satisfaction

 
Our goal is to make every product the best it can be! We are also committed to supporting our products after purchase. If you would like to speak to Graco about your product, please contact our **Customer Service Department at 1-800-345-4109** or visit our Internet website, [www.gracobaby.com](http://www.gracobaby.com). Our knowledgeable staff will be ready to answer any questions you may have concerning parts, use, or maintenance. When you call, please have the **model and serial numbers** ready so your call may be processed quickly and efficiently.

**⚠ WARNING**


**Failure to follow these warning instructions could result in serious injury or death.**



**Never leave child unattended. Always keep your child in view.**

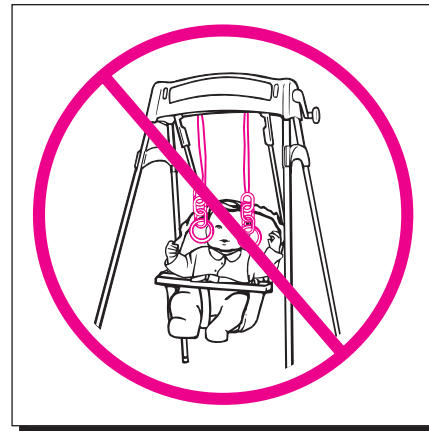

**Strings can cause strangulation. DO NOT place items with a string around your child's neck, such as hood strings or pacifier cords. DO NOT suspend strings over swing or attach strings to toys.**

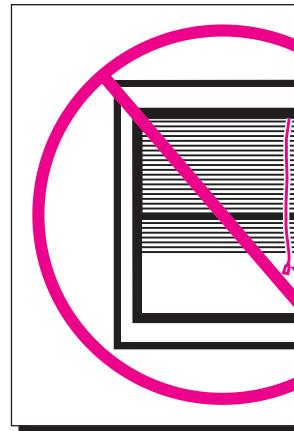 

**STRANGULATION HAZARD. DO NOT place swing in a location where there are cords, such as window blind cords, drapes, phone cords, etc.**

**THIS PRODUCT REQUIRES ADULT ASSEMBLY.**

**FOLLOW ASSEMBLY INSTRUCTIONS CAREFULLY.**

 
If you experience any difficulties, please contact the Customer Service Department.

**DO NOT USE SWING** without the seat cover.


**DISCONTINUE USING YOUR SWING** should it become damaged or broken.

# WARNING

Read the warnings and the assembly instructions carefully. Failure to follow the instructions may result in serious injury or death.

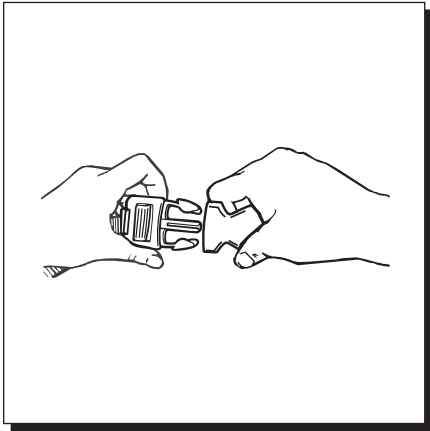

 Avoid serious injury from falling or sliding out. Always use seat belt.

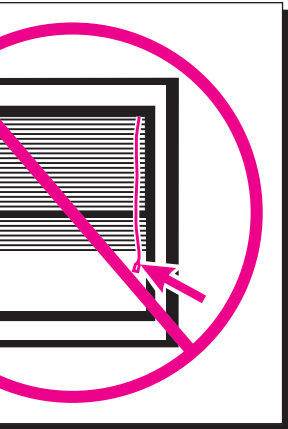

**INSTALLATION HAZARD:** Do not place swing in any room where there are cords, window blind cords, phone cords, etc.



**DO NOT** use if child weighs over 25 pounds (11.3 kg) or becomes too active to safely use the swing.

## CARE AND MAINTENANCE

**FROM TIME TO TIME CHECK YOUR SWING** for loose screws, worn parts, torn material or stitching. Replace or repair parts as needed. Use only Graco® replacement parts.

**DO NOT STORE SWING** with motor fully wound.

**EXCESSIVE EXPOSURE TO SUN OR HEAT** could cause fading or warping of parts.

**DO NOT STORE SWING** in any location which can become hot, such as a car trunk or attic. Plastic parts may warp.

**REMOVABLE CLOTH SEAT COVER** (on certain models) may be machine washed in lukewarm water on delicate cycle and drip-dried. **NO BLEACH.**

 
**TO CLEAN SWING FRAME**, use only household soap or detergent and warm water. **NO BLEACH.**

## PARTS LIST

CHECK that you have all the parts listed below BEFORE assembling your swing.


If any parts are missing, call Customer Service at 1-800-345-4109 or visit our Internet website, [www.gracobaby.com](http://www.gracobaby.com).

Tools required: Screwdriver and wrench (wrench included)

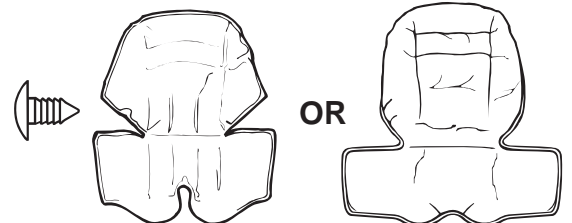


Vinyl seat cover with 2 plastic fasteners

 
Cloth seat cover



Motor unit

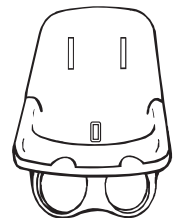 

Plastic seat

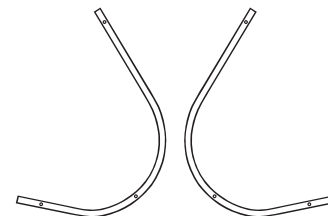 


Hanger tube (2)




Seat belt and buckle



 Short machine screw (2)



Seat wire

 


Wrench




Acorn nut (4)



 Plastic leg brace (2)



Upper leg section (4)

 


Lower leg section (4)

Leg tip (4)



 Bead (2)



Toy bar




Ring (3)

## Attaching the Legs

 
### Step 1.

Lower leg sections have a wire in one end. Push a plastic end cap onto opposite end, **without the wire**, as shown. Repeat for the other three lower leg sections.

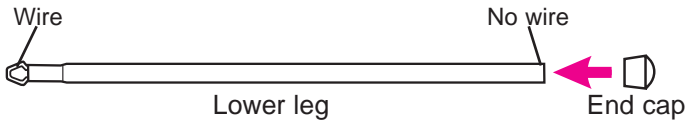


### Step 2.

With a slight twisting motion, push **wire end** of a lower leg into **completely open end** of upper leg (other end is knob-shaped). Repeat for other three lower legs.

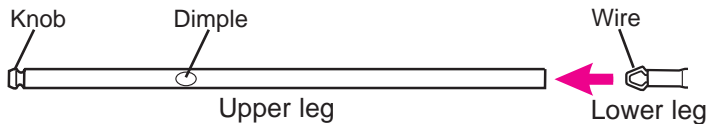

### Step 3.


Push **knob shaped end** of a leg assembly onto plastic peg inside end of motor housing as shown. Push down until leg **snaps** in place. Repeat for other three legs.

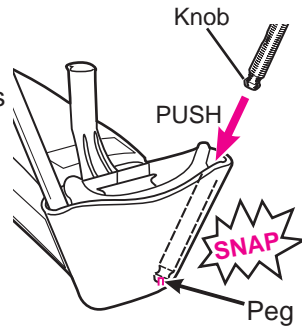


**CHECK that all legs are securely attached to the motor housing by pulling firmly on them.**

### Step 4.

 Open the swing legs completely. If necessary, turn legs to line up the dimples on the legs with the plastic leg braces. Snap leg braces onto outside of legs. The plastic pegs inside the ends of the braces will fit into the dimples on the legs.

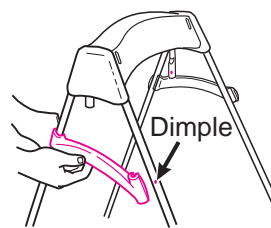


 It may be necessary to spread the legs as shown.

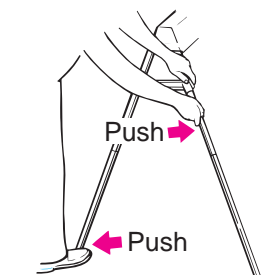

**▲WARNING Do not use the swing without the leg braces.**

 To close legs for storage, first unsnap leg braces. Then pull the tabs under the motor outward as shown, and move the legs inward.

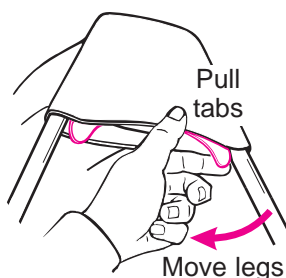


To remove legs completely, first move legs inward, then pull out with a twisting motion.

## Attaching the Seat
 
### Step 1.

Slide hanger tubes into both armrests of seat.

**If your model has side-facing metal buttons instead of forward-facing buttons at top of hanger tubes, the side-facing buttons must face toward the seat as shown.**

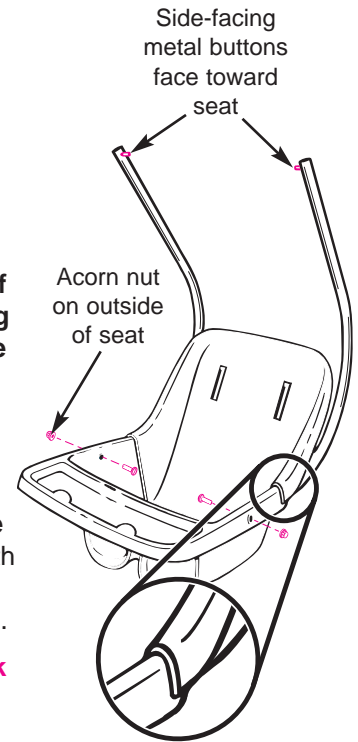


Line up holes in both armrests with holes in the hanger tubes. Put a screw through the holes, **with head of screw on inside of the seat**. Fasten screws with an acorn nut, and tighten securely with enclosed wrench.

**▲WARNING The seat back must overlap armrests, as shown enlarged at right.**
 
### Step 2.

With seat facing front of swing, push ends of both hanger tubes into the brackets as shown. When the metal buttons pop out into the bracket holes, the tubes are locked.

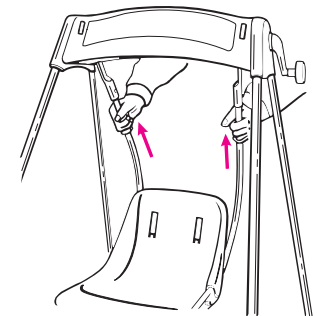


**CHECK that the hanger tubes are secure in brackets by pulling firmly on them.**

To remove hanger tubes from brackets, push metal buttons in and pull hanger tubes out.


### Step 3.

 Slide the seat wire through the seat back loops.

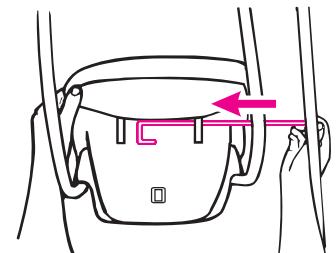

### Step 4.

 Insert the end of the seat wire through the hanger tubes as shown. Then screw plastic nuts on both ends of the seat wire and tighten securely with the enclosed wrench.

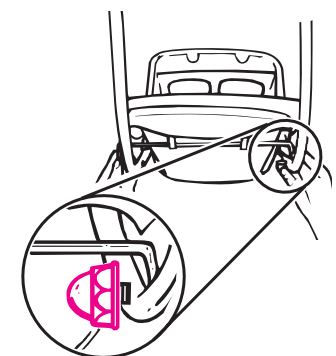


**▲WARNING Do not use swing if the seat wire is not securely attached. If seat can recline backwards between the hanger tubes, check the wire assembly.**

## Attaching the Seat Belt


### Step 1.

Thread the free end of the seat belt through the belt retainer as shown.

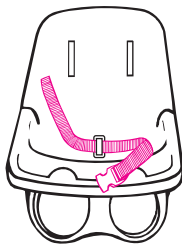


### Step 2.

Open buckle by squeezing sides of buckle to release.

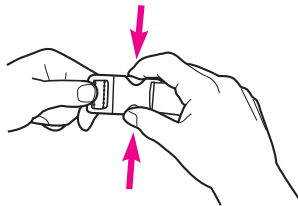

### Step 3.

 Thread belt through the buckle as shown. **CHECK** to make sure that the belt is threaded correctly by pulling on the seat belt. **The belt should not slip through the buckle.**

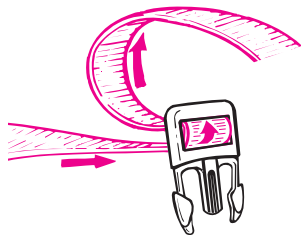


## Attaching the Seat Cover—2 Options

Your swing will have **EITHER** a vinyl or cloth seat cover. Follow the appropriate instructions below.

### Vinyl Seat Cover (on certain models):

#### Step 1.

Slide pocket at top of vinyl seat cover over the seat back.

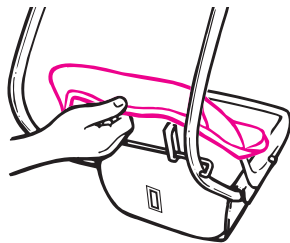

#### Step 2.

Push both ends of the seat belt through the slots in the vinyl cover, and pull the belt through.

 
If slots in vinyl are not fully open, push ends of buckle through vinyl with enough force to open the slots.



### Step 3.


From the inside of the seat, press the two plastic fasteners through the holes in the vinyl cover into the holes in the plastic seat.

If holes in vinyl are not fully open, push fasteners through vinyl with enough force to open the holes.

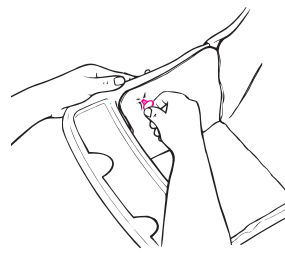

### Step 4.

 Fold cover around bottom of seat.

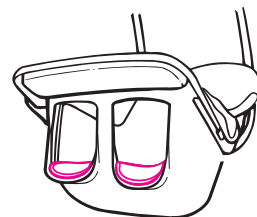


### Cloth Seat Cover (on certain models):

(No plastic fasteners are included with cloth seat cover models.)


#### Step 1.

 Slide the pocket of the cloth cover over the top of the seat as shown.

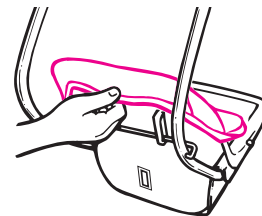


#### Step 2.

 Push both ends of the seat belt through the slots in the cloth cover, and pull the belt through.

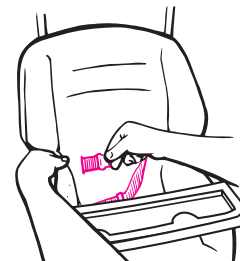


#### Step 3.

 Push the plastic clip under one side of the seat as shown. Repeat on other side.

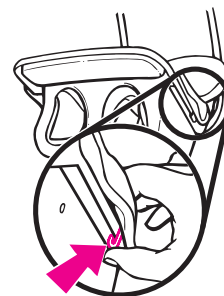

#### Step 4.

 
Pull the fabric out at the leg openings.

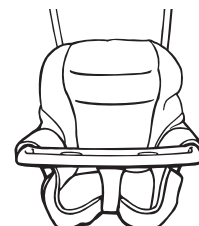

## Installing the Toy Bar


### Step 1.

 Place the two beads and three rings on the bar. The suggested order is ring-bead-ring-bead-ring. (Once the toy bar is on the tray, the order cannot be changed.)

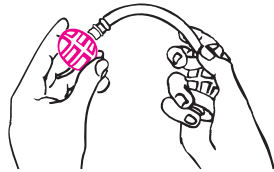


### Step 2.

 Snap the bar (one end at a time) into the two "U"-shaped holes located on the top front of the tray. **CHECK** that bar is securely attached by pulling up on the bar.

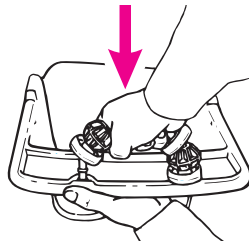

### Step 3.

 Finished assembly will look like illustration.

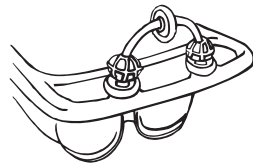


**▲WARNING** Make sure toys are properly assembled before and during use. Do not tie other toys or objects onto the swing toys. If child is able to remove the toy bar from the tray, discontinue use.

## Reclining the Seat Back

 The seat has two positions, upright and reclined.

To recline the seat, first lift the seat wire, then pull the back of the seat downward.

For the upright position, just pull forward on the top of the seat.

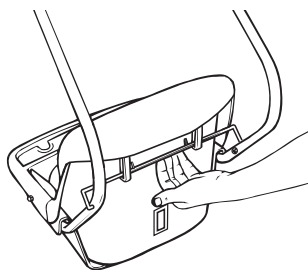

## Starting Swing

**Be sure all parts are securely fastened together before using the swing.**

### Step 1.

Open the seat belt. Place baby in the seat. (If your child is very small, you may want to use rolled-up blankets as a prop.)



### Step 2.

Fasten the seat belt. Adjust belt as needed to get a snug fit around your child.



**▲WARNING** Do not depend on the tray alone to hold your baby. Always secure your baby with the seat belt when your child is in the swing.

### Step 3.

Wind crank clockwise. Swing is fully wound when you hear a clicking sound while winding.

### Step 4.

**PUSH SWING SEAT TO START. BE SURE YOU PUSH IT UP HIGH ENOUGH FOR THE MOTOR TO GET A GOOD START.**

### Special features on certain models:

Some models have a "time-remaining" indicator on the right side of the swing faceplate. After you finish winding, it will show you the remaining swing time. It also indicates when you need to rewind the motor.

Some models have a switch on the left side of the swing faceplate to adjust the height of the swinging motion. Observe the swinging motion for a minute before changing the setting. It takes time for your swing to adjust to a new setting.

- For a lower ride, push the control switch toward "low."
- For a higher ride, push the control switch toward "high."

**NOTE:** Seat may be stopped any time motor is running without damaging motor. To restart, push swing.

# Replacement Parts

## Instructions for ordering swing parts:

Complete form below. Your swing model number **MUST** be included on the form to ensure proper replacement parts. Your model number can be found on a sticker beneath the swing motor. **Payment must accompany your order.**

<b>Parts List:</b>	<b>Price:**</b>
Motor unit .....	\$25.00
Plastic seat .....	\$21.00
Side-button hanger tube (right)* ...	\$13.00
Side-button hanger tube (left)* .....	\$13.00
Front-button hanger tube* .....	\$13.00
Vinyl seat cover .....	\$13.00
Cloth seat cover .....	\$14.00
Seat belt with buckle .....	\$ 5.00
Hardware .....	\$ 5.00
Plastic leg brace .....	\$ 5.00 (each)
Adjustment wire .....	\$ 7.00
Upper leg section .....	\$ 7.00 (each)
Lower leg section .....	\$ 7.00 (each)
Leg tips (set of four) .....	\$ 5.00
Toy bar kit .....	\$ 7.00

\* On certain models.

\*\* Prices subject to change without notice.

### IF YOU NEED HELP

If you have any questions, please call toll-free:

**1-800-345-4109**

or visit our Internet website, [www.gracobaby.com](http://www.gracobaby.com).

Return the form below with payment to:  
**GRACO CHILDREN'S PRODUCTS INC.**  
**CUSTOMER SERVICE DEPARTMENT**  
**P.O. BOX 100, MAIN STREET**  
**ELVERSON, PA 19520**

Model Number	SHIP TO:
(Must be filled in)	Name _____
<input type="checkbox"/> Motor unit	Address _____
<input type="checkbox"/> Plastic seat	City, State, Zip _____
<input type="checkbox"/> Side button hanger tube (right)	( ) _____
<input type="checkbox"/> Side button hanger tube (left)	Telephone _____
<input type="checkbox"/> Front button hanger tube	<input type="checkbox"/> Check enclosed
<input type="checkbox"/> Vinyl seat cover	(payable to Graco Children's Products Inc.)
<input type="checkbox"/> Cloth seat cover	<input type="checkbox"/> Charge to credit card:
<input type="checkbox"/> Seat belt with buckle	<input type="checkbox"/> Visa
<input type="checkbox"/> Hardware	<input type="checkbox"/> MasterCard
<input type="checkbox"/> Plastic leg brace	<input type="checkbox"/> Discover
<input type="checkbox"/> Adjustment wire	Total: _____
<input type="checkbox"/> Upper leg section	Shipping & handling: <u>\$5.00</u>
<input type="checkbox"/> Lower leg section	Account #: _____
<input type="checkbox"/> Leg tips	6% sales tax (PA only): _____
<input type="checkbox"/> Toy bar kit	Expiration date: _____
	Total amount due: _____
	Signature: _____