

OPERATING AND PROGRAMMING INSTRUCTIONS



Due to the lower temperature settings, this unit has been de signed to hold NON-POTENTIALLY HAZARDOUS FOOD ONLY. This unit will NOT hold potentially hazardous food at a safe temperature

- 1. Turn power switch to the ON position.
- 2. After a sequence of codes the display shows the time of day, or "ON".



Press and hold the TEMP button to view the actual temperature of the unit.

Temperature Setpoint Programming

- 1. Press and hold the TEMP button for 6 seconds. The actual temperature shows first followed by the flashing setpoint temperature.
- 2. While holding in on the TEMP button, press and release the SET button. Now the setpoint temperature blinks at a faster rate. Now release the TEMP button.
- 3. Press the UP and DOWN buttons to change the setpoint temperature.
- 4. Once the desired setpoint temperature (preprogrammed maximum temperature) is reached, press the SET button to return to normal operation mode and the setpoint is saved.

"Time of Day" Programming

Press and hold the SET button while using the UP and DO buttons to set the desired time. When the SET button is re leased, the time is saved.

SPECIAL PROGRAMMING

- 1. With POWER switch off, press and hold both the UP and DOWN buttons, and then turn the POWER switch on until "SP" shows on the display. Release the UP and DOWN buttons, and "oF" or "oC" shows on the display.
- 2. Press the UP or DOWN buttons to toggle from "°F" to "°C", or "°C" (Celsius) to "°F" (Fahrenheit).



SPECIAL PROGRAMMING (Continued)

- 3. Press the SET button, and "CAL" shows in the display. Press and hold TEMP button, and press the UP and DOWN buttons to match the display with the actual temperature.
- 4. Press the SET button, and "CPU" shows in the display. Press and hold TEMP button to view the CPU (control PCB) temperature.
- 5. Press the SET button, and "OutPutS" shows in the display. Press the TEMP button to turn the relays, display and heaters, OFF and ON.
- 6. Press the SET button, and "In-" shows in the display. Press and hold either the UP or DOWN button until "In- SYS" shows in the display. This programs factory settings back into the controls.
- 7. Press the SET button. If "C=y" shows in the display, the time of day shows in the display during normal operation. If "C=n" shows in the display, "ON" shows in the display during normal operation. Press the UP and DOWN buttons to toggle from one to the other.
- 1. Turn the unit to the OFF position.
- 2. Disconnect electrical supply to the unit.



To avoid burns, allow the unit to cool before cleaning.

3. Open doors and wipe down racks.

4. Clean doors with a non-abrasive, soft cloth and mild soap. Do not use ammonia.



<u>Do not</u> use steel wool, other abrasive cleaners or cleaners/sanitizers containing chlorine, bromine, iodine or ammonia chemicals, as these will deteriorate the stainless steel material and shorten the life of the unit.

<u>Do not</u> spray the unit with water, such as with a garden hose. Failure to follow this caution could cause component failure.

5. Clean the interior and exterior of the unit with a soft cloth, soap, and water.

CLEANING INSTRUCTIONS