


morphyrichards®

## Breeze iron steam/spray/shot

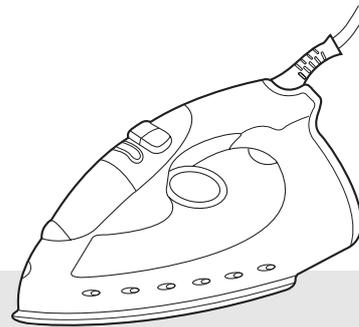

Please read and keep these instructions



### getting the best from your new iron...

- **Safety first**

*Caution must be used when handling this appliance as it does get very hot. Always switch off the unit and allow to cool before cleaning or storing.*

- **Jet cleaning** *(certain models only)*

*Your iron will give the best ironing results and will last longer if you apply jet cleaning after each period of ironing.*

**2year**  
guarantee

**CE**

[www.morphyrichards.com](http://www.morphyrichards.com)

## Important safety instructions

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

**WARNING: Danger to the person!**

**IMPORTANT: Damage to the appliance!**  
In addition we offer the following safety advice.

### Location

- Do not use outdoors.
- The iron must be used and rested on a stable surface.
- When placing the iron on its heel, ensure that the surface on which the heel is placed is stable.

### Children

- Close supervision is necessary when any appliance is used near children.
- Children should be supervised to ensure that they do not play with this appliance.

### Personal safety

- Burns can occur from touching hot metal parts, hot water or steam. Use caution when you turn a steam iron upside down, there may be hot water in the water tank.
- Do not use the vertical steam feature on clothes that are being worn.
- Do not leave the iron unattended whilst plugged in or on an ironing board. Never allow the mains lead to over hang the work surface.
- The socket should always be off before plugging or unplugging from the socket. Never yank the cord to disconnect from the socket, instead, grasp plug and pull to disconnect.

 
- Do not allow the cord to touch hot surfaces. Let the iron cool completely before putting away. Loop cord loosely around the iron before storing.

### Other safety considerations

- Use the iron only for its intended use.
- To protect against the risk of electric shock do not put the appliance in water or in any other liquid.
- Always disconnect the iron from the electrical socket when filling with water or emptying, and when not in use.
- Do not operate the iron with a damaged cord or if the iron has been dropped or if there are visible signs of damage, or if it is leaking. To avoid the risk of electric shock, do not disassemble the iron, but telephone Morphy Richards for advice. Incorrect reassembly can cause a risk of electric shock when the iron is used.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

## Special instructions

- If your iron does not work, check the following points:  
Has the temperature control been set to the required temperature? Is the plug in its socket? Is the plug itself or the socket faulty? (Check by plugging in another appliance).
- **WARNING: when not in use, your iron should never be placed flat and left on an ironing board.**
- To prevent damage to the textile being ironed, follow the temperature guide carefully. (Test the inside of the hem of the garment).



- When ironing is complete, remove the plug from the socket, empty any remaining water from the tank, and allow to cool before storage.
- If you drop or severely knock your iron this could cause internal damage even if the outside appears alright. Have it checked by a qualified electrician.
- It is recommended that you use up one beaker of water by operating your iron's steam and shot of steam functions before ironing any clothes as some dripping may occur while your iron's steam system is activated.

## Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance the plug should be removed and the appropriate one fitted.

**WARNING : The plug removed from the mains lead, if severed, must be destroyed as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.**

Should the fuse in the 13 amp plug require changing a 13 amp BS1362 fuse must be fitted.

**WARNING: This appliance must be earthed.**

## Instructions for use


### Temperature guide

Heat setting markings on the adjustable control dial of all Morphy Richards irons match those of the International Textile Care Labelling Code.

Symbol		 (120°C Max) Cool	 (160°C Max) Warm	 (210°C Max) Hot
Control knob positions	<b>Do not iron at all</b>	●	●●	●●●
Fabric		Nylon, Acetates e.g. Acrilan Courtelle, Orlon Triacetates, e.g. Tricel/Polyester	Wool, Polyester mixtures e.g. Polyester/Cotton	Cotton, Linen Rayon, Rayon mixtures, e.g. Rayon/Linen
Ironing		Iron on wrong side if moisture required use damp cloth (Not Acetate)		Fabrics requiring this setting usually require steam pressing for heavy cotton, denim etc.
With water in tank		← Dry and spray →	← Steam/spray/shot of steam →	← Jet clean →
Without water in tank		← Dry ironing →		



## Components of your iron

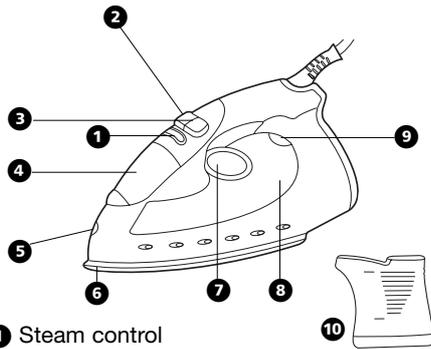

- ❶ Steam control
- ❷ Spray button
- ❸ Shot of steam button (certain models only)
- ❹ Filling hole with cap
- ❺ Spray nozzle
- ❻ Soleplate
- ❼ Temperature control dial with indicator
- ❽ Water tank
- ❾ Temperature indicator light (red)
- ❿ Filling beaker

## Before use

Note: The steam facility should only be used on garments which are suitable for ironing at the 2 and 3 dot settings.


When ironing with the steam facility at the 2 dot setting, the steam output should be set at the lower end of the steam range (see variable steam section).

Textiles and clothes are supposed to carry ironing instructions. If they don't you should follow the fabric guide on page 3, but be sure to test the temperature by ironing the hem of the garment or similar area first.

If you turn the control dial down from a hot setting to a cooler setting, wait until the iron temperature has stabilised before you continue ironing.


## Filling

- 1 Make sure that the iron is not plugged in and then set the steam control ❶ to the '☀' position before filling the iron with water.
- 2 Lift up the fill cap and fill with water through the filling hole ❹ using the beaker provided. **A** 1 1/2 beakers fills the tank (230 ml). After filling replace the fill cap. In hard water areas the use of distilled or demineralised water is recommended. Never use battery topping up fluid or water containing any substances like starch, or sugar, or defrosted water from a refrigerator.
- 3 Always pour out the remaining water after use. **WARNING: When filling your iron with tap water always use the beaker provided. Never fill directly under the tap.**

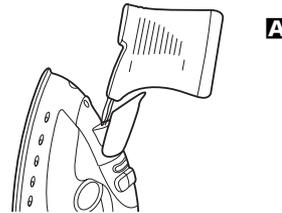

## Temperature control

Plug in the iron and switch on. Set the temperature control dial **B** to the temperature required, but don't start ironing immediately. If you wait a few minutes, the iron will stabilise at the required setting. Your Morphy Richards iron is fitted with an indicator light ❾ which will go on and off while you are ironing.

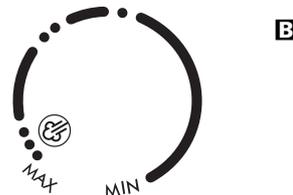

This is perfectly normal as it shows that the iron is maintaining the heat setting you have chosen.

It is always a good idea to begin with cool fabrics and work up to higher settings.

An iron heats up quicker than it cools down so you'll save time and electricity.

## Features of your iron

### Temperature indicator light

The indicator light shows that the iron is warming up. When the required temperature is reached the light will go out and will cycle on-off during operation.

### Dry ironing

You can use your iron as a dry iron only. Make sure the steam control **1** is set to the '☒' symbol.

Any temperature setting may be used depending on the garment. The spray feature may be used provided there is water in the tank (see filling section). You do not need to put any water in the tank when dry ironing only.

### Spray

Press the spray button **2** and aim the spray of water at stubborn creases. You can do this whilst dry ironing providing there is water in the tank.

 
When using the water spray it may be necessary to push the button a few times to get the spray pump primed.



### Steam control

Fill the iron with water as described in 'Filling', page 4 and insert the plug into the electrical socket.

The steam output can be switched from off to on by sliding the steam control **3**. **1**



The steam facility should only be used on garments which are suitable for ironing at 2 and 3 dot setting.

### Shot of steam (certain models only)

Press the shot of steam button **3** to obtain a burst of extra steam for ironing out creases in heavy material such as denim etc.

The shot of steam can be used whilst dry ironing, providing there is water in the tank, and the temperature control is set within the steam range.

Do not use shot of steam at temperatures below the steam range shown on the control.

Note: For optimum steam quality, do not operate the shot more than three times in succession.



### Variable steam (certain models only)


Fill the iron with water as described in 'filling', page 4 and insert the plug into the electrical socket.

The steam output can be varied from low to high by the sliding the variable steam control **4**. When using the iron at the bottom of the steam temperature range, the steam output should be adjusted to the lowest setting.

**Vertical steam** (certain models only)


Hold the iron in a vertical position between 1cm and 2cm away from the item **D**. Press the shot of steam button **S**, this will create vertical steam. This feature is especially useful for removing creases from hanging clothes, curtains, wall hangings etc.

Note: For optimum steam quality, do not operate the shot more than three times in succession.

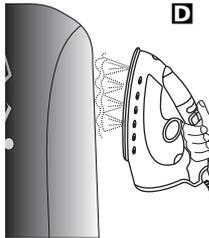

## Emptying and storing

When you have finished ironing, unplug your iron. Ensure that the steam control is set at the 'X' position, lift up the fill cap and empty any remaining water out of the filling hole.

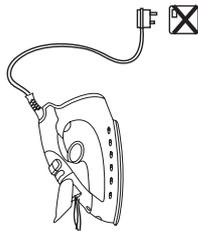

Do not store in the box, but in an upright position, so that any drops of water remaining cannot leak out and discolour the soleplate.

Important: The flex can be damaged if wound too tightly around the iron after use. Make a loose loop with the flex and wrap it around the iron. The iron must be cool before winding the flex and storing on its heel.



## Maintenance

**Jet cleaning** (certain models only)

Your iron has a built in cleaning system designed to keep the water valve, steam chamber and steam vents clear of lint and loose mineral deposits. The 'jet clean' should be operated after each period of ironing.

To operate, ensure that there is little water in the tank, place the iron on its heel and turn the temperature control dial to the maximum setting. Wait for the temperature indicator light to go out, then unplug the iron and hold it about 6" (150mm) above the sink in the ironing position. Press the shot of steam button about 10 times in succession.

After this cleaning operation, empty out any remaining water.

**To clean an aluminium soleplate**

To keep the soleplate of your iron clean and free of limescale, make a paste of mild scouring powder and a little water. Apply a small amount to the soleplate, rub and then remove with a damp cloth. Wipe thoroughly with a clean cloth.

**To clean a stainless steel soleplate** (certain models only)

To keep the soleplate of your iron clean and free of limescale, we recommend that you use one of the gentle chrome, silver or stainless steel cleaners that are generally available. Always follow the manufacturers instructions. To clean off melted man-made fibres set the iron at 3 dot position and pass it over a clean piece of cotton which will draw the deposit off the surface.

**To clean the exterior**

Allow the iron to cool and wipe over with a damp cloth and mild detergent, then wipe with a dry cloth.

## Helpline

---

If you have any difficulty with your appliance, do not hesitate to call us. We are more likely able to help than the store from where you bought it. Please have the following information ready to enable our staff to deal with your query quickly.

- Name of the product
- Model number as shown on the underside of the appliance.



For electrical products sold within the European Community. At the end of the electrical products useful life it should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country.

## Your two year guarantee

It is important to retain the retailers receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

**Model no.**                      **Serial no.**

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown. You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions) the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

Morphy Richards products are intended for household use only.

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.

To qualify for the 2 year guarantee the appliance must have been used according to the manufacturers instructions. For example irons should have been regularly maintained.

### EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non domestic use.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
- 6 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

- This guarantee is valid in the UK and Ireland only.

**morphy richards®**

The After Sales Division  
Morphy Richards Ltd, Mexborough  
South Yorkshire, England, S64 8AJ

Helpline (office hours)  
UK **0870 060 2615**  
Republic of Ireland **1800 409119**