

use & care guide

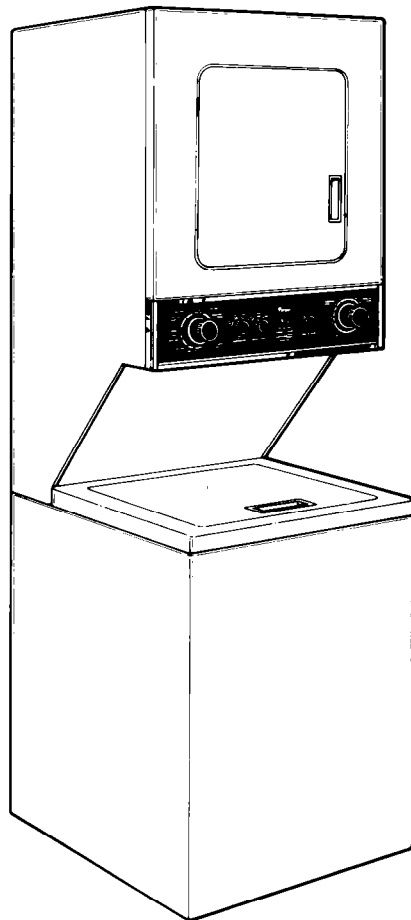

thin
twin


WASHER • DRYER

Model LT4900XS

ishers, Clothes Dryers, Freezers, Refrigerator-Freezers, Ice Makers, Dishwashers, Built-In Ovens and Surface Units, Ranges, Microwave Ovens, Trash Compac



Parts and features

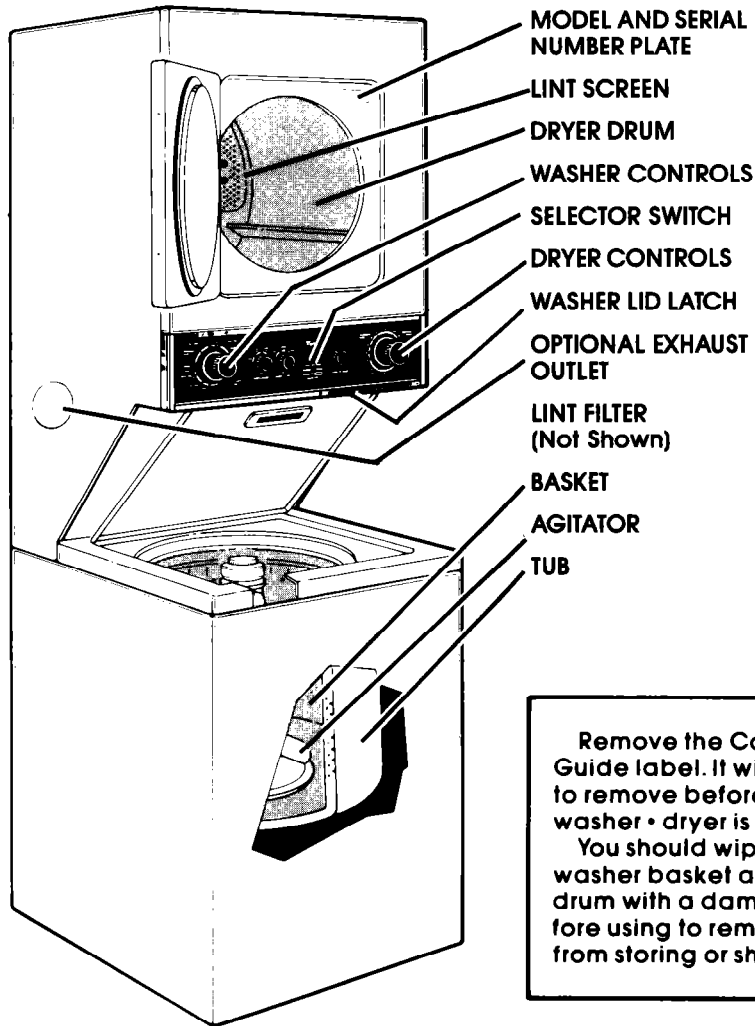

Remove the Consumer Buy Guide label. It will be easier to remove before the washer • dryer is used. You should wipe out the washer basket and dryer drum with a damp cloth before using to remove dust from storing or shipping.

Copy your Model and Serial Numbers here

When you need service or call with a question, have this information ready:

1. **Complete** Model and Serial Numbers (from the plate located as shown).
2. Purchase date from sales slip.

Copy this information in these spaces. Keep this book, your warranty and sales slip together in a handy place.

_____ Complete Model Number

_____ Complete Serial Number

_____ Purchase Date

_____ Service Company and Telephone Number

Please complete and mail the Owner Registration Card furnished with this product.

Contents

	Page		Page
PARTS AND FEATURES BEFORE USING YOUR WASHER•DRYER	2	Starting Your Dryer	13
IMPORTANT SAFETY INSTRUCTIONS	4	Selecting a Cycle	14
WASHER OPERATING INSTRUCTIONS	6	DRYING TIPS	16
Starting Your Washer	6	Drying Times	16
What Happens in Each Cycle	8	Mixed Loads	16
OTHER OPERATING INSTRUCTIONS	12	LINT SCREEN	17
For a Rinse and Spin	12	LINT REMOVAL	17
For a Drain and Spin	12	CARING FOR YOUR WASHER•DRYER	18
For a Soak or Pre-Wash	12	Cleaning Dryer Interior	18
Cleaning the Lint Filter	13	Vacation Care	19
DRYER OPERATING INSTRUCTIONS	13	Voltage Requirements	19
		Winterizing	19
		IF YOU NEED SERVICE OR ASSISTANCE	20
		"THIN TWIN" WARRANTY	24

©1987 Whirlpool Corporation

Before using your THIN TWIN* washer•dryer

For best washing and drying results, you must take some very important steps before, during and after each load:

1. Prepare and sort each load for washing, (see your "Laundry Guide").
2. Measure and add detergent or soap to washer, (see your "Laundry Guide").
3. Load the washer properly, (see your "Laundry Guide").
4. Select the water temperature, load size and cycle recommended for the fabrics before starting the washer, (see pages 6 and 7 of this book).
5. Add other laundry aids to the washer according to instructions, (see your "Laundry Guide").
6. Properly sort the load for drying, (see your "Laundry Guide").
7. Select the right drying cycle and time for the fabrics, (see pages 14-16 of this book).
8. Remove and hang or fold items **immediately** after drying.

Service or performance problems caused by the user of any product not manufactured by Whirlpool Corporation are the responsibility of the manufacturer of that product.

*Tmk.

Important safety instructions



WARNING – To reduce the risk of fire, electric shock, or injury to persons when using your washer/dryer, follow basic precautions, including the following:

Read these Laundry Instructions for important use and safety information before using your washer/dryer.

NEVER wash or dry items cleaned washed, soaked in or spotted with wax, paint, gasoline, or flammable fluids in the washer. The fumes can create a **FIRE HAZARD** or **EXPLOSION**. **ALWAYS** hand launder and air dry fabrics containing these materials.

NEVER allow children to operate, play with, or crawl inside the washer/dryer. Close supervision of children is necessary when the washer/dryer is used near children.

When discarding an old washer/dryer, **ALWAYS** remove the lid and door to prevent accidental entrapment.

NEVER reach into the washer/dryer until all the motion stops. If the lid is opened while the washer basket is spinning, the basket will automatically stop in a few seconds.

DO NOT install or store washer/dryer where it will be exposed to the weather.

DO NOT tamper with the controls.

You are personally responsible for making sure that your washer/dryer is installed, repaired and parts replaced by a qualified person.

NEVER use or store flammable fluids (dry cleaning solvents, gasoline, kerosene) in or near your washer/dryer. Do not add flammable fluids to the wash water. The substances give off vapors that can create a **FIRE HAZARD** or **EXPLOSION**.

Use only fabric softeners specifically labeled as not being harmful to the dryer.

FIRE HAZARD and **DAMAGE** to materials can result from:

- drying rubber, rubber-like and heat sensitive materials with heat.
- allowing lint to build-up inside the dryer or exhaust system – cleaning should be done by a qualified person.

Clean lint screen before or after each load.

WARNING: If hot water has not been used recently (usually two weeks or longer), hydrogen gases may build up in the water heater and the hot water pipes. **HYDROGEN GAS IS EXPLOSIVE.** To prevent injury or damage, before using your washer, turn on all hot water faucets and allow water to run for several minutes. This will allow gases to escape. Do not smoke or use any open flame near the faucet while it is open.

DO NOT let dust, paper, rags, chemicals, etc. pile up around or under the washer/dryer.

The washer/dryer must be electrically grounded. See the "Installation Instructions."

– SAVE THESE INSTRUCTIONS –

Important Safety Instructions and Your Responsibilities

ALWAYS unplug the power supply cord before attempting to service the washer/dryer.

DO NOT machine wash glass fiber materials. Small particles can stick to fabrics washed in following loads and cause skin irritation.

HAZARDOUS FUMES can be formed if chlorine bleach is used in the same wash as ammonia or acids such as vinegar or rust remover.

ALWAYS store detergent, laundry aids and other materials in a cool, dry place where children can't reach them – in a locked cabinet if possible.

ALWAYS read and follow instructions on packages of detergent and laundry aids – especially warnings and precautions.

NEVER operate the washer/dryer if...

- it is not working right.
- it is damaged.
- parts are missing.
- all panels are not in place.

You are personally responsible for making sure that your washer/dryer:

- is properly maintained.
- is properly installed and leveled in a well ventilated room on a floor that can support the weight.*
- is located in an area where the temperature is above 45°F (7.2°C) because...
 - the dryer will not operate properly at cold temperatures.
 - freezing temperatures can damage the washer.
- is connected to the proper electrical supply, outlet, water supply, plumbing fixtures, drain, and other dryer exhausting system.*
- is not installed against drapes or curtains.*
- is used only for jobs normally expected of home automatic washer/dryers.


*Refer to the "Installation Instructions" for complete information.

Washer operating instructions


Starting Your Washer



Be sure to measure and add detergent, then place a sorted load in the washer before starting it.

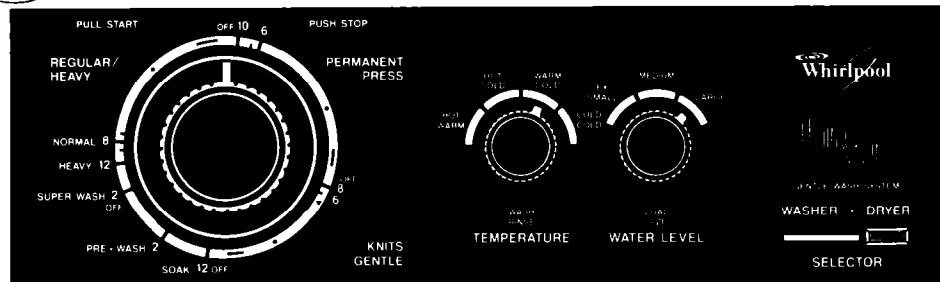


1. Position SELECTOR SWITCH

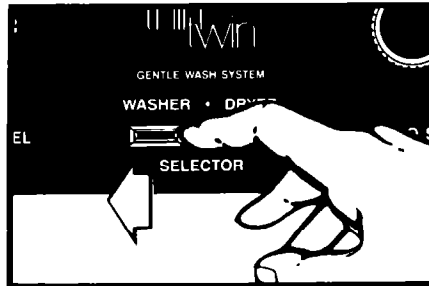

- Move Selector Switch to WASHER position. Washer will not operate when switch is in DRYER position.


2. SELECT A LOAD SIZE

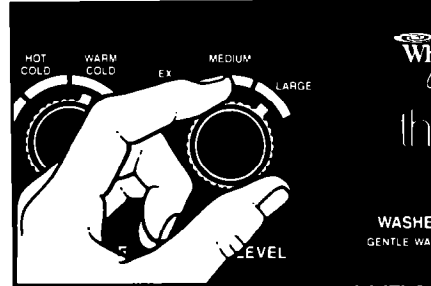

- Turn the knob to point at a setting that describes the size of load you want to wash.
- The water level can be set for EX, SMALL, MEDIUM or LARGE loads. Select the water level that matches the load size.

See your "Laundry Guide" for details on load sizes.

3. Select WATER TEMPERATURES

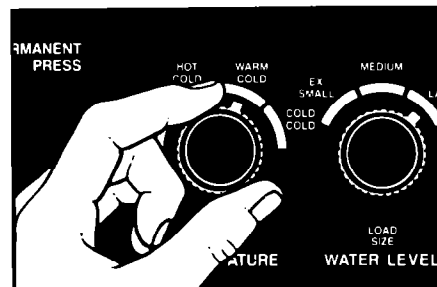


- Match the wash water temperature to the type of fabrics and soils being washed.

Recommended wash temperatures can be found in your "Laundry Guide"

LOAD SIZES AND WATER LEVELS

For best cleaning results, the load must be able to move freely in the water. Too big a load or too little water can tear items.



- LARGE**
11.3 gal. (42.7 L)
- MEDIUM**
8.5 gal. (32.1 L)
- EX SMALL**
5.6 gal. (21.2 L)

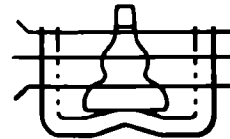


*Approximate fill with load

To hold the washer lid up, lift the lid until it snaps past the latch.


To release the lid, push the lid latch up.

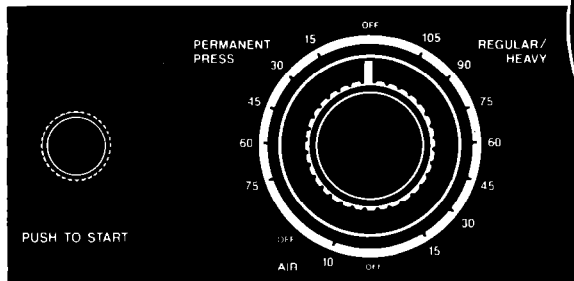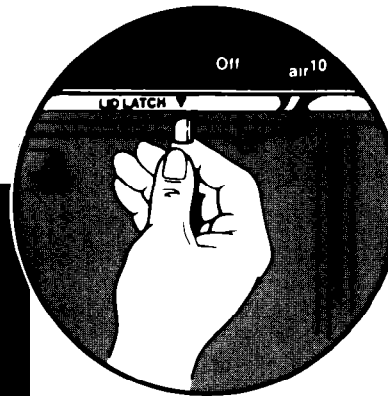


4. Select CYCLE and WASH TIME; Start the Washer

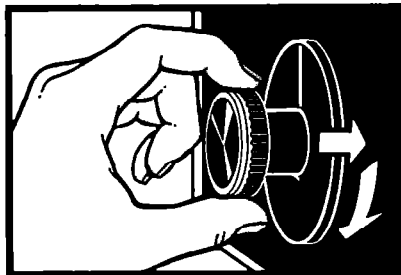


A. Push in the Control Knob and turn it to the right. It must be pushed in and turned only clockwise.

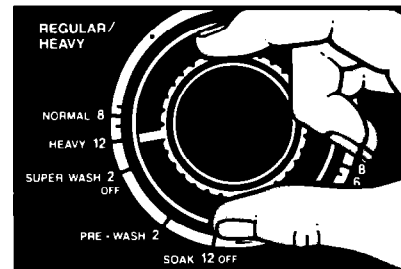

B. Stop on a number in the cycle you want. The numbers are minutes of wash time. The drawing shows 12 minutes of agitation in the REGULAR/HEAVY Cycle.

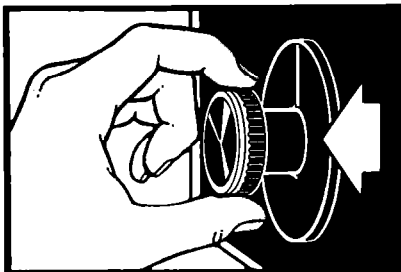

C. Start the washer by pulling out the Control Knob. The washer will fill to the level you set with wash water of the selected temperature. After filling, the washer will agitate for the selected number of minutes.

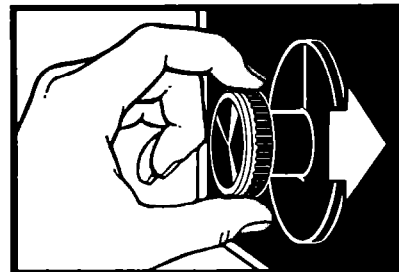

D. To stop the washer at any time, push in the Control Knob. To restart the washer, pull out the Control Knob.



To set the controls for a rinse and spin, a drain and spin, or a soak or pre-wash, see page 12.

What Happens in Each Cycle*

Each cycle has different agitation and spin speeds designed for different kinds of fabrics. Numbers on the dial in each cycle are the minutes of WASH agitation time.



When the Cycle Control Knob is set to a number and pulled out, the washer fills before agitation and timing starts. After agitation starts, the knob turns

REGULAR HEAVY Cycle

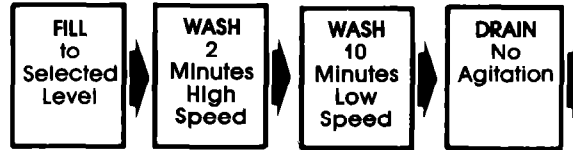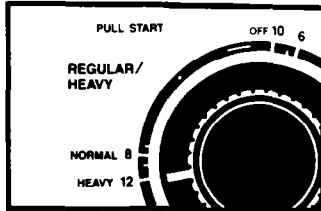



A cycle for sturdily constructed fabrics that are heavily soiled.

REGULAR NORMAL Cycle

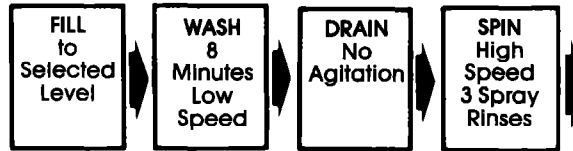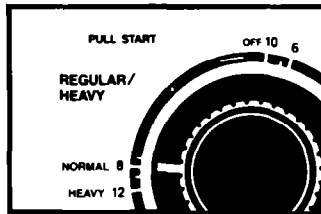

A cycle for sturdily constructed fabrics that are moderately soiled.

PERMANENT PRESS NORMAL Cycle

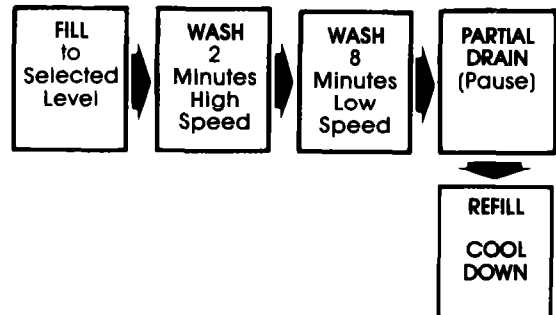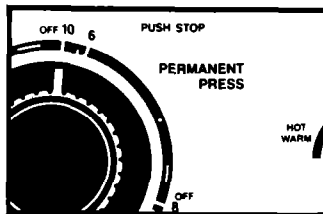




A special cycle with the necessary **cool-down** rinse which helps keep wrinkles from setting into Permanent Press and some synthetic fabrics.

clockwise until it points to OFF and the cycle ends.

NOTE: You may hear the sound of water spraying during the spin parts of some cycles. In some cycles, cold water is sprayed on the spinning load to help with the rinsing.


Gentle Wash System

For better fabric care in the REGULAR and PERMANENT PRESS cycles, the agitation speed is reduced during the last few minutes of wash time.

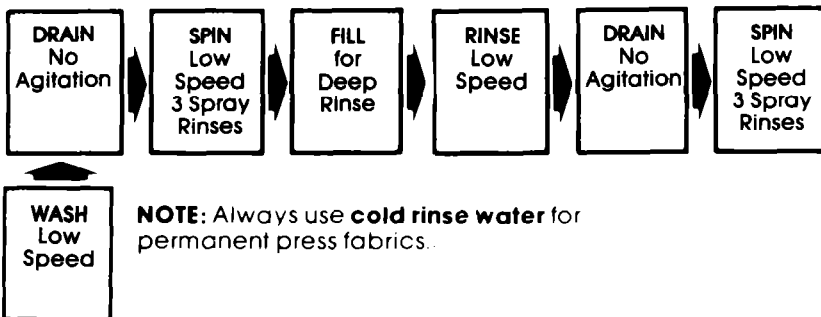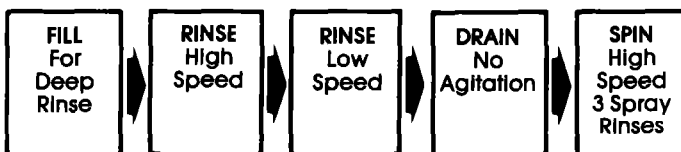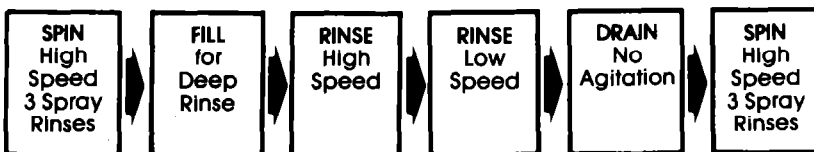


NOTE: Always use **cold rinse water** for permanent press fabrics.

KNITS/GENTLE Cycle

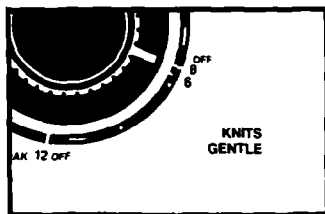


A cycle that gently washes and spins delicate items and washable knits. Wash nylon hose in a net laundry bag.

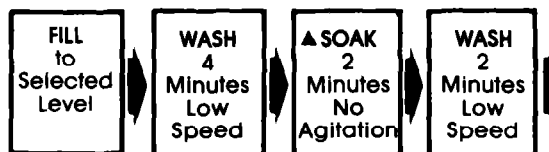

▲ Indicates the machine is pausing for a brief soak period.


SOAK and PRE-WASH Cycles

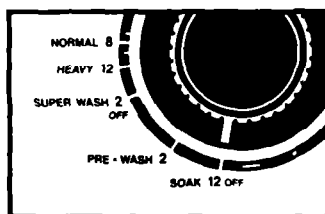

Periods of agitation and soaking time help remove heavy soils and certain stains that need extra pretreatment. Use recommended amount of detergent. **The SOAK Cycle should always be followed by a Wash Cycle.**





SUPER WASH Cycle

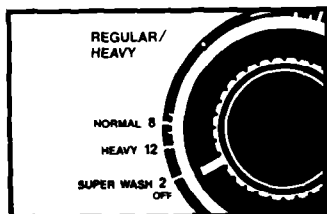

Use for washing heavily soiled loads that require maximum soil removal. **Double the amount of detergent recommended when using the SUPER WASH Cycle.**



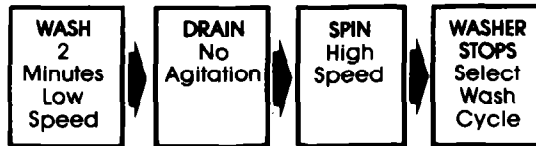
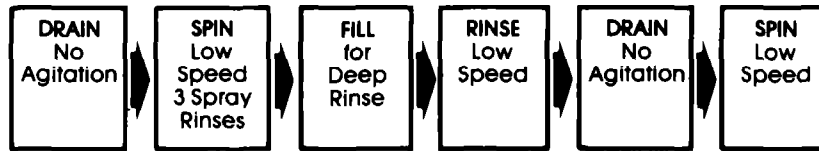


Pre-wash setting begins here,
(see page 12).

Special care is needed when soaking or pre-washing laundry.
See your "Laundry Guide" for proper use of this cycle.

After the Partial Drain, the washer automatically refills and goes in the REGULAR/HEAVY Cycle. **Be sure to use enough detergent for the double wash.**

Other operating instructions

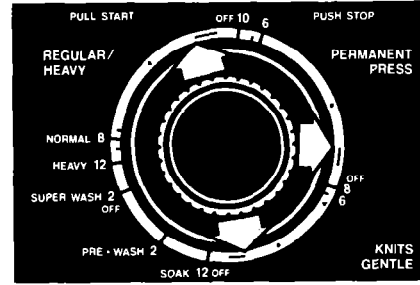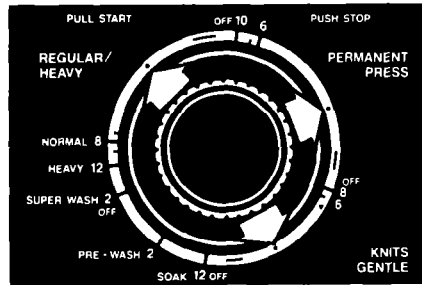

For a rinse and spin

You may need an extra rinse and spin for heavily soiled loads which need more detergent. (Extra detergent can require an extra rinse.)

1. Push Control Knob in.
2. Turn clockwise to any ● on the dial.
See above drawing.
3. Pull Control Knob out. The washer will fill to selected level; agitate 2 minutes; drain and spin.

For agitation and spin speeds in each cycle, see pages 8-11.


For a drain and spin

Your washer can be set to drain and spin out water.

1. Push Control Knob in.
2. Turn clockwise to the bar just before the OFF area in any cycle. **See above drawing.**
3. Pull Control Knob out. The washer will drain and spin.

For a soak or pre-wash

For best results, use **warm** water for soaking or pre-washing stained laundry. **Hot water can set stains.**

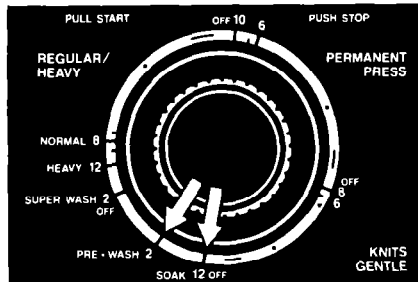

1. Use recommended amount of detergent or pre-soak product.
2. Push Control Knob in.
3. Turn clockwise to point at a **number** in the SOAK or PRE-WASH cycles.
4. Pull Control Knob out. The washer will start.
5. When the cycle is over, add detergent for the next selected wash cycle. **The SOAK cycle should always be followed by a Wash Cycle.**

Important: See additional care information in your "Laundry Guide."


To start the soak or pre-wash with agitation, the Cycle Control Knob must point to the number in the SOAK Cycle.

Cleaning the lint filter

Clean filter after every load for best filtering results. **NOTE: The load type will vary the amount of lint build-up.**

To clean:


1. Lift off the agitator barrel.
2. Wash or wipe the filter clean in the bottom of the agitator barrel. **The filter is not removable.**
3. Replace the agitator barrel and snap into place.

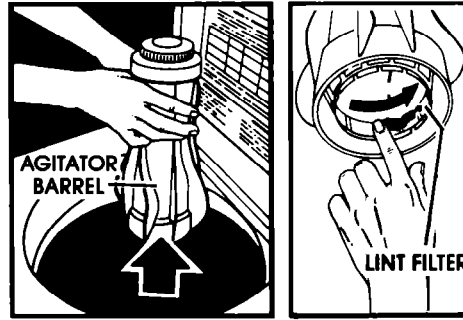


Dryer operating instructions

Starting Your Dryer

Before starting your dryer, be sure laundry is sorted and loaded properly (see your "Laundry Guide"). **Be sure the door is tightly closed.**

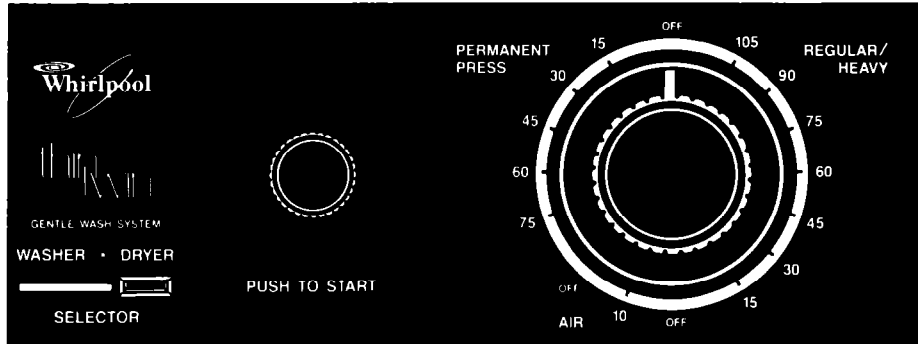


1. Position SELECTOR SWITCH

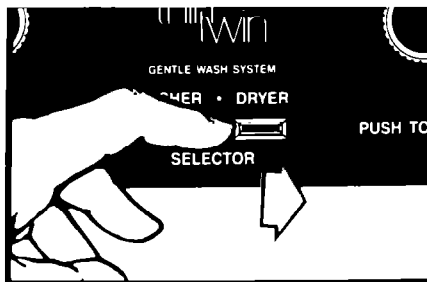

Move Selector Switch to DRYER position. Dryer will not operate when switch is in WASHER position.


2. Select CYCLE and TIME

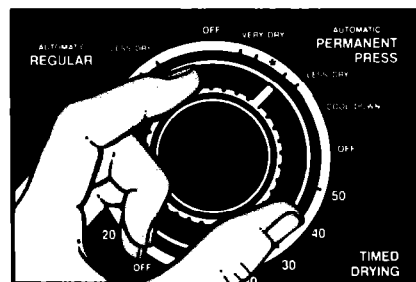

Turn the Control Knob either way to point to the time setting you want in the cycle you want.


continued on next page

1. Push the START Button

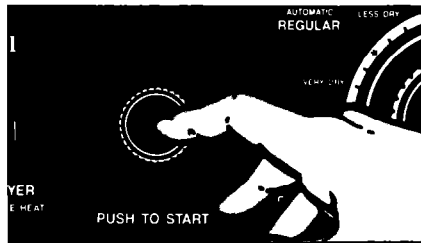

The dryer will start tumbling when you push the START Button.

2. To Stop and Restart the Dryer

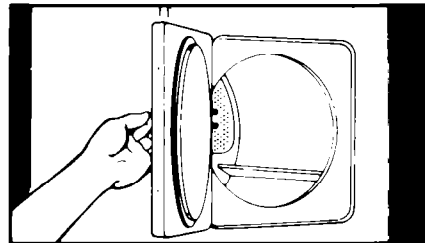


To stop, open the door (or turn the Control Knob to OFF).

To restart, close the door and push the START button.


The Cycle Control Knob should point to OFF when the dryer is not in use.

Selecting a Cycle


Dryer cycles are designed for the proper drying of different kinds of fabrics. This dryer has 3 cycles:

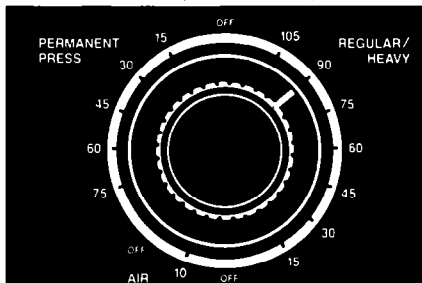

REGULAR HEAVY Cycle – The heat is off during the last 7 minutes of tumbling. The load is cooled down for more comfortable handling.

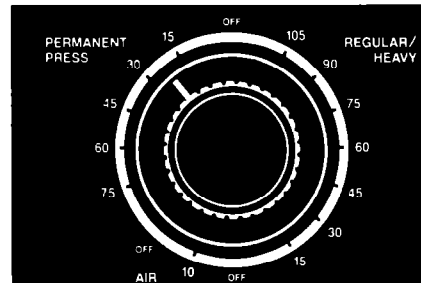

PERMANENT PRESS Cycle – The heat is off during the last 10 minutes of tumbling to help keep wrinkles from setting in. Clothing wrinkled from packing in suitcases or closets can be smoothed out by tumbling them in this cycle for 20 minutes.

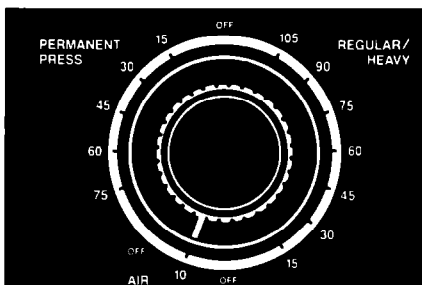

AIR Cycle – No heat. This cycle is useful when drying heat-sensitive items or when fluffing pillows and bedding or dusting sheers and curtains.




TYPE OF LOAD	SUGGESTED CYCLE
COTTONS	
HEAVY – Bedspreads, mattress pads, quilts	REGULAR HEAVY
MEDIUM AND LIGHTWEIGHT – Shirts, dresses, sheets, diapers, towels, work clothes	REGULAR HEAVY
PERMANENT PRESS	
HEAVY – Work clothes, jackets, raincoats, etc.	PERMANENT PRESS
MEDIUMWEIGHT – Shirts, uniforms, dresses, slacks, etc.	PERMANENT PRESS
KNITS	
HEAVYWEIGHT – COTTONS, RAYONS, BLENDS – T-Shirts, slacks, polo shirts, etc.	PERMANENT PRESS
LIGHTWEIGHT – SYNTHETIC FIBERS (polyester, acrylic, etc.) AND BLENDS – Lingerie, blouses, dresses, etc.	PERMANENT PRESS
DELICATELY CONSTRUCTED FABRICS –	
Sheer Curtains (2 or 3 panels)	PERMANENT PRESS
RUBBER, PLASTIC, HEAT SENSITIVE FABRICS	
Pillows, bras, etc.	AIR
Plastic shower curtains, tablecloths	AIR
Rubber backed rugs	AIR
Olefin, polypropylene, sheer nylon	AIR



WARNING: Drying these and other heat sensitive materials can damage them or be a FIRE HAZARD.

Drying tips

Drying times

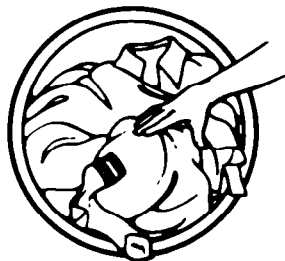

Drying times will vary depending on:


- amount of moisture in the clothes.
- type and weight of the fabric.
- size of the load.
- room temperature around the dryer.
- temperature of the wash/rinse water.
- amount of lint in the lint screen.

NOTE: 120 volt dryers have longer drying times.

See your "Laundry Guide" for more information.

DO NOT OVERDRY. Overdrying can cause shrinkage, static cling, and can damage some fabrics.

Mixed loads

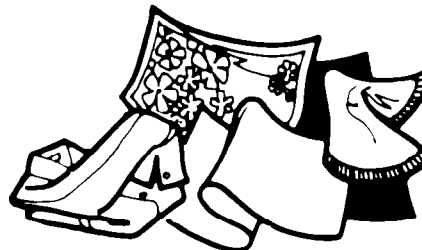

When drying a load with different kinds and weights of fabrics, use the cycle suggested for the lightest fabrics. When the dryer stops, remove dry items and reset the control.


To help reduce wrinkling, take the load from the dryer as soon as tumbling stops. This is very important for permanent press, knits and other synthetic fabrics.

Lint screen

Clean the lint screen before each load. A screen blocked by lint can increase drying time and may be a **FIRE HAZARD**.


The lint screen is inside the dryer drum, on the back wall.

1. Use the finger holes to pull the lint screen straight out.

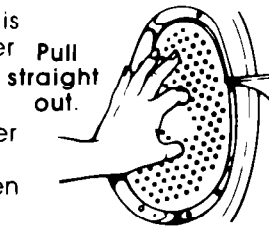

WARNING: DO NOT run the dryer with the lint screen loose, damaged, blocked or missing. Doing so can cause overheating, damage fabrics and be a **FIRE HAZARD**.

2. Lightly squeeze the body, as shown, while pulling the cover off.

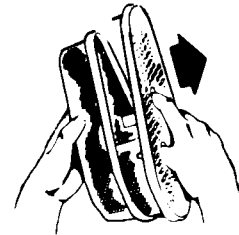

3. Roll lint off the screen with your fingers. **DO NOT** rinse or wash the screen. **Wet lint is hard to remove.**
4. Replace the cover on the body of the lint screen.
5. Push the lint screen straight back in until it clicks into place.

Lint removal


Lint can gather inside the dryer and create a **FIRE HAZARD**. This lint should be removed at least every **2 to 3 years**, or more often, depending on dryer usage.

Cleaning should be done only by a qualified person.


1. Remove back panel from dryer.
2. Avoid touching thermostats, wires, terminals and heater box.
3. Remove lint from shaded area – see art – with a soft brush or vacuum cleaner.
4. Replace back panel. Reconnect, exhaust duct, etc. Level the washer/dryer.




- WARNING:**
- Avoid electrical shock hazard – unplug power supply cord or turn off electrical power.
 - Avoid injury or damage – do not put hands inside cabinet.
 - Make sure dryer is cool.

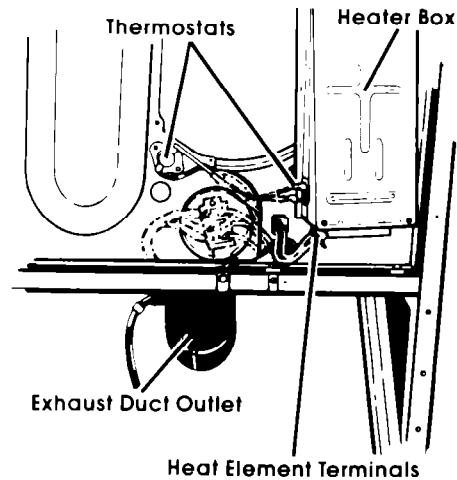

Caring for your washer • dryer

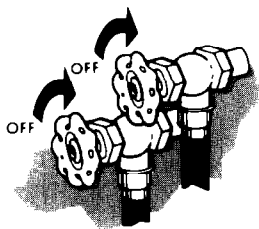


When not washing, keep both water faucets turned off. This takes the pressure off the water inlet valve and hoses.

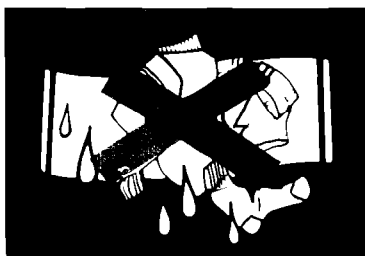

Never use the washer to...

- soak for more than 2 hours
- soak with chlorine bleach.
- soak with vinegar or other acids.
- soak or store urine soaked clothes.


Never leave or store wet, damp or dry laundry in your washer or dryer.

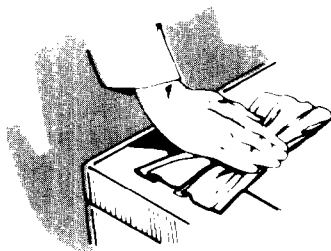


After washing, use a soft dry cloth to wipe the outside and inside dry. Leave washer lid up until the basket is dry. **Wipe up all spills.** Spills allowed to remain may dull or damage the finish.

Remove loose and sharp objects from pockets and cuffs before washing or drying – pins, buckles, etc. **Close metal zippers.**

Sharp or heavy objects should never be put on or in the washer or dryer. Check pockets for bolts, nuts, etc.

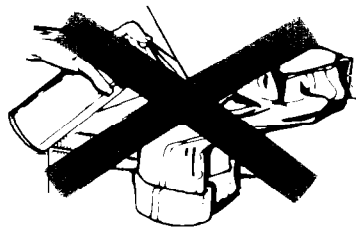

Some pretreatment products can damage dials, consoles and finish. Do not use these products on or near your washer or dryer.

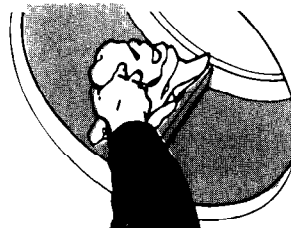

Cleaning dryer interior



WARNING: Before cleaning interior, unplug power supply cord or, turn off electrical power to avoid electrical shock hazard.

Garments which contain unstable dyes, such as denim blue jeans or brightly colored cotton items, may discolor the dryer interior. If the interior is discolored, clean with one of the following methods to avoid staining later load items.

Powdered laundry detergent and very warm water


Make a paste with detergent and very warm water. Apply paste to a soft cloth and scrub area until all excess dye is removed. Wipe thoroughly with a damp cloth.

Tumble a load of rags. **–OR–**

Liquid spray household cleaner

Spray on stained area. Rub with a cloth until all excess dye is removed. Tumble a load of rags.

Vacation care

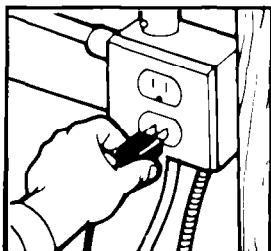


1. Turn off both water faucets to take pressure off inlet valves and hoses.
2. Unplug power supply cord or turn off electrical power supply.
3. Clean lint screen and lint filter.

Voltage Requirements

This Thin Twin Dryer model operates on household current of 120 volts. Drying times will be longer than for dryers that operate on 240 volts.

Winterizing

Install and store your washer / dryer where it won't freeze. Because some water stays in the washer, freezing can damage it. If your washer / dryer is stored **or moved** during freezing weather, winterize it.

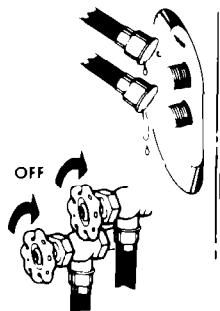


1. Shut off both water faucets. Disconnect and drain water inlet hoses.



2. Put a quart of R.V. or automobile type antifreeze in the basket.




3. Run washer on a drain and spin setting (see page 12) for about 30 seconds to mix antifreeze and water.

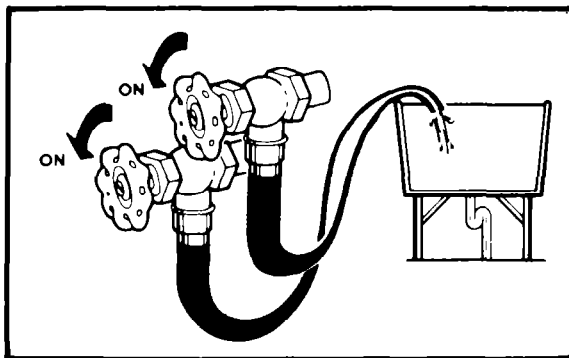

To use washer again:

1. Flush water pipes and hoses.
2. Reconnect water inlet hoses.
3. Turn on both water faucets.

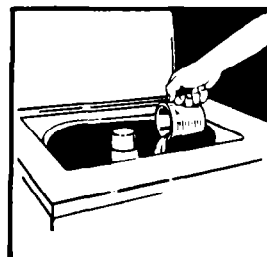

4. To clean out anti-freeze, run washer through a complete cycle with a cup of detergent.

If you need service or assistance, we suggest you follow these five steps:

1. Before calling for assistance...




Performance problems often result from little things you can find and fix yourself without tools of any kind.

If your washer does not fill:

- Is the power supply cord plugged into a live circuit with the proper voltage?
- Are both water faucets open?
- Have you checked your home's main fuses or circuit breaker box?
- Are the water supply hoses kinked?
- Is the Cycle Control Knob set and pulled out?
- Is Selector Switch set in the WASHER position?

If your washer does not spin:

- Is the lid closed?
- Is the power supply cord plugged into a live circuit with the proper voltage?

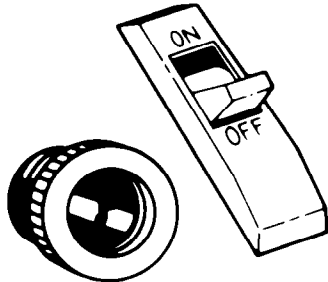

- Have you checked your home's main fuses or circuit breaker box?

If your washer drains at the wrong time:

- The drain hose should be at least 28 inches above the floor and secured.
- The drain hose should not fit tightly in the drain pipe.
- Make sure that the Cycle Control Knob is pointing to a number in the cycle.

Make sure the drain hose is higher than the water level in the washer. If it isn't...


- The washer may seem to be draining during wash and rinse cycles.
- Water can siphon out. (See "Installation Instructions.")

If your washer stops during the permanent press cycle:

- Remember, the washer will stop for about 2 minutes after the partial drain during the cool-down period in this cycle.

If your dryer does not run or heat:

- Is the power supply cord plugged into a live circuit with the proper voltage?
- Is the door closed tightly?
- Did you push START?
- Have you checked your home's main fuses or circuit breaker box?
- The AIR setting is without heat.
- The last minutes of heat settings are without heat. See page 14.
- Is Selector Switch set in the DRYER position?

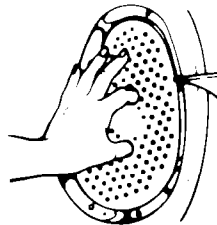

If drying times seem too long:

- Is the lint screen clean? See page 17 of this book for cleaning instructions.
- See page 16 of this book and your "Laundry Guide."

2. If you need assistance*...

Call Whirlpool COOL-LINE® service assistance telephone number. Dial free from anywhere in the U.S.:
1-800-253-1301

and talk with one of our trained Consultants. The Consultant can instruct you in how to obtain satisfactory operation from your appliance or, if service is necessary, recommend a qualified service company in your area.

3. If you need service*...



Whirlpool has a nationwide network of franchised TECH-CARE® Service Companies, TECH-CARE service technicians

are trained to fulfill the product warranty and provide after-warranty service, anywhere in the United States. To locate TECH-CARE service in your area, call our COOL-LINE service assistance telephone number (see Step 2) or look in your telephone directory Yellow Pages under:

APPLIANCES - HOUSEHOLD -
 MAJOR - SERVICE & REPAIR

WHIRLPOOL APPLIANCES
 FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES
 XYZ SERVICE CO
 123 MAPLE

999-9999

OR

ELECTRICAL APPLIANCES -
 MAJOR - REPAIRING & PARTS

WHIRLPOOL APPLIANCES
 FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES
 XYZ SERVICE CO
 123 MAPLE

999-9999

OR

WASHING MACHINES, DRYERS
 & IRONERS - SERVICING

WHIRLPOOL APPLIANCES
 FRANCHISED TECH-CARE SERVICE

SERVICE COMPANIES
 XYZ SERVICE CO
 123 MAPLE

999-9999

4. If you have a problem*...

Call our COOL-LINE service assistance telephone number (see Step 2) and talk with one of our Consultants, or if you prefer, write to:

Mr. Robert Stanley
 Division Vice President
 Whirlpool Corporation
 2000 M-63
 Benton Harbor, MI 49022

5. If you need FSP® replacement parts*...

FSP is a registered trademark of Whirlpool Corporation for quality parts. Look for this symbol of quality whenever you need a replacement part for your Whirlpool appliance. FSP replacement parts will fit right and work right, because they are made to the same exacting specifications used to build every new Whirlpool appliance.

*If you must call or write, please provide: model number, serial number, date of purchase, and a complete description of the problem. This information is needed in order to better respond to your request for assistance.

WHIRLPOOL® "THIN TWIN" WARRANTY

LENGTH OF WARRANTY	WHIRLPOOL WILL PAY FOR
FULL ONE-YEAR WARRANTY From Date of Purchase	FSP* replacement parts and repair labor to correct defects in materials or workmanship. Service must be provided by a franchised TECH-CARE* service company.
LIMITED FOUR-YEAR WARRANTY Second Through Fifth Year From Date of Purchase	FSP* replacement parts for any part of gearcase assembly if defective in materials or workmanship. The gearcase assembly is shown below.
WHIRLPOOL WILL NOT PAY FOR	
<p>A. Service calls to:</p> <ol style="list-style-type: none"> 1. Correct the installation of the washer/dryer. 2. Instruct you how to use the washer/dryer. 3. Replace house fuses or correct house wiring or plumbing. 4. Replace light bulbs. <p>B. Repairs when washer/dryer is used in other than normal, single-family household use.</p> <p>C. Pick up and delivery. This product is designed to be repaired in the home.</p> <p>D. Damage to washer/dryer caused by accident, misuse, fire, flood, acts of God or use of products not approved by Whirlpool.</p> <p>E. Any labor costs during the limited warranty.</p>	

WHIRLPOOL CORPORATION SHALL NOT BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow the exclusion or limitation of incidental or consequential damages so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Outside the United States, a different warranty may apply. For details, please contact your authorized Whirlpool distributor or military exchange.

**GEARCASE ASSEMBLY
COVERED BY YOUR
WARRANTY**

