

mellerware®

TRENDS FOR LIFE

MODENA 3 IN 1 COFFEE MAKER



complies with
INTERNATIONAL
IEC60335
SAFETY SPECIFICATIONS


m
1700W

2 YEAR
GUARANTEE

Model:
29003

PLEASE READ ALL INSTRUCTIONS BEFORE USE

2 year guarantee

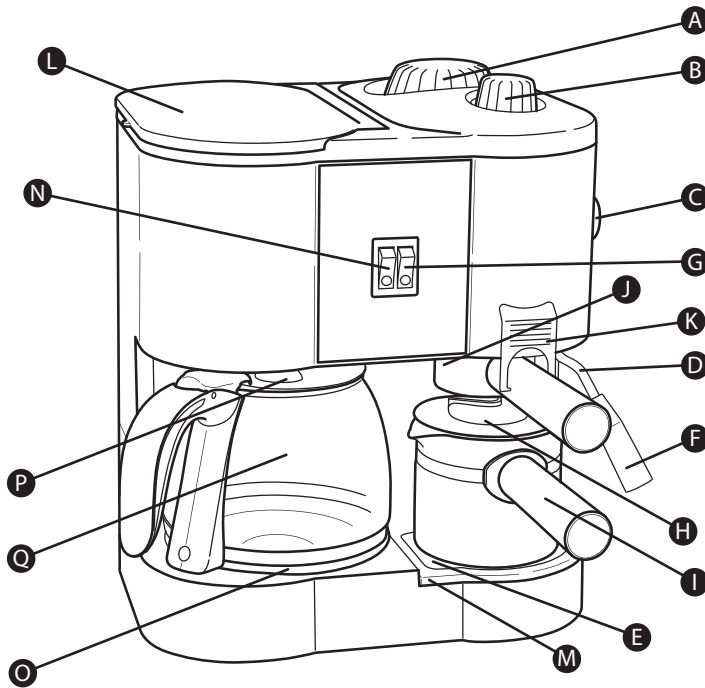

DESCRIPTION

A Boiler unit cover (water for espresso coffee)
B Brew strength control knob
C Steam control knob
D Steam pipe
E Drip tray cover
F Steam nozzle
G On/Off Switch (for espresso coffee)
H Espresso jug cover

I Small jug for espresso
J Portafilter
K Filter lock
L Water tank cover (for drip coffee)
M Removable drip tray
N On/Off Switch (for drip filter coffee)
O Warming plate
P Large jug Lid
Q Large glass jug for drip filter coffee

Please read the instruction manual before using this appliance.

SAFETY CAUTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

1. Please read all the instructions before using this appliance.
2. Do not touch any hot surfaces, handles or knobs.
3. To protect against electric shock, do not immerse the appliance its power cord or plug in water or any other liquid.
4. Switch the appliance "OFF" and unplug it from

the wall socket when it is not in use, and before undertaking any cleaning task.

5. Allow the appliance and its accessories to cool down completely before undertaking any cleaning task.
6. Do not use the appliance if it has a damaged power cord, plug or after it malfunctions or has been damaged in any manner. If any of the above has occurred return the appliance to the nearest authorized service centre for repair.
7. Do not use this appliance outdoors.
8. Do not let the power cord hang over the edge of a table or countertop or allow it to touch any hot surfaces.
9. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.





10. To disconnect the appliance, switch the appliance "OFF" and then remove the plug from the wall socket.
11. Do not use the appliance for anything other than its intended purpose.
12. Only use the appliance on a hard, flat and level surface, to avoid interruption of air flow underneath the appliance.
13. Always ensure that the water reservoir cap is tightened securely before switching the appliance on.
14. Do not remove the water reservoir cap or the brew basket until all the pressure has been released.
15. Warning: To reduce the risk of fire or electric shock, do not remove any of the appliances' casings. There are no user serviceable parts inside. Repairs must only be done by an authorized service centre.
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.

ESPRESSO and CAPPUCCINO

1. Unscrew the water reservoir cap.
2. Fill the water reservoir with the desired amount of cold water.
3. Screw the water reservoir cap back on and ensure that it has been closed tightly.
4. Place the coffee filter into the portafilter.
5. Add the desired amount of ground coffee using the measure spoon provided with the coffee machine (follow the markings inside the coffee filter).
6. Place the portafilter back in position by inserting it underneath the water outlet and turning it anti-clockwise until it is firmly locked in place.
7. Place the carafe onto the drip tray.
8. Plug the appliance in and switch it on, the indicator light will illuminate.
9. Wait for the "vapour" indicator light to illuminate.
 1. For espresso, turn the small knob on the top of the appliance to the left (until the knob is pointing to the coffee sign).
 2. For cappuccino, pour milk into the milk cup (no more than half full) and immerse the steam nozzle into the milk. Turn the small knob on the top of the appliance to the right (until the knob is pointing to the steam sign). This can be used for frothing milk and heating

up beverages.

NOTE: Switch off the steam nozzle before moving the milk jug away by turning the steam knob clockwise. Do this to prevent contact with steam which could result in injury.

10. We recommended that you clean the steam nozzle immediately after each use to prevent the build up of deposits.

Filter Coffee

1. Open the cover of the water tank on the top left of the appliance.
2. Pour in the desired amount of water into the water tank (no more than the overflow point).
3. Using the measuring spoon, add the desired amount of ground coffee into the filter, then close the cover, place the jug on the heating base.
4. Switch the appliance on.
5. After use, switch off the appliance and unplug it, allow it to cool down to room temperature before undertaking any cleaning task.

CLEANING AND MAINTAINANCE

1. Before cleaning the appliance, please ensure that the plug has been removed from the wall socket.
2. Wipe the surface with a damp cloth. Do not use any chemicals or abrasives to clean this appliance.
3. Dismantle the steam nozzle and clean with water.
4. Clean the funnel and filter nets with water.

DESCALING

In order to maintain the excellent quality of your espresso and filter coffee machine we recommend that you descale your appliance.

To prevent build-up of deposits especially in hard water areas, do not leave water in the appliance. The appliance should be regularly descaled at the following recommended intervals:

NORMAL WATER: every 6 months
HARD WATER: every 3 months

1. Only use a decaling substance suitable for an espresso machine and carefully follow the instructions.
2. Pour cold water together with 2 to 3 teaspoons of decaling substance into the jug.
3. Remove the filter from the filter holder.
4. Replace the empty jug back onto the drip tray.
5. Turn the steam control knob clockwise to clean the valve. Repeat the process if required.





6. To clean the machine after decaling, operate 3 – 4 times with clean water only.
7. Do not pour the decaling substance into an enamel sink, do not use the mixture of water and descaler twice.

REMINDER

1. This product is only for household use.
2. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid hazard.

Rated input voltage: AC 220V~240V

Rated Frequency: 50Hz


Rated input: 1700W (Espresso: 800W/Filter coffee: 900W)


Espresso capacity: 240cc/Filter coffee capacity: 1200cc








creative housewares

 20 Tekstiel Street, Parow, Cape Town, 7493, South Africa

 P.O. Box 6156 Parow East, 7501, South Africa

 +27 21 931 8117  +27 21 931 4058

Service Centre Helpline: 086 111 5006

 www.creativehousewares.co.za

