 


CM47087 MUK Rev 3

morphy richards®

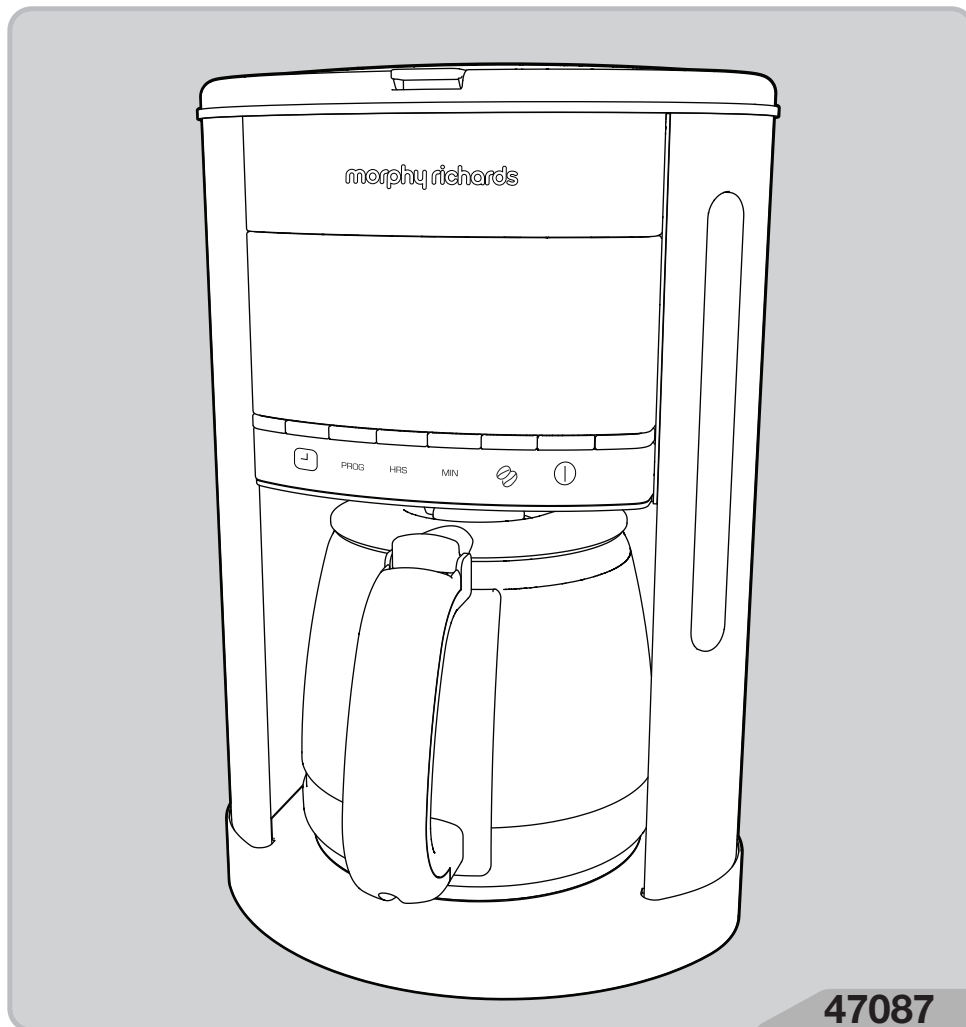

Accents Filter Coffee Maker



For competitions, product hints and tips
and more join us at



www.homeofthehouseproud.com



www.facebook.com/loveyourhome

 


www.twitter.com/loveyourmorphy

www.morphyrichards.com

* Register online for your 2 year guarantee. See back of this instruction book for details. (UK and Ireland customers only)


Product overview

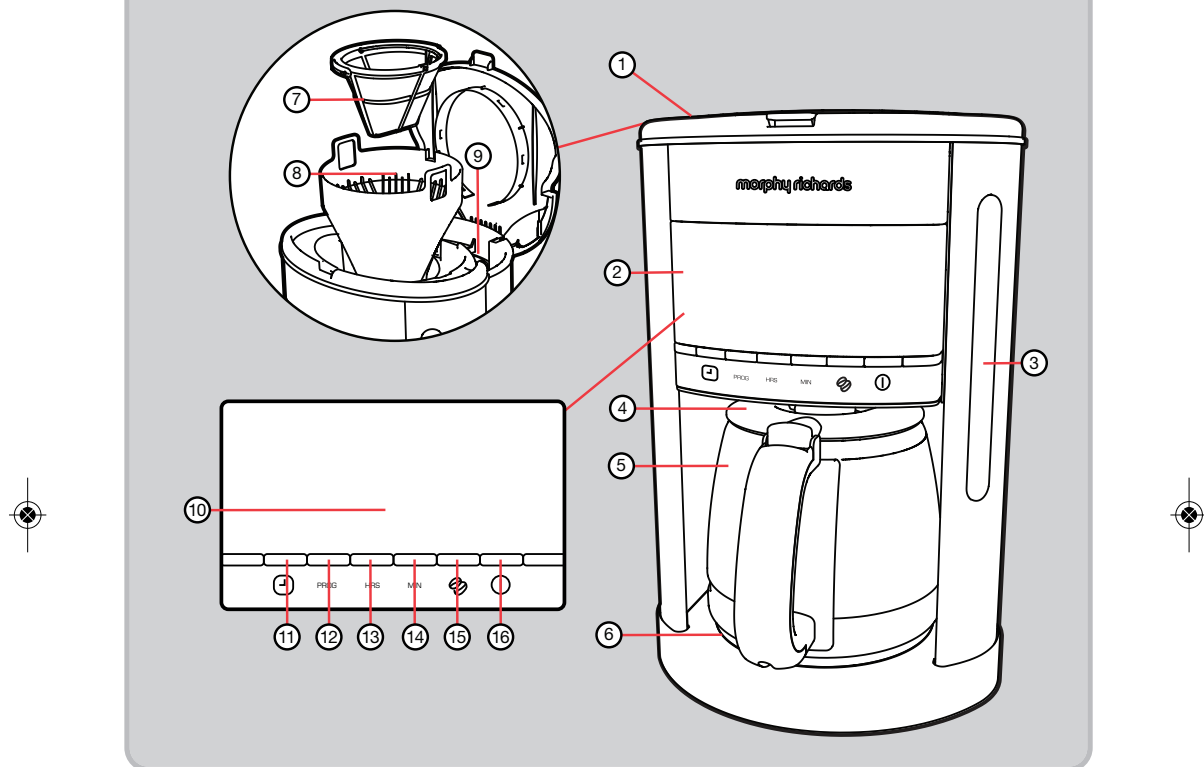



Features

- | | |
|--------------------------------|----------------------------|
| (1) Lid | (10) Display Screen |
| (2) Control Panel | (11) Auto Button |
| (3) Water Gauge | (12) Programme Button |
| (4) Jug Lid | (13) Hour Button |
| (5) Jug | (14) Minute Button |
| (6) Hot Plate | (15) Aroma Function Button |
| (7) Removable Permanent Filter | (16) On/Off Button |
| (8) Removable Filter Holder | |
| (9) Water Reservoir | |


 
Using your coffee maker

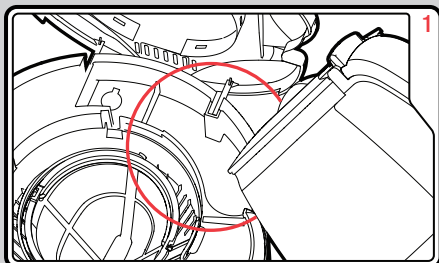

 
 
Fill the Water Reservoir (9) with cold water. Do not overfill.

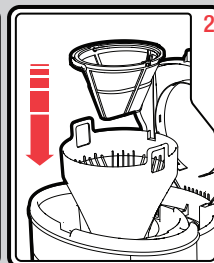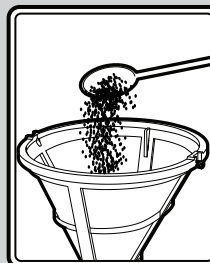

  Spoon filter coffee into the Removable Permanent Filter (7). We recommend 7g of coffee per cup. Place the Filter into the Filter Holder (8) in the coffee maker ensuring the Filter Holder clicks into place.

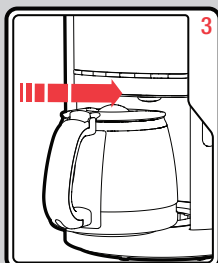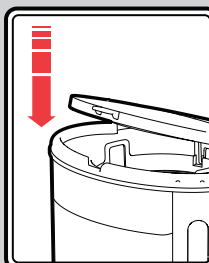

  Close the Lid and replace the Jug on the Warming Plate.

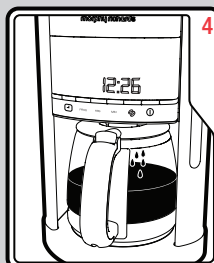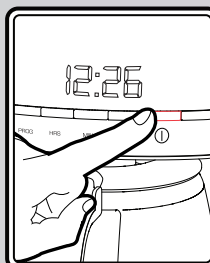

Press the On/Off Button (16) to start the brewing process. To stop the brewing process, press the button a second time.

Before first use

- Take your coffee maker out of the box and remove the packaging.
- Wash the detachable parts of the machine in warm soapy water.
- The first time you use your coffee maker, operate the coffee maker with water only.

Setting the clock

- When the coffee maker is plugged in, the display will illuminate and flash.
- To set the time, use the Hour (13) and Minute (14) Buttons. The display is a 24 hour clock.
- When the coffee maker is in standby mode, you can use the Hour and Minute Buttons to adjust the clock.

 
Refilling your coffee maker

- Switch off the coffee maker and allow 3 minutes to cool before refilling with cold water.


Using the Aroma Function

- Use this feature if you want your coffee to taste more intensive.
- 1 Fill the Water Reservoir to water level 4 and add your required amount of coffee into the Removable Permanent Filter (7).
 - 2 Before pressing the On/Off button (16), press the Aroma Function Button (15). The aroma and On/Off lights will illuminate on the display.
 - 3 The aroma brewing cycle will then commence, taking longer than the standard brewing cycle, creating a more intense coffee flavour.
- To stop the aroma brewing cycle, simply press the Aroma Function Button (15).


To pre-set a brewing time

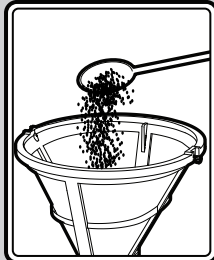

 Follow 'Using your coffee maker' steps 1-3 on page 3.

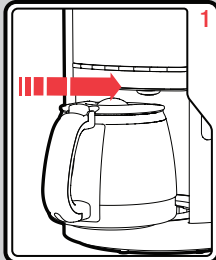


1

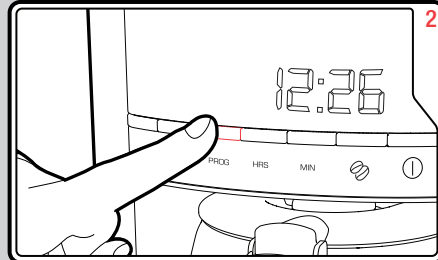 


Press the Programme Button (12).

 2

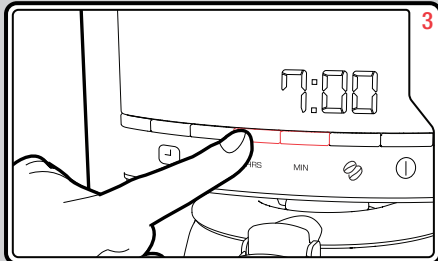

Select the brewing start time using the Hour (13) and Minute (14) Buttons.

 3

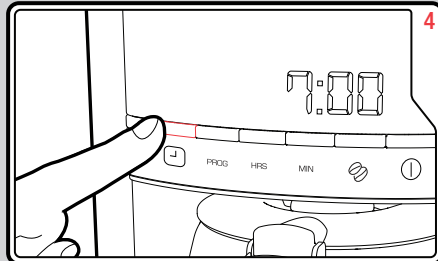

When you have selected the desired time press the Auto Button (11), a white light will illuminate. To Cancel, press the Auto Button (11) again.

4

Keep warm

After the brewing cycle has finished, your coffee maker will switch to the keep warm mode for 2 hours.

The lights on the Display will switch off when the keep warm cycle has finished.

To switch the keep warm mode off press the On/Off Button (16).

Cleaning your coffee maker

- Unplug the coffee maker and allow to cool.
- Do not immerse the coffee maker in liquid.
- Rinse the Water Reservoir occasionally with cold water. Do not use a cloth as any residue or lint may be left behind to clog the coffee maker.
- Remove the Permanent Filter, discard any used coffee and wash. Extended soaking helps to remove coffee stains from the mesh.

- Wash the Glass Jug, Jug Lid, and Filter Holder in warm soapy water. Rinse and dry all parts thoroughly. Refit the Filter and Filter Holder.
- Wipe all external surfaces, including the warming plate, with a damp cloth and dry thoroughly.
- Care must be taken to ensure that the non-drip valve situated on the bottom of the filter holder is not damaged during cleaning.
- Never use harsh or abrasive cleaners.
- NO parts are suitable for cleaning in a dishwasher.

Descaling

- If you live in a hard water area, we recommend that your coffee maker is descaled at regular intervals, e.g. every 2-3 months. In areas of moderately hard water, you should descale every 6 months.
- If the water filters through more slowly than usual, it is a sign that descaling is necessary.
- We recommend you use a proprietary liquid descaler which is especially made for coffee makers and plastic kettles. Follow the instructions on the bottle or sachet, and then operate the coffee maker with just water 3 times before making coffee.
- Do not use a kettle descaler unless the packet specifically states it is suitable for coffee makers.

Note: The permanent mesh filter should not be used during descaling.

Contact us

Helpline

If you are having a problem with your appliance, please call our Helpline, as we are more likely to be able to help than the store you purchased the item from.

Please have the product name, model number and serial number to hand when you call to help us deal with your enquiry quicker.

UK Helpline: 0844 871 0960

IRE Helpline: 1800 409 119

Spares: 0844 871 0926

Talk To Us

If you have any questions or comments, or want some great tips or recipe ideas to help you get the most out of your products, join us online:

Blog: www.homeofthehouseproud.com

Facebook: www.facebook.com/loveyourhome

Twitter: www.twitter.com/loveyourmorphy

Website: www.morphyrichards.com

Notes

[illegible]

Health and Safety

The use of any electrical appliance requires the following common sense safety rules.

Primarily there is danger of injury or death and secondly the danger of damage to the appliance. These are indicated in the text by the following two conventions:

WARNING: Danger to the person!

IMPORTANT: Damage to the appliance!

In addition, we offer the following safety advice.

Location

- This appliance is intended to be used in household and similar applications such as:
farm houses;
by clients in hotels, motels and other residential type environments;
bed and breakfast type environments.
It is not suitable for use in staff kitchen areas in shops, offices and other working environments.
- Remove all the packaging and retain for future reference.
- Ensure the coffee maker is used on a firm, flat surface.
- Do not use the coffee maker outdoors or near water.
- Do not place the coffee maker on a highly polished wooden surface as damage may occur to the surface.
- Do not place the coffee maker on or near hot surfaces such as a hot plate, radiant rings or near a naked flame.
- **WARNING:** Do not place the coffee maker onto a metal tray or metal surface whilst in use.

Mains cable

- Do not let the mains cable hang over the edge of the worktop where a child could reach it.
- Do not let the lead run across an open space e.g. between a low socket and a table.
- Do not let the cable run across a cooker or other hot area which might damage the cable.
- The mains cable should reach from the socket to the base unit without straining the connections.
- If the mains cable is damaged, it must be replaced by the manufacturer, it's service agent or similarly qualified person in order to avoid a hazard.

Personal safety

- Ensure the lid of the glass jug is securely in place before pouring.
- Take care to pour hot coffee slowly and carefully without tipping the glass jug too fast.
- Do not fill above the capacity mark of the water level gauge marked on the jug or reservoir.
- Do not use the glass jug in a microwave.
- Do not touch metal parts until the unit has cooled.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not move when switched on.

- Never use warm or hot water to fill the water tank.
- Do not overfill the water tank.
- Take care to pour hot coffee slowly and carefully without tipping the glass jug too fast.
- Do not place the glass jug on the hot plate unless the lid is in position.
- Make sure the mains lead does not touch the hot parts of the machine.
- Do not wind the mains lead around the hot appliance or store the appliance until it has fully cooled down.
- Do not open the reservoir lid whilst brewing.

Children

- Children do not understand the dangers associated with operating electrical appliances. Never allow children to use this appliance.
- Children should be supervised to ensure that they do not play with the appliance.

Treating scalds

- Run cold water over the affected area immediately. Do not stop to remove clothing, get medical help quickly.

Other safety considerations

- Disconnect the coffee maker from the mains supply when filling, cleaning or not in use.
- When unplugging, turn any control to 'off', then remove the plug from the wall outlet.
- Keep the outside of the coffee maker area clean and dry at all times.
- Do not touch hot surfaces. Always use handles or knobs.
- Do not immerse the coffee maker itself in water and always ensure the electrical connections are kept dry.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Ring the helpline number for advice on examination and repair.
- The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- Do not use the coffee maker for anything other than it's intended purpose.
- **CAUTION:** To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning. Use a soft cloth and mild detergent.

Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING : The plug removed from the mains lead, if severed, must be destroyed, as a plug with a bared flexible cord is hazardous if engaged into a live socket outlet.

Should the fuse in the 13 amp plug require changing, a 13 amp BS1362 fuse must be fitted.

WARNING: This appliance must be earthed.

CM47087 MUK Rev 3 06/11

Registering your 2 year guarantee

Your standard one year guarantee is extended for an additional 12 months when you register the product within 28 days of purchase with Morphy Richards. If you do not register the product with Morphy Richards within 28 days, your product is guaranteed for 1 year. To validate your 2 year guarantee register with us online at www.morphyrichards.co.uk

Or call our customer registration line

UK 0844 871 0962

IRE 1800 409 119

N.B. Each qualifying product needs to be registered with Morphy Richards individually.

Please note that the 2 year guarantee is only available in the UK and Ireland. Please refer to the one year guarantee for more information.

Your 1 year guarantee

It is important to retain the retailer's receipt as proof of purchase. Staple your receipt to this back cover for future reference.

Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model no.

Serial no.

All Morphy Richards products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase, it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 12 months of original purchase, you should contact the Helpline number quoting Model number and Serial number on the product, or write to Morphy Richards at the address shown.

You may be asked to return a copy of proof of purchase.

Subject to the exclusions set out below (see Exclusions), the faulty appliance will then be repaired or replaced as appropriate and dispatched usually within 7 working days of receipt.

If, for any reason, this item is replaced or repaired during the 1 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 1 year guarantee, the appliance must have been used according to the instructions supplied. For example, crumb trays should have been emptied regularly.

Exclusions

Morphy Richards shall not be liable to replace or repair the goods under the terms of the guarantee where:

- 1 The fault has been caused or is attributable to accidental use, misuse, negligent use or used contrary to the manufacturer's recommendations or where the fault has been caused by power surges or damage caused in transit.
 - 2 The appliance has been used on a voltage supply other than that stamped on the products.
 - 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
 - 4 The appliance has been used for hire purposes or non domestic use.
 - 5 The appliance is second hand.
 - 6 Morphy Richards reserves the right not to carry out any type of servicing under the guarantee at its discretion
 - 7 Plastic filters for all Morphy Richards kettles and coffee makers are not covered by the guarantee.
 - 8 Batteries and damage from leakage are not covered by the guarantee.
- This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer. Morphy Richards products are intended for household use only. See usage limitations within the location safety instructions.

Disclaimer

Morphy Richards has a policy of continuous improvement in product quality and design. The company, therefore reserves the right to change the specification of its models at any time.



For electrical products sold within the European Community. At the end of the electrical products useful life, it should not be disposed of with household waste.

Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice in your country

**IF YOU ARE HAVING A PROBLEM
WITH ONE OF OUR PRODUCTS, CALL
OUR HELPLINE:**

**UK: 0844 871 0960
EIRE: 1800 409 119
SPARES: 0844 873 0726**

morphy richards

The After Sales Division
Morphy Richards Ltd
Mexborough, South Yorkshire,
England, S64 8AJ

Helplines (office hours)
UK 0844 871 0960
Spare Parts 0844 873 0726
Republic of Ireland 1800 409 119
www.morphyrichards.com

