 


morphy richards

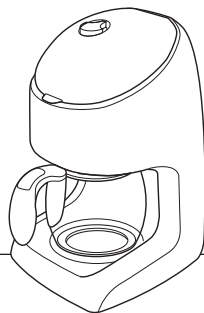

Series 2000 10-cup filter coffee maker



Two year guarantee

THIS GUARANTEE IS VALID IN THE UK AND IRELAND ONLY. It is in your interest to retain the retailers receipt as proof of purchase. Please quote the following information if the product develops a fault. These numbers can be found on the base of the product.

Model No. _____ Serial No. _____

All Morphy Richards Products are individually tested before leaving the factory. In the unlikely event of any appliance proving to be faulty within 28 days of purchase it should be returned to the place of purchase for it to be replaced.

If the fault develops after 28 days and within 24 months of original purchase, you should contact the helpline number quoting Model number and Serial number on the product, or write to the address below. You will be asked to return the product (in secure, adequate packaging) to the address below along with a copy of proof of purchase. Subject to the exclusions set out below (see 'Exclusions') the faulty appliance will then be repaired or replaced and dispatched usually within 7 working days of receipt.

If for any reason this item is replaced during the 2 year guarantee period, the guarantee on the new item will be calculated from original purchase date. Therefore it is vital to retain your original till receipt or invoice to indicate the date of initial purchase.

To qualify for the 2 year guarantee the appliance must have been used according to the manufacturers instructions. For example kettles should have been regularly descaled or an iron cord should have been stored as recommended by the instructions.

EXCLUSIONS

Morphy Richards shall not be liable to replace or repair the goods under the terms of the Guarantee where:

- 1 The fault has been caused or is attributable to accidental use, mis-use, negligent use or used contrary to the manufacturers recommendations or where the fault has been caused by power surges or damage caused in transit.
- 2 The appliance has been used on a voltage supply other than that stamped on the products.
- 3 Repairs have been attempted by persons other than our service staff (or authorised dealer).
- 4 Where the appliance has been used for hire purposes or non-domestic use.
- 5 Morphy Richards are not liable to carry out any type of servicing work, under the guarantee.
- 6 Plastic filters and glass jugs for all Morphy Richards kettles and coffee makers are not covered by the guarantee.

This guarantee does not confer any rights other than those expressly set out above and does not cover any claims for consequential loss or damage. This guarantee is offered as an additional benefit and does not affect your statutory rights as a consumer.

**The After Sales Division, Morphy Richards Ltd, Mexborough, South Yorkshire, England, S64 8AJ
Helpline (office hours): UK (local rate) 08450 777700, Republic of Ireland 1800 409119**

IMPORTANT SAFEGUARDS

Before using your coffee maker for the first time please read these safeguards.

- 1** Remove all packaging and retain for future use.
- 2** Disconnect the coffee maker from the mains supply when filling or not in use.
- 3** Ensure coffee maker is used on a firm flat surface.
- 4** Never use warm or hot water to fill the water reservoir.
- 5** Ensure the lid of the glass jug is securely in place before pouring.
- 6** Take care to pour hot coffee slowly and carefully without tipping the glass jug too fast.
- 7** Do not place the glass jug on the hot plate unless the lid is in position.
- 8** Keep the outside of the coffee maker and hot plate area clean and dry at all times.
- 9** Do not touch hot surfaces. Always use handles.
- 10** Make sure that small children cannot reach the coffee maker and that the mains lead does not hang over the edge of the work surface. Ensure that children are aware of the dangers of boiling water and supervise them carefully.
- 11** Do not fill above the max mark of the water level gauge marked on the jug.
- 12** Do not immerse the coffee maker itself in water and always ensure the electrical connections are kept dry.
- 13** Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Ring the helpline number for advice on examination and repair.
- 14** The use of attachments or tools not recommended or sold by Morphy Richards may cause fire, electric shock or injury.
- 15** Do not use abrasive cleaners on the outside of the coffee maker, they may scratch the surface. Clean only with a soft damp cloth.
- 16** Do not use the coffee maker for other than its intended use.
- 17** Do not use the coffee maker outdoors or in a bathroom.
- 18** Do not place the coffee maker or glass jug on a highly polished wooden surface as damage may occur to the surface.
- 19** Do not use the glass jug in a microwave.
- 20** Do not place the coffee maker on or near hot surfaces such as a hot plate or radiant rings or near a naked flame. Warning: Do not place the coffee maker onto a metal tray or metal surface whilst in use.

SAVE THESE INSTRUCTIONS

Electrical requirements Features

 
Check that the voltage on the rating plate of your appliance corresponds with your house electricity supply which must be A.C. (Alternating Current).

If the socket outlets in your home are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

WARNING: THIS APPLIANCE MUST BE EARTHED

Should the fuse in the 13 amp plug require replacement, a BS1362 13 amp fuse must be fitted.

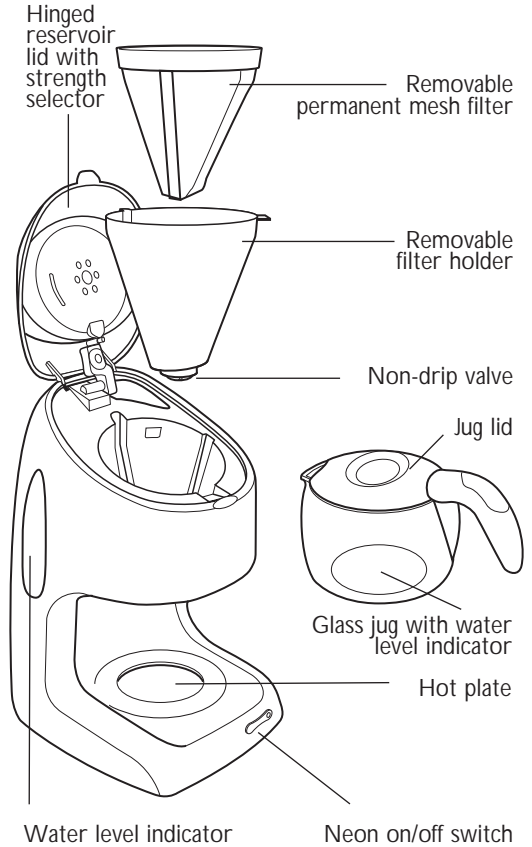


The first time you use your coffee maker


Before using your coffee maker the first time, operate the coffee maker with water only.

General use

 - 1 Lift up the hinged reservoir lid.
- 2 Fill the glass jug with the required amount of cold water and pour into the reservoir. Both the jug and water level indicator are marked in cups. Do not exceed the maximum level.

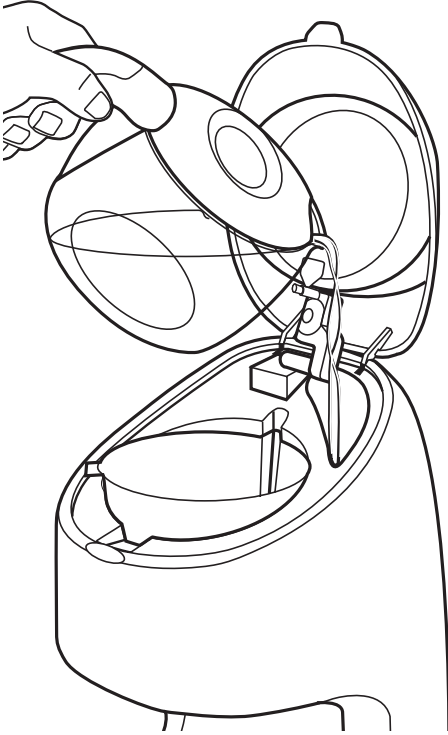

 - 3 Spoon the required amount of ground filter coffee into the mesh filter spreading it evenly. We suggest one level dessert spoon for every 1½ cups. Ensure the filter is sitting properly in the filter holder.
- 4 Close the reservoir lid.
- 5 Select the strength of coffee required using the strength selector on the reservoir lid.

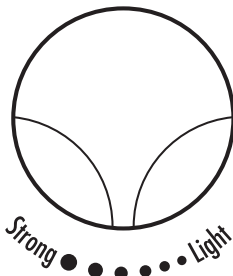

- 6 Slide the jug into the coffee maker ensuring it sits correctly on the hot plate. The jug lid must be in place during the brewing process, otherwise the non-drip valve will not open, causing the filter to flood.
- 7 Plug the coffee maker in at the wall socket and switch the coffee maker ON. The switch will light up to show the coffee maker is working.
- 8 Hot water will start to flow through the coffee grounds and into the glass jug as coffee.
- 9 When the coffee has been made, serve as required. The anti-drip valve will prevent any remaining coffee dripping onto the hot plate. Ensure that the jug is replaced on the hotplate after serving. While the coffee maker is switched ON the hot plate will keep the coffee warm.
- 10 Switch off the coffee maker when the jug is empty or the coffee is no longer required. **WARNING THE COFFEE MAKER AND HOT PLATE ARE HOT AND REMAIN HOT FOR SOME TIME AFTER SWITCHING OFF.**
- 11 Remove the permanent mesh filter using its handle and empty the used coffee grounds. Wash the filter immediately and dry thoroughly. **NOTE: THE MESH WILL BECOME DISCOLOURED AFTER A WHILE DUE TO THE STAINING EFFECT OF COFFEE.**

Refilling

- Switch off the coffee maker and allow 3 minutes to cool before refilling with cold water.

Descaling

If you live in a hard water area, we recommend that your coffee maker is descaled at regular intervals, e.g. every 2-3 months. In areas of moderately hard water you should descale every 6 months.

If the water filters through more slowly than usual, it is a sign that descaling is necessary.

We recommend you use proprietary liquid descaler which is especially made for coffee makers and plastic kettles. Follow the instructions on the bottle, and then operate the coffee maker with water only 3 times before making coffee. **DO NOT USE KETTLE DESCALER UNLESS THE PACKET SPECIFICALLY STATES IT IS SUITABLE FOR COFFEE MAKERS.** The permanent mesh filter should not be used during descaling.

Cleaning care

UNPLUG COFFEE MAKER AND ALLOW TO COOL.

DO NOT IMMERSE THE COFFEE MAKER IN LIQUID.

Rinse the water reservoir occasionally with cold water. Don't use a cloth as any residue or lint may be left behind to clog the coffee maker.

Remove the permanent filter, discard used coffee and wash. Extended soaking helps to remove coffee stains from the mesh.

Wash the glass jug, jug lid and filter holder in warm soapy water. Rinse and dry all parts thoroughly. Re-fit filter and filter holder.

Care must be taken to ensure that non-drip valve situated on bottom of filter holder is not damaged during cleaning.

Wipe all external surfaces including hot plate with a damp cloth and dry thoroughly.

NEVER USE HARSH OR ABRASIVE CLEANERS.

*Morphy Richards products are intended for household use only.
Morphy Richards has a policy of continuous improvement in product quality and design.
The Company, therefore, reserves the right to change the specification of its models at any time.*

morphy richards

Morphy Richards Limited, Mexborough,
South Yorkshire, England S64 8AJ

447/8015/05 RevOI August 2000