


# OPERATING INSTRUCTIONS FOR MR. COFFEE'S™ ACCEL™ 4 CUP COFFEEMAKERS MODELS PR5 and PR6

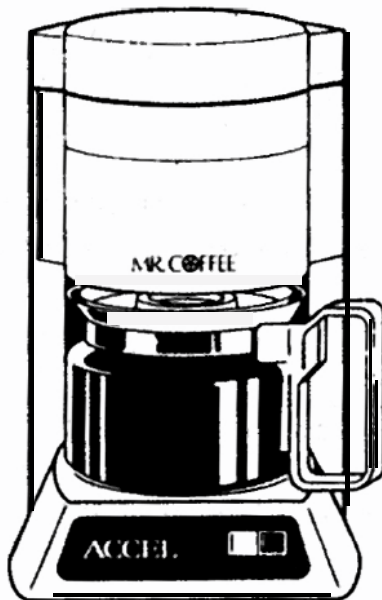

For better tasting tea  
and coffee, use Mr. Coffee  
brand filters.



*Sunbeam*

FOR HOUSEHOLD USE ONLY

# IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

1. **Read all instructions before using the machine.**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock, do not immerse cord, plugs, or machine in water or other liquid.
4. Do not permit children to use this machine without close adult supervision.
5. Turn control switch OFF and unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return this appliance only to the nearest authorized service center for repair.
7. The use of accessory attachments not recommended by Mr. Coffee, inc. may cause hazards or injuries.
6. **Do not use outdoors.**
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place this appliance on or near a hot gas or electric burner or in a heated oven.
11. To disconnect, turn any control to "off": then remove plug from wall outlet.
12. Do not use appliance for other than intended use.
13. Use on a hard, flat level surface only, to avoid interruption of air flow underneath the appliance.

## 14. **Decanter Use and Care**

Breakage may occur if the following instructions are not followed:

- a.. This decanter is designed for use with your Mr. Coffee coffeemaker and therefore must never be used on a range top, or in any oven including a microwave.
- b . Do not set a hot decanter on a wet or cold surface.
- c . Do not use a cracked decanter or a decanter having a loose or weakened handle.
- d . Do not clean the decanter with cleansers, steel wool pads, or other abrasive materials.
- e . Discard decanter immediately if it is ever boiled dry.
- f . Avoid sharp blows, scratches, or rough handling.

15. **WARNING:** To reduce the risk of fire or shock, do not remove any service covers. No user serviceable parts inside. Repair should be done by authorized personnel only.

# SAVE THESE INSTRUCTIONS

---

## SPECIAL CORD SET INSTRUCTIONS

1. A short power supply cord is provided to reduce the hazards resulting from becoming entangled in, or tripping over a longer cord.
2. An extension cord may be purchased and used if care is exercised in its use.
3. If an extension cord is used, the marked electrical rating of the extension cord must be at least 10 amps and 120 volts. The resulting extended cord must be arranged so that it will not drape over the counter top or table top where it can be pulled on by children or tripped over accidentally.

\*This appliance has a polarized plug (one blade is larger than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fully fit, contact a qualified electrician. Do not attempt to defeat this safety feature.

## ***Precautions When Using This Machine***

### **Do's. . . . .**

- Avoid areas of the coffeemaker which may become hot or emit steam when the machine is "on": particularly the brew funnel and the intake screen.
- Avoid jerking or straining the power cord when unplugging. Grasp the molded plug to unplug.
- Unplug the unit when not in use.
- Unplug the unit when wiping the exterior. Use only **a** damp cloth to wipe.
- Place machine well back from edge of counter.

### **Don'ts. . . . .**

- Do NOT place a cloth or otherwise restrict airflow beneath the appliance.
- Never reheat **a** beverage by passing it through the brewing system.
- Do **not use abrasive** or caustic **cleaning compounds to clean the exterior** of the unit.
- Do not store the machine until warmer plate has cooled.
- Do not place your hand underneath the brew funnel, in order to avoid contact with any fluid.
- Do not permit children to use this machine without close adult supervision.
- The use of chemically softened water can inhibit proper filtration. This will **affect the beverage flavor and will cause a long** drip time from the brew funnel. Avoid using chemically softened water.

## ***Introduction***

Congratulations! You are the owner of Mr. Coffee's Accel **4-cup** coffee-maker. These newest **4-cup** models feature "Accelerated Brewing For Better Flavor" and will brew four cups in five minutes.

Other features include a glass-activated Pause 'n Serve drip-stop valve which allows you up to 30 seconds to sneak a cup while the coffee is still brewing and a lighted On/Off switch.

Please read all of the instructions in this booklet carefully before you begin to use this appliance. Proper care and maintenance will insure the long life of this appliance and its trouble-free operation. Save these instructions and refer to them often for cleaning and care tips.


<b><i>Table of Contents</i></b>	<b>Page #</b>
Important Safeguards . . . . .	.2-3
Cord Set Instructions . . . . .	.3
Precautions . . . . .	.
Introduction . . . . .	.5
Clean Your Mr. Coffee Before Using . . . . .	.6
Brewing Coffee. . . . .	.7
Automatic Pause 'n Serve . . . . .	.8
Cleaning Instructions . . . . .	.8-9
Decanter Cleaning . . . . .	10
If Service Is Required . . . . .	10
Limited Warranty. . . . .	11

## ***Clean Your Mr. Coffee Before Using***

Make sure your first cup of coffee is as good as can be by cleaning your Mr. Coffee coffeemaker before you use it the first time. Just follow these simple steps:

1. Wash the decanter, lid and removable black filter basket in a mixture of mild detergent and water. Rinse each thoroughly. (Please refer to the diagram of parts listed below.)
2. Replace the black filter basket and close. Then, follow steps #4 through #6 in the "BREWING COFFEE" section. This will clean the inside of your coffeemaker.
3. When the brew cycle is finished, turn your coffeemaker off. Discard the water in the decanter and rinse the decanter, lid and black basket.

Your coffeemaker is now ready to use.

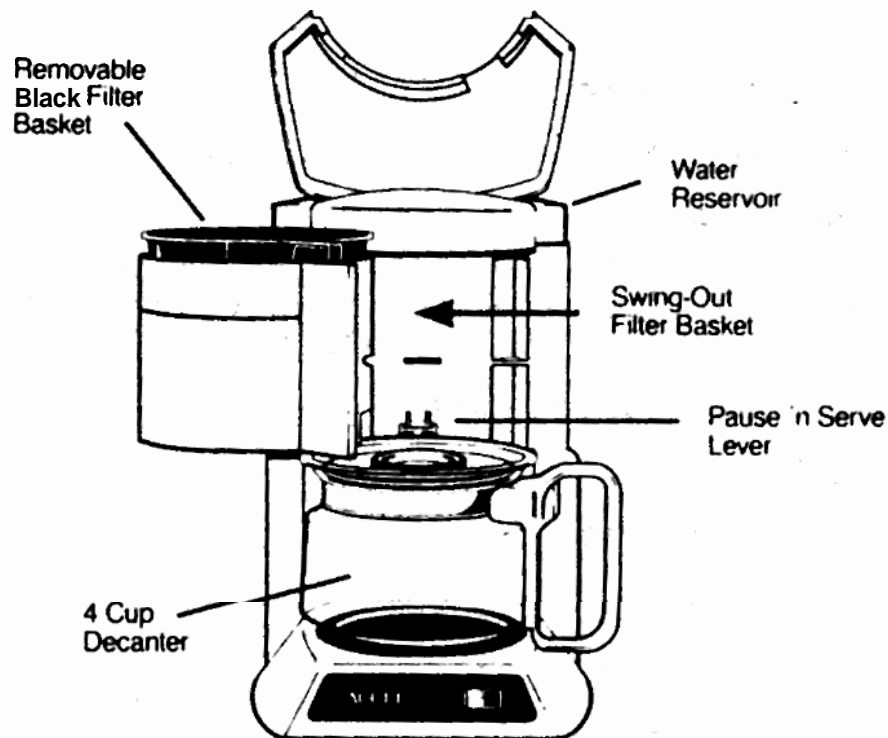

## SUGGESTED COFFEE MEASUREMENT CHART

For best results, use level tablespoons (tbls.) or level coffee scoops of drip grind or grind recommended for automatic drip coffeemakers.

<b>TO BREW:</b>	<b>USE THIS MUCH GROUND COFFEE:</b>
4 cups	4 tbls. or 2 scoops
3 cups	3 tbls. or 1-1/2 scoops
2 cups	2 tbls. or 1 scoop
1 cup	2 tbls. or 1 scoop

'Use more or less coffee to suit your taste.  
2 level tablespoons = 1 level coffee scoop.

## BREWING COFFEE

1. Open the swing-out basket to your left. Insert one 4cup Mr. Coffee brand paper filter into the black inner filter basket.
2. Add desired amount of coffee and shake slightly to level coffee. See SUGGESTED COFFEE MEASUREMENT CHART found above.
3. Be sure the paper filter is properly centered before closing the swing-out basket.
4. Fill the decanter with tap water to desired capacity as marked on the side of the decanter. (1 cup equals 5 ounces.) To brew 4 cups of coffee, fill the decanter to the bottom of the silver band.
5. Pour water into the water reservoir. For easy and accurate filling, cup markings can also be found inside the reservoir. Place the empty decanter onto the warmer plate.
6. Plug the cord into the electrical outlet and turn the on/off switch ON. When coffee stops flowing, the brewing cycle is complete.
7. Remove the black filter basket to discard the used grounds and filter. Rinse the filter basket and replace.

Note: The warmer plate will keep your coffee piping hot until you turn your coffeemaker OFF.

8. To make another pot of coffee, repeat steps #1 through #7.
9. Be sure to turn the on/off switch OFF when the decanter is empty and you are no longer using your co-maker. Unplug the power cord when not in use.

## ***Automatic Pause 'n Serve***

For your convenience, our Pause 'n Serve feature allows you up to 30 SECONDS to sneak a cup while the coffee is still brewing.

**TO PREVENT INJURY FROM HOT OVERFLOW, REPLACE DECANTER WITHIN 30 SECONDS IF REMOVED DURING BREWING.**

## ***Cleaning Instructions***

Your coffeemaker must be cleaned when you begin to notice excessive steaming or the **brewing** time increases considerably. This condition is caused by a buildup of lime and mineral deposits from your water. If the pumping action stops before all the water has been pumped out of the machine, then the appliance requires cleaning.

The frequency of cleaning depends on the hardness of water used. The following table gives you the suggested cleaning intervals.

---

<b>SUGGESTED CLEANING INTERVAL</b>	
<b>Type of Water</b>	<b>Cleaning Frequency</b>
Soft water	every 80 brew cycles
Hard water	every 40 brew cycles

---

Your coffeemaker may be cleaned by using MR. COFFEE CLEANER or vinegar. For best results use MR. COFFEE CLEANER. It is superior to vinegar and has no unpleasant odor.

### **Using Mr. Coffee Cleaner**

(Read caution statement on side panel of Mr. Coffee Cleaner box before use)

1. Fill the decanter to the bottom of the silver band with warm water.
2. Empty contents of one packet of MR. COFFEE CLEANER into the decanter and stir until the cleaner is completely dissolved. This will make a clear blue solution.
3. Pour the blue solution into the coffeemaker.
4. Place the empty decanter on the warmer plate. The swing-out basket with the black filter basket in place should be closed.
5. Turn your coffeemaker on.
6. When the blue solution has stopped flowing, turn your coffeemaker off.
7. Discard the blue solution and thoroughly rinse the decanter, lid and black basket.



8. **Repeat steps #1 - #7** with clean water only (no blue solution). Continue to rinse out the unit until you see no remaining traces of the blue solution.
9. If **a** normal brewing flow rate is not achieved, repeat the cleaning steps #1 -#8.

#### **USING VINEGAR:**

1. Fill the decanter to the bottom of the silver band with undiluted white household vinegar. Pour the vinegar into your coffeemaker.
2. Place **a** 4-cup filter into the brew funnel and close the swing-out basket.
3. Place the empty decanter on the warmer plate and turn the coffeemaker on. Watch the cup markings as the vinegar flows into the decanter. When three cups have flowed through, turn the coffeemaker off and let stand for 1/2 hour.
4. After 1/2 hour, pour the vinegar back into the coffeemaker.
5. Place the empty decanter on the warmer plate. Turn the coffeemaker on and let all of the vinegar flow through.
6. Discard the vinegar and the paper filter.
7. **To flush out all traces of vinegar**, pour a decanter full of tap water into the coffeemaker and allow it all to cycle through.
8. Discard the water and turn the coffeemaker off. Repeat steps #7 and #8.

## ***Decanter Cleaning***

Hard water can leave a whitish mineral deposit inside the decanter. Coffee and tea discolor these deposits, sometimes leaving a brownish stain inside the decanter. To remove these stains, follow these simple steps:

1. Use a hot white vinegar solution and let it soak for about 20 minutes and then discard.
2. Wash and rinse the decanter thoroughly using a soft cloth. Do not use harsh abrasive cleaners. These will cause scratches which can lead to breakage.

## ***If Service Is Required***

If service is required for your Mr. Coffee machine, please consult the listing of authorized service centers packed with your brewer.

**Please do not return this appliance to your store.**

For additional information regarding service, please call our Toll-Free Number: 1-800-321-0370.

Ohio residents call: 1-800-362-7604.

Our office hours are 8:30 a.m. to 5:00 p.m. Eastern Time Zone Monday through Friday.

Please include the model number (PR5 or PR6), date of purchase, and description of problem in all communications.

## ***Limited Warranty***

Mr. Coffee, inc. warrants to the consumer that Mr. Coffee's® Accel 4 Cup Coffeemaker, Series PR (except for cord set and glass parts) is free from manufacturer defects in material or workmanship for a period of one year from the date of original purchase when used in compliance with directions as outlined in the manufacturer instructions, which will constitute reasonable and necessary maintenance by the consumer.

In case of manufacturer defects in materials or workmanship, Mr. Coffee, inc. agrees to repair (remedy) a defective coffeemaker without charge.

To be covered under this warranty, repairs must be made by the *authorized* Mr. Coffee Service Center most convenient to the consumer. A list of *authorized* Mr. Coffee Service Centers is enclosed. As the consumer, you assume all cost incurred in transporting your Mr. Coffee coffeemaker to the Authorized Mr. Coffee Service Center.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Any implied warranty is limited in duration to the one year provided in this, the only, expressed warranty. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

No responsibility is assumed for incidental or consequential damages; nor damage due to misuse or the use of any unauthorized attachment; nor assumption of responsibility for damage by use of an unspecified electrical circuit. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Warranty is void:

- If unit is subjected to service by anyone other than a service center appearing on the enclosed Authorized Mr. Coffee Service Center list.

# Mr. Coffee Predicts Major Warming Trend.



Already known as a trend-setter in the industry, Mr. Coffee presents yet another hot idea: mug and decanter warmers for the home or

office. Both feature a unique on/off mechanism that goes on when a mug or decanter is in place and goes off when removed. Both shut off automatically when left unattended – after thirty minutes for the mug warmer and two hours for the decanter warmer. And both keep coffee at an ideal temperature – putting a delicious, hot cup of coffee within easy reach of people across America.

Available where Mr. Coffee products are sold or call 1-800-321-0370.

In Ohio call 1-800-362-7604.

## MR. COFFEE®

Mr. Coffee, inc.

24700 Miles Road, Bedford Heights, Ohio 44146-1399