

# magimix®




## NESPRESSO®



### M100 Automatic Instruction Manual

**!** Please read this Instruction Manual and the safety instructions before operating the appliance!

ref.: 460157

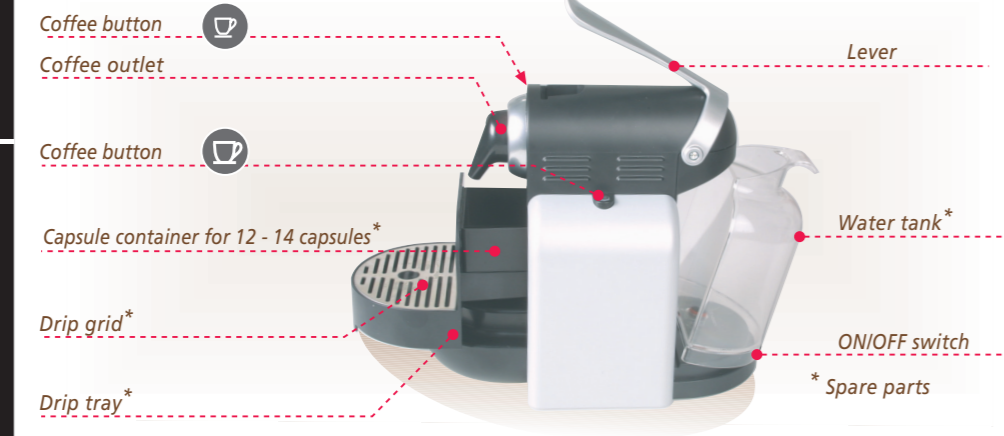

### 1 First use or after a longer period of non-use

Remove plastic film → Fill water tank → Place a container → Plug into mains + switch ON

Heating up → Ready → Rinse: let water run through 6x → No water (see: 8b)

### 2 Daily: before the 1st coffee

Fill water tank with fresh water → Switch ON → Heating up → Ready

### 3 Espresso or Lungo

#### Preparation

Preheat cup: 1 cup of water → Insert capsule

Flow speed depends on coffee variety → Eject capsule (drops into capsule container)

#### Programming the fill up level

Insert capsule → Press and hold button for at least 3 seconds, release at desired level

#### Resetting the programmed large and small coffee flows to factory settings

Switch OFF → Press and hold big cup button for 3 secs. → Switch ON

### 4 Daily: After the last coffee

Switch off → Empty capsule container + drip tray → Rinse and empty water tank

### 5 Clean: When necessary

Damped cloth, cleaning agent mild

~~abrasive~~ ~~solvent container~~ ~~dishwasher~~

### 6 Empty system: After long period of non-use, for frost protection and after repair.

Switch off and remove water tank → Press small cup button & switch on simultaneously → Buttons blink alternatively

1. Open 2. push and hold for 3 secs. → Close → Switch off (machine blocks for 10 min and is ready to be transported)

### 7 Descaling

**!** Carefully read safety instructions on decalcifier package. Decalcifier is aggressive to surface of casing.

Water hardness		Descal after
fH	dH	
36	20	300
18	10	600
0	0	1200

**Preparation**  
1. Remove capsule, 2. Empty capsule container + drip tray, 3. Rinse machine, see 1

**Descaling**  
Fill with Nespresso descaler and 0.5 l water → Place a recipient → 1. Lift lever, 2. insert filter, 3. close lever 1.

**Rinse**  
Remove filter → Empty, rinse and fill water tank with fresh water → Rinse machine, see 1

**Exit:** press both buttons simultaneously for 3 secs.

### 8 Troubleshooting

**a** no light → Check mains: plug, voltage, fuse. In case of problems call Nespresso Club

**b** No coffee, no water → Water tank empty → fill water tank

**c** Coffee not hot enough → Preheat cup, descale if necessary

**d** Capsule area leaking (water in drip tray) → Position capsule correctly. If leakage: call Nespresso Club

**e** Irregular interval blinking → Send machine to repair or call Nespresso Club

#### Specifications

- 220 - 240 V, 50 Hz, max. 1260 W
- max. 19 bar
- ~ 3 kg
- 1 l
- 5°C ... 45°C
- 16.6 cm | 25.2 cm | 29.1 cm

#### Optional Accessory

Nespresso descaling kit

### Safety precautions

Keep this instruction manual

This appliance may become a safety hazard if these instructions and safety precautions are ignored.

**SOS** Emergency: Immediately remove plug from power socket.

- Always close lever, never lift during operation. Do not put fingers into capsule compartment and capsule shaft, danger of injury. Do not use appliance without drip tray and drip grid. Keep appliance/cable out of reach of children.
- Children may never use the appliance without close adult supervision.
- Before cleaning/care, unplug the appliance and let it cool down. Never immerse either the whole machine, power cord or plug, in water or any other fluids.
- Do not place power cord on or near hot parts or sharp edges etc. Never touch the cable with wet hands. If damaged, do not use the appliance. In order to avoid danger, all repairs to the power cord, must only be carried out by the Nespresso's authorised service agent.
- Descaling: 7c) Do not lift lever during descaling process. 7d) Rinse the water tank and clean the machine to avoid any residual descaling agent.
- Check that the voltage quoted on the rating plate is the same as your voltage. Connect the appliance only to power sockets with protective earth. The use of incorrect connection voids warranty.
- Do not open appliance and do not put anything into openings. All operations other than normal use, cleaning and care must be performed by Nespresso Club.
- Packaging is made of recyclable materials.
- Unplug the machine and cut off the power cord near housing. Dispose of machine and cable at your public disposal depot, or contact Customer Services for further assistance.

#### FOR UK AND REPUBLIC OF IRELAND ONLY

**WARNING:** Always replace the fuse cover of the fitted plug, never use the plug with the fuse cover omitted. If a replacement fuse cover is required, ensure it is the same as the one visible on the pin face of the plug (i.e. RED or ORANGE).

Fuse covers are available from: BBS Ltd  
Po Box 110  
Farnham Surrey GU104XL  
Phone : 01252 727755

Use a 13 A fuse approved by ASTA to BS1362, marked thus

**WARNING:** a plug with a bared flexible cord is hazardous if engaged in a live socket. If the fitted plug has been cut from the power supply cord, it should be destroyed and replaced with a three pin plug in accordance with the following code: BLUE : neutral BROWN : live GREEN/YELLOW : earth

The wire which is coloured BLUE must be connected to the terminal in the plug which is marked with the letter "N" or coloured BLUE or BLACK.

The wire which is coloured BROWN must be connected to the terminal in the plug which is marked with the letter "L" or coloured BROWN or RED which is connected to the fuse.

The wire which is coloured GREEN/YELLOW should be connected to the terminal marked with the letter "E", or by the earth symbol or coloured GREEN or GREEN/YELLOW.

⏏ earth symbol