

 


# BREAKFAST MAKER

## INSTRUCTION MANUAL



**Model: BM-1107**

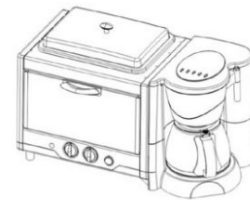

**Model: BM-1119**

## IMPORTANT SAFEGUARDS

1. Read all instructions carefully.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plugs or oven in water.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner. Contact the manufacturer.
7. The use of accessory attachments not recommended by the manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Use extreme caution when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then connect cord to wall outlet. To disconnect, turn all controls to OFF position then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. Before plugging the appliance into the main supply, make sure the voltage corresponds to that indicated on the nameplate.
15. Place the appliance on a dry, flat surface.
16. Oversized foods or metal utensils must not be inserted in the toaster oven, as they may create fire or the risk of electrical shock.
17. A fire may occur if the toaster oven is in operation while covered or touching flammable material, including curtains, draperies, walls and the like. Do not store any item on top of the appliance when in operation.

 
18. Do not clean with metal scouring pads. Pieces breaking off the pad and touching electrical parts could present a risk of electrical shock.
19. Exercise extreme caution when using containers constructed of other than metal or glass.
20. Do not store any of the following materials in the oven: paper, cardboard, plastic, etc.
21. A short power cord (or detachable power cord) is provided to reduce the risk of becoming entangled or tripping.
22. This appliance is equipped with a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
23. If an extension cord is to be used:
  - Ensure the electrical rating of the extension cord meets the requirements of the unit's rating label.
  - The extension cord is grounded
  - Ensure the extension cord is not draped over the counter top or tabletop where it can be pulled on or tripped over.
24. Do not cover the crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.
25. To reduce the risk of fire, do not place any heating or cooking appliances beneath the Breakfast Maker.
26. To reduce the risk of fire, do not store anything directly on top of the appliance surface when in operation.
27. Do not immerse the appliance in water or any liquid.
28. Use only clean water when filling the water tank.
29. Do not touch the hot plate while the Breakfast Maker is in operation or immediately after switching off, as it will be very hot.
30. After using the Breakfast Maker a number of times, clean the filter cone, reusable filter, glass carafe and water tank thoroughly with warm water and non-abrasive detergent.

## SAVE THESE INSTRUCTIONS

**BM-1107**

**PART IDENTIFICATION**

**3-IN-1 Breakfast Machine:**  
Coffee Maker, Toaster Oven and Frying Pan

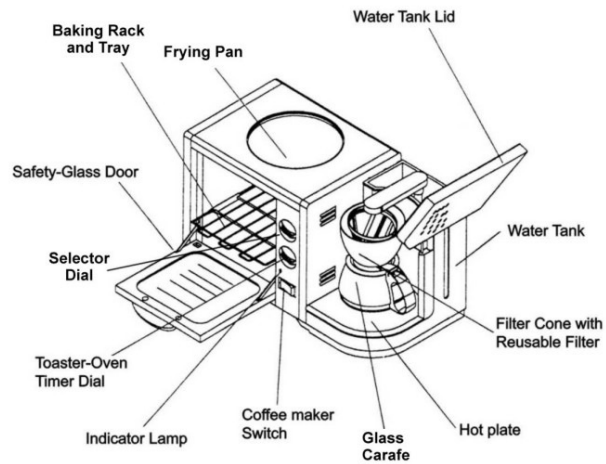


3

**BM-1119**

 **PART IDENTIFICATION**

**4-IN-1 Breakfast Machine:**  
Coffee Maker, Toaster Oven, Frying Pan  
and Steaming Tray

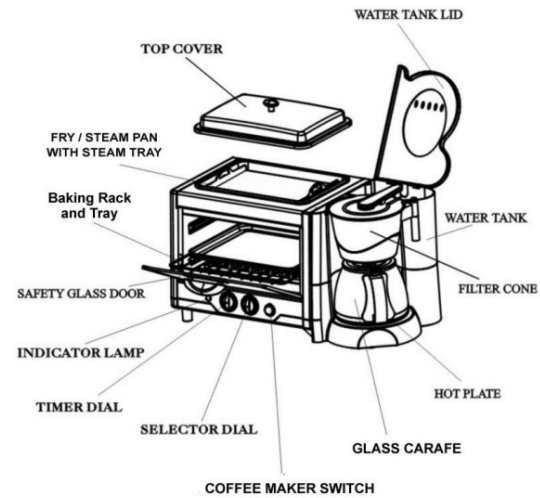

4

## OPERATING INSTRUCTIONS

### COFFEE MAKER

**NOTE:** Before initial use, clean glass carafe, filter cone and reusable filter thoroughly with lukewarm water and mild detergent. Clean water tank by wiping the interior with clean cloth. Then fill 1 ~2 cups of clean water and with the glass carafe in place, turn on the Coffee switch and allow water to cycle through. Discard water.

- Open the water tank lid and fill with clean water to the required level.
- Add ground coffee or tea into the reusable filter.
- Place the reusable filter into filter cone and insert cone in place.
- Place coffee carafe on the hot plate.
- Switch on the coffee maker switch, the indicator light should light up.

#### Note:

- **To close the filter cone, swing the cone clockwise, lift up a little and gently push inward. This will lock the cone in place. To open, lift up and pull counter-clockwise.**
- **To keep coffee/ tea warm, keep the glass carafe on the hot plate.**
- **Scalding may occur if the lid is removed during brewing process.**
- **If ground coffee or tea leaves are to be added during operation, first switch off power and switch back on after adding.**
- **If there is no water in the water tank, switch off power before adding water.**

### FUNCTION SELECTOR

**OFF** – Oven and Frying Pan/Steam Tray switched off

**UP** – operates only the upper element (Frying Pan / Steam Tray)

**DOWN** – operates the lower element (toaster oven)

**COMBO** – operates both upper and lower elements

### TOASTER OVEN

- Turn Selector Dial to DOWN position and turn Timer Dial to desired cooking time (maximum 15 minutes).
- It is suggested to preheat the toaster oven for 2 minutes, especially when using the baking tray.
- When toasting, place food directly on the Baking Rack.
- Keep door closed while oven is in use, to prevent heat loss.
- The oven may be used to defrost frozen food. If possible, freeze food in smaller pieces wrapped in aluminum foil. This will ensure uniform defrosting. Defrost time depends on the size and amount of food.

### FRYING PAN

- Turn Selector Dial to UP position and turn Timer Dial to desired cooking time (maximum 15 minutes).
- It is suggested to preheat the frying pan for 2 minutes.

### STEAM TRAY (BM-1119 only)

- Place the Steam Rack and add water into the upper tray.
- Turn the Selector Dial to UP position and turn Timer Dial to desired cooking time (maximum 15 minutes).
- Cover tray and wait for water to boil.
- Add your food, cover and steam.

### COMBO

- To use both the toaster oven and top cooking element, turn Selector Dial to COMBO position and turn Timer Dial to desired cooking time.

**Note:**

 
- Once the cooking time has elapsed, the unit will emit an audible signal and the heating will stop.
- Turning the Timer Dial counter clock-wise to the "0" position or turning the Selector Dial to OFF will interrupt the cooking process.
- Turn both dials to off position when done.

**CLEANING**

- Turn all switches to OFF position
- Unplug the appliance from main power source
- Remove coffee pot, filter and filter cone clean with lukewarm water
- Remove baking rack, baking tray, frying pan/steam tray – clean with lukewarm water with mild detergent, or in a dishwasher
- The crumb collecting tray can be removed for cleaning
- Use a damp cloth to clean the outer surfaces
- Use a dry cloth to clean the interior
- Never use abrasive detergents or products that cause scratching
- Take special care not to touch the resistances when cleaning the inside of the oven.

**Note: Do not clean immediately after use, as appliance is hot. Wait until the appliance has cooled down before cleaning.**

To remove backing rack and crumb collecting tray:

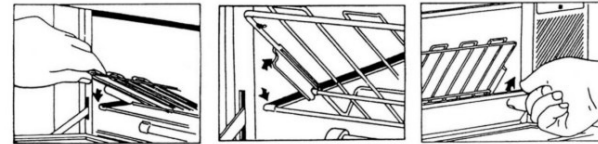

**SPECIFICATIONS**

		<b>BM-1107</b>	<b>BM-1119</b>
Input voltage		120V / 60Hz	120V / 60Hz
Power consumption		1150W	1550W
Coffee Maker	Power	650W	650W
	Capacity	4 cups	8 cups
Toaster Oven	Power	500W	900W
	Capacity	5 L	10 L
	Timer	15 min	15 min
Upper Pan	Power	300 W	900W
Unit dimension (L x W x H)		16 x 9.5 x 9.75 in.	19.75 x 11.5 x 11 in.
Net weight		7.5 lbs	15 lbs



## Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

**SUNPENTOWN INTERNATIONAL INC.**  
21415 Baker Parkway, City of Industry, CA 91789-5236  
Tel: 909-468-5288 • Fax: 909-468-5279  
service@sunpentown.com  
[www.sunpentown.com](http://www.sunpentown.com)