

ALL-IN-ONE LCD PROJECTOR



MODEL NO.:PRJSD188

USER'S MANUAL



TV AMPLIFIER

Read the manual carefully,before use the projector

Accessory and purchasable parts

In order to use the projector well ,when you open the carton of projector ,please check the full accessories

Accessory list:

Projector-----	1 unit
remote control-----	1 pcs
power cable-----	1 pcs
AV signal cable-----	1 pcs
HDMI signal cable-----	1 pcs
VGA signal cable-----	1 pcs
warranty card-----	1 pcs
manual-----	1 pcs
spare fuse-----	1 pcs
clear paper-----	1 pcs
reflecting mirror-----	1 unit

Purchasable accessory:

- 1, projector screen
- 2, projector ceiling mount
- 3, spare lamps

CONTENTS

Warning.....	1
Safety precautions	2
Caution	3
Installation of projector	4
Full setting	4
Standard setting(front projector)	5
Installation method	6
Interface instruction	7
Signal connection map	8
Remote control instruction.....	9
Panel keystroke instruction	10
open/close	11
Open operation	11
Close operation.....	11
Image trapezoid adjustment	12
Focus adjustment	12
Trapezoid adjustment	12
Image trapezoid adjustment	13
Menu setting method	13
1.Image menu adjustment	13
2.volume menu adjustment	14
3.function menu adjustment.....	14
4.system menu adjustment	14
5.PIP menu adjustment	14
6.preset menu adjustment	14
7.TV Search menu adjustment	14
DVD menu operation setting.....	15-19
HDMI or USB play setting	20
Maintenance	21-23
Trouble shooting.....	24-25
Specification	26
Accessory	27

WARNING

warning ₤

Please remember the model Number and series number if you need. And please check all accessories when you drop the carton package.

MODEL NUMBER ₤

SERIES NUMBER ₤


When you use this projector , please read this manual carefully

Warning ₤

Do not see the light from the lens ,it is high bright lamp. It will damage your eye .specially for children



Warning :Do not place the projector in the wet condition, avoid to getting an electric shock

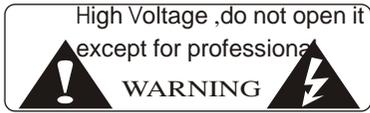

High Voltage ,do not open it ,except for professional

WARNING



It indicates there is a instruction for important operation



It indicates there is a dangerous voltage

Warning ₤

when close the projector ,the fans will continue to turn 90seconds. Before pull out the power cable, please be sure the fans stop to turn. Or it will damage the projector lamp.

About the remote control battery:

The remote control battery should be fixed correctly , Or it will damage the remote control. Make sure the remote control out of children reach.

Specification

LCD	Model	5" TFT
Input signal	video	Component video ,s-video, VGA , HDMI ,Ypbpr ,TV(optional), USB
	audio	Stereo
Output signal	audio	Stereo output ,coaxial output 5w*2 speaker and earphone
LCD	Native resolution contrast ratio	800*600(support 720P,1080P) 800:1
Lens	Aperture Focus	2.9 170mm
Lamp	Power Colour -temp life working time	150w 9300k 8000hours <10 hours
Image	Size Brightness keystone	60-100 inches 1800lumen ±15°
Power	Voltage power consumption	90v-110v/ 60HZ 200 W
Working condition	Temperature humidity	0°C ~+70°C 10% ~65%
Store condition	Tempe ration humidity	-20°C ~+70°C 10% ~90%
Remote control	Frequency	38KHz
Machine	Size weight	350×215×190mm 6Kg

(If all parameter changed, do not note again)

problem	Possible situation
3. No image	<ul style="list-style-type: none"> ◎ If choose the right signal mode ◎ If open the input signal devices ◎ If connect the signal cable ◎ If connect the signal cable well ◎ Under VGA mode ,setting the computer frequency must over 75KHz?
4. Projector turns off automatically	<ul style="list-style-type: none"> ◎ Dust cover the filter ◎ The filter long time no clean, please clean it by water ◎ The voltage is too low or big fluctuation
5. Lamp doesn't work	<ul style="list-style-type: none"> ◎ When you turn off the projector , the lamp too hot, please wait at least 5 minute ,then you can turn it on again. ◎ Input power are wrong ,please confirm your projector power specification 220V or 110V ◎ Lamp are broken or out of service life please replace the lamp and test it again

Warning;

when use this projector ,please read this manual carefully.

If wrong operation ,it will cause electric shock or fire.so when use and repair this projector ,please comply with the following points.

1,Read manual

Before use this projector ,please read full manual carefully and operate according to this manual instruction

2,Clear

when clear this projector ,please pull out the power cable. Use the wet cloth to clear,not the cleasner

3.Accessory

please use our recommended accessory. Or it will damage the projector.

4,Use environment

Donot place the projector in wet environment

5,installation and fix

please place this projector in stable table .

6, Ventilation

the ventilation in the projector are best for projector work stably. Donot let the dust wall up the filter. Or it will cause the projector high-temperature protected. So please use the water to clear the filter per month.

7, Power

please make sure the power same as your projector inquiry specification. (220 V or 110V)

8, Earthing wire

this projector has earthing wire .

It is three pin plug.

9,protect the power cable

Please confirm the power cable are perfect when connect the projector.

10,Thunder

when the thunder happen or long time no use , please pull the power cable out of projector.

11,Repairment

As the high voltage inside ,please donot open or try to repair the projector by yourself. . Please ask a professional technician to repair the projector.

12, Far away Heat device

please make sure this projector far away other heat device . It will damage the projector service life

About the installation

- In order to improve the projector service life, It should not place in a wet and ventilation condition.
- Donot put the projector under the sunshine directly.
- Projector working temperature: 0°C~+70°C。 Projector store temperature : -20°C~+70°C。
- Donot block the ventilation-window of projector
If the projector interior temperature are too hot , the machine will be shut off automatically.This is hot - protected system.
So please clean the filter of projector per month . It is very important.
Donot let the dust cover the filter.
- About Open and close the projector
 - when open the projector ,connect the power cable and press the "power" key on the panel .the projector will work ,but the lamp will be bright more and more .After 5 minutes, the lamp work normally
 - when close the projector , press the power key again . And then the lamp shut off. But the fans still work until 5minutes later. When close the projector ,donot pull out the power cable directly . After 5minutes, the projector will shut off automatically.


Warning:

Fans will adjust the temperature , It is controlled by system 。 when the projector work, the fans turn slowly or quickly, so the fans noise are different. But it is normal。 when the projector work ,donot pull out the pwer cable。 If the fans stop to work,it will cause the projector interior temperature very high, so it may damage the projector.

The projector operation is very simple . Just like to use TV. please refer to this chapter when you encounter a problem

Problem	Possible situation
1. No power	<ul style="list-style-type: none"> ◎ The projector donot connect the power cable ◎ Fuse broken ◎ Check the fuse broken on the backboard
2. Remote control cannot open or close the projector	<ul style="list-style-type: none"> ◎ If open the power key ◎ If there is no batteries in the remote control ◎ If have obstruction between remote control and projector ◎ If have strong ray on the projector ◎ This machine just turn off . You should wait 5minutes and open the machine again.

3. Use Screwdriver to remove the four screws as picture

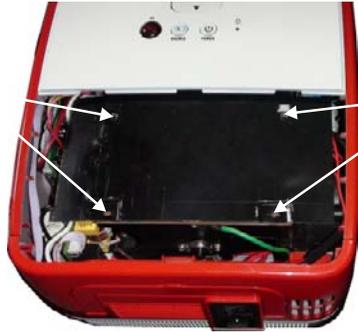


4. Use a small screwdriver to insert the lamp terminal to get the lamp out



- ★ Before replacing the lamp, make sure the lamp are cold.
- ★ Before open the lamp cover board, pull out the power cable
- ★ When replacing the lamp, donot drop some dirty goods inside the projector

PROJECTOR INSTALLATION


Please use the setup instruction below:

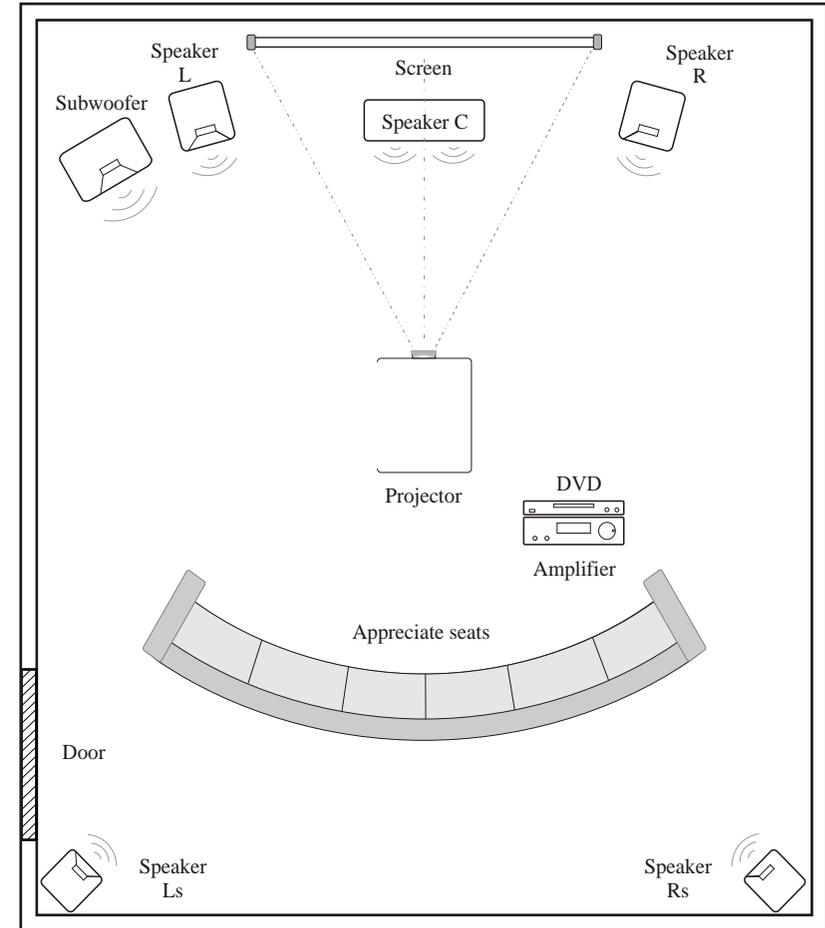

In order to get good image quality ,donot let the sunlight shine the screen directly .If you use the projector in the day time,

Standard setting (front projection)

Please refer to the following instruction ,adjust your picture size and distance, the projector must be put on a strong flat desk or suspended on the ceiling by mounts

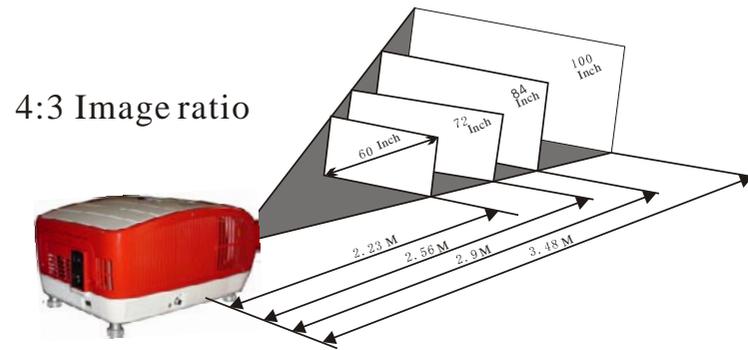

The data maybe have 3% error,due to the image size according to the distance between projector and screen . if the distance is less 2m or over 5m,the image would not be clear.

warning:


Please check the following picture to show the trapezoid adjustment

<p>Incorrect installation, the images left-right small.</p>	<p>Installed correctly, the image is rectangular.</p>	<p>Incorrect installation, the images right-left small.</p>

Replace the projector lamp

our projector lamp have 6months warranty ,But in different use environment after 6000hours ,the lamp brightness will reduce and the image will become dark. Therefore ,please replace the lamp according to the following steps:

- 1、 First inverse projector on the table and remove the 2screws as picture

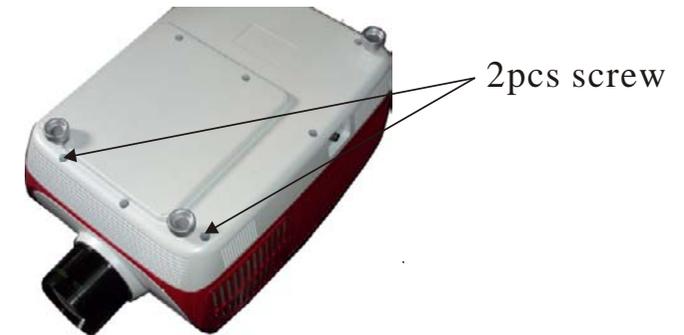

- 2、 Put the projector on the table,remove the 4pcs screws and the cover



When projector working ,the projector will be overheat
Now many projectors use fans to cold it .But our projector use
two filters to cold the projector .When use the projector,there
will be some dirt to cover the filter . So please clean the
filters per month.

Following step:

1.Remove the grille as picture




2.Clean the dust on the filter by water and dry the filter again.
And install the filte well



Installation method:

contact a proffessional service man to mount this projector to a ceiling
follow the instructions below for the corret projector positions:

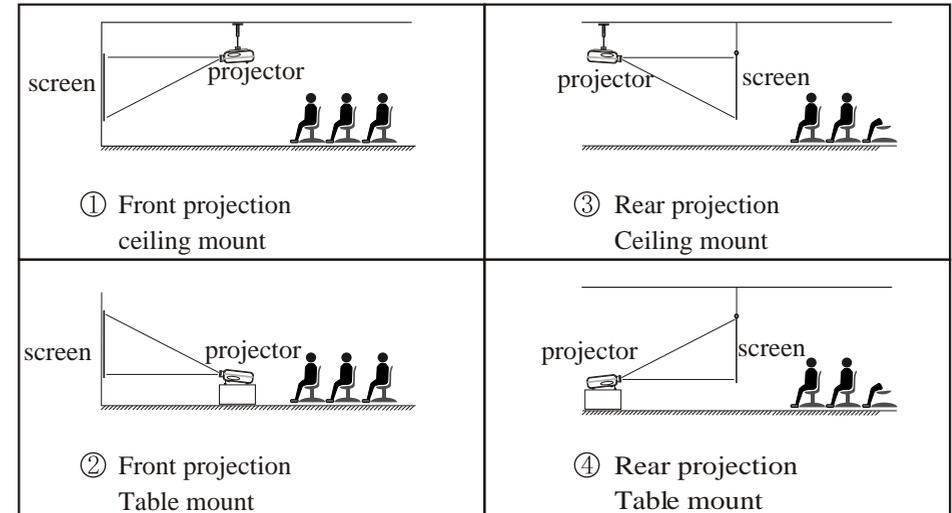


Warning:

- 1) This projector might damage beyond repair when it is incorrectly mounted on a ceiling or when its incorrectly installed on a surface or installed on a incorrect surface. It may also inflict damage to persons within close vicinity.
- 2)This projector can only be used in an environment with a temperature not exceeding the range of 0- 35 degree .The projector may malfunction if temperatures vary outside the normal operating range.
- 3) The sharpness of the screen might be interrupted when the projector is being used in a dusty,wet,moist or smoke filled environment. The projector might malfunction in a moist or wet environment.
- 4) Take care of sufficient ventilation around the projector.
Otherwise this projector might overheat and cause life threatening situations

Input port instruction

This projector can support HDMI signal ,component video signal,s-video VGA, and USB input ,TV signal ,the audio in and audio out function

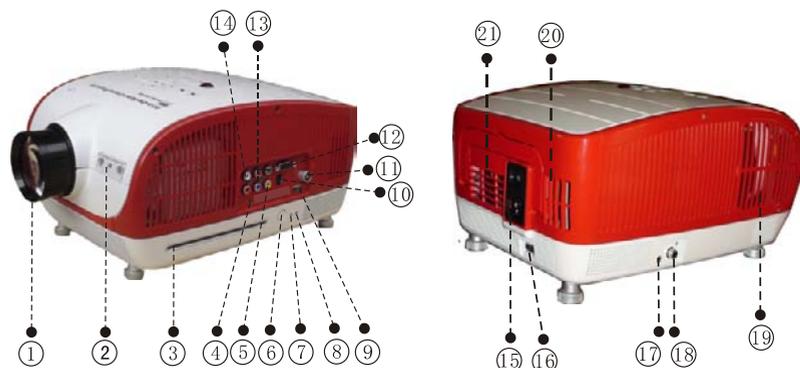

- | | |
|--|--|
| <p>1. Lens
Adjust the focus lens until the image is clear</p> <p>2. Panel brand
Logo</p> <p>3.DVD window
The DVD inside or outside</p> <p>4.Audio output
It can connect the amplifier</p> <p>5. Video input
Video signal input port</p> <p>6. Disc output key
Press this key can replace the disc</p> <p>7. DVD power indicator light
Choose the DVD channel,it is light</p> <p>8. Situation indicator light
On DVD mode,the light is blue ,if you press the HDMI switch key on the remote,the light is red</p> <p>9. USB
DVD channel,press the menu key,you can choose to play the video or USB</p> | <p>10. S-VIDEO input</p> <p>11. TV signal input</p> <p>12. VGA input
Connect PC equipment</p> <p>13. Component video input</p> <p>14.Audio input</p> <p>15. Power switch</p> <p>16.HDMI signal input</p> <p>17. Ear phone port</p> <p>18. DVD audio coaxial output</p> <p>19. Cold wind input port</p> <p>20、 21、 Hot wind output port</p> |
|--|--|

If you want to play the external HDMI signal or USB function, you must choose the DVD channel !

Play the external HDMI signal as following::


1. firstly open the projector power,the indicator light is flash, Then press the power key on the panel or remote control , the projector begin to work
2. when blue screen appear ,press the “source” key on panel or “TV/AV” Key on remote control,choose the DVD mode. You can see the image which play the DVD disc .If you press the “HDMI switch” key on the remote control ,it can play the external HDMI signal .The DVD or HDMI indicator light become red ,then you can enjoy your program.

Play the USB function as following:

1. firstly open the projector power,the indicator light is flash, Then press the power key on the panel or remote control , the projector begin to work
2. when blue screen appear ,press the “ source” key on panel or “TV/AV” Key on remote control,choose the DVD mode。 you can see the image which play the DVD disc .If you press the “ Menu” key on the remote control (please press the “mode switch” key on the remote control,change the Remote control to DVD mode) Then entre the DVD system , choose the “ system setup” ,then choose “ sources” . You will find the choice “Disc /USB” ,choose the USB and press “confirm” key on the remote control. You will play the USB Function.

Digital setup

When you choose the digital setup, the screen will display as follow:

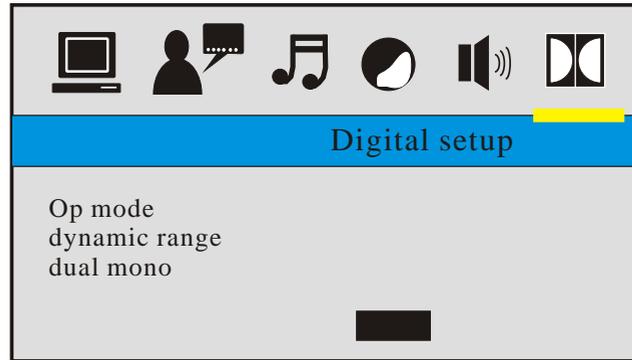

- A、Op mode can setup for line out or FR adjust
- B、Dynamic range can setup audio output range


Note: If you adjust the DVD menu wrong and cause problem .the projector cannot play the DVD disc. Please reset the menu . You can use the "factory reset" ,then it will work well

Image display reflected 90degree



If you use projector in cold day ,you can use the reflected mirror to install on the projector lens(as the above picture),you must adjust the focus lens until the projection image are clearest .

Connect main equipment

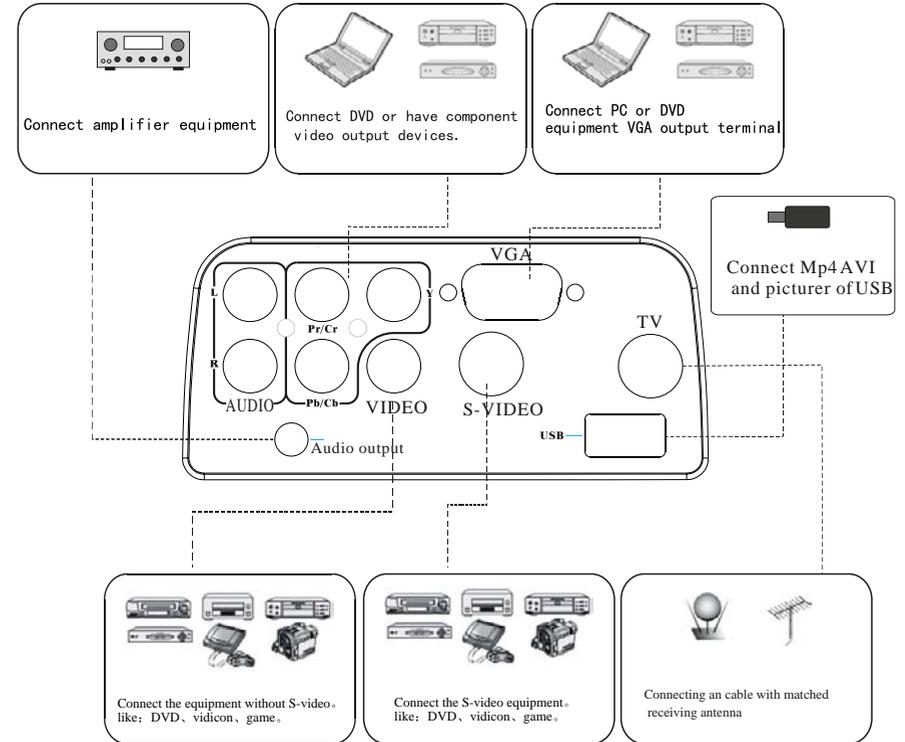


HDMI connect

Back of projector



HDMI port ,under DVD mode , press HDMI switch on the remote control, choose the external HDMI signal to play

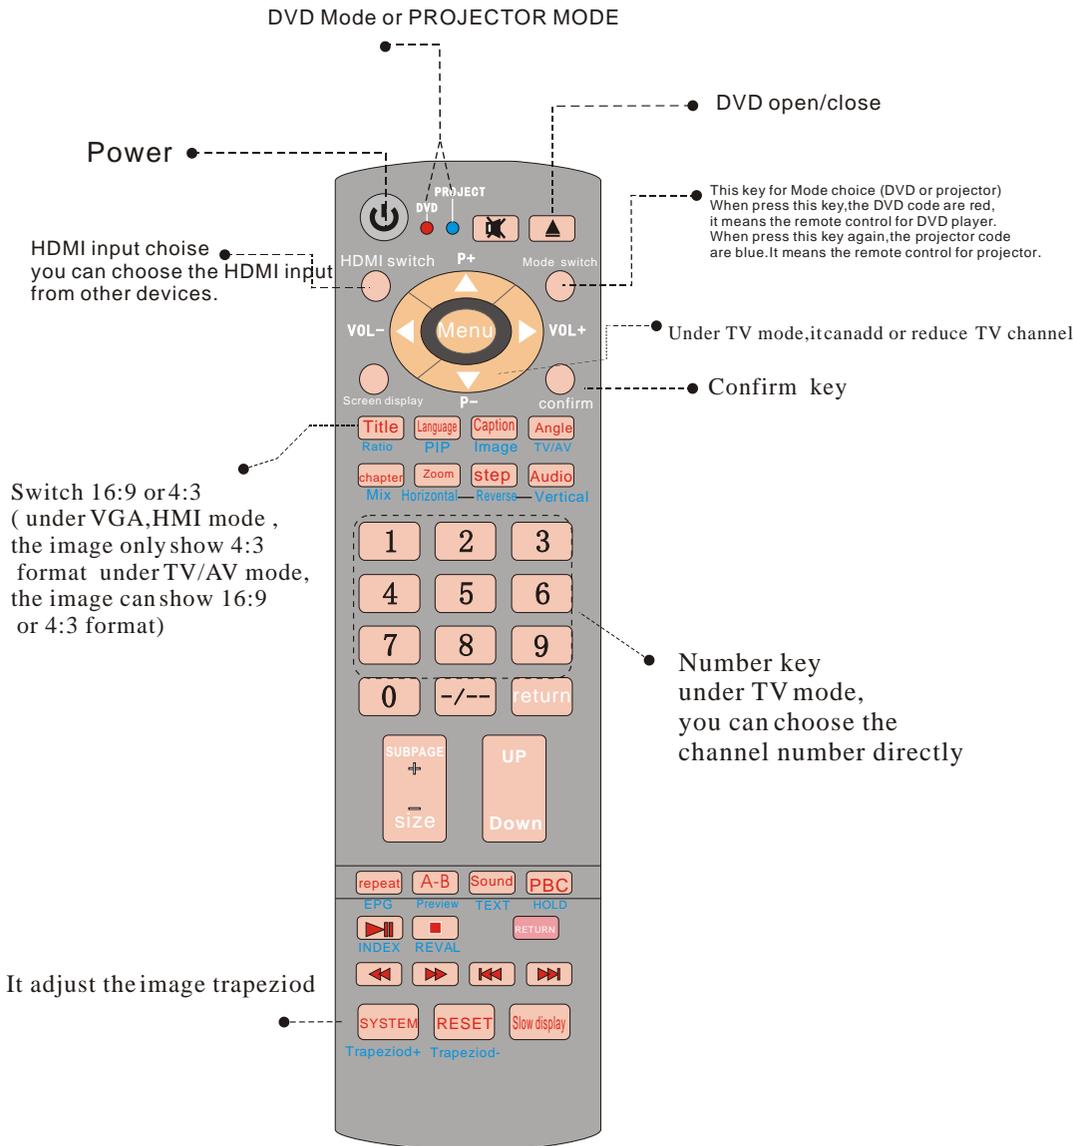

Important Note :

- 1, this remote control can control the DVD player (Built inside) and projector . So please use the “mode switch” key to choose DVD mode or projector mode.
- 2, Under DVD mode, all red key in the remote control can be used. Under Projector mode, all blue key can be used. All white key can used under two modes.
- 3, when press “mode switch” ,if the indicator light are red, it means the remote control can control the DVD menu ; if the indicator light are blue, it means the remote control can control the Projector menu.

Speaker setup


When you choose the speaker setup ,it will display as following:



- A、DOWNMIX set up the audio out for LT/RT, stereo analog rear ,5.1 speaker channel
- B、SUBWOOFER set up the subwoofer open or close
- C、Center delay set up the center channel delay time
- D、Rear delay set up the rear delay time
- E Front set up the speaker volume higher or lower


Audio setup:

When you press the audio setup key ,it will display as following :

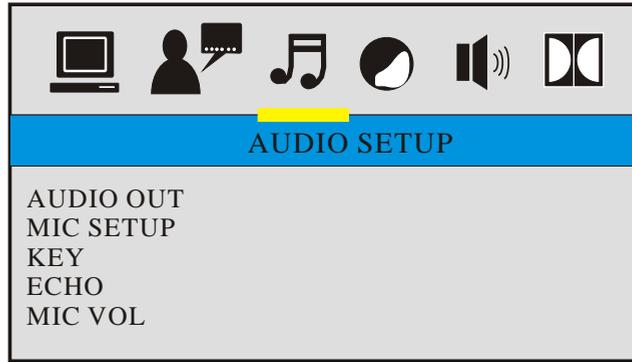


Video setup:

When you press the video setup key ,it will display as following :

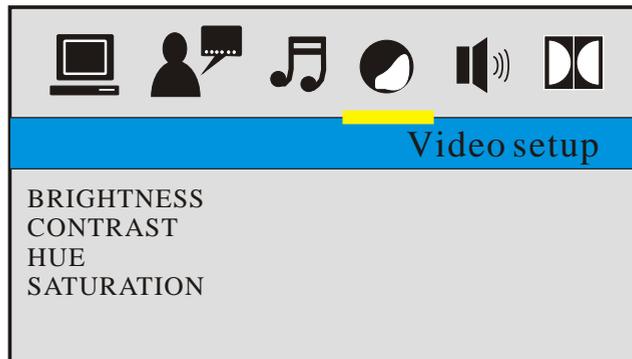





Panel keystroke sketch map

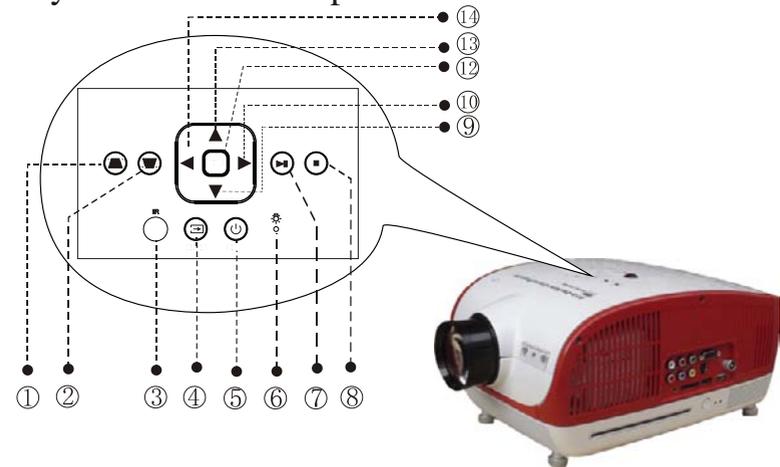

- ① ② Adjust the image trapeziod
- ③ Remote control reciver
- ④ Signal mode choice key ,for choose different signal ,as PC,component ATV,VIDEO,S-VIDEO,and DVD
- ⑤ POWER key ,for open /close projector if close it must wait for release hot,then turn off the switch back of the projector
- ⑥ On working the indicator is light , on stay situation ,the light is flash
- ⑦ On DVD mode,press this key, stop or begin the disc
- ⑧ On DVD mode ,press this key to stop to play. press it again to play again ,if press it twice , it keep stopping.
- ⑬ ⑨ Menu direction key ,can up/down or choose TV channel
- ⑭ ⑩ Menu direction Key ,can left/right or adjust the volume higher orlower

If the projector is the new one , please read “projector install” chapter, placed the projector, connect the powerwire and the signalwire, the operation as follow:

Open operation

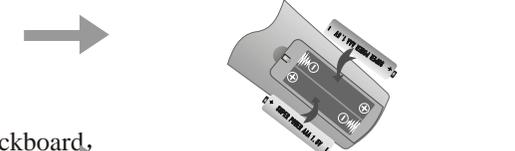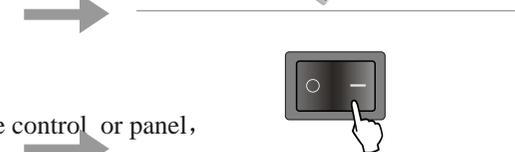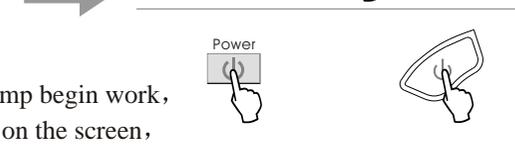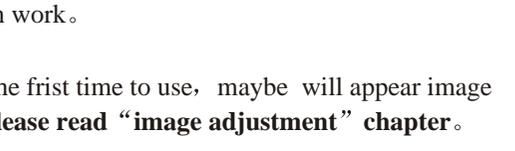1. Before use the remoter .
Put in two 7 size battery in it 
2. Open the power switch on the backboard, the power light begin to flash. 
3. press the power key on the remote control or panel, the indicator light turn light. 
4. After 2 second, the projector lamp begin work, began appear unclear white light on the screen, after 2 minute the projector begin work. 
5. For the new projector. When the frist time to use, maybe will appear image unclear or **trapezoid distortion** , please read “**image adjustment**” chapter.
6. After the image is clear, then you can watch program. during watching, you also can setup the system parameter, please read “menu setting” chapter.

Close operation

1. During use the projector, press “power” key, can let the projector switch to stay situation.
2. After inter into stay situation, the projector under auto protect、 auto release hot, the indicator light is flase situation, but here, the projector is under auto protect situation, not accept any order. if need to startup again , must wait for finished the release hot .

Language setup:

When you choose the language setup ,the screen will display as following




- A、 OSD LANGUAGE set up the menu words
- B、 AUDIO langset up the disc language
- C、 SUBTITLE LANG set up the disc display words
- D MENU LANG setup the disc menu display words

Note : B,C,D is relation with the disc that you play ,if can not set .your disc no this function

When you choose the DVD channel ,the DVD begin to work when the DVD interface appear in the screen, put the disc inside the projector , then you can enjoy your program.

Use remote control to operate the DVD menu ,please note the up/down /left/right ,then press OK key

When the mode code is DVD,the light is red ,press the menu key , it will display the picture as follow:

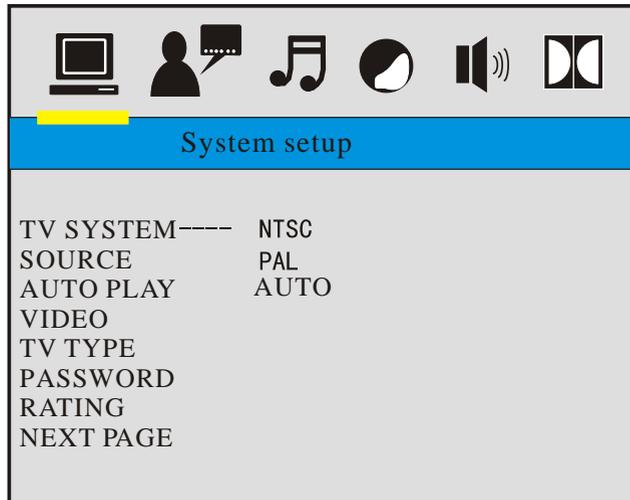

- A TV SYSTEM can choose 3 image standard ,the NTSC,PAL and AUTO if it is unnormal ,you can switch it
- B、 Source can choose play USB ,the DVD VCD Mp3 Mp4 and AVI format ,JPG picture,the SD is no function
- C、 AUTO PLAY can choose open or close
- D、 Video can choose some format video ,it is the 1080P HD signal output
- E、 TV type can choose 4:3 or 16:9,no need to adjust ,can adjust the projector directly
- F、 Password and rating use for some disc that have password or rating

The new projector, using it first time, commonly will appear image faintness and the the image is trapezoid, it is course that not adjust well of the lens focus and the trapezoid. please follow the step the correction:



Focus adjustment

- 1、 turn the lens into the projector, then turn it out slowly , at the same time, looking at the resolution point carefully, when the image is very clearly (take the middle area of the image),it is the best situation of the lens



Trapeziod correction




- 2、 adjust the trapeziod correction key-press or the key on the remote, untile the screen image become square. the trapezoid correction is ± 15 degree. if can not adjust all the trapezoid distortion need to minish the uprightness distance. if use table placed the projector can use the angle adjust key to change the projector project angle.

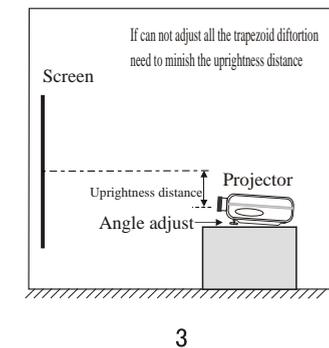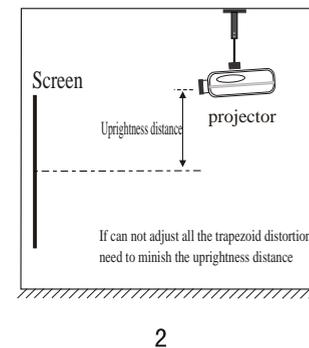

Menu setting

Menu setting method

- Using the projector, press “menu” key, the picture display on screen to adjust the menu (picture one);
- press “◀/▶” key, the menu enters into “image” > “volume” > “function” > “system” > “setting” > “image” adjust interface;
- Select the adjust interface, use “▲/▼” key select the item that needs to be adjusted (picture two);
- use “◀/▶” key to adjust the selected item parameter;
- Finished the selected item parameter, press the “menu” key again, exit the page;
- Repeat operate the 2~5 step, till finished all the parameter's setting, press “exit” key, exit the menu page, otherwise, the menu page will exit automatically after a period time.

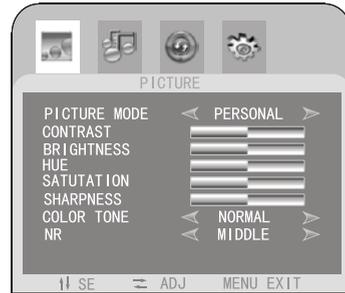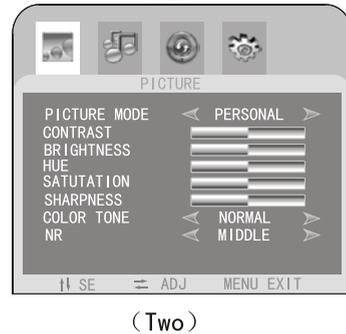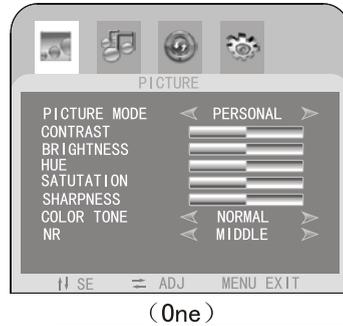

1. Image menu adjustment

- Press “menu” key, until display the above picture of the menu;
- Press “▲/▼” key, select the option that needs to be adjusted;
- Press “◀/▶” key, adjust parallel selected parameter.
- Press the “menu” key again, exit the menu page parameter adjustment station.

Note:

- “◀▶” It means it has a certain choice
- “▶” It means it has a subtitle choice
- “▬” It means it has continuous adjustable parameter




note: °

- i ° indicate fixed option 13 »
- i ° indicate submenu option »
- i ° indicate continue adjust


parameter, as adjust parameter will appear adjustment interface:

Menu setting

2. SOUND INTERFACE

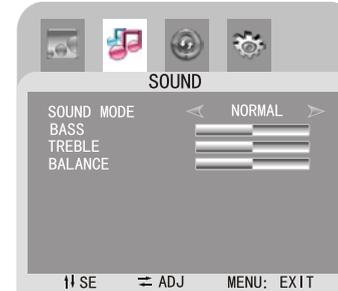

3. ADVANCE INTERFACE

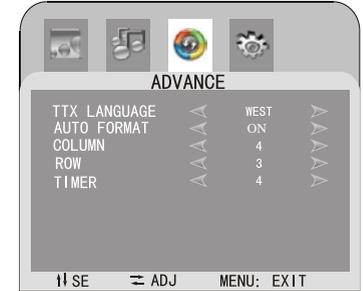

4. SYSTEM INTERFACE




5. PIP INTERFACE



(NOTE: only HDMI and Pc, support PIP function, when PIP function not close, the signal just switch between HDMI and PC)

6. GEOMETRY INTERFACE

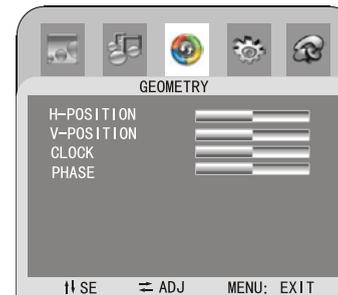

7. TV-CHANNEL INTERFACE

