

## INSTRUCTION MANUAL

### Split System Heat Pump

Wall-mounted type	Ceiling-mounted type	Recessed type
KHS2432	THS2432	XHS2432
KHS3632	THS3632	XHS3632
	THS4232	XHS4232



**Save This Instruction Manual**

---

# Features

These air conditioners are equipped with a cooling function. Details on this function are provided below; refer to these descriptions when using the air conditioner.

- **Microprocessor Controlled Operation**  
The interior compartment of the remote control unit contains several features to facilitate automatic operation, and is logically displayed for easy use.
- **Simple One-touch Wireless Remote Control**  
The remote control unit has several features to facilitate automatic operation.
- **24-hour clock with ON/OFF Program Timer**  
The wireless remote controller allows you to set up a wide variety of time based operations. Such functions include automatic on/off with time settings, same time on/off every day, on timer and off timer.
- **1-Hour OFF Timer**  
This timer turns off the unit one hour after the button is pressed.
- **Night Setback**  
Pressing the Night Setback button changes the setting of the room temperature thermostat so that you do not experience excessive cooling or heating when sleeping.
- **Automatic and 3-step Fan Speed**  
Auto/High/Medium/Low
- **Air Sweep Control**  
The flaps move up and down in the air outlet, directing air in a sweeping motion around the room, providing comfort in every corner.
- **Automatic Restart Function for Power Failure**  
Even when power failure occurs, preset programmed operation can be reactivated once power resumes.
- **Anti-Mold Filter**  
This unit is equipped with an anti-mold filter that inhibits the growth of mold and bacteria.

---

# Contents

	Page
Features.....	2
Product Information.....	3
Warning Symbols.....	3
Installation Location.....	4
Electrical Requirements.....	4
Safety Instructions.....	4
Names of Parts.....	5
Using the Remote Control Unit.....	11
Operation with the Remote Control Unit.....	13
1. Automatic Operation.....	13
2. Manual Operation.....	14
3. Adjusting the Fan Speed.....	15
4. Fan Only.....	16
5. Night Setback Mode.....	16
Special Remarks.....	18
Setting the Timer.....	18
Using the 1-Hour OFF Timer.....	20
Adjusting the Airflow Direction.....	21
Operation without the Remote Control Unit.....	21
Care and Cleaning.....	22
Troubleshooting.....	24
Tips for Energy Saving.....	24
Operating Range.....	24

---

## Product Information

The following information is useful when calling a service person. Please fill in the blanks below. The model and serial numbers are on the nameplate at the bottom of the cabinet.

Model No. \_\_\_\_\_ Serial No. \_\_\_\_\_

Date of purchase \_\_\_\_\_

Dealer's address \_\_\_\_\_

Phone number \_\_\_\_\_

---

## Warning Symbols

The following symbols are used in this manual to alert to potentially dangerous conditions to users and service personnel using this appliance:



**WARNING**

This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.



**CAUTION**

This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

# Installation Location

- We recommend that this air conditioner be installed properly by qualified installation technicians in accordance with the Installation Instructions provided with the unit.
- Before installation, check that the voltage of the electric supply in your home or office is the same as the voltage shown on the nameplate.



## WARNING

- Do not install this air conditioner where there are fumes or flammable gases, or in an extremely humid space such as a greenhouse.
- Do not install the air conditioner where excessively high heat-generating objects are placed.

## Avoid:

- To protect the air conditioner from heavy corrosion, avoid installing the outdoor unit where salty sea water can splash directly onto it or in sulphurous air near a spa.
- The unit may malfunction when the receiver in the indoor unit is exposed to the inverter lamp light.

# Electrical Requirements


1. All wiring must conform to the local electrical codes. Consult your dealer or a qualified electrician for details.
  2. Each unit must be properly grounded with a ground (or earth) wire or through the supply wiring.
  3. Wiring must be done by a qualified electrician.
- Power supply: 60 Hz, single-phase, 230/208 volts.



## CAUTION

To warm up the system, the power mains must be turned on at least five (5) hours before operation. Leave the power mains ON unless you will not be using this appliance for an extended period.

Power mains

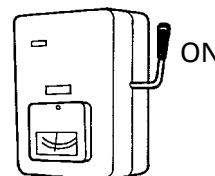

For ceiling-mounted and recessed-type indoor units, the flaps move for one minute when the power is supplied to the unit. This is not a malfunction.

# Safety Instructions

- Read this Instruction Manual carefully before using this air conditioner. If you still have any difficulties or problems, consult your dealer for help.
- This air conditioner is designed to give you comfortable room conditions. Use this only for its intended purpose as described in this Instruction Manual.



## WARNING

- Never touch the unit with wet hands.
- Never use or store gasoline or other flammable vapor or liquid near the air conditioner — it is very dangerous.
- This air conditioner has no ventilator for intaking fresh air from outdoors. You must open doors or windows frequently when you use gas or oil heating appliances in the same room, which consume a lot of oxygen from the air. Otherwise there is a risk of suffocation in extreme cases.




## CAUTION

- Do not turn the air conditioner on and off from the power mains switch. Use the ON/OFF operation button.
- Do not stick anything into the air outlet of the outdoor unit. This is dangerous because the fan is rotating at high speed.
- Do not let children play with the air conditioner.
- Do not cool the room too much if babies or invalids are present.


# Names of Parts

Each air conditioner shown below consists of an indoor unit and an outdoor unit. You can control the air conditioner with the remote control unit.


**Ceiling-mounted type**

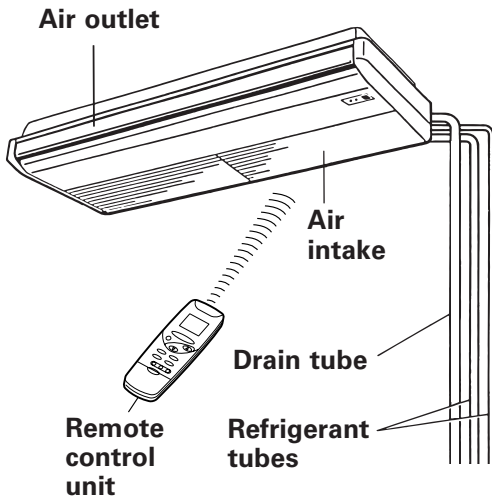

**Recessed type**

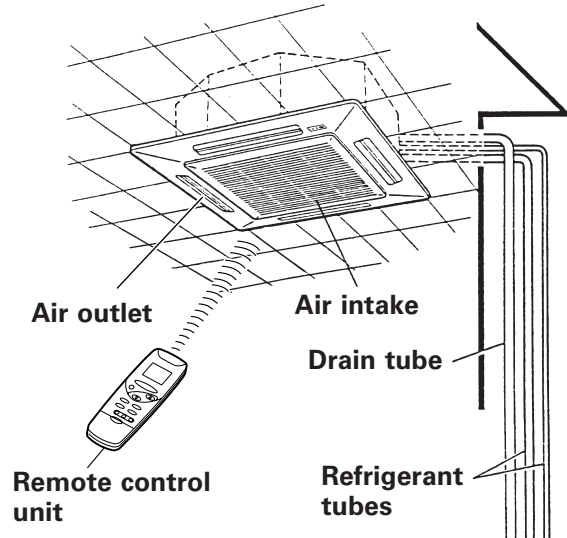

**Wall-mounted type**

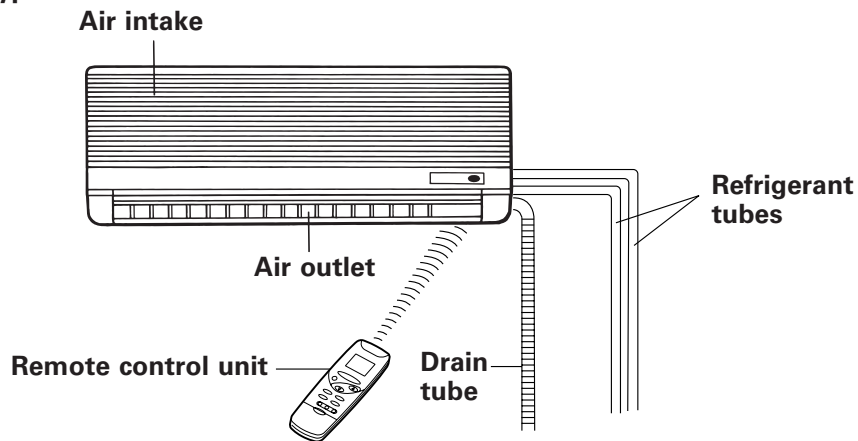

**NOTE**




This illustration is based on the external view of a standard model. Consequently, the shape may differ from that of the air conditioner which you have selected.

<b>Air intake</b>	The return air in the room is drawn into this section and passes through air filters which remove dust and foreign particles.
<b>Air outlet</b>	Conditioned air is returned to the room through the air outlet (ceiling and wall-mounted type) or four air outlets (Recessed type). The direction of airflow can be adjusted as desired using the remote control unit.
<b>Remote control unit</b>	The wireless remote control unit controls power ON/OFF, operation mode selection, temperature, fan speed, timer setting, and air sweeping.
<b>Refrigerant tubes</b>	The indoor and outdoor units are connected by copper tubes through which refrigerant gas flows.
<b>Drain tube</b>	Moisture in the room is condensed and drains off by means of this tube.
<b>Outdoor (condensing) unit</b>	The outdoor unit contains the compressor, fan motor, heat exchanger coil, and other electrical components.

# Unit Display and Operation Selector

Recessed type





Ceiling-mounted type

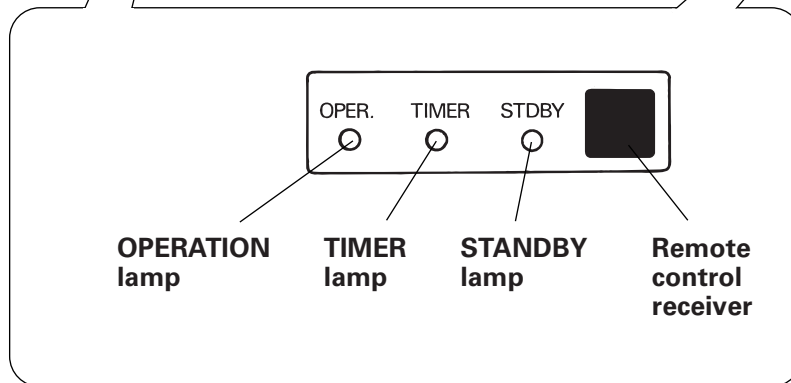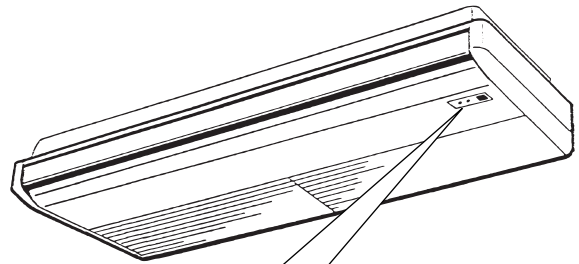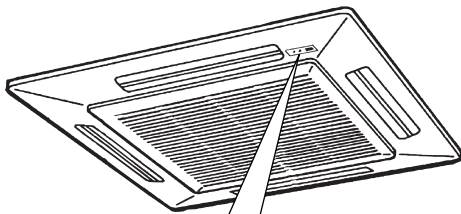

Recessed type


Ceiling-mounted type

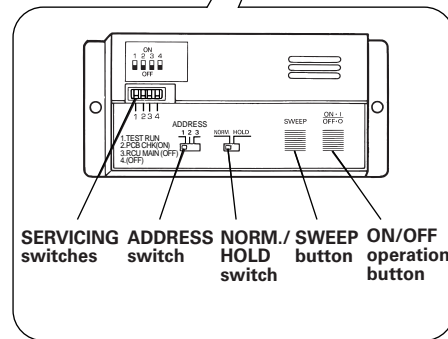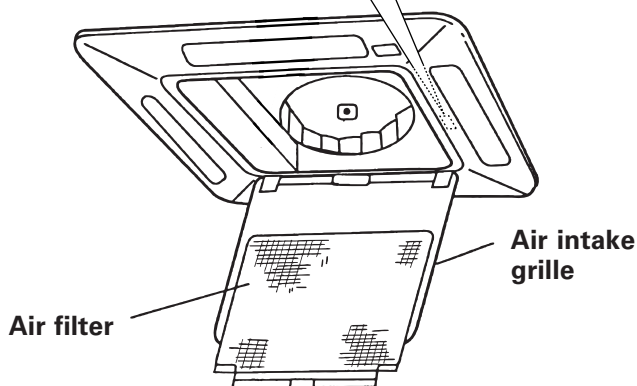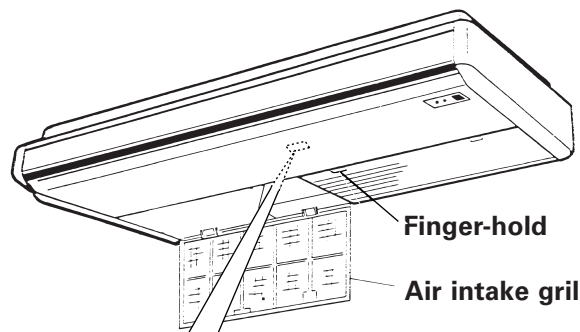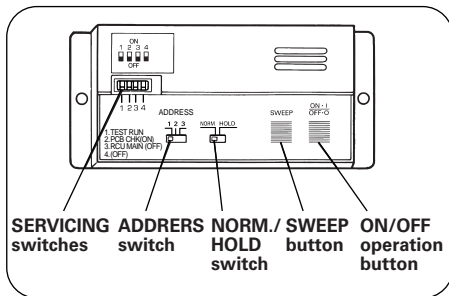

Operation selector




Operation selector
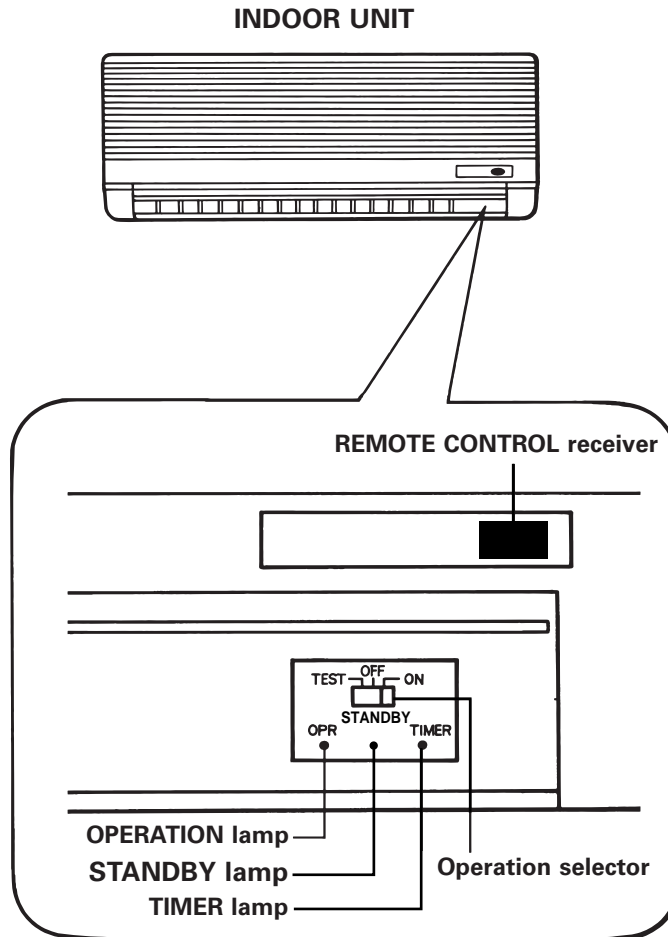
## Unit Display and Operation Selector (continued)



<b>REMOTE CONTROL receiver</b>	This section picks up infrared signals from the remote control unit (transmitter).
<b>Operation selector ON position</b>	This position is for operating the air conditioner with the wireless remote control unit. The selector should normally be set in this position.
<b>OFF position</b>	Switch the selector to the OFF position if you are not going to use the air conditioner for a few days or longer.  <b>The OFF position does not disconnect the power. Use the main power switch to turn off power completely.</b>
 <b>WARNING</b>	
<b>TEST position</b>	This position is used only when servicing the air conditioner.  <b>Do not set at the TEST position for normal operation.</b>
 <b>CAUTION</b>	
<b>OPERATION lamp</b>	This lamp lights when the system is in the continuous AUTO, HEAT, COOL or FAN mode.
<b>STANDBY lamp</b>	This lamp lights when the system is warming up for heating and when the system is defrosting. To keep a constant room temperature, the air conditioner continues to supply a gentle breeze when warming up or when the heating operation is paused by the thermostat.
<b>TIMER lamp</b>	This lamp lights when the system is being controlled by the timer.

# Remote Control Unit (Display)

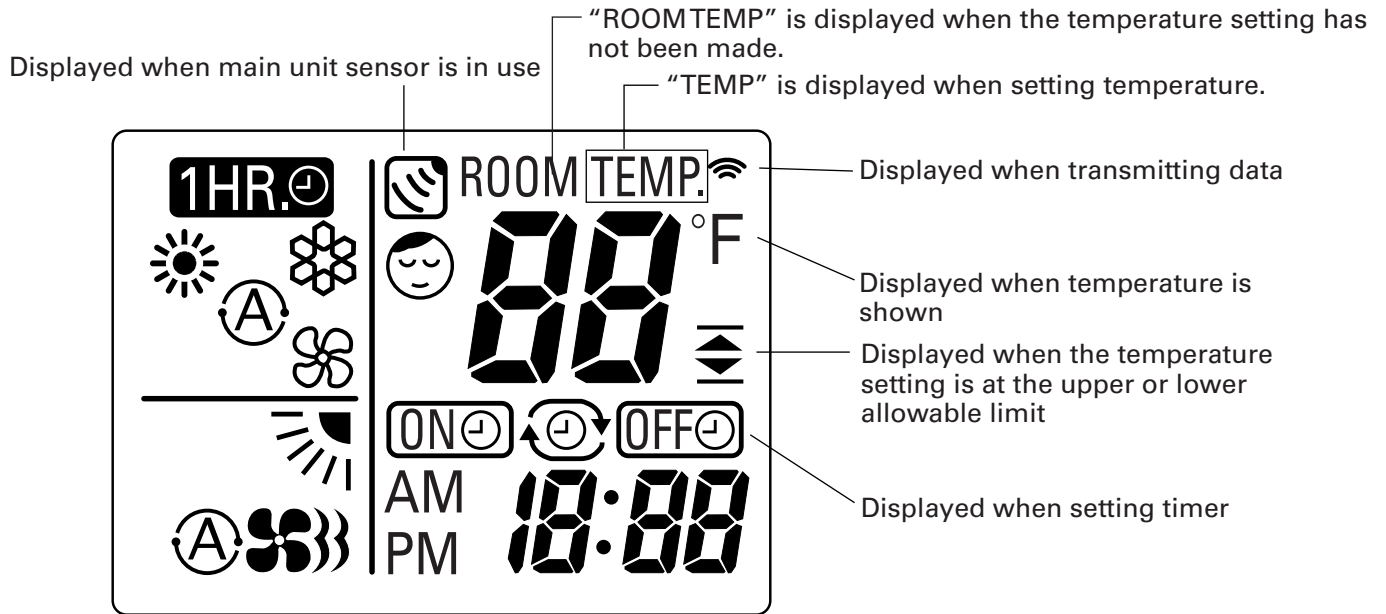

## Symbols

### (1) Operation mode

- AUTO.....
- COOLING.....
- HEATING.....
- FAN.....

### (2) Fan speed

- Automatic operation.....
- HIGH.....
- MEDIUM.....
- LOW.....

### (3) Set temperature

- 60 – 86 °F
- When set to 82 °F.....
- Current temperature indication.....

### (4) Timer

- 24-hour clock with ON/OFF Program Timer.....
- 24-hour ON Timer.....
- 24-hour OFF Timer.....
- 1-hour OFF Timer.....

### (5) NIGHT SETBACK.....



### (6) Confirmation of transmission.....




### (7) Sweep indication.....


 






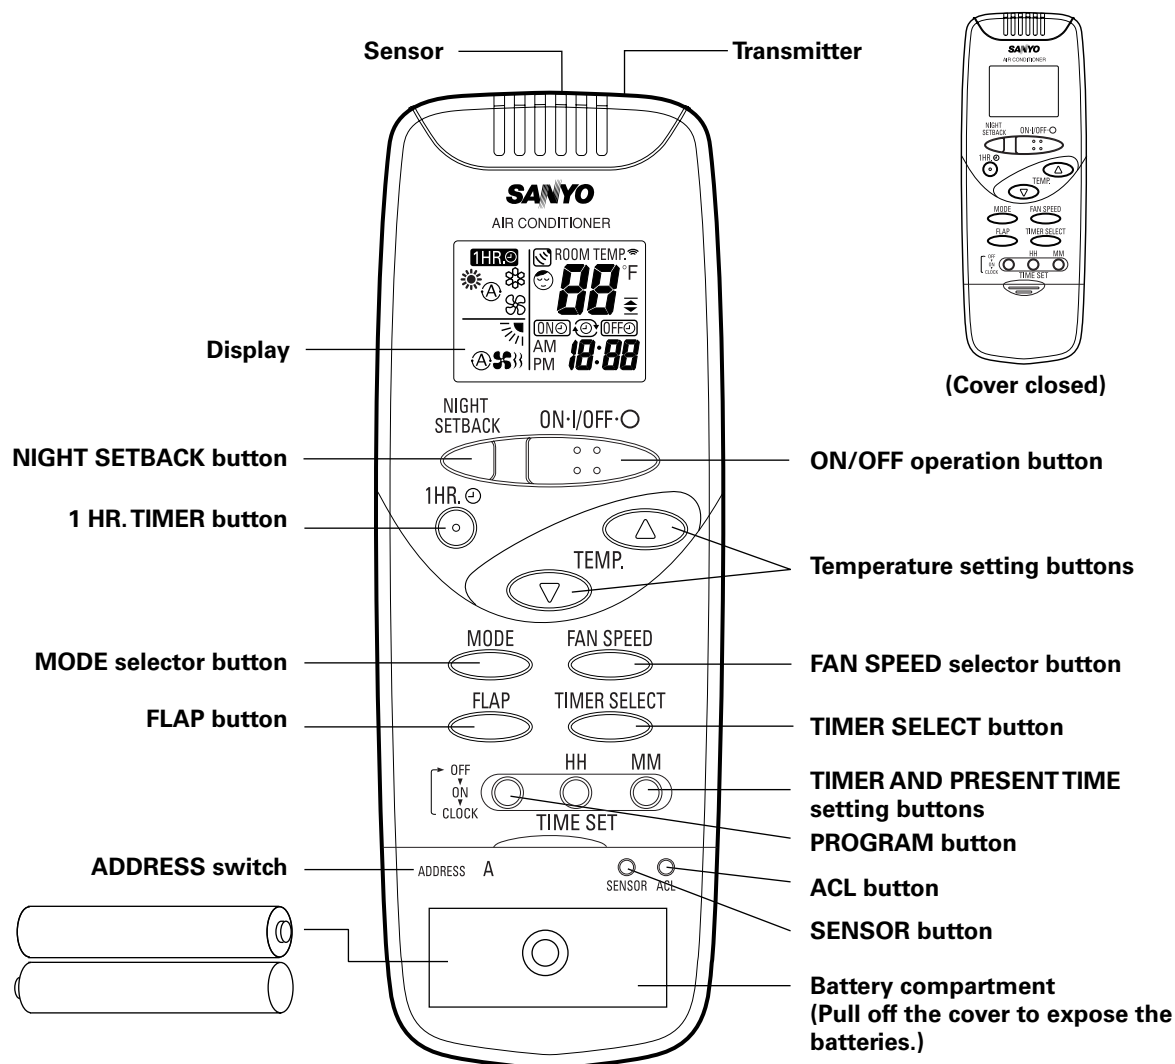








 




## Remote Control Unit



**NOTE** The illustration above pictures the remote control unit after the cover has been lowered and removed.

<b>Transmitter</b>	When you press the buttons on the remote control unit, the  mark appears in the display to transmit the setting changes to the receiver in the air conditioner.
<b>Sensor</b>	A temperature sensor inside the remote control unit senses the room temperature.
<b>Display</b>	Information on the operating conditions is displayed while the remote control unit is switched on. If the unit is turned off, only the mode that was set previously is still displayed.
<b>NIGHT SETBACK button</b>	For details, see "Night Setback Mode". When you press this button in the COOL or HEAT mode, the  mark appears in the display, and the remote control unit automatically adjusts the set temperature to save energy.
<b>Temperature setting buttons (TEMP.)</b>	Press the  button to increase the set temperature. Press the  button to reduce the set temperature.
<b>ON/OFF operation button</b>	This button is for turning the air conditioner on and off.
<b>Timer and Present Time setting buttons</b>	First, press the program button to select the mode you want. Each time you press the "HH" button, the hours advance by one. Each time you press the "MM" button, the minutes advance by one.


## Remote Control Unit (continued)

<b>Program button</b>	For details, see "Setting the Timer" Press this button to select the mode you want to program.
<b>TIMER SELECT button</b>	No display : The timer does not operate.  : The air conditioner stops at the set time.  : The air conditioner starts at the set time.  : The air conditioner stops and starts, or starts and stops, at the set times every day.
<b>MODE selector button (AUTO)  (HEAT) (COOL) (FAN)</b>	Use this button to select the AUTO, HEAT, COOL or FAN mode.  : When this setting is selected, the air conditioner calculates the difference between the thermostat setting and the room temperature and automatically switches to the "COOL" or "HEAT" mode as appropriate.  : The air conditioner makes the room warmer.  : The air conditioner makes the room cooler.  : The air conditioner works only as a circulation fan.
<b>FLAP button</b>	Press this button to select the sweep function, which moves the flap up and down automatically.  : The flap moves up and down automatically.
<b>FAN SPEED selector button</b>	 : The air conditioner automatically decides the fan speeds.  : High fan speed  : Medium fan speed  : Low fan speed
<b>1 HR. TIMER button (1-HOUR OFF TIMER)</b>	 : When you press this button, regardless of whether the unit is operating or stopping, the unit operates for one hour and then shuts down.
<b>ACL button (ALL CLEAR)</b>	Puts the remote control unit into pre-operation status. Always press this button after replacing the batteries.
<b>ADDRESS switch</b>	<ul style="list-style-type: none"> <li>• Change the address switch to prevent mixing of signals from remote control units when two Sanyo air conditioners are installed next to each other. Normally, the remote control address switch is set to A. For the second indoor unit, both addresses of the remote control unit and the indoor unit must be changed. The second remote control unit address must be changed to B by breaking off the tab "A." And the second indoor unit address must be changed from 1 to 2 by switching the slide switch in the indoor unit. For more information, please contact the dealer where you made the purchase.</li> <li>• Normally, the tabs on the remote control unit should not be bent.</li> </ul>
<b>SENSOR button</b>	When you press this button (use a small-tipped object such as a ballpoint pen), the  mark will appear at the display. And the room temperature is detected by the sensor which is built into the indoor unit and the air conditioner is controlled accordingly.
<b>NOTE</b>	If the remote control is located near a heat source, such as a space heater or in direct sunlight, press the SENSOR button to switch to the sensor on the indoor unit.

**NOTE** The remote control unit sends the temperature signal to the air conditioner regularly at five minute intervals. If the signal from the remote control unit stops for more than ten minutes due to the loss of the remote control unit or other trouble, the air conditioner will switch to the temperature sensor which is built into the indoor unit and control the room temperature. In these cases, the temperature around the remote control unit may differ from the temperature detected at the air conditioner's position.

# Using the Remote Control Unit

## How to Install Batteries

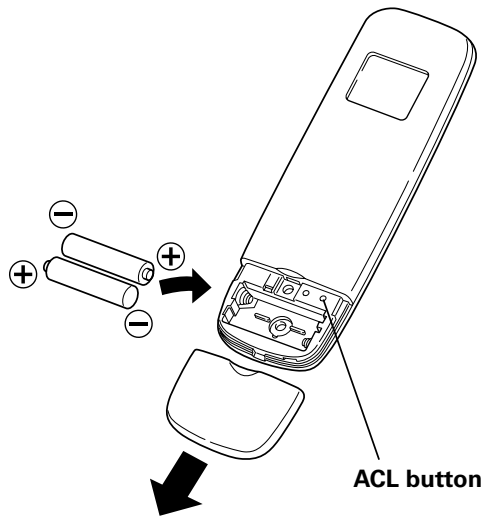


1. Slide the cover in the direction indicated by the arrow and remove it.
2. Install two AAA alkaline batteries. Make sure the batteries point in the direction marked in the battery compartment.
3. Use a thin object such as the tip of a pen to press the ACL button.

### NOTE

- The batteries last about six months, depending on how much you use the remote control unit. Replace the batteries when the remote control unit's display fails to indicate, or when the remote control cannot be used to change the air conditioner's settings.
- Use two fresh leak-proof type-AAA alkaline batteries.
- In replacing batteries, follow the instructions as mentioned in the sub-section "How to Install Batteries".
- If you do not use the remote control unit more than 1 month, take out the batteries.

## How to Use the Remote Control Unit

When using the remote control unit, always point the unit's transmitter head directly at the air conditioner's receiver.

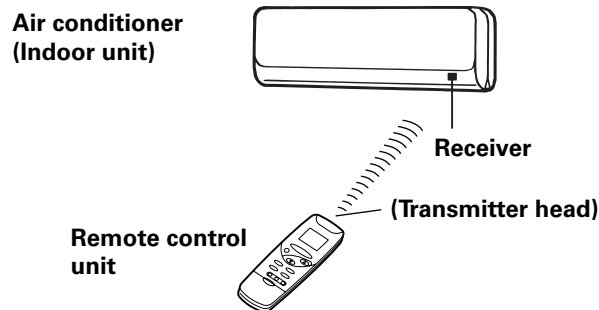

## Remote Control Unit Installation Position


The remote control unit may be operated either from a non-fixed position or from a wall-mounted position. To ensure that the air conditioner operates correctly, DO NOT install the remote control unit in the following places:

### DO NOT

- In direct sunlight
- Behind a curtain or other places where it is covered
- More than 26 feet (8 m) away from the air conditioner
- In the path of the air conditioner's airstream
- Where it may become extremely hot or cold
- Where it may be subject to electrical or magnetic noise
- Where there is an obstacle between the remote control unit and air conditioner (since a check signal is sent from the remote control unit every 5 minutes)

## Using the Remote Control Unit (continued)

### Mounting the Remote Control Unit

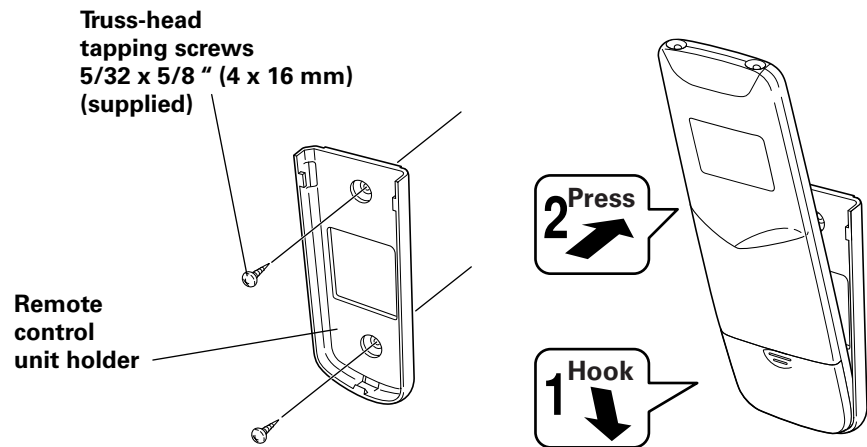


### When attaching to wall

- 1) Confirm the indoor unit beeps when the ON/OFF button is pressed at the wall location where the remote control unit is to be attached, then attach the holder to the wall.
- 2) When taking out the remote control unit, pull it from the holder.

### When using the remote control unit

- Point the transmitter on the remote control unit at the sensor on the indoor unit when operating the remote control unit and the air conditioner.
- Do not place objects which may block the transmitted signals between the receiver and the remote control unit.

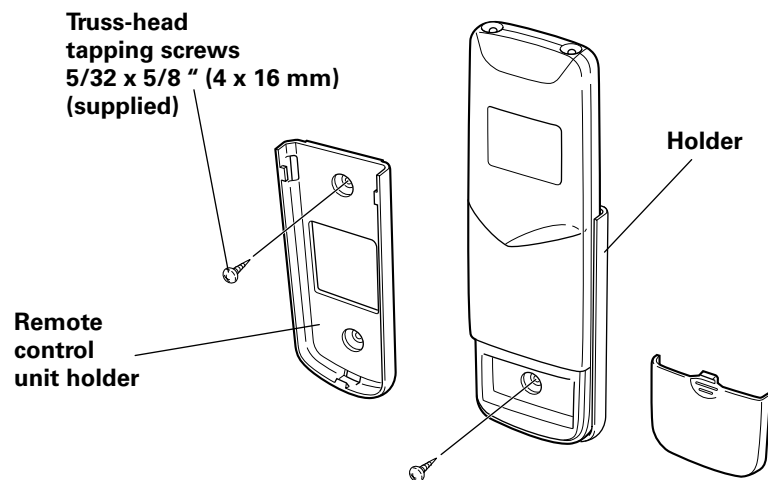


### Securing the remote control unit to prevent theft

- 1) Attach the holder to the wall with one screw in the upper hole only.
- 2) Remove the cover from the remote control unit, and then remove the batteries. Next, place the remote control unit in the holder.
- 3) Secure both the remote control unit and the holder to the wall with another screw through the lower hole.
- 4) Put the batteries back in the remote control unit, and then replace the cover.

# Operation with the Remote Control Unit

## 1. Automatic Operation

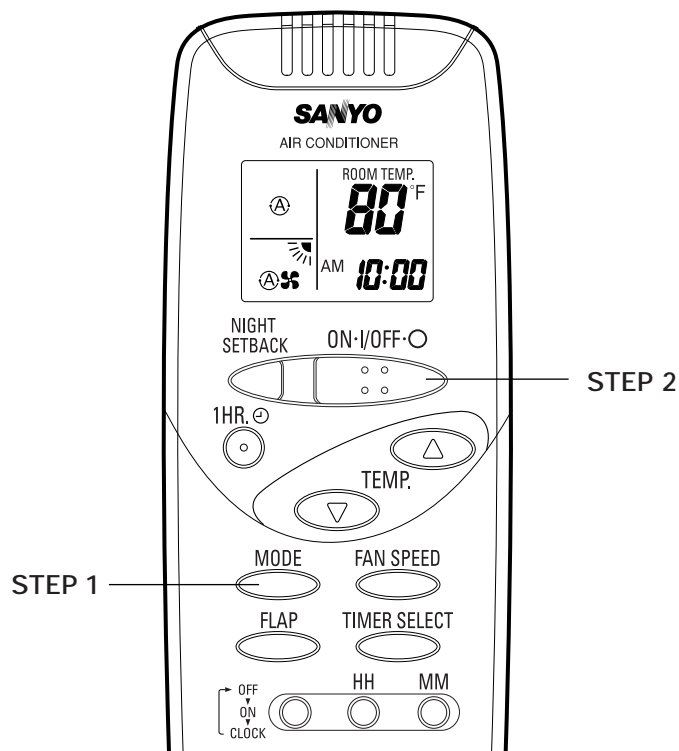

### NOTE

Check that the circuit breaker on the power panel is turned on and that the operation selector of the indoor unit is in the ON position.

 
When Automatic operation mode (A) is selected and the unit is set using the steps below, the air conditioner operates automatically and brings the room to the desired temperature simply by pressing the ON/OFF operation button.

<b>STEP 1</b>	Press the MODE selector to (A).
<b>STEP 2</b>	Press the ON/OFF operation button.

To stop the air conditioner, press the ON/OFF operation button again.


### NOTE

- To change the temperature setting, press the temperature setting buttons and change the setting to the desired temperature. The  $\blacktriangle$  indicates the upper limit for the temperature setting and the  $\blacktriangledown$  indicates the lower limit.
- The temperature setting changes by two degrees each time one of the TEMP. buttons is pressed.
- Although the fan speed is set automatically, you can change the fan speed by pressing the FAN SPEED selector button as shown below.



## Operation with the Remote Control Unit (continued)

### 2. Manual Operation

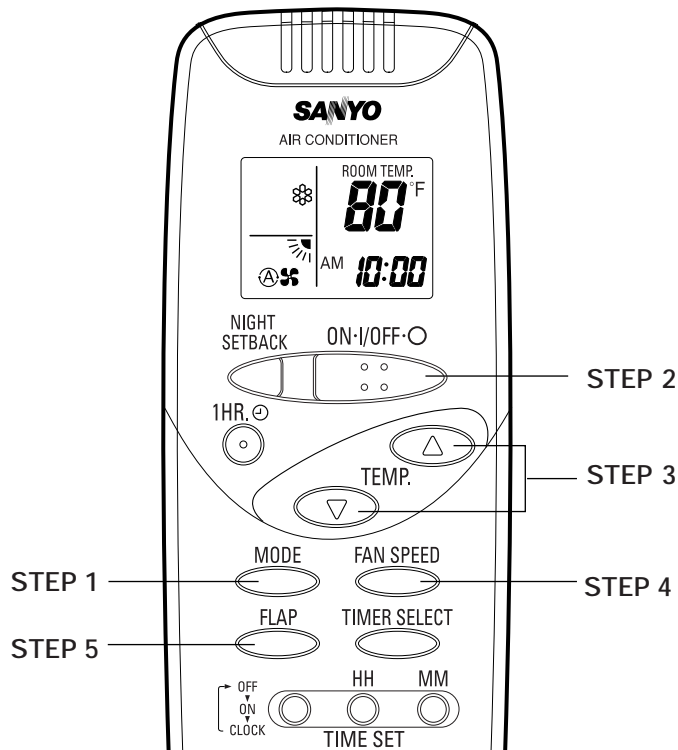

#### NOTE

Check that the circuit breaker on the power panel is turned on and that the operation selector of the indoor unit is in the ON position.

If the automatic operation settings of the unit are not satisfactory, press the setting buttons below to change the settings as desired.

<b>STEP 1</b>	Press the MODE selector button and select the desired mode. For heating operation → ☀ For cooling operation → ❄
<b>STEP 2</b>	To start the air conditioner, press the ON/OFF operation button.
<b>STEP 3</b>	Press the TEMP. setting buttons to change the temperature setting to the desired temperature. Adjustable temperature range: 86 °F max. 60 °F min.
<b>STEP 4</b>	Set the FAN SPEED selector button to the setting you want.
<b>NOTE</b>	If the fan speed is set to Ⓐ❄ (Automatic), the fan speed switches automatically according to the difference between the actual room temperature and the temperature setting.
<b>STEP 5</b>	Press the FLAP button and set the airflow direction as desired. (Refer to "Adjusting the Airflow Direction" on page 21.)

To stop the air conditioner, press the ON/OFF operation button again.

## Operation with the Remote Control Unit (continued)

 
### NOTE

- Choose the best position in the room for the remote control unit, which also acts as the sensor for room comfort and transmits the operating instructions. Once you've found this best position, always keep the remote control unit there.
- This appliance has a built-in 3-minute time delay circuit to ensure reliable operation. When the operation button is pressed, the compressor will start running within three minutes. In the event of power failure, the unit will stop. When the power is restored, the unit will restart automatically after three minutes.

### 3. Adjusting the Fan Speed

#### A. Automatic

Simply set the FAN SPEED selector button to the  position.

A microcomputer in the air conditioner controls the fan speed automatically when the  mode is selected. When the air conditioner starts operating, the difference between the room temperature and the set temperature is detected by the microcomputer which then automatically switches the fan speed to a suitable level.


#### Cooling mode:

When difference between room temperature and set temperature is	FAN SPEED
4 °F and over	High
Between 4 °F and 2 °F	Medium
Below 2 °F	Low

#### Heating mode:




When difference between room temperature and set temperature is	FAN SPEED
4 °F and over	High
Below 4 °F	Medium

### NOTE

The above table assumes that the sensor in the remote control is being used. If the sensor in the indoor unit is being used (the  indicator is on), actual operation may differ slightly from the operation described in the table.


(Refer to "SENSOR button" on page 10.)

#### B. Manual

If you want to adjust fan speed manually during operation, just set the FAN SPEED selector button as desired by following STEP 4 on page 14. [, , or ]

## Operation with the Remote Control Unit (continued)

### 4. Fan Only

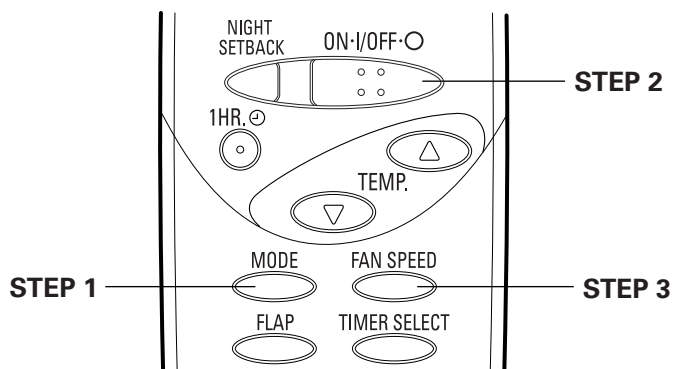


If you want to circulate air without any temperature control, follow these steps:

**STEP 1:** Press the MODE selector button to switch to the fan mode. (☪)

**STEP 2:** Press the ON/OFF button.

**STEP 3:** Press the FAN SPEED selector button to select the fan speed of your choice (☪), ☪, or ☪).

### 5. Night Setback Mode

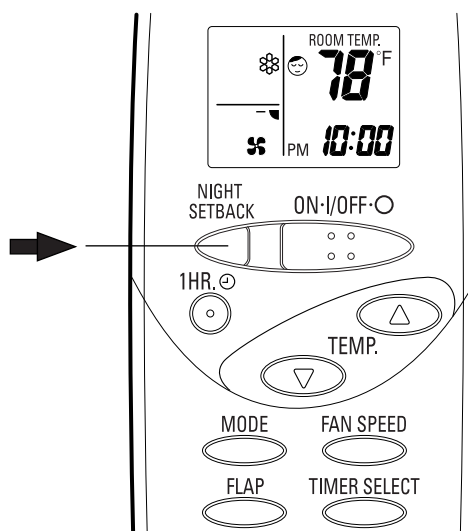

**Night Setback Mode is used for saving energy.**

Press the NIGHT SETBACK button during operation. The ☺ mark appears in the display.

To release the night setback function, press the NIGHT SETBACK button again.

#### **NOTE**


The night setback mode cannot be used during automatic operation.



## Operation with the Remote Control Unit (continued)


### A. Cooling Mode: (☼)

When the night setback mode is selected, the air conditioner automatically raises the temperature setting 2 °F when 30 minutes have passed after the selection was made, and then another 2 °F after another 30 minutes have passed, regardless of the indoor temperature when night setback was selected. This enables you to save energy without sacrificing comfort. This function is convenient when gentle cooling is needed.

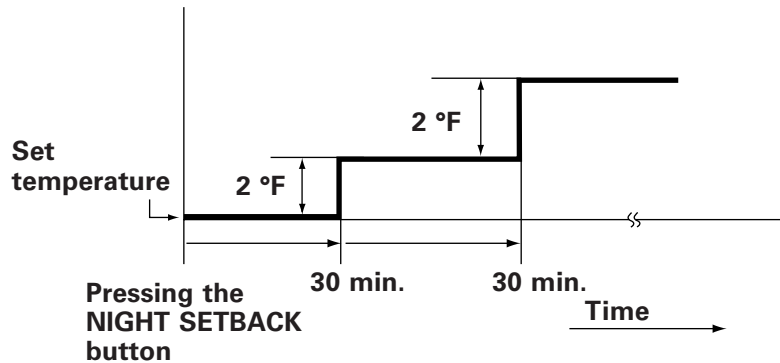

### B. Heating Mode: (☼)

When the night setback mode is selected, the air conditioner automatically lowers the temperature setting 4 °F when 30 minutes have passed after the selection was made, and then another 4 °F after another 30 minutes have passed, regardless of the indoor temperature when night setback was selected. This enables you to save energy without sacrificing comfort. This function is convenient when gentle heating is needed.

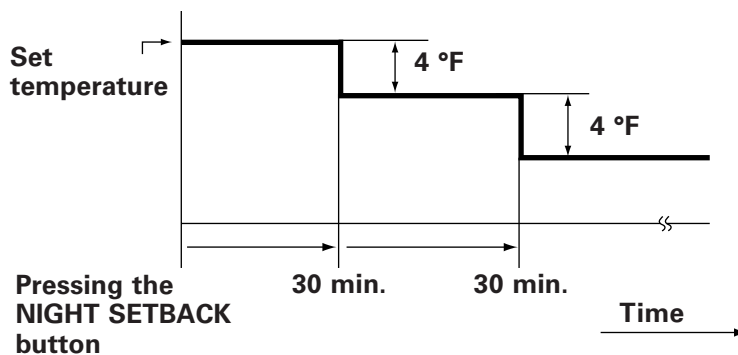

# Special Remarks


**Power failure during operation**

- In case of power failure, the unit will stop. When the power is restored, the unit will restart automatically after three minutes.

**Remote Control Unit**


- The remote control unit transmits the setting condition to the air conditioner regularly at three minute intervals.

# Setting the Timer

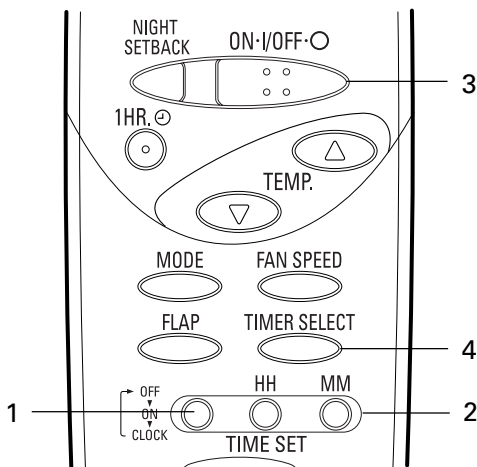

## 1. How to set the present time


(Example) To set to 9:10 pm.

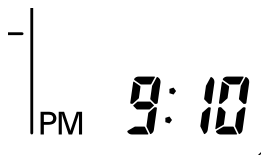

Operation	Indication
1. Press the Program button (OFF/ON/CLOCK) three times.	The time indication alone blinks.
2. • Press the HH button until PM 9 is displayed. • Press the MM button until 10 is displayed.	The display will automatically stop blinking except for the ":" symbol after 10 sec.

## 2. How to set the OFF time

(Example) To stop the air conditioner at 11:30 pm.

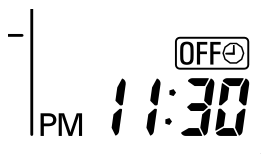

1. Press the Program button (OFF/ON/CLOCK) once.	The timer OFF icon indication blinks and present OFF time is shown.
2. • Press the HH button until PM 11 is displayed. • Press the MM button until 30 is displayed.	The display will change automatically back to show the present time after 10 sec.
3. Press the ON/OFF button to start the air conditioner.	The present time is displayed.
4. Press the TIMER SELECT button to set OFF time.	The present time and OFF icon are displayed.

## Setting the Timer (continued)


### 3. How to set the ON time (Example) To start operation at 7:10 am.





Operation	Indication
1. Press the Program button (OFF, ON, CLOCK) twice.	The timer ON indication blinks and present ON time is shown.
2. • Press the HH button until AM 7 is displayed. • Press the MM button until 10 is displayed.	The display will change automatically back to show the present time after 10 sec.
3. Press the ON/OFF button to start the air conditioner.	The present time is displayed.
4. Press the TIMER SELECT button to set ON time.	The present time and ON are displayed.

### 4. How to set a program for daily ON/OFF operation


(Example) To start operation at 7:10 am. and stop the air conditioner at 11:30 pm.

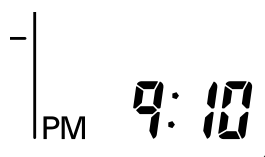


Present time

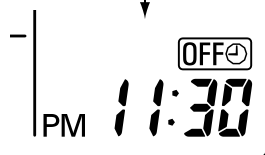 

OFF time

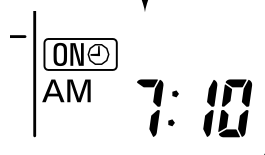

ON time

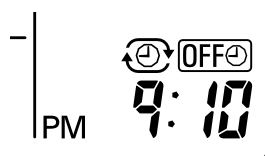

Programed daily ON/OFF

1. Set the timer ON/OFF times as shown in 2 and 3.	The present time PM 9:10 and OFF are displayed.
2. Press the ON/OFF button to start the air conditioner.	
3. Press the TIMER SELECT button to set the ON/OFF combination timer.	


**NOTE** When the Daily ON/OFF program is set to start the air conditioner before the ON time setting, the ON OFF indications appear on the display.

On the other hand, when the Daily ON/OFF program is set to start the air conditioner after the ON time setting, the OFF OFF indications appear on the display. Thus, these indications show the timer program which will operate next.

**NOTE** You can check the timer ON/OFF times after you have set them by pressing the PROGRAM button.

# Using the 1-Hour OFF Timer

## 1. 1-Hour OFF Timer

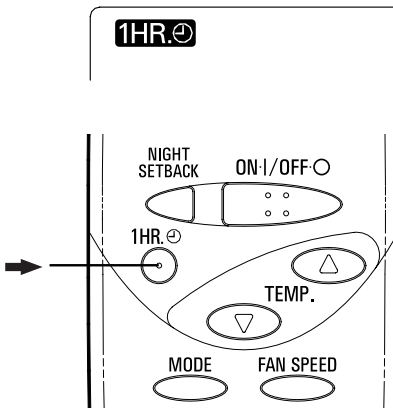

**This function causes the unit to operate for one hour and then stop, regardless of whether the unit is on or off when this button is pressed.**

The **1HR.** indicator in the display indicates that this function is operating.

### Setting procedure:

Regardless of whether the unit is operating or stopped, press the 1 HR. TIMER button.

**1HR.** appears in the display.

### Cancellation procedure:

Press the ON/OFF operation button to turn the unit off, wait for the unit to stop operating, and then press the ON/OFF operation button again. The 1-Hour Timer function is now cancelled and the unit operates normally.

### NOTE

- If, while the 1-Hour Timer function is operating, the 1 HR. TIMER button is pressed once to cancel the function and then again, the unit continues to operate for one hour from that point in time and then stops.



## 2. Operation Together with the Program Timer

- The 1-Hour OFF Timer setting is given priority over the daily program setting.
- It is not possible to use the OFF Timer and 1-Hour OFF Timer together. Whichever function is set last takes precedence. If the 1 HR. TIMER button is pressed while the TIMER OFF function operates, OFF Timer is cancelled and the unit will stop operating one hour later.

# Adjusting the Airflow Direction

## A. Horizontal (Wall-mounted type only)

The horizontal airflow can be adjusted by moving the vertical vane to the left or right.

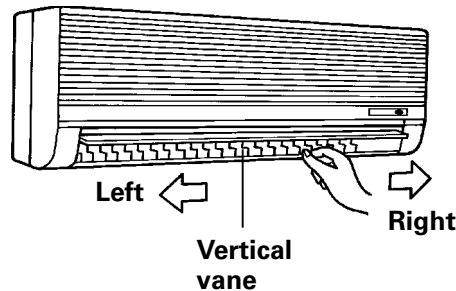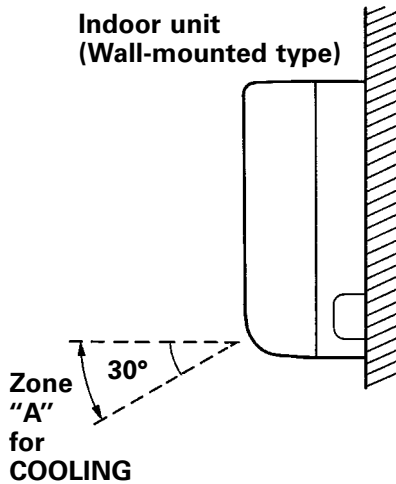



## B. Vertical

Confirm that the remote control unit has been turned on. Press the FLAP button to start the flap moving up and down (↕). If you want to stop the flap movement and to direct the air in the desired direction, press the FLAP button again. In the COOL mode, don't direct the flap down more than 30° (KHS, THS Types), or leave it in the vertical position (XHS Type), otherwise condensation may drip onto the floor. Zone "A" (KHS, THS Types) and any position other than vertical (XHS Type) are the recommended flap positions for cooling.




**CAUTION**

Do not move the flap with your hands.

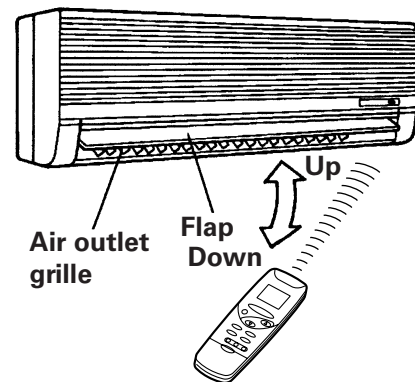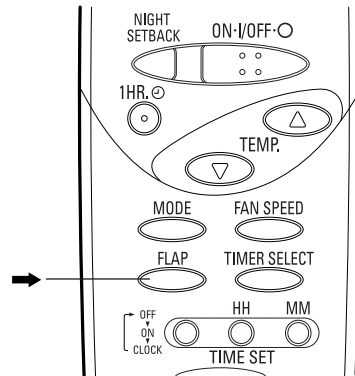

# Operation without the Remote Control Unit

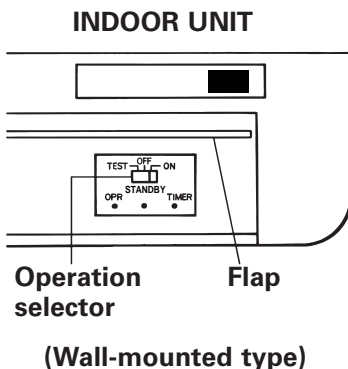

If you have lost the remote control unit or it is not working, follow the steps below.

1. When the air conditioner is stopped.

If you want to turn on the air conditioner, switch the operation selector to the OFF position, and then to the ON position.

**NOTE**

The set temperature and fan speed are automatically set at the last selection before stopping.

2. When the air conditioner is running.

If you want to turn off the air conditioner, switch the operation selector to the OFF position.

# Care and Cleaning



## WARNING

1. For safety, be sure to turn the air conditioner off and also to disconnect the power before cleaning.
2. Do not pour water or spray detergent on the indoor unit to clean it. This will damage the internal components and may cause an electric shock or fire.

### Air Intake and outlet side (Indoor Unit)

Clean the air intake and outlet side of the indoor unit with a vacuum cleaner brush, or wipe them with a clean soft cloth.

If these parts are stained, use a clean cloth moistened with a mild liquid detergent. When cleaning the air outlet side, be careful not to force the vanes out of place.



## CAUTION

1. Never use solvents or harsh chemicals when cleaning the indoor unit. Do not wipe plastic parts using very hot water.
2. Some metal edges and the fins are sharp and may cause injury if handled improperly; be especially careful when you clean these parts.
3. The internal coil and other components of the outdoor unit must be cleaned every year. Consult your dealer or service center.

### Air filter

The air filter collects dust and other particles from the air and should be cleaned about once every six months (Recessed type) or two weeks (ceiling-mounted type and wall-mounted type). If the filter gets blocked, the efficiency of the air conditioner drops greatly.

## NOTE

The frequency with which the filter should be cleaned depends on the environment in which the unit is used.

### How to remove the filter

#### Recessed type:


1. Remove the bolt screw on each side out of the latch using a screwdriver. (After cleaning, be sure to reattach the two bolt screws.)
2. Press on the two latches of the air intake grille with your thumbs in the direction of the arrow to open the grille.
3. Open the air intake grille downward.



## CAUTION

When cleaning the air filter, never remove the safety string. If it is necessary to remove it for servicing and maintenance inside, be sure to reinstall the safety string securely (hook on the grille side) after the work.

4. Remove the air filter attached to the air intake grille.

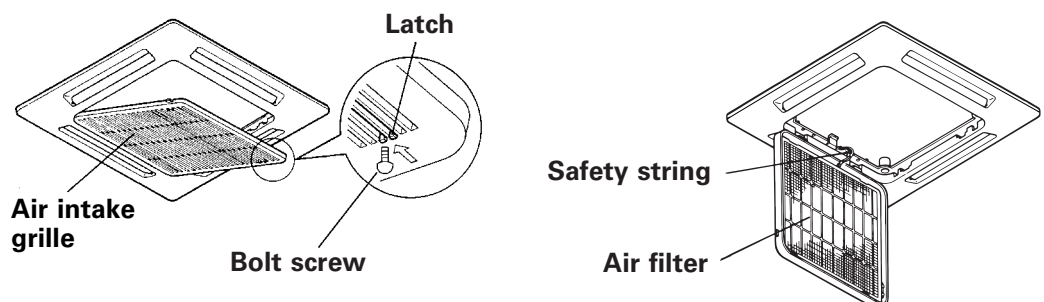


## Care and Cleaning (continued)

### How to remove the filter

#### Ceiling-mounted type:


1. Remove the bolt screws on the latch using a screwdriver. (After cleaning, be sure to reattach the two bolt screws.)
2. Take hold of the two latches on the air intake grille and press them to the rear, and the grille will open downward.
3. Take hold of the finger-hold on the air filter, first lift it and then pull it toward you to release it from the catch.

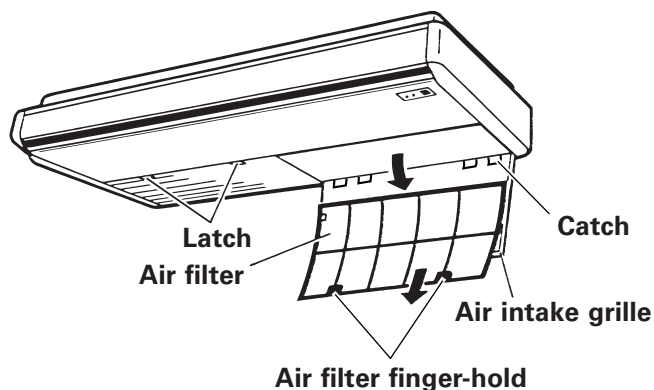

### How to remove the filter

#### Wall-mounted type

1. Move the flap on the air outlet grille to its lowest position.
2. Hold the air filter by the tab at the bottom, and pull downward.

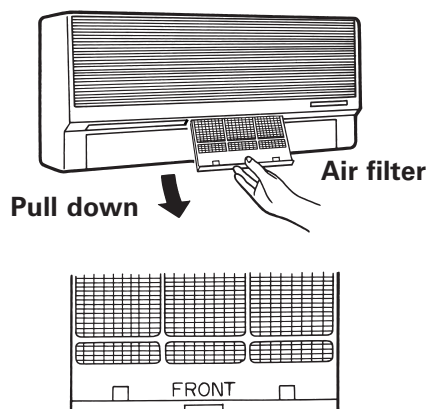

### How to clean the filter

Use a vacuum cleaner to remove light dust. If there is sticky dust on the filter, wash the filter in lukewarm, soapy water, rinse it in clean water, and dry it.

#### Outdoor Unit



**CAUTION**

1. **Certain metal edges and the condenser fins are sharp and may cause injury if handled improperly; special care should be taken when you clean these parts.**
2. **Periodically check the outdoor unit to see if the air outlet or air intake is clogged with dirt or soot.**
3. **The internal coil and other components of the outdoor unit must also be cleaned periodically. Consult your dealer or service center.**

#### Care: After a Prolonged Idle Period

Check the indoor and outdoor unit air intakes and outlets for blockage; if there is a blockage, remove it.

#### Care: Before a Prolonged Idle Period

- Operate the fan for half a day to dry out the inside.
- Disconnect the power supply and also turn off the breaker.
- Clean the air filter and replace it in its original position.
- Outdoor unit internal components must be checked and cleaned periodically. Contact your local dealer for this service.

# Troubleshooting

If your air conditioner does not work properly, first check the following points before requesting service. If it still does not work properly, contact your dealer or service center.

Trouble	Possible Cause	Remedy
Air conditioner does not run at all.	<ol style="list-style-type: none"> <li>1. Power failure.</li> <li>2. Leakage breaker tripped.</li> <li>3. Line voltage is too low.</li> <li>4. ON/OFF operation button is OFF.</li> <li>5. Batteries in remote control unit have run down.</li> </ol>	<ol style="list-style-type: none"> <li>1. Restore power.</li> <li>2. Contact service center.</li> <li>3. Consult with electrician or dealer.</li> <li>4. Press the button again.</li> <li>5. Replace batteries.</li> </ol>
Compressor runs but soon stops.	<ol style="list-style-type: none"> <li>1. Obstruction in front of condenser coil.</li> </ol>	<ol style="list-style-type: none"> <li>1. Remove obstruction.</li> </ol>
Poor cooling performance.	<ol style="list-style-type: none"> <li>1. Dirty or clogged air filter.</li> <li>2. Heat source (cooker, heater, or electrical appliance) or many people in room.</li> <li>3. Doors and/or windows are open.</li> <li>4. Obstacle near air intake or air discharge port.</li> <li>5. Thermostat is set too high.</li> </ol>	<ol style="list-style-type: none"> <li>1. Clean the air filter to improve the air flow.</li> <li>2. Eliminate heat source if possible.</li> <li>3. Shut them to keep the heat out.</li> <li>4. Remove it to ensure good air flow.</li> <li>5. Set the temperature lower.</li> </ol>

# Tips for Energy Saving

- Do not**
- **Block the air intake and outlet of the unit. If either is obstructed, the unit will not work well, and may be damaged.**
  - Let direct sunlight into the room. Use sunshades, blinds or curtains. If the walls and ceiling of the room are warmed by the sun, it will take longer to cool the room.
- Do**
- Always try to keep the air filter clean. (Refer to "Care and Cleaning.") A clogged filter will impair the performance of the unit.
  - To prevent conditioned air from escaping, keep windows, doors and any other openings closed.

**NOTE**

**Should the power fail while the unit is running**

If the power supply for this unit is temporarily interrupted the unit will automatically resume operation (once the power is restored) with the same settings that were in effect before the power was interrupted.

# Operating Range

The air conditioner is operable within the temperature ranges listed below:

	Temperature	Indoor air temperature	Outdoor air temperature
COOLING	Max.	95 °F DB/71 °F WB	115 °F DB
	Min.	67 °F DB/57 °F WB	23 °F DB
HEATING	Max.	80 °F DB/67 °F WB	75 °F DB/65 °F WB
	Min.	— PB/— WB	17 °F DB/15 ° F WB



**SANYO FISHER COMPANY  
A DIVISION OF SANYO NORTH AMERICA CORPORATION  
21605 Plummer Street  
Chatsworth, CA 91311 U.S.A.**

**In Canada  
SANYO Canada Inc.  
300 Applewood Crescent,  
Concord, Ontario,  
L4K 5C7, Canada**