

Portable DVD Player



PD-7001 User Manual

Version 1.1

Important Safety Precautions

<p>WARNING RISK OF ELECTRIC SHOCK DO NOT OPEN</p>	<p>To reduce risk of electrical shock, do not remove cover or back (no user serviceable parts inside). Refer Servicing to qualified personnel.</p>
 <p>This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.</p>	 <p>This symbol indicates Important instructions accompanying the product.</p>

Warning To reduce the risk of fire or shock hazard, do not expose this DVD player to rain or moisture. No objects filled with liquids, such as vases, should be placed on the apparatus.

Caution:

1. This product utilizes a laser. Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure. Do not open covers and do not repair yourself. Refer servicing to qualified personnel.
2. FCC Regulations state that unauthorized changes or modifications to this equipment may void the user's authority to operate it.

Note:

1. This DVD player is designed and manufactured to respond to the Region Management Information. If the Region number of a DVD disc does not correspond to the Region number of this DVD player, this DVD player cannot play this disc.
2. Apparatus should not be exposed to dripping or splashing liquids. No objects filled with liquids, such as vases, should be placed on the apparatus.

This portable DVD player contains mercury. Disposal of this material may be regulated due to environmental considerations. For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance: www.eiae.org

Keep your sales receipt to obtain warranty parts and service and for proof of purchase. Attach it here and record the serial and model number in case you need them. The numbers are located on the back of the player.

Model number: _____ Serial Number: _____
 Purchase date: _____
 Place of purchase and phone number: _____

**CLASS 1
 LASER
 PRODUCT**


Table Of Contents

1. Before Starting	
Package Contents	1
Getting to know your DVD player	2
Attaching and removing the battery	3
Using the power adapter	3
Charging the battery	4
Connecting your DVD player to other components	4
The remote control	5
Compatible discs	6
Regional coding	6
2. Basic Operations	
Turn on the DVD player	7
Basic playback	8
Using DVD video menu	9
Volume & Mute	10
3. Advanced Operations	
VCD/SVCD PBC menu	11
Repeat/A-B	12
Console operation	13
Random	15
Zoom & Programming	15
Special features only in DVD disc	16
The second function—Shift key	17
Playing MP3, WMA, and JPEG files	20
4. System Setup Menu	
Setting the language	22
Display setup	24
Audio setup	26
Lock setup	28
Other settings	29
5. Troubleshooting	32
6. Safety Guide	34
7. Warranty Information	34
8. Technical Support	34
9. Appendix	35


Before Starting

Package Contents


Thank you for purchasing the PD-7001 Portable DVD player. Unpack the box and remove any protection films. The following items should be in the package:

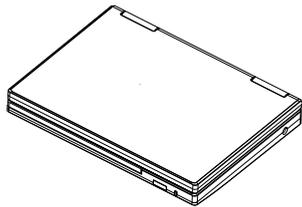


Portable DVD Player

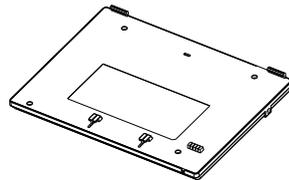

Battery

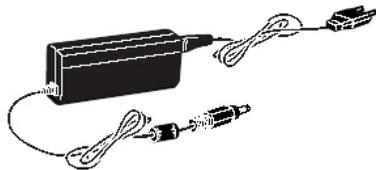

Power Adapter and Charger

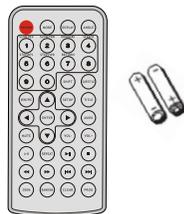

Remote Control



Audio/Video Cable



Car Headrest Mounting Case


DVD PLAYER
Portable DVD Player



PD-7001 User Manual
Version 1.1


User Manual

Getting to know your DVD player

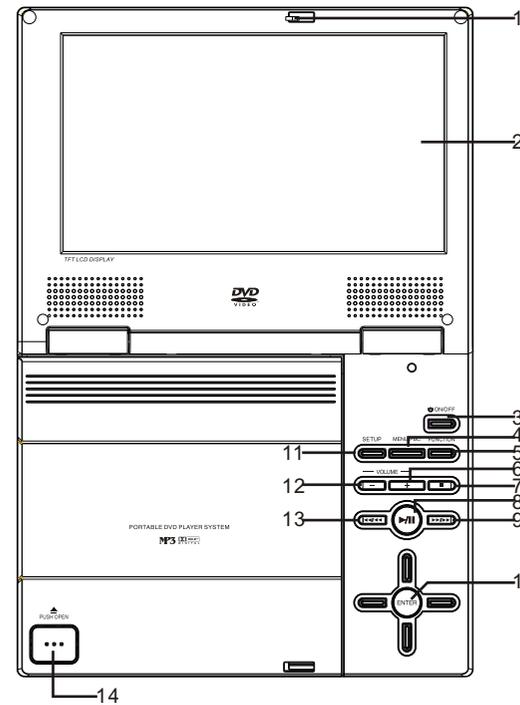

1. Locking Clip
2. LCD Screen
3. On/Off
4. Menu/PCB
5. Function
6. Volume+
7. Stop
8. Play/Pause
9. Forward /Next Chapter
10. Arrow/Enter
11. Setup
12. Volume-
13. Previous /Reverse Chapter
14. Push Open

Porten your DVD player

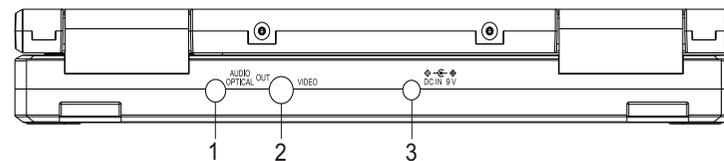

1. Audio out /Optical out
2. Video out
3. DC IN

Attaching and removing the battery


Attaching the battery

1. Lay the battery down flat as shown in the illustration.
2. Place the player centered on top of the battery so that the battery's locating pegs fit into the fixing holes (□) on the underside of the player.
3. Slide the player back onto the battery until it clicks into place.

Removing the battery

1. Turn the player over, with the rubber pads facing up.
2. While pushing the removal tab down, slide the battery in the opposite direction. The battery will slide right off.


Note: Contact the appropriate local governmental office or your current waste removal provider for assistance in determining the correct battery disposal method in your area.

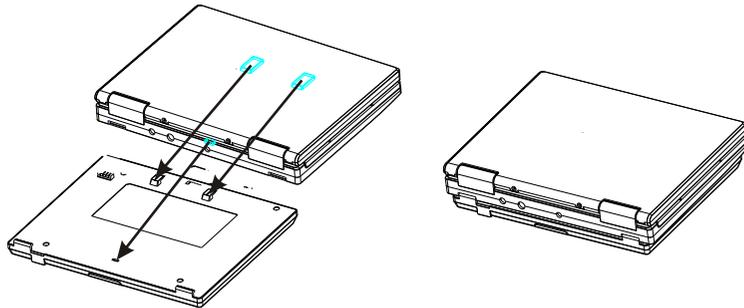

Using the power adapter

1. Connect the output from the power adapter to the player's DC IN socket.
2. Connect the power adapter's supply cable to a AC power outlet.

Note: If the power adapter is plugged in, the player will function even if the battery is not attached.

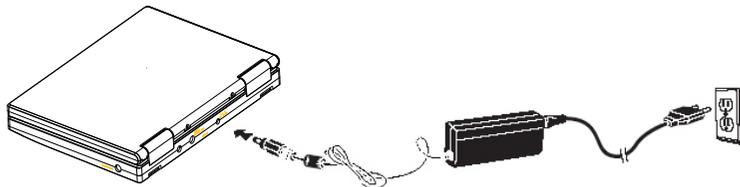

Before Starting


Charging the battery

Make sure the battery is properly attached to the player. Connect the output from the power adapter to the DC IN port on the player (Figure 1.1) and the LED will light up.

This LED will turn to green once the battery is fully charged.

When charging the battery for the first time, please charge for at least 12 hours.

Battery Warning Information: When the battery level is low, it will show a low battery warning on the LCD screen (Figure 1.2).

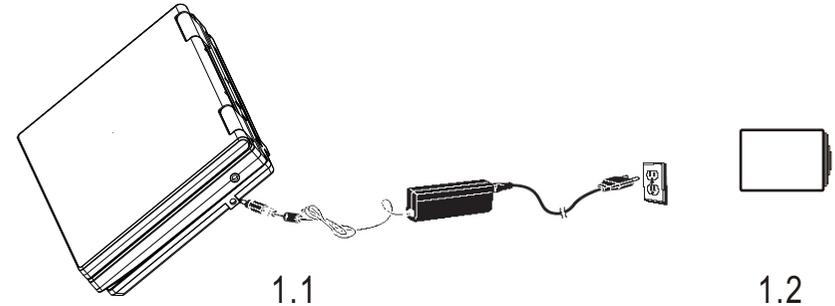


Connecting your DVD player to other components

Connecting the DVD player to a television set


If you want to use your DVD player for home viewing, you can connect it to a television set using the Audio-Video cables supplied.

Note: Remember to turn your TV on and tune it to the corresponding input channel on your TV.

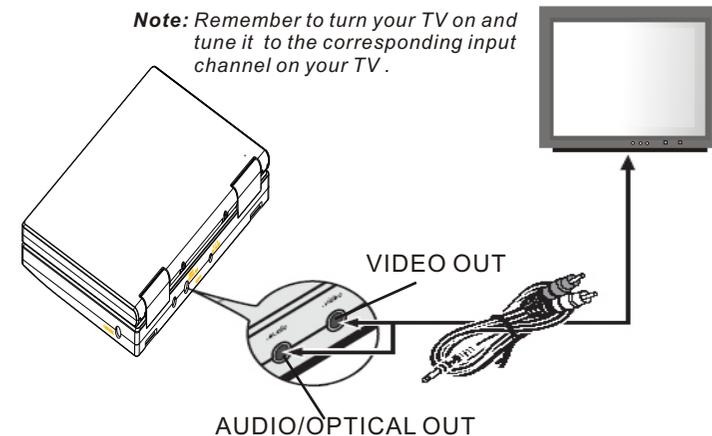

Before Starting

The remote control

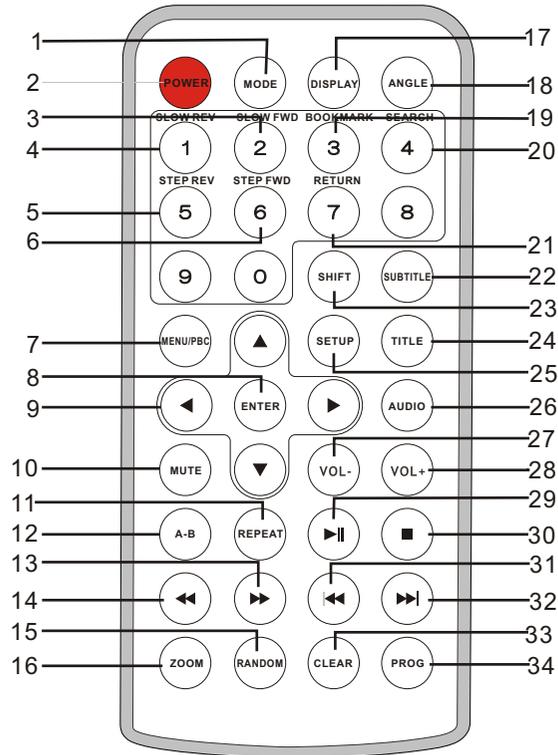

1. LCD Mode
2. Power
3. Number 2/Slow Fwd
4. Number 1/Slow Rev
5. Number 5/Step Rev
6. Number 6/Step Fwd
7. Menu/PBC
8. Enter
9. Arrow
10. Mute
11. Repeat
12. A-B
13. Fast Forward
14. Fast Reverse
15. Random
16. Zoom
17. Display
18. Angle
19. Number 3/Bookmark
20. Number 4/Search
21. Number 7/Return
22. Subtitle
23. Shift
24. Title
25. Setup
26. Audio
27. Volume-
28. Volume+
29. Play/Pause
30. Stop
31. Previous Chapter
32. Next Chapter
33. Clear
34. Program

Compatible discs

This DVD player is compatible with the following types of discs/formats: DVD movies, Video CD's, MP3 files, WMA files, and JPEG files. Before you put a disc in the player, make sure the disc/format is compatible.

Note:

Some discs may not be compatible due to laser pickup and design.

Regional coding

For the regional code assignment, the Motion Picture Association of America (MPAA) has divided the world into 6 regions:

Region 1: United States, Canada, East-Pacific Islands.

Region 2: Japan, West Europe, Egypt, South Africa, Far East.

Region 3: South East Asian countries include the R.O.C. Hong Kong, South Korea, Thailand, Indonesia, etc.

Region 4: Australia, New Zealand, Central South America, South Pacific Islands.

Region 5: Russia, Mongolia, Indian Islands, Central Asia, East Europe, North Korea, North Africa, North West Asia, etc.


Region 6: Mainland China.

If the region number of your DVD disc does not correspond to the region number of this DVD player, this player may not be able to play the disc.

Basic Operations

Turn on the DVD player

1. Set the player on a table or on a steady surface.
2. Raise the screen to the open position.
3. Press the **Power** key of the remote control to turn on the unit, you can also press and hold the **On/Off** button for 3 seconds to turn on the unit.
4. When the power is turned on . The player will automatically search for the disc.
If a compatible disc is available, the unit will start the disc playback automatically.

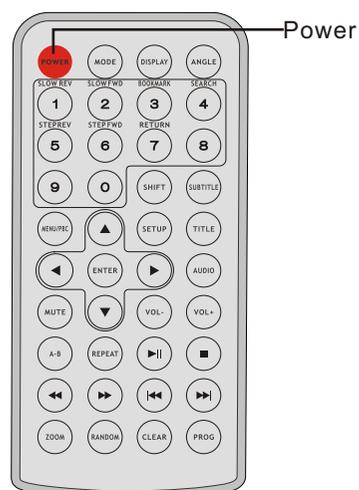


Standby Mode :

- (1). Press **Power** key to turn off the disc playback when the unit is on.
- (2). When the unit is off, press **Power** key to start disc playback again.
- (3). Disconnecting the main power to the device will end the standby state.

Note:

To save battery power, the unit has an auto-screensaver and auto shut-off function. When the unit is stopped or paused, and no operations are performed within 5 minutes, the screen saver mode will be activated automatically. After the screensaver has been on for 5 minutes, the unit will turn off automatically without the resume play feature.

Basic playback

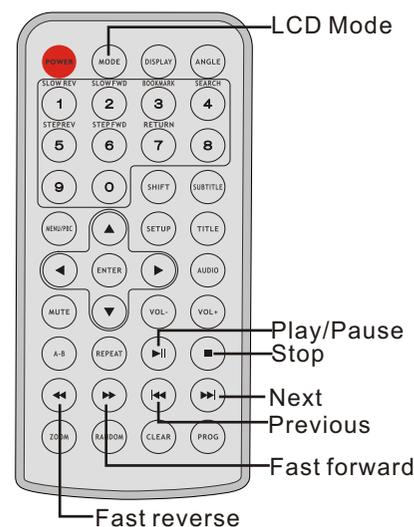

Play/Pause: If disc playback is stopped, press this key to make player start again. If in the pre - stop condition it executes memory play function. During disc playback, press once to pause; press again to resume playback.

Stop: Stops disc playback. Press once to stop the disc playback. (Playback will start at location where you stopped.) Pressing twice will cause a full stop. (Playback will start at the beginning of the disc).

Fast forward/Reverse: When you press the **Fast forward/Reverse** key during playback, the unit will **Fast forward/Reverse** the disc. With each consecutive press of the **Fast forward/Reverse** key, the playback speed increases. There are 4 speed levels for DVD discs in FWD/ REV: 2x,4x,16x,100x. For all other discs, there are 3 speed levels: 2x,4x, 8x. Press the **Play** key to resume normal playback.

Previous Chapter/Next Chapter: When you press this key, the player will skip to the Previous/Next chapter or track and play automatically.

LCD Mode: The **Mode** button brings up the LCD picture menu. You can adjust the picture options: COLOR, CONTRAST, BRIGHTNESS, HUE, REVERSAL, NORMAL and RESET using the arrow and ENTER buttons to make adjustments.

COLOR: adjusts the richness of color.

CONTRAST: adjusts the difference between the light and dark areas.

BRIGHTNESS: adjusts the brightness.

HUE: adjusts the balance between red and green levels.


REVERSAL: turns the image upside down.

NORMAL: adjusts the 4:3 or normal LCD screen format.

RESET: adjusts all **MODE** options back to the factory settings except **NORMAL** .

Basic Operations

Using DVD video menu

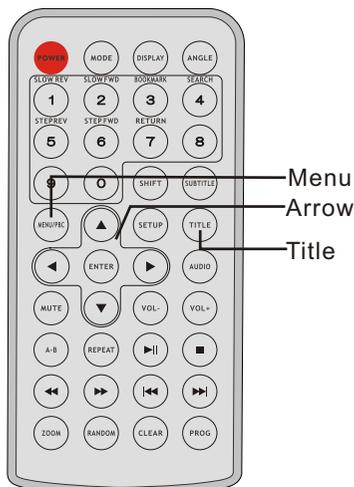

When you insert a DVD disc in the DVD player and start to play it:

1. The unit will automatically start the playback from the beginning of the disc and then the Menu will be brought up.
2. Press \uparrow Up/ \downarrow Down/ \leftarrow Left/ \rightarrow Right to move the highlight in the Menu.
3. Press **Enter** on the selected option.

Q:How can I see the contents of the disc?

A: Move the highlighted bar to **Play Movie** or **Play** on the disc menu of the disc and press **Enter**. The title of this option may vary from disc to disc.

Q:How can I set the subtitle language?

A: Select **Subtitle** or **Options** on the disc menu of the disc, and press **Enter**. In the subtitle list that appears, select the subtitle language you want and press **Enter**. Note that the title of this option may vary from disc to disc.

Q: How do I play the disc from a certain scene in the movie?

A: Select **Scene Select** on the disc menu of the disc, and press **Enter**. The screen will display the starting picture of each chapter. Move the highlight the chapter you want and press **Enter**. Note that the title of the option may vary from disc to disc.


Q:How do I open the Menu while the disc is being played?

A: Simply press **Menu** or **Title**.

Note:

On a CD with MP3, WMA and JPEG, press the **Title** button to switch between Music, Photo and Movie options. Please refer to the related descriptions in the **Playing MP3, WMA and JPEG files** section.

Volume & Mute

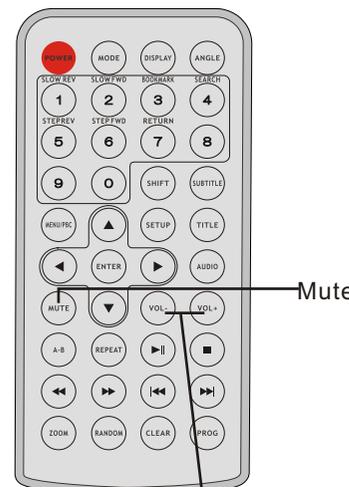


Volume

Press the **VOL+/VOL-** buttons and the following volume adjust menu will appear on the screen.
Use **VOL+** to increase the volume and **VOL-** to decrease the volume.



Mute

 If you do not want to have audio while the movie or music is being played:
1. Press **Mute** to turn audio off.
2. Press **Mute** again to turn audio on.




VOL+/VOL-

Advanced Operation

VCD/SVCD PBC MENU

Some VCD and SVCD discs (Karaoke-discs) have disc menus. They are used to select the contents that you want to view. This type of menu can also be called the **PBC (Playback Control) MENU**.

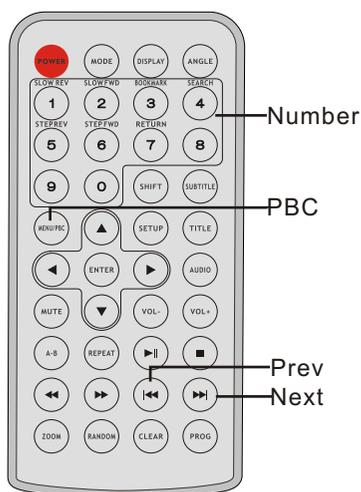

- If this type of disc is being played:
1. When the PBC option is set to ON in the Others settings of the setup menu, the disc playback will be automatically started and will stop at the PBC MENU screen. You can press **PBC** button on the remote control to turn the PBC function ON/OFF.
 2. Press **Prev** and **Next** to scroll the previous/next Menu pages if available.
 3. Press the **Number** buttons to enter the number of the segment or track that you wish to play. If the segment or track is a two digit number, simply enter the two digits consecutively.

Q: I do not want to see the PBC Menu. I just want to the disc to play.

A: Simply set **PBC** option to OFF in the Others setting of the setup menu, and the **PBC** function will be disabled. The unit will resume the disc playback from the beginning of the disc, and will not show the **PBC** menu.

Q: How do I get back to the menu during the playback?

A: With the PBC function on, enter the second function by pressing **Shift** and then pressing **Return** to stop the disc playback and get back to the menu.

Q: The PBC function has been turned off, how do I turn it back on again?

A: Simply set **PBC** option to ON in the Others setting of the setup menu to restore the PBC function. The other way is press **Menu/PBC** key again. Note that after the PBC is turned on, the current playback will be stopped and the **PBC** menu will be displayed.



Note:

If no operations are executed within 10 seconds after the PBC menu is displayed, the unit will resume the playback from the first track.

Repeat/A-B

Repeat: Press **Repeat** if user wants to repeat the whole disc or a specific track/ chapter of the disc

1. Press **Repeat** to switch between different repeat modes.
2. When **Repeat** is pressed, the repeat results may differ depending on the disc types. See the diagram below:

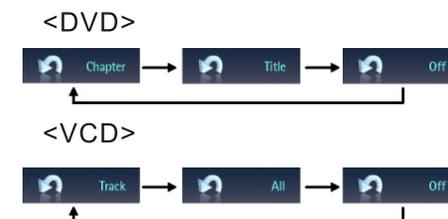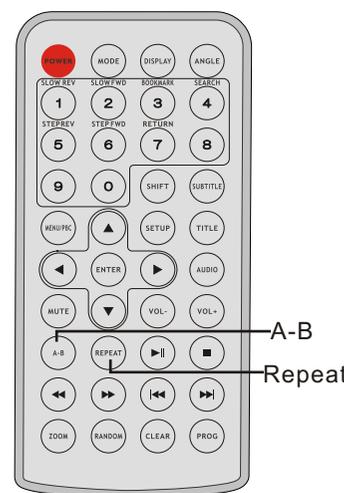

A-B: Press **A-B** if you want to repeat a specific segment on the DVD that you can define.

1. Press **A-B** once at the point (A) where you want to start the repeat.



2. Press **A-B** again at the point (B) where you want to end the repeated segment.



3. The A-B segment repeat will then start to play.

4. Press **A-B** a third time to cancel the A-B repeat mode and resume the normal disc playback.



Note:

When playing VCD2.0, the repeat function can only be achieved with the PBC function turned off.

Advanced Operations

Console operation

You can display the general playback status on the screen. Some items can be changed using the menu. To use the on-screen display:

1. Press **Display** during playback.
2. Press **▲/▼** to select an item. The selected item is highlighted.
3. Press **◀/▶** to change the setting. You can also use the number buttons if appropriate (e.g. inputting the title number). For some functions, press Enter to execute the setting.

Notes:

- Some discs may not provide all of the features shown below.
- If no button is pressed for 10 seconds, the on-screen Display disappears.

Example: On-Screen Display during playing DVD/DVD-VR

Title Number	 1/17	◀ / ▶ Numbers Enter
Chapter Number	 2/32	◀ / ▶ Numbers Enter
Time Search	 0:01:45	Numbers Enter
Audio language and digital Audio output mode	 1. ENG D D 3/2.1	◀ / ▶ or Audio
Subtitle language	 OFF	◀ / ▶ or Subtitle

Angle  1/1

◀ / ▶ or Angle

Sound



◀ / ▶

Example: On-Screen Display during playing VCD

Track Number (or PBC mode)	 PBC	
Time Search	 0:01:45	Numbers Enter
Audio Channel	 Stereo	◀ / ▶ or Audio
Sound	 Normal	◀ / ▶

Advanced Operations


Random

1. Each time you press **Random**, the unit automatically executes the random playback function.
2. In **Random** mode, press **Random** again to return to the normal playback mode.

Note:

1. The function is only valid for VCD, SVCD and CD discs.
2. The function is only valid for VCD/SVCD discs when the PBC function is turned off.

Zoom & Programming

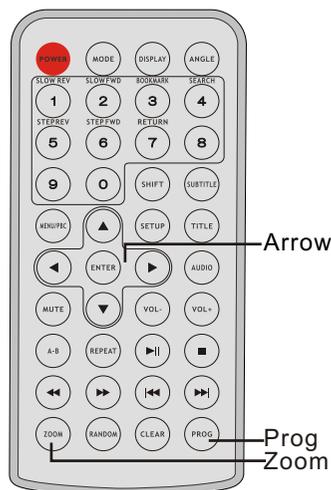

Zoom

1. When playing a disc, press **Zoom** to magnify the image. Each time you press **Zoom**, the picture is magnified even more (until you get to the maximum zoom level).
2. To see other parts of the picture when you are zoomed in on the image, try pressing the Arrows to move in corresponding directions. This feature is called Pan and Scan.


Programming

The program playback function allows you to enter the order in which you want the tracks to play. This feature is not available on DVD discs.

1. The program playback function is valid only when the PBC function is off, and when the unit has stopped playback for VCD discs.
2. Please see the audio playback section for more information on how to set the program playback menu for VCD or audio discs.

Special features only in DVD disc

Three special functions are available for DVD discs.

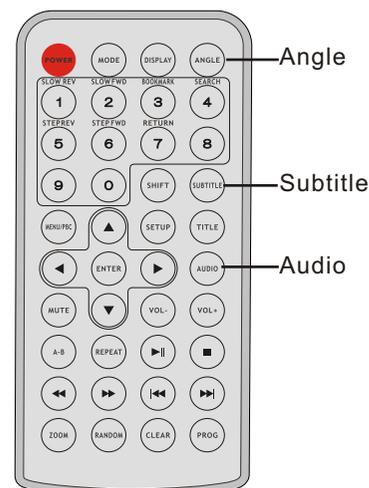

Select the Subtitle Language

1. Press **Subtitle** once to bring up the subtitle information shown on the top left corner of the screen. See the illustration below:



2. Each time you press **Subtitle**, you can switch to the next subtitle.
3. If the Subtitle menu is not displayed press **Subtitle** to bring up the subtitle menu.

Select the Audio Language

1. Press **Audio** once to bring up the audio information shown on the top left corner of the screen.



You will see the language selected and the digit audio output information as illustrated below:

2. Each time you press **Audio**, you can switch to the next audio language.
3. If the audio menu is not displayed, press **Audio** to bring up the audio menu..

Select the Camera Angle

1. Press **Angle** once to bring up the angle information shown on the top left corner of the screen. See the illustration below:



2. Each time you press **Angle**, the camera angle changes.
3. If the camera angle menu is not displayed, press **Angle** to bring up the camera angle menu.

Advanced Operations

The second function—Shift key

Shift key: The Shift key on the remote control is used in combination with the number keys which have a second function. The number keys that have a dual functions are labeled as SLOW REV, SLOW FWD, BOOKMARK, SEARCH, STEP REV, STEP FWD, RETURN.

Second function keys



1. Press **Shift** to open the following function symbol.



2. Press the **second function** key you want to use, and press it within 5 seconds, otherwise the second function will quit automatically.


SLOW FWD: If a disc is being played, holding the **Slow forward** key will cause the playback to play forward slowly. When playing in **Slow forward**, the image plays slowly and the sound stops. Press **Play** to resume normal play

SLOW REV: If a disc is being played, holding the **Slow reverse** key will cause the playback to play forward slowly. When playing in **Slow reverse**, the image plays slowly and the sound stops. Press **Play** to resume normal play.

Step FWD/Step REV: During playback pressing the Step FWD/Step REV key allows you to progress the playback one frame at a time.

Return: During playback, press the **Return** key to return to the PBC menu. When playing picture CD, press the **Return** key to show and hide picture menu.

Note:
The *Slow REV, Slow FWD, Bookmark, Search, Step REV, Step FWD, Return* must be in second function mode.

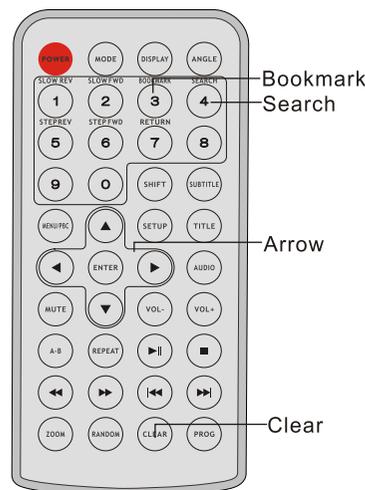

During disc playback, you can use the **Bookmark** function, as follows:

1. Press the **Shift** key to open the function symbol below:



2. When you want to set a bookmark at the position currently being played, press **Bookmark**. On the bookmark menu, you will see the following picture. It indicates a bookmark has been set at this specified position.



3. If you want to see the bookmark that you just set, follow these steps:

(1). Press the **Shift** key to open the function symbol below:



(2). Press **Search** to achieve search function. The bookmark you have set appears as below;



Use the arrow keys to move the cursor to the related bookmark, and press **Play** or **Enter**.

Notes:

- (1). Press the **Search** again to exit the search menu.
- (2). You can set a total of 9 bookmarks. You also can delete the bookmark point you have set by pressing **Clear** on the remote control.

Advanced Operations

Frequently asked questions

Q: After I inserted the DVD disc into the unit, the screen asks for a 4-digit password. Why?

A: This is because the DVD disc that you have inserted is rated with the **Parental Control**, and the current rating level set is lower than the rating of the disc.

After you enter the password correctly, the disc playback can start normally.

*Provided that you have not already changed it, the factory preset password for the player is **empty**. Please refer to **Setup Menu/Lock Setup** for the details on how to set the rating level of the parental control on the DVD player.*

Note on Parental Control:

The DVD Parental Control is a rating system, like movie ratings. It helps you to control the rating of DVDs that your family watches. Use the settings on the screen to set the rating of the player (including the software player on the PC). If the disc rating is higher than the rating of the unit, the disc cannot be played. Note that some times, the rating control sequence is different subject to the disc types. The unit alerts you when you try to play a movie with a rating that exceeds the limit you are set. If you choose to override the rating limit, you will need to enter your password to resume the disc playback. If you choose to unlock the parental control, the parental control feature will not function, and the whole disc contents will be played. The same DVD disc can also be edited into different editions based on the rating set by the parental control. With the parental control, you can also edit out or replace the violent scenes that are unsuitable for children..

List of parental control levels:


1. Adult
2. NC-17
3. R
4. PG-R
5. PG-13
6. PG
7. G
8. Kids

Advanced Operations

Playing MP3, WMA, and JPEG files

When you insert a disc that contains MP3, WMA, MPEG, or JPEG data or an audio CD into the unit, you will see the files listed as illustrated below:

1. Press **Title** to switch among the 3 option pages: **Music**, **Photo** and **Movie**.
2. The music page is divided into 3 areas: **Playback list**, **Program list** and the **Edit area** in the middle.

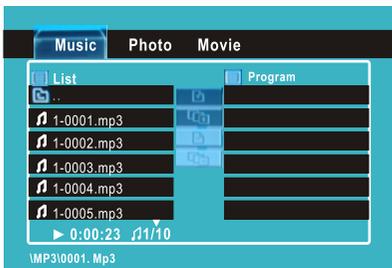

- You can press **Play** or **Enter** on the high lighted folder in the **Playback list** to view the folder contents, or play the corresponding audio files in the **Playback list** or **Program list**.
- You can use the ADD, ADD ALL, DELETE and DELETE ALL options provided in the middle edit area to choose what files get played in the program list..
- To remove a file, simply move the highlight to the corresponding file under the program list, and press **Clear**.

3. The photo page is divided into 3 areas: **Playback list**, **Preview window** and the **Edit area** in the middle.



- You can press **Play** or **Enter** on the highlighted folder in the **Playback list** to view the folder contents
- When the highlighted file you select is a picture file, you will see a minimized version of the picture in the preview window on the right side of the photo page.
- After you press **Enter** on the slide show option in the middle **Edit area**, you will see all the pictures displayed in order.

- After you press **Enter** on mix in the middle edit area, all the pictures will be displayed in order, and the MP3 songs will be played as background music.
- The speed in the edit area is used to adjust the time spent during the picture transition.



4. In the movie page, you can press **Play** or **Enter** on the highlighted folder in the playback list to view the folder contents or play the corresponding file.

Note :

The playback interface and operations of the audio CD disc is very similar to that of Music. Please refer to the related descriptions in the music section for more information audio CD playback.

System Setup Menu

System setup menu

You can press the **Setup** key on the remote control to bring up system setup menu.

- When the cursor is located at the top of the On-Screen Display, press **Left/ Right** arrow keys to switch between different pages.
- Press **Down** arrow key to move to the setup page, and press **Up/ Down** Arrow keys to select the setting that you want to change.
- Open the selection list by pressing **Right** arrow key on the selected item. Change the selection by **Up/ Down** arrow keys and enter key.

Setting the language



1. You will first see the **LANGUAGE** menu page when the setup menu is brought up, as illustrated on the left.



2. The item Menu Language is used to select the setup menu and OSD (ON-Screen Display) language used during the disc playback and instructional operations. The language selection includes English, French, Chinese, Japanese on the left.

3. **Disc Audio:** When you play a DVD disc, the unit will select the default audio language if the language is available in the disc. Please note that if the language recorded on the disc is not available in the language in the disc menu, the language originally recorded on the disc will be used. If the disc is equipped with a specific playback language, the language specified will be used.
4. The **Disc Subtitle** and **Disc Menu** functions are similar to that of Disc Audio. They are used to set the default playback language for the DVD subtitle and Menu display language.



Display setup

1. When entering the **Display Setup Menu** page, you will see the screen illustrated below.



System Setup Menu


Display setup

2. **TV Aspect:** Depending on the type of television you have, the image adjustment offers 2 options for your setting: **4:3** and **16:9**. This item is used to display image data in the wide-screen film on the normal TV set. The option 16:9 is used when the DVD player is connected to wide screen TV in Full Mode, and the screen will display pictures in full size.



3. The **Display Mode** item can only be modified when the **TV Display** mode is set to 4:3. Two options are provided: **Letterbox** and **Panscan**.

- **Letterbox** : This image option will display the panoramic frame movie in the smaller portion of the screen. And the movie might appear with black bars at the top and bottom of the screen.
- **Panscan**: This image option refers to pictures where the left and right edges of the picture are cut off so it fills the whole screen. It is selected for the normal TV set display. This mode is selected when the picture is displayed in panoramic view and complete scan format.

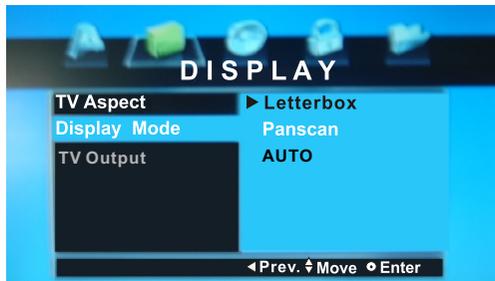

4. TV Output is used to switch TV system when you need. Here provide PAL, AUTO, and NTSC. When connect to TV set, choose TV system according to actual situation until get satisfied picture. In defect mode, choose NTSC.


Audio setup

1. You will first see the picture as shown on the below side after you enter the **AUDIO**. For language code, refer to Appendix2.



2. The Dolby Digital option allows you to toggle the Dolby Digital output On/Off. Two options are provided: **Bitstream** and **PCM**. The DTS indicates the output mode of the Digital Cinema.


- **Bitstream**: Select this option when the unit is connected to an amplifier with a builtin DTS decoder, Dolby Digital decoder and MPEG decoder, or other audio equipment with digital audio output terminals.
- **PCM**: Select this option when the unit is connected to the dual stereo digital audio equipment. When the DVD disc being played is recorded with the dolby digital, MPEG1/MPEG2 recording systems, the DVD player selects PCM as the audio output.

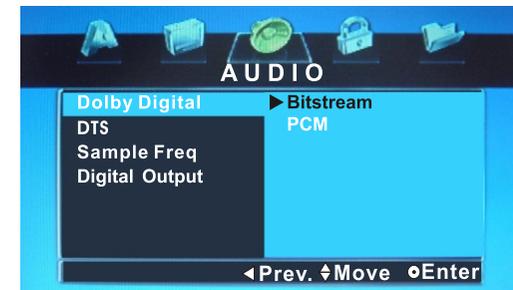

System Setup Menu

Audio setup

3. The Sample Freq provides 2 options. If the connected receiver or amplifier is not capable of processing digital input with a sampling frequency of 96kHz, it will select 48kHz as the sampling frequency to compress the signal to a standard signal. After the 48kHz frequency is selected, the unit will automatically convert 96kHz signals into 48kHz signals, and then your system will be able to decode the signals. If the receiver is capable of outputting digital signals with a sampling frequency of 96kHz, it will select 96kHz as the output signal. After 96kHz frequency is selected, the unit will be able to process all signals without any compression.

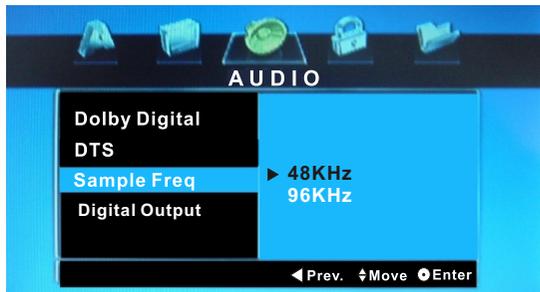

4. The Digital output option is used to turn the Dolby Digital/DTS/Sample Freq. On/Off.




Lock setup

1. You will see the screen illustrated below upon entering the **Lock Setup Menu**. This page is used to set the **Parental Control**.
2. The **Rating** item is used to set the rating level.
 - Before you enter into the item, the system will request you to input the password first. After the password is entered correctly, the parental control rating level can be changed.
 - If you did not set any password for Parental Control, the system will request you to input a new password.
 - If you make a mistake before pressing Enter, press Clear and enter your 4-digit password again.




- After the new password is entered successfully, press **Up/ Down** to change the parental control rating level. Including the **Unlock** level, there are a total of 9 levels in the parental control rating levels. See the **Parental Control** section for details.

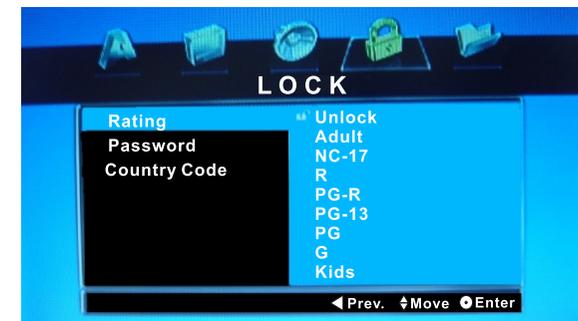


System Setup Menu

Lock setup

4. The **Password** option is used to set a new password or change the old password. Before you can change the password, the system will require you to input the old password first. The new password will be accepted only when the old password is input correctly.

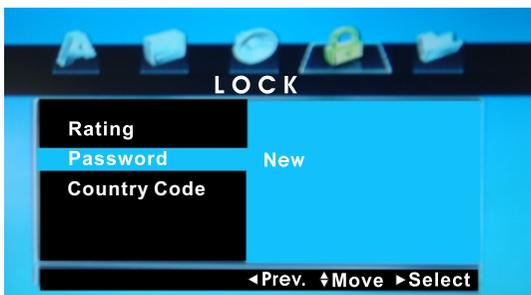

5. The **Country Code** item is used to set the region code. The Parental Control level is only valid when the Country Code of the unit is matched with that of the disc. Changes can be made by modifying the two letter code.

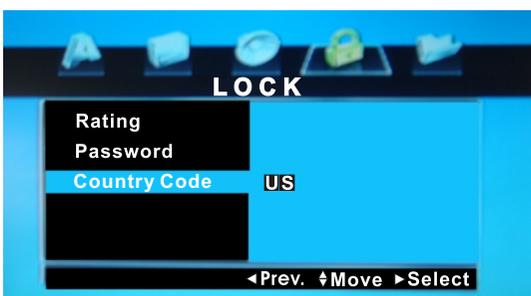

- Before the user can enter into the country code item, the system will request you to input the password first. The country code can be changed only after the password is inputted successfully.
- Press **Up/ Down** to select the first letter.
- Press **Right** to move the highlight
- Press **Up/ Down** again to select the second letter.

Other settings

- Press **Enter** to confirm the selection of the Country Code.

Note :

Submit password: 6512.

For country code, refer to Appendix 1.

1. You will see the screen illustrated below upon entering the Others setting page. This page is used to set on the PBC, Auto Play, B.L.E, Load Default, Screen Saver, and Last Play options.



2. The PBC function provides 2 options: ON and OFF. Please refer to the VCD/ SVCD PBC menu section for detailed descriptions of ON and OFF option of the PBC function.



System Setup Menu

Other settings


3. The **Auto Play** provides 2 options: ON and OFF. When the option is set as ON, the auto play function is activated. For VCD and CD discs, the unit will automatically play the VCD/CD disc from the beginning once the disc is recognized. When the auto play option is set as OFF, the user will need to manually play VCD/CD discs.



Note:

If the **Auto Play** function is set to OFF, a VCD disc is read, shows the VCD icon, but playback does not start, press the Play key to play.

4. When the **B.L.E.** (Black Level Expansion) function is executed on the picture, the best picture quality is achieved. The B.L.E. item provides 2 options: ON and OFF. When this option is turned ON, the black level of the picture will be expanded (0 IRE is cut off, dark). When this option is turned OFF, the black level of the picture will be the standard level (7.5 IRE is cut off, light).

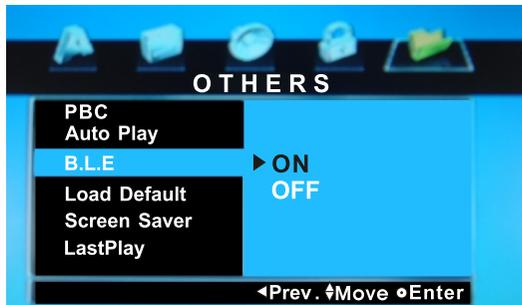


Note :

The **B.L.E.** function is only valid when the TV color signal system is set at NTSC.

Other settings

5. **Load Defaults function:** If you have made changes in the setup menu, and wish to revert back to the default factory settings, just move the cursor to the selection and press enter. Any changes made to the setup menu will be restored to the factory defaults.

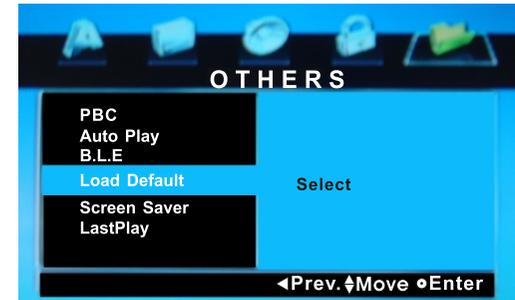

6. **Screen Saver function:** You can toggle ON/OFF the Screen Saver if you do not wish to have the Screen Saver appear.



Troubleshooting

Other settings

7. Memory Play function: This player has memory play function. If you reset or put the previous disc into the tray after reopening the tray, the player will continue to play from the point interrupted last time. If you do not want to have this function you can select the OFF.



Troubleshooting

Before requesting service for this DVD player, please check the items below for a possible cause of the problem you are encountering. Some simple checks or a minor adjustment on your part may eliminate the problem and restore the proper operation.

1. Power

➤ No power

Check if the AC power cord has been connected correctly or if the battery is in place.

2. Picture

➤ Picture distortion

Need to clean the disc.

➤ Picture does not fit TV screen

The images may not fill up the whole TV screen even after the mode has been set. This is because the DVD images are fixed in width.

3. Sound

➤ No Sound

- (a).If the unit is being played in slow or pause mode, press Play to return to normal playback.
- (b).If the unit is played in 8x, 16x, or 100x mode, press Play to return to the normal playback speed.

- (c).When the unit is in System Setting/Program Menu, press Setup/Prog to exit the System Menu/Program menu, or press Play to return to the normal playback mode

- (d).If the unit is Muted, press Mute again to enable the normal sound play.

4. Operations

➤ The remote control does not work properly.

- (a).Using remote control near the unit. Aim the remote control at the remote sensor of the unit.
- (b).If the batteries in the remote control are dead, please replace batteries with new ones.

➤ Disc Playback Failure

- (a).No disc is inserted. (No disc symbol appears on the screen). Please insert your disc. It is possible that the disc is dirty. Please clean the disc.
- (b).There could be humidity in the unit. Power on the unit for 30 minutes without playing any discs.

➤ The player fails to play from the beginning

- (a).The play mode is in the Program, Random, Repeat or Repeat A-B mode. Press the relative functions again to restore the normal play mode.(Please refer to the advanced operations chapter for detailed instructions.)
- (b).While the DVD Title/Chapter or DVD setup menu is displayed on the TV screen directly, or while playing Video CD that includes PBC function, the setup menu is displayed on the TV screen.

➤ Stops playing automatically

Some discs have recorded the pause automatically command in the original recording. The unit will stop playing automatically at the segment where the command is recorded.

If the battery is dead, please recharge the battery or connect the unit to the adapter.

The battery life is between 3 and 4 hours depending on your usage. A Low battery warning will be displayed about five minutes, after which the unit will automatically switch off.

Safety Guide

Read all instructions and warnings provided. Save these instructions for future use.

If service is required, ensure work is done by a qualified technician.
Do not use this unit near water or in a rainy/moist environment
Do not attempt to service this product yourself. Doing so will expose you to various hazards including dangerous voltage
This unit is suitable for a 110V to 230V AC power supply
Disconnect the power cable (pull plug) and USB cable in the following situations:
-In the event of service
-Power cable/plug becomes damaged
-Unit is exposed to excess moisture/rain
-Unit is being cleaned
Unit must be used with adult supervision at all times; children must not be allowed to handle any of the cable
Never insert any objects other than CDs/DVDs into the tray.

Warranty Information

One Year Limited Warranty

This EMPREX device is guaranteed against manufacturing defects for one full year from the original date of purchase.
This warranty is valid at the time of purchase and is non-transferable. Sales slip or other authentic evidence is required to validate warranty. Damage caused by accident, misuse, abuse, improper storage, and/or uncertified repairs is not covered by this warranty.
All mail or transportation costs including insurance are at the expense of the owner.
Do not send any product to EMPREX for warranty without an RMA (Return Merchandise Authorization) and proof of purchase. Ensure delivery method can be tracked (keep tracking number).
Warranty is valid only in the country of purchase. EMPREX assumes no liability that may result directly or indirectly from the use or misuse of these products.
IMPORTANT
This warranty will be voided if the device is tampered with, improperly serviced, or the security seals are broken or removed.

Technical Support

US: 4180 Business Center Drive Fremont, CA 94538, USA
Website: www.allsupport.net Email: support@allsupport.net
EUR: Website: www.emprex.com Email: tech_eu@emprex.com
Other: Website: www.emprex.com Email: service@emprex.com

Appendix 1

Country Codes

Choose a country code from this list.

Country	Code	Country	Code
Afghanistan	AF	Hungary	HU
Argentina	AR	India	IN
Australia	AU	Indonesia	ID
Austria	AT	Israel	IL
Belgium	BE	Italy	IT
Bhutan	BT	Jamaica	JM
Bolivia	BO	Japan	JP
Brazil	BR	Kenya	KE
Cambodia	KH	Kuwait	KW
Canada	CA	Libya	LY
Chile	CL	Luxembourg	LU
China	CN	Malaysia	MY
Colombia	CO	Maldives	MV
Congo	CG	Mexico	MX
Costa Rica	CR	Monaco	MC
Croatia	HR	Mongolia	MN
Czech Republic	CZ	Morocco	MA
Denmark	DK	Nepal	NP
Ecuador	EC	Netherlands	NL
El Salvador	EG	Netherlands Antilles	AN
Egypt	SV	New Zealand	NZ
Ethiopia	ET	Nigeria	NG
Fiji	FJ	Norway	NO
Finland	FI	Oman	OM
France	FR	Pakistan	PK
Germany	DE	Panama	PA
Great Britain	GB	Paraguay	PY
Greece	GR	Philippines	PH

Appendix 1

Country	Code	Country	Code
Russian Federation	RU	Switzerland	CH
Saudi Arabia	SA	Taiwan	TW
Senegal	SN	Thailand	TH
Singapore	SG	Turkey	TR
Slovak Republic	SK	Uganda	UG
Slovenia	SI	Ukraine	UA
South Africa	ZA	United States	US
South Korea	KR	Uruguay	UY
Spain	ES	Uzbekistan	UZ
Sri Lanka	LK	Vietnam	VN
Sweden	SE	Zimbabwe	ZW
Greenland	GL	Poland	PL
Islands	HM	Portugal	PT
Hong Kong	HK	Romania	RO

Appendix 2

Language Codes

Use this list to input your desired language for the following initial settings: Disc Audio, Disc Subtitle, Disc Menu

Language	Code	Language	Code
Abkhazian	6566	English	6978
Afar	6565	Esperanto	6979
Afrikaans	6570	Estonian	6984
Albanian	8381	Faroese	7079
Ameharic	6577	Fiji	7074
Arabic	6582	Finnish	7073
Armenian	7289	French	7082
Assamese	6583	Frisian	7089
Aymara	6588	Galician	7176
Azerbaijani	6590	Georgian	7565
Bashkir	6665	German	6869
Basque	6985	Greek	6976
Bengali; Bangla	6678	Greenlandic	7576
Bhutani	6890	Guarani	7178
Bihari	6672	Gujarati	7185
Breton	6682	Hausa	7265
Bulgarian	6671	Hebrew	7387
Burmese	7789	Hindi	7173
Byelorussian	6669	Hungarian	7285
Cambodian	7577	Icelandic	7383
Catalan	6765	Indonesian	7378
Chinese	9072	Interlingua	7365

Appendix 2

Language	Code	Language	Code
Kashmiri	7583	Portuguese	8084
Kazakh	7575	Quechua	8185
Kirghiz	7589	Rhaeto-Romance	8277
Korean	7579	Rumanian	8279
Kurdish	7585	Russian	8285
Laothian	7679	Samoan	8377
Latin	7665	Sanskrit	8365
Latvian, Lettish	7686	Scots Gaelic	7176
Lingala	7678	Serbian	8382
Lithuanian	7684	Serbo-Croatian	8672
Macedonian	7775	Shona	8376
Malagasy	7771	Sindhi	8368
Malay	7783	Singhalese	8373
Malayalam	7776	Slovak	8375
Maltese	7784	Slovenian	8376
Maori	7773	Somali	8379
Marathi	7782	Spanish	6983
Moldavian	7779	Sudanese	8385
Mongolian	7778	Swahili	8387
Nauru	7865	Swedish	8386
Nepali	7869	Tagalog	8476
Norwegian	7879	Tajik	8471
Oriya	7982	Tamil	8465
Panjabi	8065	Tatar	8484
Pashto, Pushto	8083	Telugu	8469

Appendix 2

Language	Code	Language	Code
Tigrinya	8473	Vietnamese	8673
Tonga	8479	Volapuk	8679
Turkish	8482	Welsh	6789
Turkmen	8475	Wolof	8779
Twi	8487	Xhosa	8872
Ukuainian	8575	Yiddish	7473
Urdu	8582	Yoruba	8979
Uzbek	8590	Zulu	9085
Corsican	6779	Irish	7165
Croatian	7282	Italian	7384
Czech	6783	Japanese	7465
Danish	6865	Javanese	7487
Dutch	7876	Kannada	7578
Persian	7065	Thai	8472
Polish	8076	Tibetan	6679