


BUNN®

CWA-APS, TS
CWTA-APS, TS

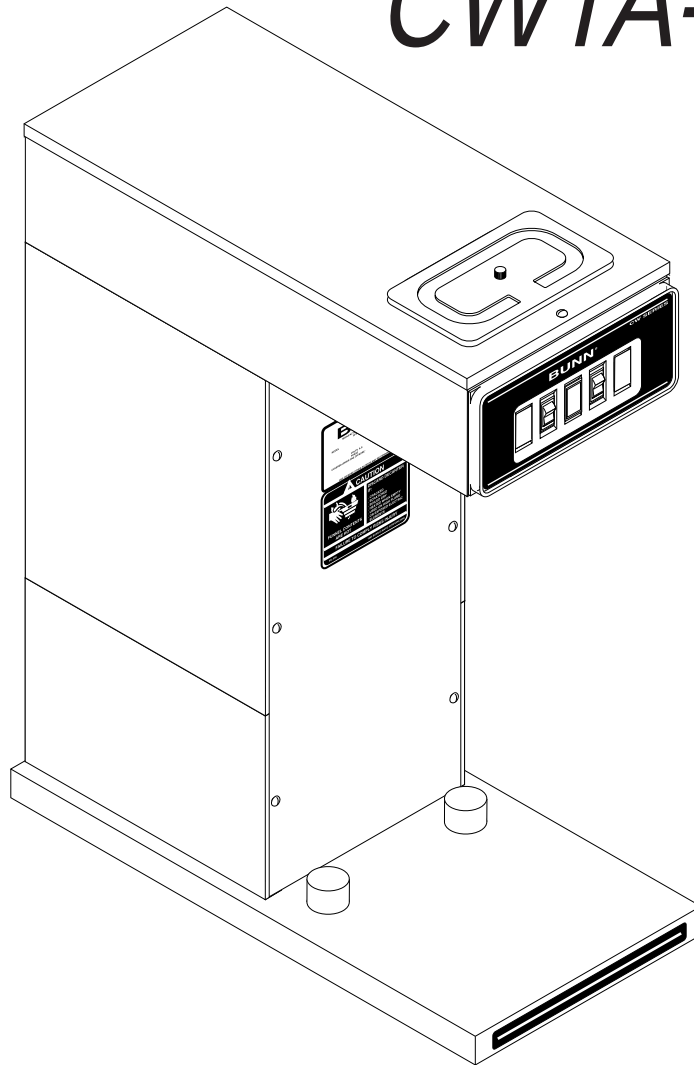

OPERATING & SERVICE MANUAL

BUNN-O-MATIC CORPORATION

POST OFFICE BOX 3227

SPRINGFIELD, ILLINOIS 62708-3227

PHONE: (217) 529-6601 FAX: (217) 529-6644

INTRODUCTION

This equipment will brew a half-gallon batch of coffee into an awaiting dispenser. It can be easily configured for either pour-over or automatic brewing. The automatic version may include a hot water faucet for allied beverage use. It is only for indoor use on a sturdy counter or shelf.

WARRANTY

Bunn-O-Matic Corp. ("Bunn") warrants the equipment manufactured by it to be commercially free from defects in material and workmanship existing at the time of manufacture and appearing within one year from the date of installation. In addition:

1.) Bunn warrants electronic circuit and/or control boards to be commercially free from defects in material and workmanship for two years from the date of installation.

2.) Bunn warrants the compressor on refrigeration equipment to be commercially free from defects in material and workmanship for two years from the date of installation.

3.) Bunn warrants that the grinding burrs on coffee grinding equipment will grind coffee to meet original factory screen sieve analysis for three years from date of installation or for 30,000 pounds of coffee, whichever comes first.

This warranty does not apply to any equipment, component or part that was not manufactured by Bunn or that, in Bunn's judgement, has been affected by misuse, neglect, alteration, improper installation or operation, improper maintenance or repair, damage or casualty.

THE FOREGOING WARRANTY IS EXCLUSIVE AND IS IN LIEU OF ANY OTHER WARRANTY, WRITTEN OR ORAL, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTY OF EITHER MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. The agents, dealers or employees of Bunn are not authorized to make modifications to this warranty or to make additional warranties that are binding on Bunn. Accordingly, statements by such individuals, whether oral or written, do not constitute warranties and should not be relied upon.

The Buyer shall give Bunn prompt notice of any claim to be made under this warranty by telephone at (217) 529-6601 or by writing to Post Office Box 3227, Springfield, Illinois, 62708-3227. If requested by Bunn, the Buyer shall ship the defective equipment prepaid to an authorized Bunn service location. If Bunn determines, in its sole discretion, that the equipment does not conform to the warranty, Bunn shall repair the equipment with no charge for parts during the warranty period and no charge for labor by a Bunn Authorized Service Representative during the warranty period. If Bunn determines that repair is not feasible, Bunn shall, at its sole option, replace the equipment or refund the purchase price for the equipment.

THE BUYER'S REMEDY AGAINST BUNN FOR THE BREACH OF ANY OBLIGATION ARISING OUT OF THE SALE OF THIS EQUIPMENT, WHETHER DERIVED FROM WARRANTY OR OTHERWISE, SHALL BE LIMITED, AS SPECIFIED HEREIN, TO REPAIR OR, AT BUNN'S SOLE OPTION, REPLACEMENT OR REFUND.

In no event shall Bunn be liable for any other damage or loss, including, but not limited to, lost profits, lost sales, loss of use of equipment, claims of Buyer's customers, cost of capital, cost of down time, cost of substitute equipment, facilities or services, or any other special, incidental or consequential damages.


Carefully read and follow all notices in this manual.
The manual should be kept in good condition. Replace any unread

00656.0000

ELECTRICAL REQUIREMENTS

CAUTION - The brewer must be disconnected from the power source until specified in *Initial Set-Up*.

"A" Models require 2-wire grounded service rated 230-240 volts ac, 20 amp, single phase, 50 Hz.

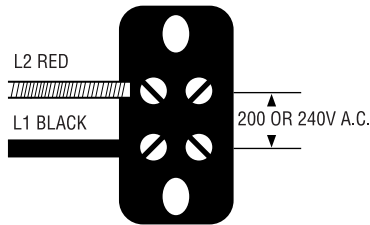

Electrical Hook-Up

CAUTION – Improper electrical installation will damage electronic components.

1. An electrician must provide electrical service as specified.
2. Using a voltmeter, check the voltage and color coding of each conductor at the electrical source.
3. Place the heater switch at the rear of the brewer in the “OFF” lower position.
4. Remove the front panel beneath the sprayhead.
5. Feed the cord through the strain relief and connect it to the terminal block.
6. Connect the brewer to the power source and verify the voltage at the terminal block before proceeding. Replace the front panel.
7. If plumbing is to be hooked up later be sure the brewer is disconnected from the power source. If plumbing has been hooked up, the brewer is ready for *Initial Set-Up*.

PLUMBING REQUIREMENTS

Models CWA-APS & CWA-TS:

These models are completely portable and require no attached plumbing.


Models CWTA-APS, CWTFA-APS, CWTA-TS, CWTFA-TS:

These brewers must be connected to a cold water system with operating pressure between 20 and 90 psi (138 and 620 kPa) from a ½" or larger supply line. A shut-off valve should be installed in the line before the brewer. Install a regulator in the line when pressure is greater than 90 psi (620 kPa) to reduce it to 50 psi (345 kPa) . The water inlet fitting is ¼" flare.

NOTE - Bunn-O-Matic recommends ¼" copper tubing for installations of less than 25 feet and ⅜" for more than 25 feet from the ½" water supply line. A tight coil of copper tubing in the water line will facilitate moving the brewer to clean the countertop. Bunn-O-Matic does not recommend the use of a saddle valve to install the brewer. The size and shape of the hole made in the supply line by this type of device may restrict water flow.

This equipment must be installed to comply with the Basic Plumbing Code of the Building Officials and Code Administrators International, Inc. (BOCA) and the Food Service Sanitation Manual of the Food and Drug Administration (FDA).

PLUMBING REQUIREMENTS (cont.)

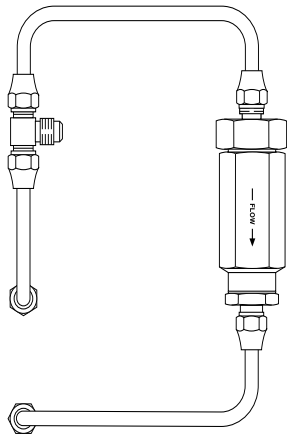

BE SURE TO INSTALL THE ABOVE
ASSEMBLY AS SHOWN

Models CWTFA-APS & CWTFA-TS

1. Attach the flare fitting from the short piece of tubing on the flow control (supplied) to the lower water inlet fitting at the left rear of the brewer.
2. Attach the flare fitting from the short piece of tubing on the tee (supplied) to the upper water inlet fitting at the left rear side of the brewer.
3. Flush the water line and securely attach it to the flare fitting on the tee.
4. Turn on the water supply.
5. Place an empty vessel beneath the faucet and lift the handle until water is dispensed.

INITIAL SET-UP

CAUTION - The brewer must be disconnected from the power source throughout the initial set-up, except when specified in the instructions.

1. Insert an empty funnel into the funnel rails.
2. Place an empty dispenser under the funnel.
3. Place the heater switch at the rear of the brewer in the "OFF" (lower) position and connect the brewer to the power source.
4. Fill the tank with water as directed:
 - 4A. Models CWA-APS & CWA-TS:
Pour three pitchers of tap water into the screened area on top of the brewer. Allow approximately two minutes between pitchers for water to flow into the tank. While the third pitcher of water is entering the tank, the tank will fill to capacity and the excess will flow from the sprayhead, out of the funnel, and into the dispenser.
 - 4B. Models CWTA-APS, CWTFA-APS, CWTA-TS & CWTFA-TS:
Connect the brewer to the power source, place the "ON/OFF" switch in the "ON" (upper) position, and momentarily press and release the START switch. Water will begin flowing into the tank. When water stops flowing into the tank, initiate a second and a third brew cycle. During the third brew cycle the tank will fill to its capacity and the excess will flow from the sprayhead, out of the funnel, and into the dispenser.
5. When the flow of water from the funnel stops, place the heater switch at the rear of the brewer in the "ON" (upper) position and wait approximately twenty minutes for the water in the tank to heat to the proper temperature. Some water will drip from the funnel during this time; this is due to expansion and should not occur thereafter.
6. Empty the dispenser and initiate another brew cycle as directed:
 - 6A. Models CWA-APS & CWA-TS:
Pour one pitcher of tap water into the screened area on top of the brewer.
 - 6B. Models CWTA-APS, CWTFA-APS, CWTA-TS & CWTFA-TS:
Place the "ON/OFF" switch in the "ON" (upper) position, and momentarily press and release the START switch.

INITIAL SET-UP (cont.)

7. Place the "ON/OFF" switch in the "OFF" (lower) position after water has stopped flowing from the funnel, and let the water in the tank reheat to the proper temperature.
8. Empty the dispenser and proceed as directed:
 - 8A. Models CWA-PS & CWA-TS:
The brewer is now ready for use in accordance with the coffee brewing instructions on the next page.
 - 8B. Models CWTA-APS, CWTF A-APS, CWTA-TS & CWTF A-TS:
Place the "ON/OFF" switch in the "ON" (upper) position, and momentarily press and release the START switch. Check the water volume in the dispenser after water has stopped flowing from the funnel. It should be 64 ounces.
9. If not, disconnect the brewer from the power source, remove the front panel, and adjust the brew timer as required. See *Adjusting Brew Volumes*. Replace the front panel, connect the brewer to the power source, and allow the water to reheat, start, and measure another brew cycle.
10. Repeat step 9 until 64 oz water volume is achieved.
11. The brewer is now ready for use in accordance with the coffee brewing instructions on the next page.

ADJUSTING BREW VOLUMES

CAUTION - Disconnect the power source from the brewer prior to the removal of any panel for the replacement or adjustment of any component.

NOTE: Prior to setting or modifying batch sizes, check that the brewer is connected to water supply, the tank is properly filled, and a funnel and server are in place.

1. Modifying batch sizes. To modify a batch volume, first check that the SET/LOCK switch is in the "SET" position on the circuit board.

To increase a batch size. Press and hold the START or BREW switch until three clicks are heard. Release the switch (Failure to release the switch within two seconds after the third click causes the volume setting to be aborted and previous volume setting will remain in memory) and press it again one or more times. Each time the switch is pressed, two seconds are added to the brew time period. Allow the brew cycle to finish in order to verify that the desired volume has been achieved.

To decrease a batch size. Press and release the START or BREW switch once for every two-second interval to be removed from the total brew time period; then immediately press and hold down the START or BREW switch until three clicks are heard. Release the switch. (Failure to release the switch within two seconds after the third click causes the volume setting to be aborted and previous volume setting will remain in memory). Allow the brew cycle to finish in order to verify that the desired volume has been achieved.

2. Setting batch sizes. To set a batch volume, first check that the SET/LOCK switch is in the "SET" position on the circuit board. Press and hold the START or BREW switch until three distinct clicks are heard, and then release the switch. (Failure to release the switch within two seconds after the third click causes the volume setting to be aborted and previous volume setting will remain in memory). View the level of the liquid being dispensed. When the desired level is reached, turn the ON/OFF switch to "OFF" (lower). The brewer remembers this volume and will continue to brew batches of this size until the volume setting procedure is repeated.

NOTE: When brewing coffee, batch volumes will decrease due to absorption by the coffee grounds.

3. Setting programming disable feature. If it becomes necessary to prevent anyone from changing brew times once programmed, you can set the SET/LOCK switch to the "LOCK" position. This will prevent any programming to be done until switch is once again placed in the "SET" position.

OPERATING CONTROLS

Models CWA-APS & CWA-TS:

These models function without operating controls.

Models CWTA-APS, CWTFA-APS, CWTA-TS & CWTFA-TS:

ON/OFF SWITCH

Placing the "ON/OFF" switch in the "OFF" (lower) position stops brewing. Stopping a brew cycle after it has been started will not stop the flow of water into the funnel until the tank syphons down to its proper level. Placing the switch in the "ON" (upper) position enables the brew circuit.

START SWITCH

Momentarily pressing and releasing the switch starts a brew cycle when the "ON/OFF" switch is in the "ON" (upper) position.

NOTE – The "ON/OFF" switch must be in the "ON" (upper) position to initiate and complete a brew cycle.

COFFEE BREWING

1. Insert a BUNN® filter into the funnel.
2. Pour the fresh coffee into the filter and level the bed of grounds by gently shaking.
3. Slide the funnel into the funnel rails.
4. Place an empty dispenser beneath the funnel.
5. Operate the brewer as directed:
 - 5A. Models CWA-APS & CWA-TS:
Pour one pitcher of tap water into the screened area on top of the brewer.
 - 5B. Models CWTA-APS, CWTFA-APS, CWTA-TS & CWTFA-TS:
Place the "ON/OFF" switch in the "ON" (upper) position. Momentarily press and release the START switch.
6. When brewing is completed, simply discard the grounds and filter.

CLEANING

1. The use of a damp cloth rinsed in any mild, non-abrasive, liquid detergent is recommended for cleaning all surfaces on Bunn-O-Matic equipment.
2. Check and clean the sprayhead. The sprayhead holes must always remain open.
3. With the sprayhead removed, insert the delimiting spring (provided) all the way into the sprayhead tube. When inserted properly, no more than two inches of spring should be visible. Saw back and forth five or six times.

NOTE – In hard water areas, this may need to be done daily. It will help prevent liming problems in the brewer and takes less than a minute.

TROUBLESHOOTING

A troubleshooting guide is provided to suggest probable causes and remedies for the most likely problems encountered. If the problem remains after exhausting the troubleshooting steps, contact the Bunn-O-Matic Technical Service Department.

- Inspection, testing, and repair of electrical equipment should be performed only by qualified service personnel.
- All electronic components have 240 volt ac and low voltage dc potential on their terminals. Shorting of terminals or the application of external voltages may result in board failure.
- Intermittent operation of electronic circuit boards is unlikely. Board failure will normally be permanent. If an intermittent condition is encountered, the cause will likely be a switch contact or a loose connection at a terminal or crimp.
- Solenoid removal requires interrupting the water supply to the valve. Damage may result if solenoids are energized for more than ten minutes without a supply of water.
- The use of two wrenches is recommended whenever plumbing fittings are tightened or loosened. This will help to avoid twists and kinks in the tubing.
- Make certain that all plumbing connections are sealed and electrical connections tight and isolated.
- This brewer is heated at all times. Keep away from combustibles.

- WARNING –
- Exercise extreme caution when servicing electrical equipment.
 - Unplug the brewer when servicing, except when electrical tests are specified.
 - Follow recommended service procedures
 - Replace all protective shields or safety notices

PROBLEM	PROBABLE CAUSE	REMEDY
Brew cycle will not start	1. No water (CWTA-APS, CWTF-APS, CWTA-TS & CWTF-TS)	Water lines and valves to the brewer must be open.
	2. No power or incorrect voltage to the brewer	(A) Check the terminal block for 240 volts across the red and black terminals. (B) Check circuit breakers or fuses.
	3. ON/OFF Switch	Refer to <i>Service</i> - ON/OFF Switch for testing. See page 16
	4. Start Switch	Refer to <i>Service</i> - Start Switch for testing procedures. See page 18
	5. Timer	Refer to <i>Service</i> - Timer for testing procedures. See page 22 or 23
	6. Solenoid Valve	Refer to <i>Service</i> - Solenoid Valve for testing procedures. See page 17

TROUBLESHOOTING (cont.)

PROBLEM	PROBABLE CAUSE	REMEDY
Brew cycle will not start (cont.)	7. Water strainer/flow control (.222 GPM)(CWTA-APS, CWTFA-APS, CWTA-TS, CWTFA-TS)	(A) Direction of flow arrow must be pointing towards brewer. (B) Remove the strainer/flow control and check for obstructions. Clear or replace.
Water is not hot	1. Tank Heater Switch 2. Limit Thermostat CAUTION - Do not eliminate or bypass limit thermostat. Use only B.O.M. replacement part #29329. 1000 (CWTA-APS, CWTFA-APS, CWTA-TS, CWTFA-TS)	Refer to <i>Service</i> - Tank Heater Switch for testing procedures. See page 20 Refer to <i>Service</i> - Limit Thermostat for testing procedures. See page 15
	3. Control Thermostat	Refer to <i>Service</i> - Control Thermostat for testing procedures. See page 14
	4. Tank Heater	Refer to <i>Service</i> - Tank Heater for testing procedures. See page 19
Inconsistent beverage level in dispenser	1. Strainer /flow control (.222 GPM) (CWTA-APS, CWTFA-APS, CWTA-TS & CWTFA-TS) 2. Syphon System 3. Lime Build-up CAUTION - Tank and tank components should be delimed regularly depending on local water conditions. Excessive mineral build-up on stainless steel surfaces can initiate corrosive reactions resulting in serious leaks.	(A) Direction of flow arrow must be pointing towards the brewer. (B) Remove the strainer/flow control and check for obstruction. Clear or replace. The brewer must be level or slightly lower in front to syphon properly. Inspect the tank assembly for excessive lime deposits. Delime as required.

TROUBLESHOOTING (cont.)

PROBLEM

Inconsistent beverage level in the dispenser (cont.)

PROBABLE CAUSE

4. Water Pressure (CWTA-APS, CWTFA-APS, CWTA-TS & CWTFA-TS)

REMEDY

The water pressure to the brewer must be at least 20 psi (138 kPa).

Consistently low beverage level in the dispenser

1. Timer (CWTA-APS, CWTFA-APS, CWTA-TS & CWTFA-TS)

Timer dial must activate solenoid for at least two minutes and fifteen seconds.

2. Strainer/flow Control (.222 GPM)

(A) Direction of flow arrow must be pointing towards brewer.

(B) Remove the strainer/flow control and check for obstructions. Clear or replace.

Spitting or excessive steaming

1. Lime Build-up
CAUTION - Tank and tank components should be delimed regularly depending on local water conditions. Excessive mineral build-up on stainless steel surfaces can initiate corrosive reactions resulting in serious leaks.

Inspect tank assembly for excessive lime deposits. Delime as required.

2. Control Thermostat

Refer to *Service* - Control Thermostat for testing procedures. See page 14

Dripping from sprayhead

1. Syphon System

The brewer must be level or slightly lower in front to syphon properly.

2. Lime Build-up
CAUTION - Tank and tank components should be delimed regularly depending on local water conditions. Excessive mineral build-up on stainless steel surfaces can initiate corrosive reactions resulting in serious leaks.

Inspect the tank assembly for excessive lime deposits. Delime as required.

3. Solenoid Valve (CWTA-APS, CWTFA-APS, CWTA-TS & CWTFA-TS)

Remove the solenoid valve and clear any obstructions. Rebuild or replace the valve if necessary. See page 16


TROUBLESHOOTING (cont.)

PROBLEM	PROBABLE CAUSE	REMEDY
Water flows into tank continuously (ON/OFF Switch "ON")	1. Timer (CWTA-APS, CWTFA-APS, CWTA-TS & CWTFA-TS)	Refer to <i>Service</i> -Timer for testing procedures. See page 22 or 23
Water flows into tank continuously (ON/OFF Switch "OFF")	1. Solenoid Valve (CWTA-APS, CWTFA-APS, CWTA-TS & CWTFA-TS)	Remove the Solenoid Valve and clean any obstruction. Rebuild or replace the valve if necessary. See page 17
Beverage overflows dispenser	1. Dispenser	The dispenser must be completely empty before starting a brew cycle.
	2. Timer (CWTA-APS, CWTFA-APS, CWTA-TS & CWTFA-TS)	Refer to <i>Service</i> -Timer for testing procedures. See page 22 or 23
	3. Solenoid Valve (CWTA-APS, CWTFA-APS, CWTA-TS & CWTFA-TS)	Remove the Solenoid Valve and clean any obstruction. Rebuild or replace the valve if necessary. See page 17
Weak beverage	1. Filter Type	BUNN® paper filters must be used for proper extraction.
	2. Coffee Grind	A fine or drip grind must be used for proper extraction.
	3. Sprayhead	A six-hole stainless steel sprayhead must be used for proper extraction.
	4. Funnel Loading	The BUNN® paper filter must be centered in the funnel and the bed of grounds leveled by gentle shaking.

TROUBLESHOOTING (cont.)


PROBLEM	PROBABLE CAUSE	REMEDY
Weak beverage (cont.)	5. Water Temperature	Place an empty funnel on an empty dispenser beneath the sprayhead. Initiate a brew cycle and check the water temperature immediately below the sprayhead with a thermometer. The reading should not be less than 195°F (91°C). Adjust the control thermostat to increase the water temperature. Replace if necessary.
Dry coffee grounds remain in the funnel	1. Funnel Loading	The BUNN® paper filter must be centered in the funnel and the bed of grounds leveled by gently shaking.
Brewer is making unusual noises	1. Solenoid (CWTA-APS, CWTFAPS, CWTA-TS & CWTFATS) 2. Plumbing Lines 3. Water Supply 4. Tank Heater	The nut on the solenoid must be tight or it will vibrate during operation. Plumbing lines should not resting on the counter top. (A) The brewer must be connected to a cold water line. (B) Water pressure to the brewer must not exceed 90 psi (620 kPa). Install a regulator if necessary to lower the working pressure to approximately 50 psi (345 kPa). Remove and clean lime off the tank heater. See page 19
Brewer is making unusual noises (CW)	1. Tank Heater	Remove and clean lime off the tank heater. See page 19

 SERVICETHis



SERVICE (cont.)

CONTROL THERMOSTAT

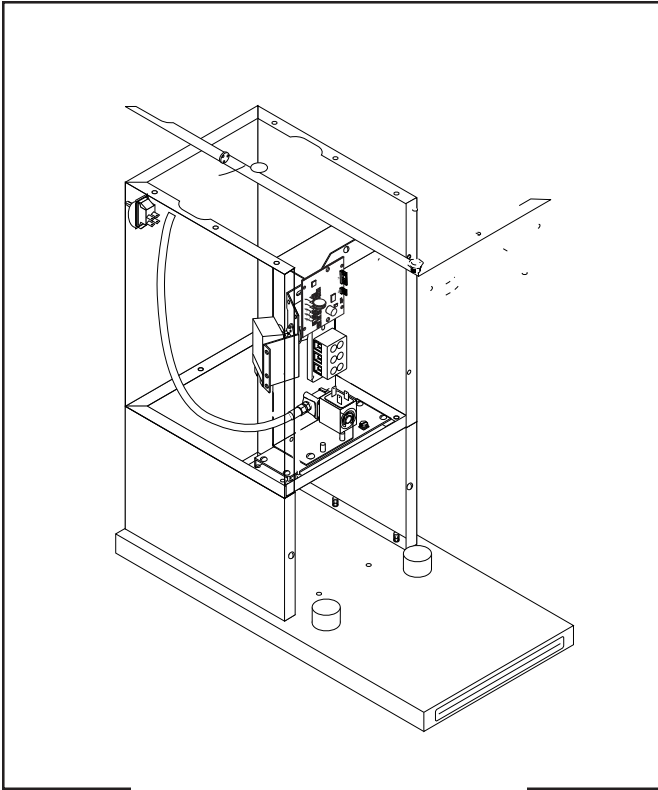

Location:

The control thermostat is located inside the trunk on the upper left side of the component bracket.

Test Procedures:

1. Disconnect the brewer from the power source.
2. Locate the blue wire on the control thermostat.
3. With a voltmeter, check the voltage across the blue wire on the control thermostat and the red insert on the terminal block. Connect the brewer to the power source. The indication must be 240 volts ac.
4. Disconnect the brewer from the power source.

If voltage is present as described, proceed to #5.
If voltage is not present as described, refer to the *Wiring Diagram* and check the brewer wiring harness.

5. Locate the black wire on the control thermostat.
6. Gently remove the capillary bulb and grommet from the tank.
7. With a voltmeter, check the voltage across the black wire of the control thermostat and the red insert on the terminal block when the control thermostat is turned "ON" (Fully clockwise). Connect the brewer to the power source. The indication must be 240 volts ac.

8. Disconnect the brewer from the power source.

If voltage is present as described, reinstall the capillary tube into the tank to the line 4.5" above the bulb, the control thermostat is operating properly.

If voltage is not present as described, replace the thermostat.

Removal and Replacement:

1. Remove wires from control thermostat terminals.
2. Remove the thermostat capillary bulb by firmly pulling up on the capillary at the tank lid. This will disengage the grommet from the tank lid.
3. Remove the one #8-32 screw securing the control thermostat to the component bracket in the trunk and remove control thermostat.
4. Slide the grommet to the line 4.5" above the bulb on the new capillary tube.
5. Insert the capillary bulb through the hole in the tank lid and press the grommet firmly and evenly so that the groove in the grommet fits into the tank lid.
6. Carefully bend the capillary tube so that the tube and bulb inside the tank are in the vertical position.

NOTE - The capillary tube must be clear of any electrical termination and not kinked.

7. Using one #8-32 screw secure the control thermostat to the component bracket inside the trunk.
8. Refer to Fig. 3 when reconnecting the wires.
9. Adjust the control thermostat as required.

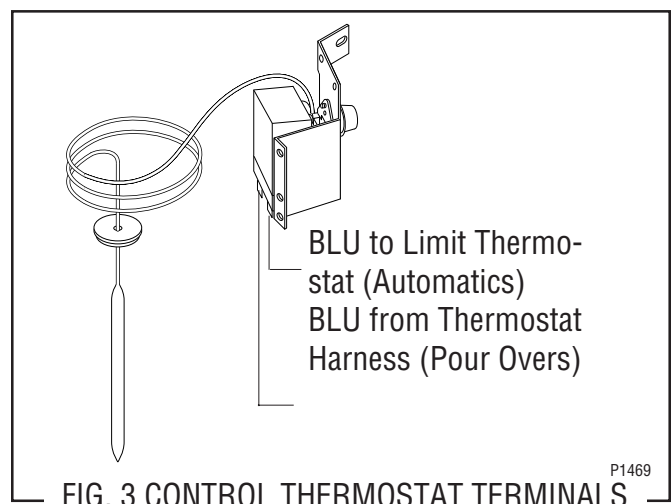


FIG. 3 CONTROL THERMOSTAT TERMINALS

P1469

SERVICE (cont.)

LIMIT THERMOSTAT (CWTA & CWTF)

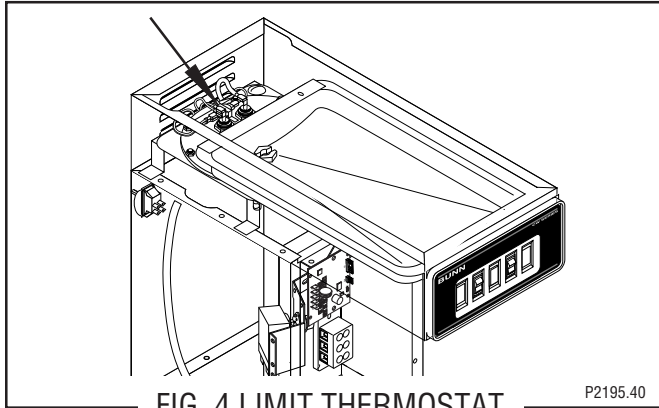


FIG. 4 LIMIT THERMOSTAT

P2195.40

Location:

The limit thermostat is located inside the rear of the hood on the tank lid.

Test Procedures:

1. Disconnect the brewer from the power source.
2. Disconnect the blue and black wires from the limit thermostat.
3. With an ohmmeter, check for continuity across the limit thermostat terminals.

If continuity is present as described, the limit thermostat is operating properly.

If continuity is not present as described, replace the limit thermostat.

Removal and Replacement:

1. Remove all wires from limit thermostat terminals.
2. Carefully slide the limit thermostat out from under the retaining clip and remove limit thermostat.
3. Carefully slide the new limit thermostat into the retaining clip.
4. Refer to Fig. 5 when reconnecting the wires.


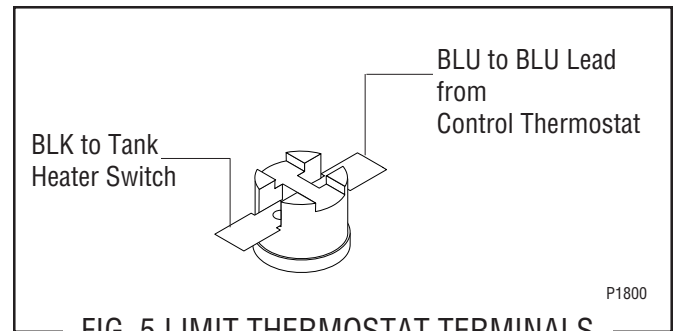


FIG. 5 LIMIT THERMOSTAT TERMINALS

P1800

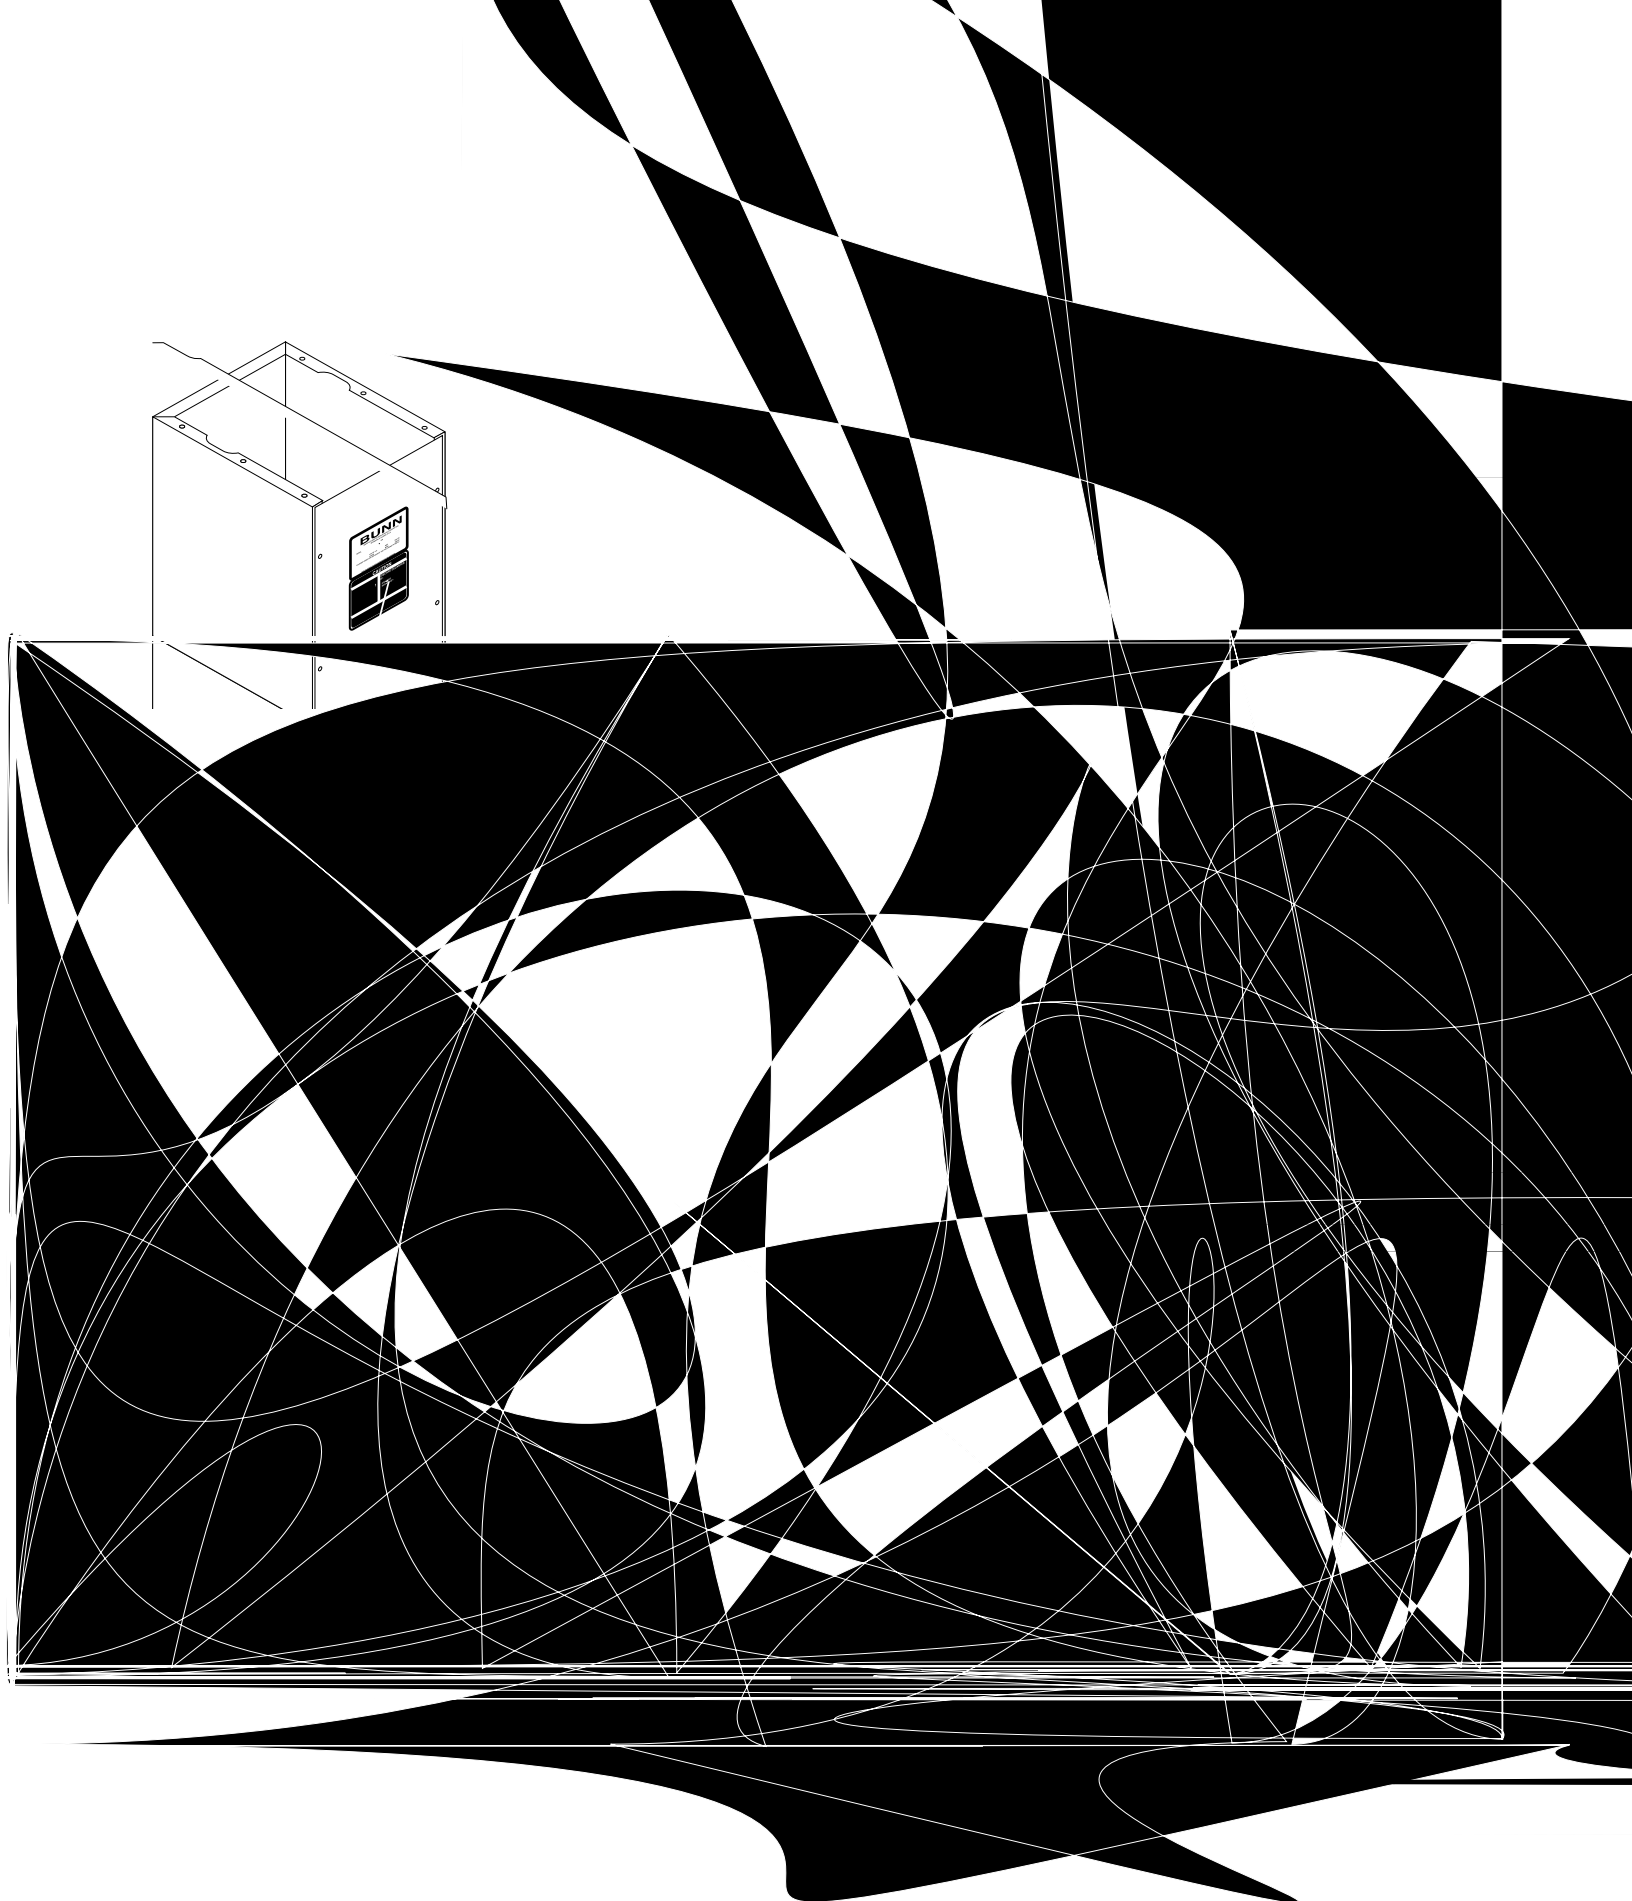

SERVICE (cont.)

SOLENOID VALVE

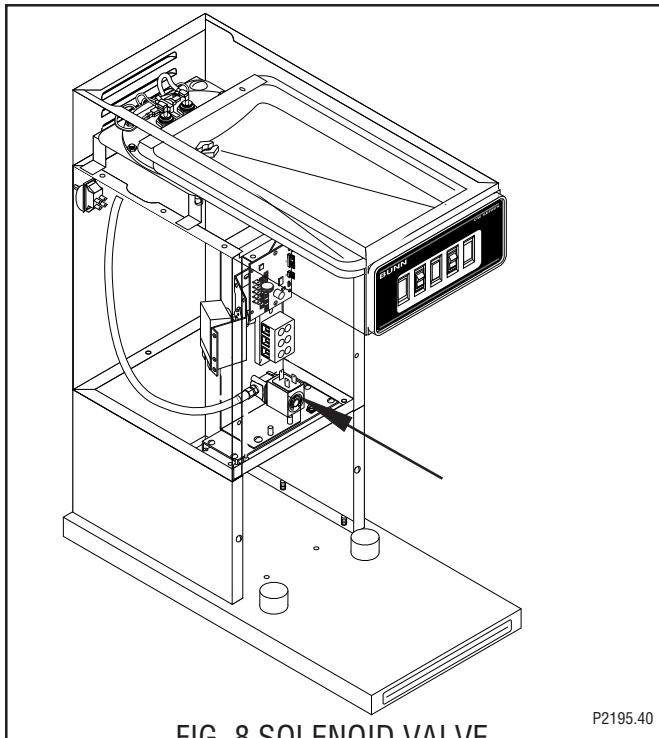


FIG. 8 SOLENOID VALVE

Location:

The solenoid valve is located inside the trunk on the lower center part of the component bracket.

Test Procedures:

1. Disconnect the brewer from the power source.
2. Disconnect the white/green wire and black wire from the solenoid valve. With the "ON/OFF" switch in the "ON" (upper) position press the START switch.
3. With a voltmeter, check the voltage across the white/green wire and black wire. Connect the brewer to the power source. The indication must be 240 volts ac.
4. Disconnect the brewer from the power source,

If voltage is present as described, proceed to #5

If voltage is not present as described, refer to *Wiring Diagram* and check brewer wiring harness.

5. Check for continuity across the solenoid valve coil terminals.

If continuity is present as described, reconnect the white/green wire and black wire from the timer.

If continuity is not present as described, replace the solenoid valve.

6. Check the solenoid valve for coil action. Connect the brewer to the power source. With "ON/OFF" switch in the "ON" (upper) position press START switch and listen carefully in the vicinity of the solenoid valve for a "clicking" sound as the coil magnet attracts.
7. Disconnect the brewer from the power source.

If the sound is heard as described and water will not pass through the solenoid valve, there may be a blockage in the water line before the solenoid valve, or the solenoid valve may require inspection for wear and removal of waterborne particles.

If the sound is not heard as described, replace the solenoid valve.

Removal and Replacement:

1. Remove the white/green wire and black wire from the solenoid valve.
2. Turn off the water supply to the brewer.
3. Disconnect the water lines to and from the solenoid valve.
4. Remove the two #8-32 screws securing the solenoid mounting bracket to the component bracket. Remove bracket and solenoid valve as an assembly.
5. Remove the two #10-32 screws and lockwashers securing the solenoid valve to the solenoid bracket.
6. Using two #10-32 screws and lockwashers install new solenoid valve on solenoid mounting bracket.
7. Using two #8-32 screws install solenoid valve and bracket to the component bracket.
8. Securely fasten the water lines to and from the solenoid valve.
9. Refer to Fig. 9 when reconnecting the wires.


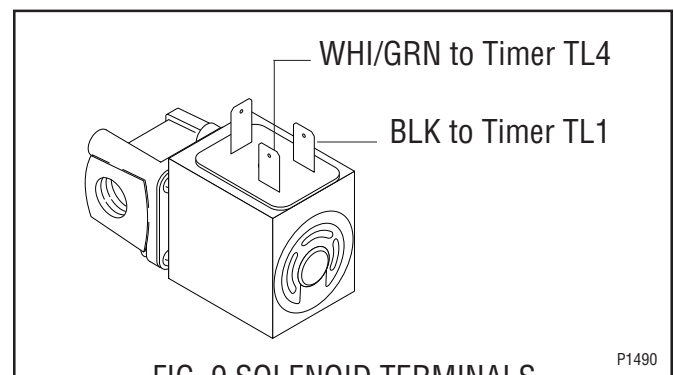


FIG. 9 SOLENOID TERMINALS

SERVICE (cont.)

START SWITCH

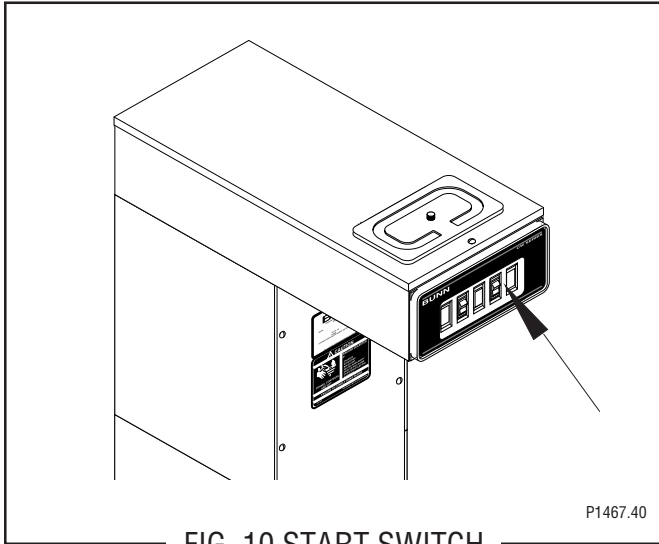

Location:

The start switch is located in the front of the hood just to the right of center.

Test Procedure:


1. Disconnect the brewer from the power supply.
2. Disconnect the white/orange wire from the top switch terminal and the white/yellow wire from the bottom switch terminal.
3. Check for continuity across the two terminals on the switch when it is held in the lower position. Continuity must not be present across these terminals in the upper position.


If continuity is present as described, reconnect the white/orange wire to the top terminal and the white/yellow wire to the bottom terminal.

If continuity is not present as described, replace the switch.

Removal and Replacement:

1. Remove the white/orange wire and white/yellow wire from the start switch.
2. Compress the clips inside the hood and gently push the switch through the opening.
3. Push new switch into the opening and spread the clips to hold the start switch in the hood.
4. Refer to Fig. 11 when reconnecting the wires.

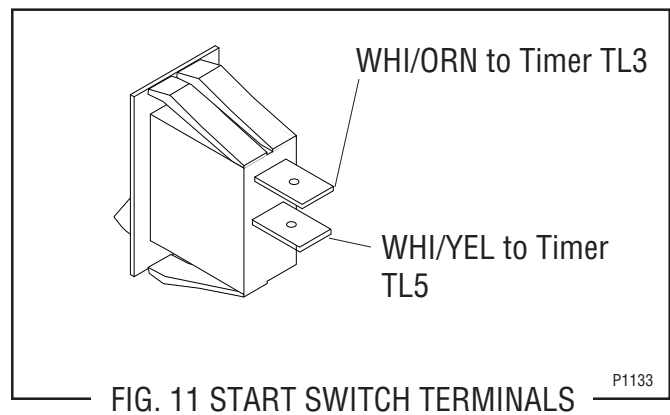

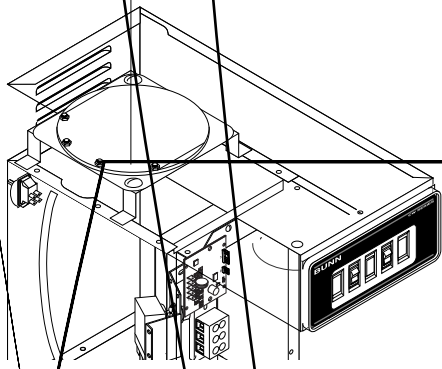

SERVICE (cont.)

TANK HEATER SWITCH

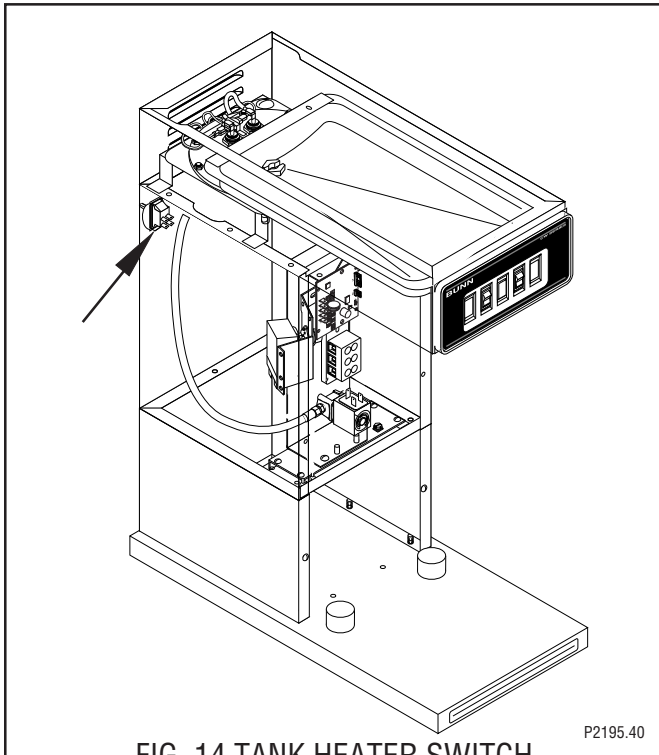


FIG. 14 TANK HEATER SWITCH

Location:

The tank heater switch is located on the rear of the brewer on the upper left side of the trunk.

Test Procedure:

1. Disconnect the brewer from the power source.
2. Disconnect the black wire from the limit thermostat (Automatics only) or the blue wire (Pour Overs only).
3. With the tank heater switch in the "ON" (upper) position, and with a voltmeter, check the voltage between the black wire removed from the limit thermostat or the blue wire from the control thermostat and the red wire on the tank heater. Connect the brewer to the power source. The indication must be 240 volts ac.
4. Disconnect the brewer from the power source.

If voltage is present as described, proceed to #5.

If voltage is not present as described, refer to the *Wiring Diagram* and check the brewer wiring harness.

5. Check for continuity between the black wire removed from the limit thermostat and the black insert on the terminal block, with the tank heater switch in the "ON" (upper) position. Continuity should not be present in the "OFF" (lower) position.

If continuity is present as described, the tank heater switch is operating properly.

If continuity is not present as described, replace the tank heater switch.

6. Disconnect the red wire from the thermal fuse on the tank heater.
7. Check for continuity between the red wire removed from the thermal fuse and the red insert on the terminal block, with the tank heater switch in the "ON" (upper) position. Continuity should not be present in the "OFF" (lower) position.

If continuity is present as described, the tank heater switch is operating properly.

If continuity is not present as described, replace the tank heater switch.


Removal and Replacement:

1. Shut off and disconnect the incoming water supply to the brewer. On automatic brewers gently remove the fill tube from the back of fill basin.
2. Remove the tank inlet fitting securing fill basin to the tank lid. Remove fill basin and gasket. Set all three parts aside for reassembly.
3. On brewers with faucets, disconnect the water supply to coil assembly and remove the tube from the tank to the faucet.
4. Remove sprayhead and hex nut securing sprayhead tube to the hood. Set aside for reassembly.
5. Disconnect the wires on the limit thermostat and the tank heater.
6. Gently pull the thermostat sensor and grommet from the tank lid.
7. Insert a tube to the bottom of the tank and syphon ALL of the water out.
8. Gently reinstall the thermostat sensor and grommet in the tank lid.
9. Remove the two #8-32 screws securing the tank assembly to the hood.
10. Lift tank and components out as an assembly and set aside for reassembly.
11. Disconnect the two black wires and the two red wires from the tank heater switch.
12. Remove the plastic facenut, hex facenut and the switch indicator/guard bracket that secures tank heater switch to the rear of the brewer. Remove switch and discard.


SERVICE (cont.)

TANK HEATER SWITCH (cont.)

13. Insert new tank heater switch through the hole in the upper left rear of the trunk and secure with switch indicator/guard bracket, hex facenut and plastic facenut.
14. Refer to Fig. 15 and reconnect the wires to the tank heater switch terminals.
15. Set tank assembly inside the hood on mounting brackets and secure with two #8-32 screws.
16. Reconnect the wires to the limit thermostat, tank heater and the control thermostat. Refer to limit thermostat and tank heater sections in this manual when reconnecting wires.
17. Brewers with faucet, reinstall the faucet tube and reconnect the water supply tubes to the coil assembly.
18. Secure the sprayhead tube to the hood using hex nut.
19. Install sprayhead.
20. Install fill basin, inlet gasket and secure to tank lid with tank inlet fitting.
21. Carefully install water fill tube into the back of the fill basin (automatics).
22. Reconnect and turn on the incoming water supply.

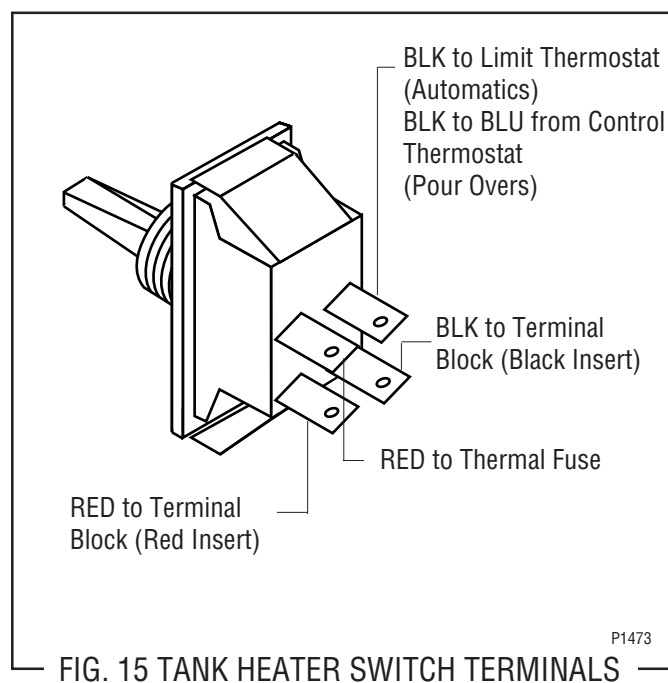

TIMER (Early Models)

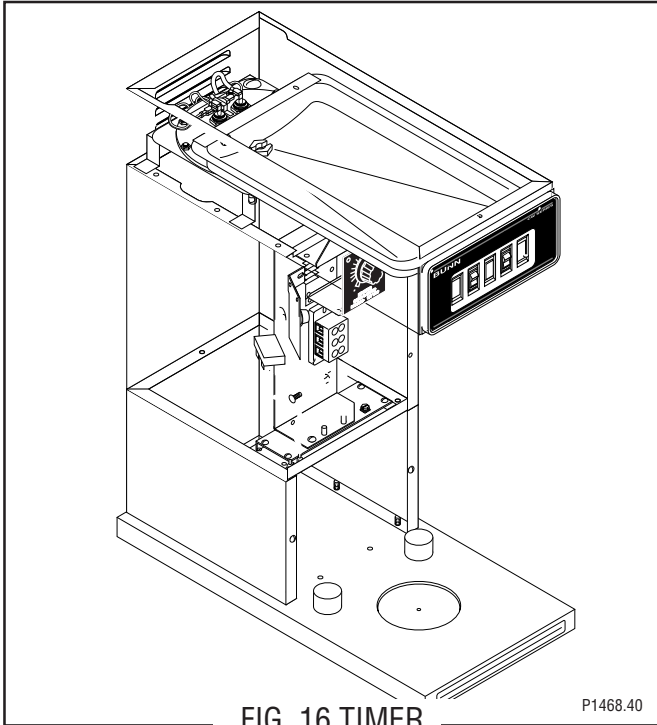

Location:

The timer is located inside the front of the trunk on the component bracket. It consists of the dial plate and circuit board.

Test Procedure:


1. Disconnect the brewer from the power source.
2. Remove the wires from terminals TL3, TL4, & TL5 of the timer and rotate the dial fully counterclockwise.
2. With a voltmeter, check the voltage across terminals TL1 and TL2 when the ON/OFF switch is in the "ON" (upper) position. Connect the brewer to the power source. The indication must be 240 volts ac.
3. Disconnect the brewer from the power source.

If voltage is present as described, proceed to #4.

If voltage is not present as described, refer to the *Wiring Diagram* and check the wiring harness.

4. Check for continuity across the white/orange wire and white/yellow wire when the START switch is held in the lower position.

If continuity is present as described, reconnect the wires to terminals TL3, TL4, & TL5 of the timer board and proceed to #5.

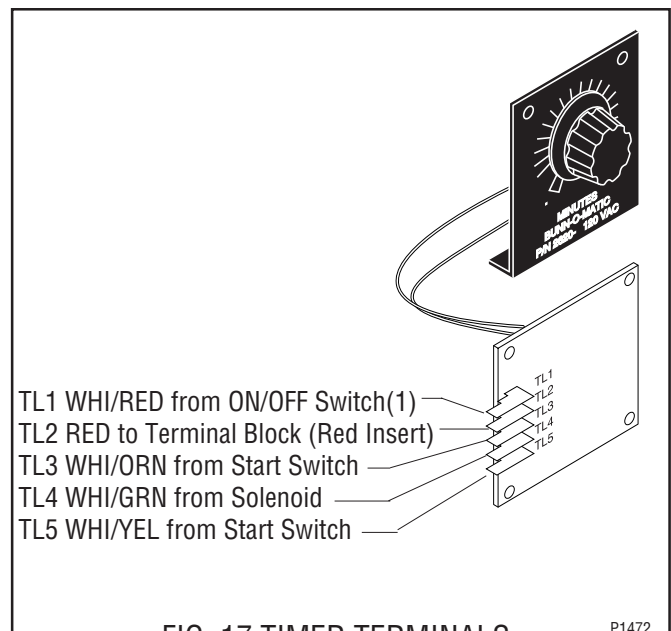

SERVICE (cont.)

DIGITAL BREW TIMER (Late Models)

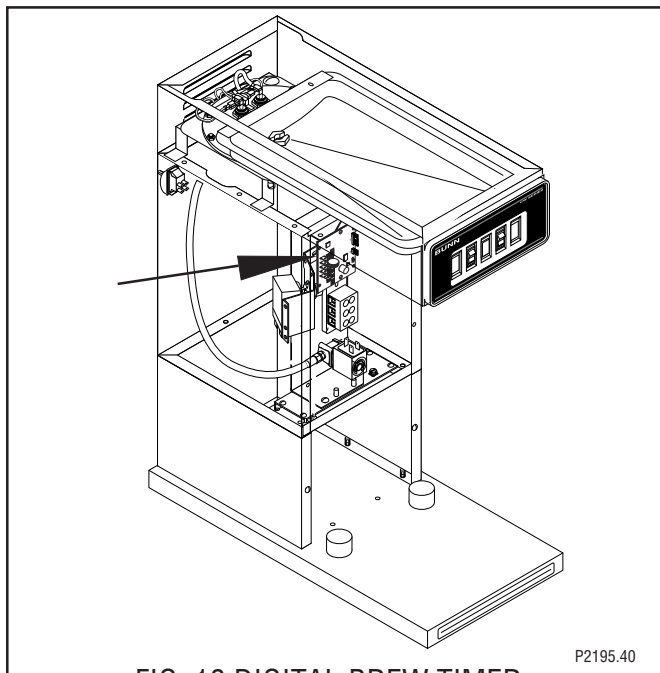


FIG. 18 DIGITAL BREW TIMER

Location:

The timer is located inside the front of the trunk on the top of the component bracket.

Test Procedure.

NOTE: Do not remove or install wires while timer board is installed. Pressure applied to one side may cause damage to the board.

1. Disconnect the brewer from the power source and remove the front access panel.
2. Remove the two #8-32 screws securing circuit board to the mounting bracket.
3. Remove circuit board and spacers (as required).
4. With a voltmeter, check the voltage across terminals TL1 and TL2 when the "ON/OFF" switch is in the "ON" (upper) position. Connect the brewer to the power source. The indication must be 240 volts ac.
5. Disconnect the brewer from the power source.

If voltage is present as described, proceed to #6.

If voltage is not present as described, refer to the *Wiring Diagram* and check the brewer wiring harness.

6. Disconnect the white/orange wire from terminal TL3 and the white/yellow wire from terminal TL5. With a voltmeter, check for continuity across the two wires when the "ON/OFF" switch is in the "ON" (upper) position and the START switch is pressed. Connect the brewer to the power source. The indication must be 240 volts ac.

If continuity is present as described, reconnect the wires and proceed to #7.

If continuity is not present as described, refer to the *Wiring Diagram* and check the brewer wiring harness.

7. With a voltmeter, check the voltage across terminals TL1 and TL4 when the "ON/OFF" switch is in the "ON" (upper) position. Connect the brewer to the power source. The indication must be 0 volts.

If voltage is as described, proceed to #8.

If voltage is not as described, disconnect the brewer from the power source and replace the timer.

8. With a voltmeter, check the voltage across terminals TL1 and TL4 when the "ON/OFF" switch is in the "ON" (upper) position. Connect the brewer to the power source and press the START switch. The indication must be as 240 volts ac.

If voltage is present as described, the brew timer is operating properly. Reset the timer as required, to obtain the desired brew volume.

If voltage is not present as described, disconnect the brewer from the power source and replace the timer.

Removal and Replacement:

1. Remove the two #8-32 screws securing circuit board to the mounting bracket.
2. Remove circuit board and spacers (as required).
3. Remove all wires from the timer.
4. Attach all wires to the replacement timer board prior to installation to the component mounting bracket. Refer to FIG. 19 when reconnecting the wires.
5. Install new circuit board with spacers (as required) to the component mounting bracket.
6. Adjust the timer as described below.

SERVICE (cont.)

DIGITAL BREW TIMER (Late Models)(cont.)

Timer Setting:

NOTE: Prior to setting or modifying volumes, check that the brewer is connected to water supply, the tank is properly filled, and a funnel and server are in place.
NOTE: All volume settings must be done with the sprayhead installed.

1. Modifying brew volumes. To modify a brew volume, first check that the SET/LOCK switch is in the “SET” position on the circuit board.

To increase a brew volume, place the ON/OFF switch in the “ON” position, press and hold the START switch until three clicks are heard. Release the switch and press it again one or more times. (Failure to release the switch within two seconds after the third click causes the volume setting to be aborted and previous volume setting will remain in memory.) Each time the switch is pressed, two seconds are added to the brew time period. Allow the brew cycle to finish in order to verify that the desired volume has been achieved.

To decrease a brew volume, place the ON/OFF switch in the “ON” position, press and release the START switch once for every two-second interval to be removed from the total brew time period; then immediately press and hold down the START switch until three clicks are heard. Release the switch. (Failure to release the switch within two seconds after the third click causes the volume setting to be aborted and previous volume setting will remain in memory). Allow the brew cycle to finish in order to verify that the desired volume has been achieved.

2. Setting brew volumes. To set a brew volume, first check that the SET/LOCK switch is in the “SET” position on the circuit board. Place the ON/OFF switch in the “ON” position, press and hold the START switch until three distinct clicks are heard and then release the switch. (Failure to release the switch within two seconds after the third click causes the volume setting to be aborted and previous volume setting will remain in memory.)


View the level of the liquid being dispensed. When the desired level is reached, turn the ON/OFF switch

to “OFF”.


NOTE: Several ounces of water will continue to syphon from the tank after turning the switch “OFF”. The brewer remembers this volume and will continue to brew batches of this size until the volume setting procedure is repeated.

NOTE: When brewing coffee, volume will decrease due to absorption by the coffee grounds.

3. Setting programming disable feature. If it becomes necessary to prevent anyone from changing brew time once programmed, you can set the SET/LOCK switch to the “LOCK” position. This will prevent any further programming until switch is once again put into the “SET” position.

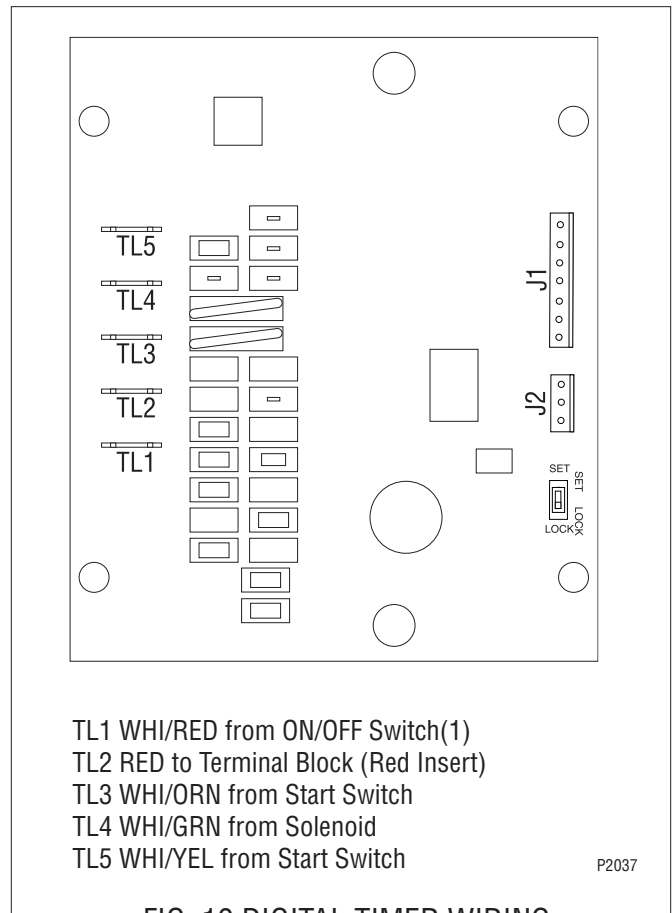

SCHEMATIC WIRING DIAGRAM FOR MODELS CWA, CWTA, CWTF - APS, TS

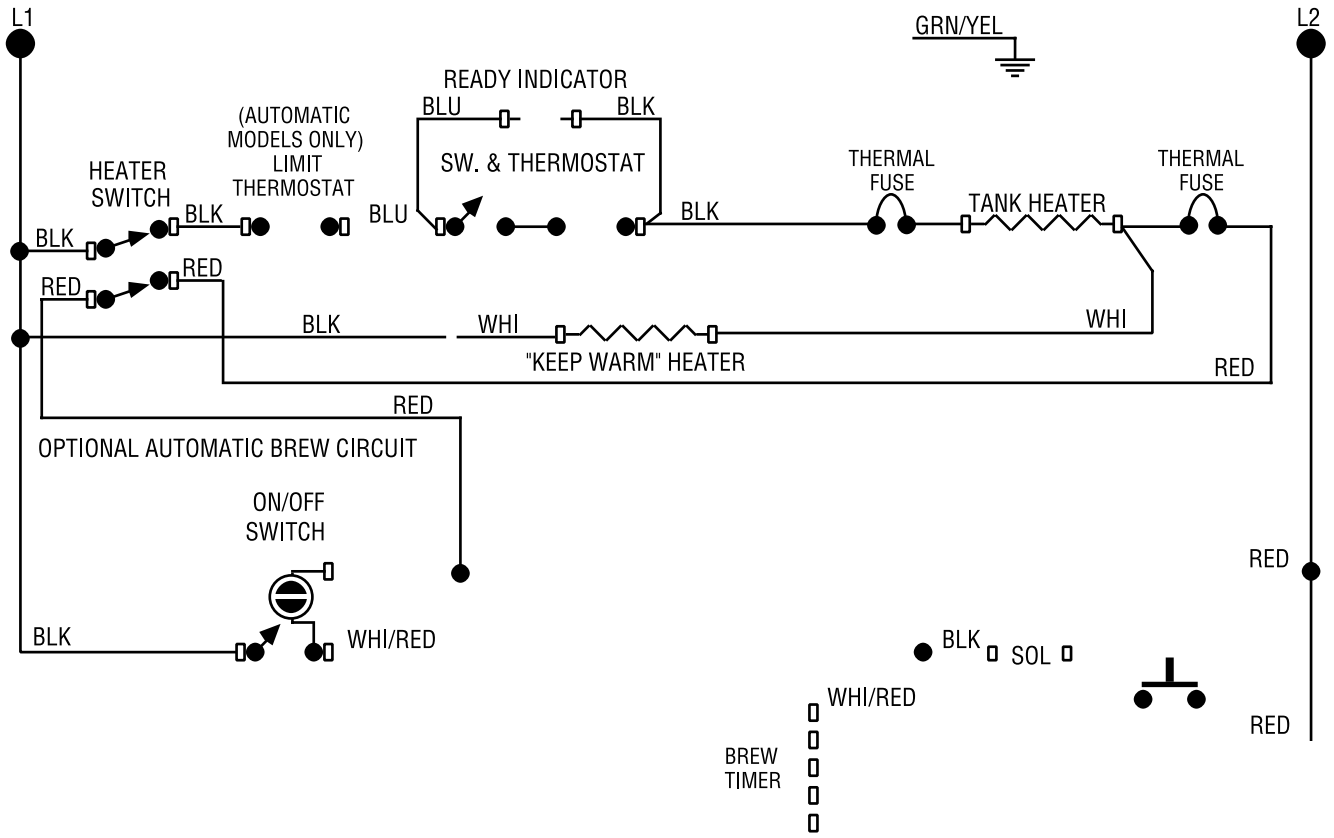

**230-240 VOLTS AC 2 WIRE
SINGLE PHASE**

10694.0002E 7/98 © 1997 BUNN-O-MATIC CORPORATION