


USE AND CARE OF YOUR
BUNN[®]
My Café[™]
Tea & Coffee Pod Brewer



Model MCPA

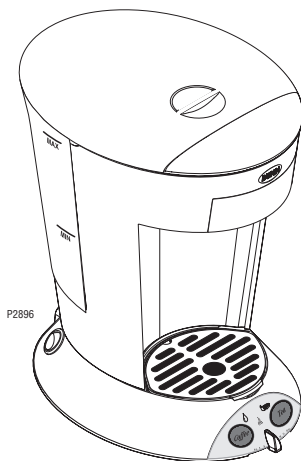

COMMERCIAL AND HOUSEHOLD TYPE

*The Bunn logo is a registered trademark of Bunn-O-Matic Corporation.
My Café is a trademark of Bunn-O-Matic Corporation.*

RECORD MODEL & SERIAL NUMBER

In order to receive accurate and timely warranty assistance, it is important to record the Model and Serial Number information located on the bottom of the brewer. A space is provided below for this information.

MODEL: _____

SERIAL NUMBER: _____

*Record these numbers from the
bottom of the brewer, before
filling the brewer with water.*

TABLE OF CONTENTS

WARNINGS	2
USER NOTICES	3
INTRODUCTION	3
SPECIFICATIONS	3
IMPORTANT HANDLING INFORMATION	3
IMPORTANT SAFEGUARDS	4
SAVE THESE INSTRUCTIONS	4
GENERAL INFORMATION	5
FEATURES AND CONTROLS	6
DEFINITIONS	7
COMPONENTS (DEFINITIONS)	7
CONTROL PANEL (DEFINITIONS)	7
FEATURES	8
INITIAL BREWER SET-UP	9
BREWING DELICIOUS COFFEE OR TEA	10
HOT WATER	11
COFFEE FUNDAMENTALS	11
BREWING TIPS	11
ROUTINE CLEANING	12
PERIODIC CLEANING/DESCALING	12
CLEANING THE SPRAYHEAD/SEAL	13
ASSEMBLING THE SPRAYHEAD/SEAL	13
INSPECTING THE SPRAYHEAD/SEAL	14
CLEANING THE POD HOLDER	14
CYCLING THE BREWER	14
STORING THE BREWER	14
TROUBLESHOOTING	15
REPLACEMENT PARTS	19
LIMITED WARRANTY	20



This symbol alerts you to the risk of fire or electrical shock in the accompanying message.



Hazardous Voltage!
Can Cause Fire Or Electrical Shock!

Do Not Disassemble The Brewer!

There Are No User Serviceable Parts Inside!

The only user replacement parts are shown on page 19.
Repair Should Be Done By Authorized Service Personnel!



This symbol alerts you to important operating and service instructions.

Keep this booklet for future reference.

USER NOTICES

Carefully read and follow all notices on the equipment and in this manual. They were written for your protection. All notices on the equipment should be kept in good condition. Replace any unreadable or damaged labels by visiting our web site at www.bunn.com.



37267.0000

37280.0000



37281.0000

WATER ONLY

INTRODUCTION

The BUNN® My Café™ Tea & Coffee Pod Brewer is designed to personalize your brewing experience by allowing a single cup brew of perfectly balanced coffee or tea.

BUNN® brewers are recognized in homes, offices and restaurants throughout the world as the very finest.

SPECIFICATIONS

Electrical - This brewer has an attached, grounded cord set and requires 2-wire service with ground, rated 220-240 volts ac, 6 amps, single phase, 50/60 Hz. Components include a 1450-watt (max.) tank heater.

NOTE: Do not operate brewer on the same outlet as other electrical appliances.




Dimensions - 31.6 cm (12 ⁷/₁₆ in.) High; 19.7 cm (7 ³/₄ in.) Wide; 26.3 cm (10 ⁵/₈ in.) Deep.

Brew Capacity - Approx. 118 to 355 ml (4 to 12 oz.) serving in 30 ml (1 oz.) increments. Reservoir holds 1.7 L (46 oz.) of water.

Weight - 3.4 kg (7 ¹/₂ pounds); includes pod brewer, pod holder, lid, reservoir, drip tray and drip tray grate.

IMPORTANT HANDLING INFORMATION

To avoid dropping and damaging the brewer or reservoir, do not attempt to pick the brewer up by the reservoir or lid. Always grasp the brewer by the sides, bottom, or top and bottom of the brewer.

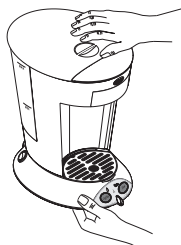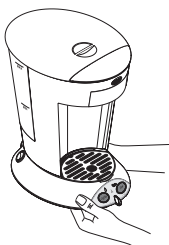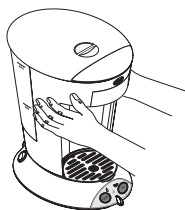

P2971

IMPORTANT SAFEGUARDS



Follow these basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or personal injury:



- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not place cord, plug, or brewer in water or liquid.
- Close supervision is necessary when the brewer is used by or near children.
- Unplug from outlet when not in use for extended periods of time and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
- Do not operate the brewer with a damaged cord or plug, or after the brewer malfunctions or has been damaged in any manner. Return the brewer to an Authorized Service Facility for examination, adjustment, or repair. (Refer to page 21)
- The use of an accessory not evaluated for use with this brewer may cause injuries and is not authorized.
- For indoor use only. Do not use outdoors.
- Do not let the power cord hang over edge of table or counter, or touch hot surfaces.
- Do not place the brewer on or near a hot gas or electric burner, or in a heated oven.
- Do not use brewer for other than its intended use.
- Do not insert or remove pod holder while brewing. Press the coffee or tea button to stop or cancel a brew cycle.
- A canceled brew cycle is not held in memory. The next brew cycle will dispense the full volume based on the volume setting.
- To avoid cup overflow, empty mug before each brew cycle.
- Never place hands directly under the pod holder. Hot water and steam can be present.
- Do not place brewer in a sink or near other water source. Remove reservoir and fill separately or use the slide lid.
- When the brewer is idle, the lid should be in the closed position.
- Always use a mug or bowl that is larger than the brew volume selected.
- Keep hands away if container overflows. Wait until brew finishes, let liquid cool, then lower volume setting or use a larger mug.
- Never brew without the pod holder insert in place. Excessive pressure on the pod could result in coffee or tea escaping from the holder and into the cup. Hot liquid splash and burns could occur.
- Use cold water only.
- Do not place torn pods or use ground coffee in pod holder.



SAVE THESE INSTRUCTIONS



- A short power-supply cord is used to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- If an extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the brewer, and the cord should be arranged so that it will not hang over the edge of the table or counter where it can be pulled on by children or tripped over.
- The extension cord must be of the grounding type, 3-wire cord. (Including grounding conductor).
- If the power cord is ever damaged, it must be replaced by the manufacturer or authorized service personnel with a special cord available from the manufacturer or its authorized service personnel in order to avoid a hazard. Improper electrical installation will damage electronic components. Damage caused by incorrect electrical connections is not covered by warranty.



GENERAL INFORMATION



Improper installation could result in permanent damage and void the limited warranty. Read & follow the instructions on page 9.

- **Use CAUTION when dispensing hot water from the brewer. The water from your BUNN® Pod brewer is approximately 93°C (200°F). This is approximately 10°C (50°F) hotter than the hot water from your faucet and must be handled with care.**
- This brewer is designed to remain plugged in at all times (except during initial installation, cleaning, or when brewer will not be used for an extended period of time).
- A power switch is provided on the lower left side to completely shut off all electrical components when your plans take you away from the brewer for three or more days. Safety features, designed into the BUNN® Pod brewer, make the daily use of this switch unnecessary.
- Whenever the brewer has been shut off or unplugged for an extended period of time, rinse the reservoir and refill with fresh cold water before using. It is also recommended that the brewer be cycled. (See page 14)
- Your BUNN® Pod brewer has a specially designed tank to keep the water inside at the proper temperature. This constant supply of hot water assures the correct method of brewing in less than one minute.
- When inserting a pod into the pod holder, it is important to seat the pod all the way into the holder cavity. Leaks could occur if the pod is too large, or does not seat completely into the holder cavity. Ensure that all of the paper edge and any tabs of the pod are inserted into the holder cavity.
- While brewing, the newest water in the tank is also being heated to the proper temperature and held until needed.
- International brewers are equipped with a 230 volt, grounded cord set. The plug is provided with a grounding circuit in compliance with local requirements. This is a safety feature and allows the plug to fit into a properly grounded outlet. If the plug does not fit into the outlet, contact an electrician to update your outlet. Attempting to bypass the safety aspect of this plug will void the warranty.
- The sprayhead may become loose over time. Unplug the machine and allow it to cool down before tightening or removing the sprayhead. Use extreme caution not to burn yourself. Tighten or remove the sprayhead with your fingertips. (Refer to page 13)
- **CAUTION:** Never apply force to remove the pod holder. If the holder does not slide out easily, wait 10 minutes and try again. Burns resulting from hot water splash could occur if the holder is forcibly removed from the brewer.
- Use **CAUTION** to avoid burns during consumption of any freshly brewed beverage. Servings are extremely hot.
- To stop a brew cycle in process, press the Coffee or Tea button again. (See Page 7)
- When operating the brewer on a standard household outlet, do not attempt to power other appliances on the same circuit. Circuit overload could occur.
- Some noise is normal when the water pump is running during a brew cycle.

FEATURES & CONTROLS

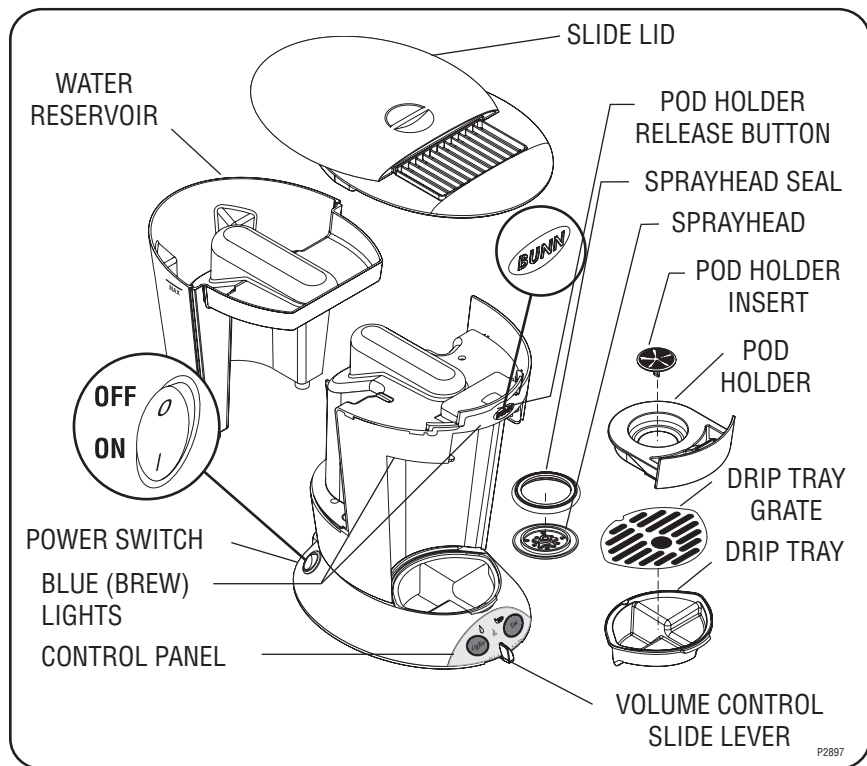


FIG 1. Exploded View

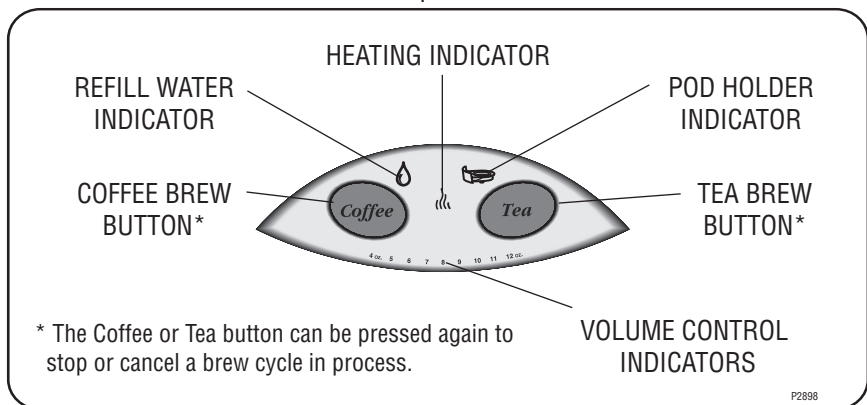


FIG 2. Control Panel

DEFINITIONS

COMPONENTS

- **WATER RESERVOIR** - Holds reserve water for brewing. The reservoir can be removed and filled separately at a sink or other clean water source or by pouring water through the slide lid. (Holds 1.7 L (46 oz.) to the maximum line.)
- **SLIDE LID** - The slide lid allows access to the reservoir. Water can be poured through the opened lid and into the reservoir without removing the reservoir.
- **POD HOLDER RELEASE BUTTON** - Push to unlock and release the pod holder. When there is power to the brewer, this button will illuminate red in color, showing the trademark BUNN name. This light will go out during a brew cycle and when the brewer has gone into Sleep Mode. (Refer to the *"Features"* section on page 8 for more information.)
- **BLUE (BREW) LIGHTS** - Blue colored lights are located near the pod holder area and light up to indicate that a brew cycle is in process.
- **SPRAYHEAD SEAL** - The seal keeps water under pressure from escaping, while a brew cycle is in process. If leaks are present during a brew cycle, consult the *"Troubleshooting"* section on page 15.
- **SPRAYHEAD** - Designed to distribute water evenly across the coffee pod or tea bag/pod to extract the proper flavor.
- **POD HOLDER INSERT** - A color-coded, removable screen designed to allow proper flow rates and steeping capabilities for the type of brew desired.
- **POD HOLDER** - Holds the coffee pod or tea bag/pod.
- **DRIP TRAY GRATE** - A removable part that allows any spilled liquid to drip through into the drip tray.
- **DRIP TRAY** - Removable tray that is designed to catch any spilled liquid.
- **POWER SWITCH** - Turns on and off all electrical service to the brewer. This button is only to be used when the brewer will not be used for several days. (In the "I" position the power is on. In the "O" position the power is off.)
- **VOLUME CONTROL SLIDE LEVER** - Adjusts the amount of water dispensed through the pod holder. Sliding it left will produce a smaller serving. Sliding it to the right will produce a larger serving. The brewer will dispense approximately 118 to 355 ml (4 to 12 oz.) in 30 ml (1 oz.) increments.
- **CONTROL PANEL** - Controls for brewing coffee or tea and various indicators are located on the control panel. (FIG. 2) See specific definitions below.

CONTROL PANEL

- **COFFEE BREW BUTTON** - Depress this button to brew a serving of coffee. ***Pressing it again will cancel a brew cycle in process.***
- **REFILL WATER INDICATOR** - If the water in the reservoir is running low, and either the Coffee or Tea Brew button is pressed, this indicator will flash for a few seconds to show that the water reservoir needs to be refilled. A brew cycle cannot be started until the reservoir has been refilled.

CONTROL PANEL (Cont.)

- **HEATING INDICATOR** - This light indicates that the heater is bringing water up to temperature. A brew cycle cannot be started until the indicator has gone out. (During a brew cycle, this light will come on indicating the tank heater is warming the new water entering the tank.)
- **POD HOLDER INDICATOR** - This indicator identifies a missing or unlocked pod holder. Before a brew cycle can be started, the pod holder must be inserted and locked into place.
- **TEA BREW BUTTON** - Depress this button to brew a serving of tea or coffee. **Pressing it again will cancel a brew cycle in process.** You will notice that the water flow will pulse on and off when brewing with this setting. This is normal. (Can also be used to brew a stronger more robust serving of coffee.)
- **VOLUME CONTROL INDICATOR** - The markings on the bottom of the control panel correspond to the VOLUME CONTROL SLIDE LEVER and are used for setting the brew volume. (Approximately 118 to 355 ml (4 to 12 oz.) in 30 ml (1 oz.) increments can be brewed based on the setting of the lever.)

NOTE: *Because some pods will absorb more water than others, the finished serving size may vary slightly.*

FEATURES

- **SLEEP MODE** - If the brewer has been idle for 6 hours, it will reduce power to conserve energy. After 26 hours, the brewer will shut down completely. When either of these two sleep modes occur, the Pod Holder Release Button will no longer be glowing red. To wake the brewer up, press either the Coffee or Tea Brew button, or eject the pod holder. The light and heater will come back on.
- **BREW CANCEL** - If it is necessary to cancel a brew cycle, this can be done by pressing either the Coffee or Tea button again. Although some water may drip out, the pump will immediately stop forcing water through the pod holder. Always wait for hot liquid to stop before removing the pod holder.

CAUTION: *When a brew cycle is canceled, it will not finish dispensing its previous brew volume when the button is pressed again. The memory is reset and the brewer will dispense a full volume as indicated by the Volume Control Lever. This could cause a cup to overflow if it is not emptied prior to pressing the button a second time.*

- **MIN & MAX MARKINGS** - The side of the water reservoir bears the markings "MIN" and "MAX". These markings indicate the minimum and maximum amount of water that can be placed in the reservoir. If the minimum amount of water is not in the reservoir, the brewer will not operate. These markings are referenced throughout this booklet.
- **PULSE BREW™** - Using the Tea Button will cause the brewer to perform a pulse brew operation. A Pulse Brew cycles the water on and off to effectively steep the tea to extract the proper flavor. The "On-Off-On" water flow is normal. Always wait for the blue (brew) lights to go out, and the red BUNN light to come back on before carefully removing the mug or pod holder. Pressing either brew button during this operation will stop the brew cycle. (See the "Brew Cancel" feature above for more information.)

INITIAL BREWER SET-UP


1. Remove the lid and water reservoir.




(CAUTION: Do not place the brewer in a sink or other water source.)



7. Plug in the brewer and turn on the power switch.

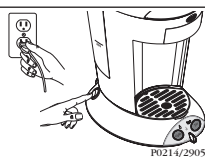


 8. Place a mug or bowl that will hold at least 414 ml (14 fl. oz.) onto the drip tray grate.



2. Thoroughly rinse the water reservoir.


3. Fill the reservoir to the maximum line with fresh cold water.

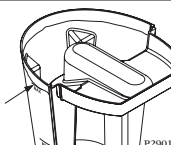

4. Replace the reservoir and lid and close the slide lid.




5. To ensure the Pod Holder is locked in place, use thumb to press the pod holder release button to eject the holder and then press all the way in to lock.

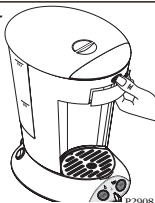


(CAUTION: You should hear a clicking sound when the pod holder locks in place.)

6. Slide the volume control lever to the maximum setting.

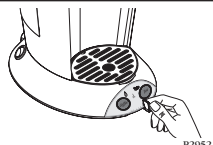

9. Press and release the coffee brew button to fill the internal water tank.*

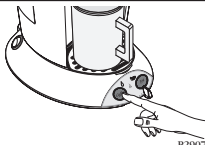


(CAUTION: Water may not immediately flow from the brewer. Never remove pod holder from brewer during a brew cycle.)

10. Empty any water in the mug or bowl and place the mug back on the drip tray grate.

(NOTE: Wait for Heating Indicator to go out before proceeding to Step #11)



11. Press and release the coffee brew button a second time.*

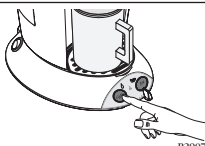

(CAUTION: Water should flow from the pod holder. Wait until water drip out has finished before removing the pod holder.)

You are now finished preparing the brewer for it's first use. Proceed to the "Brewing Delicious Coffee Or Tea" section.


* Some noise is normal when the water pump is running.

BREWING DELICIOUS COFFEE OR TEA



WARNING: Never place hands directly under pod holder outlet. Hot water can be present.
WARNING: Never remove the holder with force. If stuck, wait 10 minutes and try again.
WARNING: Never brew without the pod holder insert in place.


1. Open the slide lid.

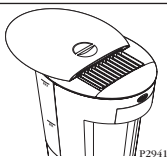


(CAUTION: Do not place brewer in sink or other water source.)




2. Fill the reservoir above the minimum line, up to the maximum line with fresh cold water.

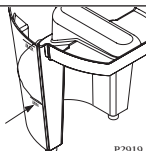

3. Close the slide lid.

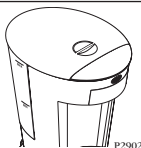


4. Adjust the volume control lever to the desired volume.

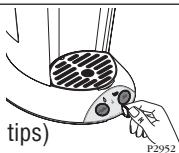


(See page 11 for brewing tips)

(NOTE: Minimum volume is approx. 118 ml (4 oz.) Maximum is approx. 355 ml (12 oz.) Settings are in 30 ml (1 oz.) increments.)


5. Place a mug, larger than the volume selected, on the drip tray grate below the pod holder outlet.

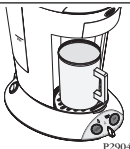

6. Press and hold the pod holder release button while sliding the pod holder out.

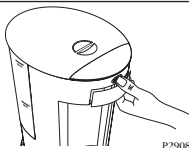


 7. Press a pod into the pod holder.




(NOTE: For best results, center pod in holder and gently press the pod completely into holder cavity.)

8. Insert the loaded pod holder into the brewer and press all the way in to lock holder.

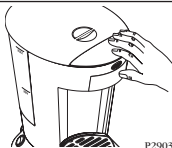


(NOTE: You should hear a clicking sound when the pod holder locks in place.)

9. Press and release the Coffee or Tea button. To cancel a brew, press and release the Coffee or Tea button.

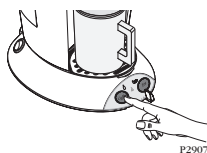


10. When brewing has stopped, press and hold the pod holder release button while sliding the pod holder out.

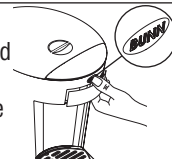

(NOTE: The red BUNN light will come back on indicating the brew cycle has finished.)

11. Dispose of the used pod. **Do Not Touch Hot Pod!**

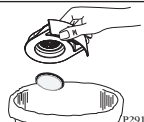

(NOTE: Use care not to dispose of pod insert.)

Enjoy!
(Caution: Beverage is very hot.)

HOT WATER

The same basic steps used to brew coffee or tea can be used to obtain hot water by leaving the coffee pod or tea bag/pod out of the pod holder.

CAUTION: *The water from your BUNN® Pod brewer is approximately 93°C (200°F). This is hotter than the hot water from your faucet and must be handled with care.*

COFFEE FUNDAMENTALS

Brewing delicious coffee is similar to cooking any favorite food. Both require a good recipe. Proper coffee making requires quality equipment to precisely control water temperature, volume, and brew time. The BUNN® Pod brewer assures consistency in your recipe by controlling all of these elements. The only variables remaining in the recipe are the amount of coffee and the volume of hot water used to extract the desired flavor.

The amount of coffee is generally determined by the pod size. (Pod size can vary and is determined by the manufacturer.) The BUNN® Pod brewer will work with most coffee pods in the 45 - 61 mm range. NOT for use with Espresso pods!

Hot water extracts many elements from the coffee, some desirable, some not. The amount of coffee used and the amount of water passed through the coffee determines strength. Increasing the amount of coffee (by using a larger pod) results in a stronger beverage. Decreasing the amount of coffee (by using a smaller pod) with the same amount of water, results in a weaker beverage. Too much water and too little coffee can result in over-extraction. Over-extracting the coffee can cause an unwanted bitter taste.

As the amount of coffee decreases, you'll note an increase in the bitterness of the beverage. This happens because the hot water begins to remove the undesirable elements after all of the desirable elements have been extracted.

Fresh coffee gives the best results. Always store the coffee pods in a sealed, air tight container. Store in a cool, dry area away from other food items with strong odors.

BREWING TIPS

When properly brewed, the difference between the best quality coffee and a poor quality coffee becomes very dramatic. Proper brewing requires little effort with the BUNN® Pod brewer.


You'll always have a great coffee experience if you follow these tips:

- 1) Always start with clean equipment.
- 2) Always use fresh cold water.
- 3) **Adjust the recipe until it suits you. If you need to make a stronger cup of coffee, experiment with less water or larger pods. The serving size range is 118 to 355 ml (4 to 12 oz.) as indicated on the Volume Control Indicator.**

ROUTINE CLEANING

Before beginning any cleaning procedure, unplug the brewer to avoid the accidental start of a brew cycle.

Clean the pod holder, drip tray and drip tray grate after each use, using a damp cloth and mild detergent and rinse. With the pod holder and drip tray removed, use a damp cloth with mild detergent to wipe the area below the pod holder and into the drip tray area. Occasionally, wipe the outside of the brewer with a damp cloth. (The reservoir, slide lid, pod holder, drip tray and drip tray grate are dishwasher safe.)

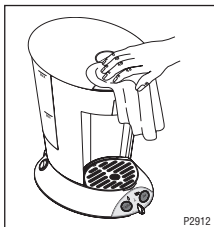

PERIODIC CLEANING/DESCALING

(Recommended At Least Once a Month.)

Periodically, you should clean and descale the brewer to clear any mineral deposits that may have accumulated due to impurities in the water source. If these deposits are not removed, they can impair the operation of the brewer and reduce the product life.




There are several products available specifically for descaling. We recommend using URNEX® Activated Descaler or JavaClean2 Cleaner and Descaler, available on our web site: www.bunn.com. (White vinegar can be used to descale if a descaling product is not available.)

Follow the directions as printed on the manufacturer's package.

- 1) Fill the reservoir with descaling product as described by the manufacturer's directions, or 946 ml (32 oz.) of white vinegar. **Do not add powder mix directly to the reservoir. Descaling product must be mixed into a solution before it is added to the reservoir.**
- 2) Place an empty pod holder into the brewer. Be sure the holder is locked into place, and set the VOLUME CONTROL SLIDE LEVER to the maximum position.
- 3) Place an empty cup or bowl on the drip tray grate that will hold at least 414 ml (14 oz.) of liquid, and press the COFFEE BREW BUTTON to start a brew cycle.
- 4) Once the brew cycle has finished, empty the cup and set it back onto the drip tray grate. Press the COFFEE BREW BUTTON again to start a second brew cycle.
- 5) Once the brew cycle has finished, empty the cup and the remaining solution, or vinegar from the reservoir. Remove the Pod Holder; clean the reservoir and pod holder thoroughly using a mild detergent, then rinse.

NOTE: There is now descaling solution in the internal tank. *Follow the manufacturer's directions if the solution must be left in the tank for any period of time. For vinegar, allow the solution to sit for at least two, but no more than four hours.*

- 6) Fill the reservoir to the maximum line with fresh clean cold water and place the pod holder back into the brewer.
- 7) Place the empty cup or bowl back onto the drip tray grate and press the COFFEE BREW BUTTON to begin a brew cycle.

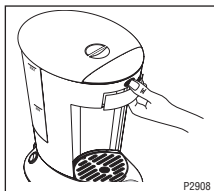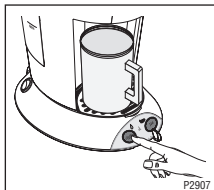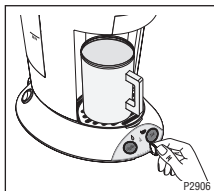

PERIODIC CLEANING/DESCALING (Cont.)

- 8) When the cycle has finished, empty the cup. Repeat step 7 at least two more times to remove the solution from the tank.
- 9) Clean the pod holder with a mild detergent and rinse thoroughly.
- 10) Proceed to the "Cleaning The Sprayhead/Seal" section.

CLEANING THE SPRAYHEAD/SEAL


- 1) Press the Power Switch into the off "O" position.
- 2) Unplug the brewer and allow it to cool down. (Minimum of 1 hour.)
- 3) After the unit has been allowed to cool, remove the pod holder and set aside.
- 4) Using your fingers, rotate the sprayhead/seal assembly clockwise until the sprayhead and seal are removed.

NOTE: If the sprayhead and seal are separated, they must be reassembled as they were when removed from the brewer.

CAUTION: Improper reassembly could result in personal injury from scalding water.

NOTE: See "Assembling Sprayhead/Seal" (Page 13) & "Inspecting Sprayhead Seal" (Page 14) for more information.

- 5) Clean the sprayhead and seal with a mild detergent and rinse thoroughly.
- 6) Using your fingers, rotate the sprayhead/seal assembly counter-clockwise until it is finger tight.
- 7) Replace the pod holder.
- 8) Plug in the brewer and press the POWER SWITCH to restore power to the brewer.

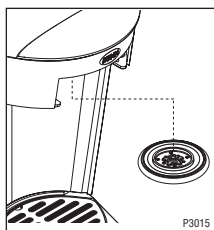




ASSEMBLING THE SPRAYHEAD/SEAL

If the sprayhead and seal are separated during removal or cleaning, they must be reassembled properly.

- 1) Identify the top of the seal. The top of the seal that seats against the roof of the sprayhead ramp has a rough ridge that can be felt by running your fingers across the surface of the seal. The bottom is smooth.
- 2) Identify the top of the sprayhead. The top of the sprayhead has a star pattern and a threaded hole where the sprayhead attaches to the brewer.
- 3) While carefully stretching the seal, guide the sprayhead into the channel of the seal. Make sure it is completely in the channel.

When properly assembled, the sprayhead will slide easily into the channel of the seal and will not cause any buckles in the surface of the seal. If the sprayhead seems to be difficult to seat, and you must stretch the seal more than a slight tug, the assembly is not together correctly.

CAUTION: Improper reassembly could result in personal injury from scalding water.

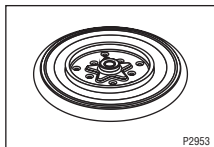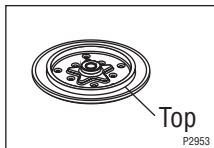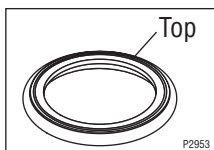

INSPECTING THE SPRAYHEAD SEAL




When disassembling your brewer for cleaning, inspect the sprayhead seal for cracks, tears and holes. Although the seal should last for an extended period of time, damage can occur through handling.

CAUTION: The seal confines the hot liquid to the pod holder. Replace the seal if it becomes damaged. Parts are available at www.bunn.com.

CLEANING THE POD HOLDER

To prevent residue build up, it is a good idea to periodically disassemble the pod holder/screen assembly and clean it with a mild detergent.

- 1) Press and hold the POD RELEASE BUTTON while sliding the pod holder out.
- 2) Flip the POD HOLDER upside down and place the holder cavity over the palm of your hand.
- 3) Using a small object, press the tab of the POD HOLDER INSERT through the hole in the bottom of the pod holder to remove.
- 4) Clean the screen and holder using a mild detergent and rinse. (Dishwasher Safe)
- 5) Press the insert back through the hole in the bottom of the POD HOLDER.

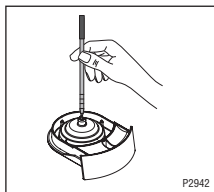

CYCLING THE BREWER

If the brewer has not been used for an extended period of time, it is a good idea to cycle your brewer before brewing a cup of coffee or tea.

- 1) Remove the reservoir and pod holder from the brewer, clean with a mild detergent and rinse.
- 2) Refill the reservoir to the maximum line.
- 3) Insert an empty pod holder into the brewer.
- 4) Set the volume control lever to the maximum setting.
- 5) Place a bowl or cup on the drip tray grate that will hold at least 414 ml (14 oz.)
- 6) Press the coffee brew button.
- 7) When the brew cycle has ended and water drip out has stopped, carefully remove the pod holder and remove any excess water.

CAUTION: Water is hot!
You are now ready to brew.

STORING THE BREWER

Unplug the brewer and wait for it to cool. If your Pod brewer has been used, it must be stored above 0°C (32°F) to prevent damage to the internal water tank. Empty and dry the water reservoir before storing.

NOTE: Water will remain in the internal tank. If stored for an extended period of time, refer to "Cycling The Brewer" section before using.



TROUBLESHOOTING



SITUATION

Nothing happens when the COFFEE BUTTON or TEA BUTTON is pressed.

EXPLANATION

This is the first time you have used your brewer.

The Initial Brewer Set-up procedure must be performed first. Please follow the directions on page 9 before attempting to run a brew cycle.

Your brewer is not plugged in.

Check to make sure the brewer is plugged in and the POWER SWITCH has been turned on. (The POD HOLDER RELEASE BUTTON - also known as the BUNN Indicator - will be illuminating red, indicating power to the brewer.)

The HEATING INDICATOR is lit.

Wait until the indicator goes off before pressing one of the brew buttons. The brewer will not start a brew cycle until the water in the internal tank is heated to the proper temperature.

The POD HOLDER INDICATOR is lit.

Check to make sure the POD HOLDER is inserted into the brewer.

If the POD HOLDER is inserted into the brewer, carefully remove and replace the POD HOLDER to ensure the POD HOLDER is locked in place.

Listen for a clicking sound. The click indicates that the holder has locked into place.

The REFILL WATER INDICATOR is lit.

The reservoir has run low on water and needs to be filled above the minimum mark indicated on the side of the reservoir.

SITUATION

EXPLANATION

The REFILL WATER INDICATOR has come on.

The WATER RESERVOIR has run low on water.

Slide the lid open and pour additional water into the reservoir, or remove the reservoir and fill it at a sink, or other water source.

CAUTION: Do not place the brewer in a sink or other water source. Do not fill past the Maximum fill line.

The POD HOLDER INDICATOR has come on.

The POD HOLDER is missing.

Place the pod holder into the machine and press it firmly into place.

The POD HOLDER is not locked in place.

Carefully remove and re-insert the pod holder into the machine while listening for a clicking sound. The POD HOLDER INDICATOR on the control panel should go out.

The water shuts off and comes back on again when brewing.

The TEA BREW BUTTON has been pressed to start the brew cycle.

Do NOT press the TEA BREW or COFFEE BREW button during the brew cycle. This will stop the brew cycle. The brewer is using a Pulse Brew™ technology to steep tea properly. The water will shut off and turn on again. This is normal and will take about 45 seconds to complete. Wait for the blue lights to go out.

NOTE: Although the pulse brew process can be used for coffee or tea, it is designed to brew tea. Because the process of brewing tea is different than coffee, the brewer works differently when the TEA BREW BUTTON is used. An “On-Off-On” cycle is used to steep the tea and provide the maximum flavor extraction. The action is a cycling of the water flow, causing the water to go off and come back on. This is normal.

TROUBLESHOOTING (Cont.)

SITUATION

The Pod Holder will not come out of the brewer.

EXPLANATION

The pod in the POD HOLDER may have swelled to a point where the holder does not slide out easily.

Wait at least 10 minutes and then try carefully removing the pod holder again.

CAUTION: Hot liquid may be present.

Water is appearing on the counter around the base of the brewer.

The WATER RESERVOIR has been removed to be filled with water and was not seated properly when it was replaced.

Remove the lid from the top of the brewer. With firm, but not forceful pressure, press down on both sides of the reservoir to ensure that the seal in the bottom of the reservoir seats properly. Replace the lid and watch for additional water around the base of the brewer. If a problem persists, contact Customer Service. (Refer to page 19 or 21 for customer assistance.)

Water leaks out around the sprayhead.

Replace a damaged seal or tighten a loose sprayhead.

Refer to “Assembling The Sprayhead/Seal” & “Inspecting The Sprayhead/Seal” sections for detailed information on how to resolve sprayhead leaks.

CAUTION: Wait for hot liquid to cool.

SITUATION

EXPLANATION

The BUNN® (POD HOLDER RELEASE BUTTON) indicator is not on all of the time.

When the BUNN® button (Also known as the POD HOLDER RELEASE BUTTON) is lit, this indicates that the power to the machine is on.

No action is required. The BUNN® Pod brewer is ready to brew.

When the brewer enters a sleep mode the POD HOLDER BUTTON will not be glowing.

Pressing any button or the POD HOLDER RELEASE BUTTON will wake up the brewer.

NOTE: *If the brewer does not operate, refer to the first situation listed in the beginning of this troubleshooting section, on page 15.*

The HEATING INDICATOR comes on when the COFFEE or TEA button is pressed.

The HEATING INDICATOR will glow when the tank is bringing water up to brew temperature.


Wait for the HEATING INDICATOR to go out. When the Indicator has gone out, a brew cycle can be started.

The HEATING INDICATOR comes on during a brew cycle.


The water entering the internal tank is being heated for the next brew cycle.

No action is required. As the heated water is being emptied to brew a serving, new water enters the internal tank. The brewer senses this new water and activates the tank heater to heat the water for the next brew cycle. The indicator coming on during a brew cycle is normal.

BUNN® REPLACEMENT PARTS

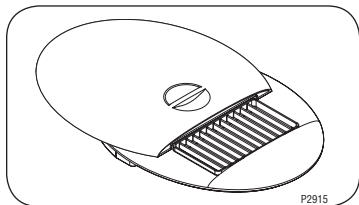

SLIDING LID
Dishwasher Safe.

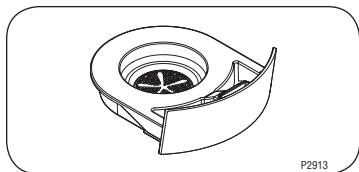

POD HOLDER
Dishwasher safe.



POD HOLDER INSERTS


Available in black or green. Color code your pod holder to identify coffee and tea holders. Helps prevent



SPRAYHEAD
Precision Jetstream™ sprayhead for full flavor extraction.




SPRAYHEAD SEAL
Used to seal the sprayhead area and ensure proper pod pressure and flavor extraction.

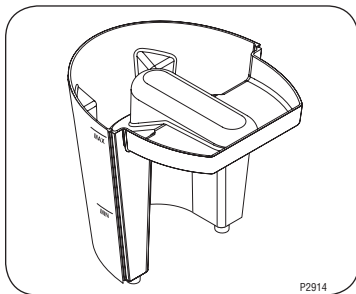

WATER RESERVOIR
Holds 1.7 L (46 oz.) of fresh water for quick brewing. Dishwasher safe.



DRIP TRAY AND GRATE
Dishwasher safe. Catches up to 177 ml (6 oz.) of liquid.

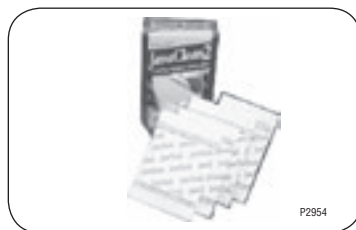

DESCALER/LIME INHIBITOR
Recommended products to descale your BUNN® My Café™ pod brewer are available at www.bunn.com.

To purchase replacement parts, visit our web site at www.bunn.com

LIMITED WARRANTY

Bunn-O-Matic Corporation (“Bunn” or “we”) warrants to the original user (the “buyer” or “you”) of this Pod Brewer that the Pod Brewer is free from defects in material and workmanship existing at the time of manufacture and appearing within two years of the date of original purchase of the Pod Brewer.

If such a defect appears during the warranty period, you must notify us promptly by contacting us through our website at www.bunn.com.

If we determine, in our sole discretion, that the unit is not in the warranted condition during the warranty period, we will (at our exclusive option) either (1) arrange for the unit to be repaired, at no cost to you for parts or labor, by a Bunn Authorized Service Representative, (2) replace the unit at no charge to you or (3) refund the purchase price you paid for the unit.

Coverage under this warranty is conditioned on you (1) providing us with prompt notice of any condition for which you seek warranty coverage, (2) providing us, if we request, with proof of the price and date of your purchase, (3) returning the unit at your expense, if we request, to a Bunn Authorized Service Representative for inspection or repair, (4) obtaining our prior authorization for any repair of the unit, and (5) having any repair work performed only by a Bunn Authorized Service Representative.

This warranty does not cover claims resulting from misuse, neglect, alteration, improper installation or operation, improper maintenance or repair, damage or casualty.

THIS WARRANTY SHALL BE EXCLUSIVE AND SHALL BE IN LIEU OF ANY OTHER EXPRESS WARRANTY, WRITTEN OR ORAL, INCLUDING BUT NOT LIMITED TO ANY EXPRESS WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS EXPRESSLY LIMITED TO THE TWO-YEAR PERIOD OF DURATION OF THE EXPRESS WARRANTY SET FORTH ABOVE. No one, including the employees of Bunn or its agents or dealers, is authorized to modify this express warranty or to make additional oral or written express warranties on our behalf. Accordingly, you should not rely on any such statements as creating oral or written express warranties that are binding on us.

Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

YOUR EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY OR OF ANY IMPLIED WARRANTY OR OF ANY OTHER OBLIGATION ARISING BY OPERATION OF LAW OR OTHERWISE SHALL BE LIMITED AS SPECIFIED HEREIN TO REPAIR, REPLACEMENT OR REFUND, AT OUR SOLE OPTION. IN ANY EVENT, WE WILL NOT BE RESPONSIBLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

This warranty gives you specified legal rights, and you may have other rights which vary from state to state.