



# NESPRESSO®

## ESSENZA AUTOMATIC



**C100**

**Instruction Manual**



Please read this Instruction Manual and the safety instructions before operating the appliance!



# 1

## First use or after a longer period of non-use



Remove plastic film



Fill water tank



Place a container



Plug into mains + switch ON



Heating up



Ready



Rinse: let water run through 6x

No water



see: 8b

# 2

## Daily: before the 1st coffee



Fill water tank with fresh water



Switch ON



Heating up



Ready

3



# Espresso



# Lungo

## Preparation



Preheat cup:



1 cup of water



Insert capsule



3.



or



Flow speed depends on coffee variety



Eject capsule (drops into capsule container)

## Programming the fill up level



Insert capsule

Press and hold button for at least 3 seconds,  
release at desired level

or

## Resetting the programmed large and small coffee flows to factory settings



Switch OFF

Press and hold big  
cup button


Switch ON

# 4

## Daily: After the last coffee



Switch off

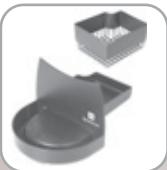

Empty capsule  
container + drip tray



Rinse and empty  
water tank

# 5

## Clean: When necessary



~~abrasive~~

~~solvent container~~

~~dishwasher~~

Damped cloth, cleaning agent mild



# 6

## Empty system: After long period of non-use, for frost protection and after repair



Switch off and remove  
water tank



Press small cup button &  
switch on simultaneously



Buttons blink alternatively



1. Open  
2. push and hold for 3 secs.



Close



Switch off  
(machine blocks for 10 min and  
is ready to be transported)




# 7 Descaling

Carefully read safety instructions on decalcifier package.  
Decalcifier is aggressive to surface of casing.  
Vinegar: Danger of damage



Water hardness      Descale after

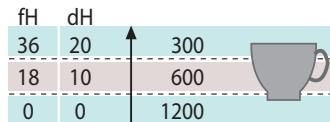

## Preparation

**a**



Remove capsule



Empty capsule  
container + drip tray



Rinse machine,  
see 1



If leakage  
see:

**8d**

**b**



Fill with *Nespresso* desca-  
ller and 0.5 l water



Place a recipient



1. Lift lever, 2. insert filter,  
3. close lever

**c**

## Descaling



Press both buttons sim-  
ultaneously for 3 seconds

**Start**

**Stop**

Avoid using vinegar as it  
can damage your machine.

Let descaling solution run through twice



Refill water tank once  
more with descaling  
solution and repeat step

**d**



Remove filter



Empty, rinse and fill water  
tank with fresh water



Rinse machine,  
see 1



Exit: press both buttons  
simultaneously for 3 secs



# 8 Troubleshooting

a

- No light indicator



Check mains: plug, voltage, fuse. In case of problems call Nespresso Club

- No coffee,  
no water

- Water tank empty -> fill water tank

b

- Venting



- Descale, if necessary -> point 7

c

- Coffee not hot enough



Preheat cup, descale if necessary

d

- Lever cannot be closed completely



Empty capsule container / check that no capsule is blocked inside the capsule container

e



- Irregular interval blinking



Send machine to repair or call Nespresso Club



## Specifications



..... 220 - 240 V, 50 Hz, max. 1260 W



..... max. 19 bar



..... ~ 3 kg



..... 1 l



..... 5°C ... 45°C



..... 16.6 cm | 25.2 cm | 29.1 cm



## Optional Accessory



Nespresso descaling kit



# Safety precautions

Keep this instruction manual



- Emergency:  
Immediately remove plug from power socket.



- This machine is made for private households (not commercial use) and indoor use only.
- Remove plug from socket if not in use for longer time, vacation etc.



- Verify that the voltage quoted on the rating plate is the same as your voltage.
- Connect the appliance only to power sockets with protective earth. The use of incorrect connection voids warranty.



- Place on a flat, stable, heat-resistant surface away from water splashes and any heat sources.



- Do not use the machine if it is not operating perfectly or if it evidences of damage. In such cases inform *Nespresso Club*.



- Always close lever, never lift during operation.
- Do not put fingers into capsule compartment and capsule shaft, danger of injury.
- Do not use appliance without drip tray and drip grid.
- Keep appliance/cable out of reach of children.



- Do not place power cord by hot parts or sharp edges, etc.
- Never touch cable with wet hands. - Do not unplug by pulling the cord.
- In case of damage, do not use the appliance. In order to avoid danger have repairs and replacement of power cord only by *Nespresso Club*.

This appliance may become a safety hazard if these instructions and safety precautions are ignored.



- Do not open appliance and do not put anything into openings. All operations other than normal use, cleaning and care must be performed by *Nespresso Club*.



- Children may never use the appliance without close adult supervision.



- Before cleaning/care unplug the appliance and let it cool down.
- Never clean wet or immerse plug, cord or appliance in any fluid.



- Descaling:  
7c) Do not lift lever during descaling process.  
7d) Rinse the water tank and clean the machine to avoid any residual descaling agent.



- Packaging is made of recyclable materials



- Environment protection first!  
Your appliance contains valuable materials which can be recovered or recycled. Leave it at a collection point.