

User's Guide


 









Introduction

Now there's a fun way to make crossword puzzles less puzzling. With this Crosswords Puzzle Solver you can . . .

- find possible crossword answers when you know only a few letters,
- find possible crossword answers when you know most of the letters,
- find phrases when you know only one word or a few letters,
- find more possible answers by changing one or more letters,
- jumble letters to form words for games such as Scrabble®.

The Crosswords Puzzle Solver can't solve all your crossword puzzles, but by combining your knowledge with its 250,000 word crossword answer list from Merriam-Webster®, you will find many more answers than you find now.

Key Guide

	Finds more possible answers.
	Jumbles letters to form words.
	Finds phrases that include entered word.
	Stands for an unknown letter.
	Stands for a series of unknown letters.
	Turns Crosswords on and off.
	Clears to <i>Ready</i> .
	Stands for an unknown letter.
	Stands for a series of unknown letters.
	Enters a request.
	Types a hyphen.
	Darkens screen contrast at <i>Ready</i> , scrolls up, or types an apostrophe.
	Lightens screen contrast at <i>Ready</i> , scrolls down, or types a period.
	Erases a letter or scrolls left.
	Types a space or scrolls right.

Getting Started

If you are using this product for the first time, follow these steps.

1. Press **ON/OFF**.

A brief demonstration appears.

2. Press **CLEAR** to stop the demo.

Ready appears.

3. Press **↓** or **↑** repeatedly to adjust the screen contrast.

You can adjust the contrast only at *Ready*.



✓ **Disabling the Demonstration**

You probably do not want to view the demonstration every time you turn this product on. To disable the demonstration, type `--D` and then press ENTER. To re-enable it, do the same.

✓ **About Automatic Shutoff**


Don't worry if you forget to turn Crosswords off. If no key is touched within two minutes, Crosswords will shut itself off.

Finding Words

Crosswords helps you find answers to crossword puzzles by filling in missing letters. Just type a question mark for each unknown letter. To type a question mark, press  or .

1. Type a word with ?'s.

A screenshot of a crossword puzzle input field. The text inside the field is 'C?M??N?E?' in a pixelated font. The field has a rounded rectangular border.

To erase a letter, press .

2. Press ENTER.

A screenshot of a crossword puzzle input field. The text inside the field is 'COMMANDER' in a pixelated font. To the right of the text is a downward-pointing arrow icon. The field has a rounded rectangular border.

The arrow at the right of the screen indicates there are more matches.

3. Press to view more matches.

4. Press CLEAR when done.

✓ Follow the Arrows

The flashing arrows at the right of the screen show which arrow keys you can press to view more words.

Finding Words

To find a series of missing letters in a word, type an asterisk. To type an asterisk, press **MATCH** or **↵**. There are more matches here because an asterisk can be one or several letters.

1. Type a word with *'s.

C*M*R

2. Press ENTER.

CABINETMAKER ↓

3. Press ↵ to view more matches.

4. Press CLEAR when done.

✓ Tips for Finding Words

- Use ?'s to find lists of words. For example, to view four-letter words beginning with a z, enter Z???.
- Use both ?'s and *'s in a word (e.g., Z*K?). There is no need to type a ? next to an *.

Finding Phrases

Crosswords can also search for phrases. You need to know only a few of the letters in the phrase. NOTE: Phrases take longer to find because Crosswords must search its entire list of phrases from A to Z.

1. Type a word in a phrase (e.g., *CAT*).
2. Press PHRS.

Phrasing AB... Ⓞ

ALLEY CAT ↓

3. Press ⏴ to continue searching.

CAT BURGLAR ↓

4. Press CLEAR to stop.

✓ Typing Punctuation

At *Ready*, you can type an apostrophe by pressing ⏶ or a period by pressing ⏴.

NOTE: These punctuation marks cannot begin a word.

Finding More Words

If you haven't found the answer you were looking for by using the ? or * keys, try pressing MORE. Each time you press MORE, Crosswords substitutes letters for one that you've typed.

1. Enter a word with ?'s or *'s
(e.g., *SH?P?*).

2. Press ↓ to view the matches.

SHAPE ↓

3. Press MORE.

cHAPE ↓

The lowercase letter is the new letter.

4. Press ↓ to view the new matches.

5. Press MORE again to find more possibilities.

æcAPU ↓

6. Press CLEAR when done.

Jumbling Letters

Jumble scrambles the letters you type to form words. It can help you with Scrabble®, anagrams, and other word games.

1. Type letters or a word.

XEWZLA

2. Press JUMBLE.

3. Press ↑ or ↓ to choose the minimum word size (e.g., 4).

4. Press ENTER.

ALEX



5. Press ↓ to view the words.
6. Press CLEAR when done.

Product Care

Replacing the Battery

This product uses one CR2032, 3-volt lithium battery. Should you need to replace the battery, unscrew the screws on the back with a very fine screwdriver and carefully remove the back cover. Then install a new battery, plus sign facing you, and replace the cover.

Cleaning, Storage, Problems

To clean, spray a mild glass cleaner onto a cloth and wipe the surface. Do not spray liquids directly on this product. Do not use or store this product in extreme or prolonged heat, cold, humidity, or other adverse conditions. It could damage its circuitry.

Customer Service

For registration and sales call 1-800-266-5626 (U.S. only) or visit us at www.franklin.com. Please have your product number (*NCS-100*) and date of purchase handy when you call to register. For customer service call 609-239-4333. For technical support call 609-386-8997.

This unit may change operating modes due to electrostatic discharge. Normal operation of this unit can be reestablished by pressing ON/OFF.

Product Information

Model NCC-100

- 250,000 words with Spellblaster II™ spelling correction
- MatchMaker™ letter-finding keys • Jumble word-builder key
- Self-demonstration • Screen contrast adjustment
- Automatic shutoff
- 6 function keys • LCD: 1 x 16 characters
- Weight: 1.6 oz. • Size: 6.9 x 10.1 x 0.8 cm
- Battery: one CR2032 3-volt lithium

Copyrights, Trademarks, Patents, and ISBN

© 1991-1995, 1999 Franklin Electronic Publishers, Inc. Burlington, N.J. 08016-4907 USA. All rights reserved.

Next Century, Spellblaster II, and MatchMaker are trademarks of Franklin.

© 1981-1983 Merriam-Webster, Inc.

All rights reserved.

Scrabble® is a registered trademark of Hasbro, Inc., manufacturer of Scrabble brand word games.

U.S. PATENTS; 4,490,811; 4,830,618; 4,891,775;
5,113,340; 5,218,536; 5,249,965

EURO. PAT. 0 136 379

ISBN 1-56712-209-4

FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

Limited Warranty (U.S. only)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES AND LIMITED REMEDY

(A) LIMITED WARRANTY. FRANKLIN WARRANTS TO THE ORIGINAL END USER THAT FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF YOUR RECEIPT, YOUR FRANKLIN PRODUCT SHALL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP. THIS LIMITED WARRANTY DOES NOT INCLUDE DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, WILL BE REPAIR OR REPLACEMENT WITH THE SAME OR AN EQUIVALENT PRODUCT OF THE DEFECTIVE PORTION OF THE PRODUCT, AT THE SOLE OPTION OF FRANKLIN IF IT DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THE DEFECTS AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER LEGISLATED RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

(B) DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY. EXCEPT FOR THE LIMITED WARRANTIES EXPRESSLY RECITED ABOVE, THIS FRANKLIN IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, QUALITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY FRANKLIN AND DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. NEITHER FRANKLIN NOR OUR DEALERS OR SUPPLIERS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR DAMAGED DATA OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR THEY ARE OTHERWISE FORESEEABLE. WE ARE ALSO NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. OUR MAXIMUM AGGREGATE LIABILITY TO YOU, AND THAT OF OUR DEALERS AND SUPPLIERS, SHALL NOT EXCEED THE AMOUNT PAID BY YOU FOR THE FRANKLIN PRODUCT AS EVIDENCED BY YOUR PURCHASE RECEIPT. YOU ACKNOWLEDGE THAT THIS IS A REASONABLE ALLOCATION OF RISK. SOME STATES/COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

(C) WARRANTY SERVICE: UPON DISCOVERING A DEFECT, YOU MUST CALL FRANKLIN'S CUSTOMER SERVICE DESK, 1-800-266-5626, TO REQUEST A RETURN MERCHANDISE AUTHORIZATION ("RMA") NUMBER, BEFORE RETURNING THE PRODUCT (TRANSPORTATION CHARGES PREPAID) TO:

FRANKLIN ELECTRONIC PUBLISHERS, INC.
ATTN: SERVICE DEPARTMENT
ONE FRANKLIN PLAZA
BURLINGTON, NJ 08016-4907

IF YOU RETURN A FRANKLIN PRODUCT, PLEASE INCLUDE A NOTE WITH THE RMA, YOUR NAME, ADDRESS, TELEPHONE NUMBER, A BRIEF DESCRIPTION OF THE DEFECT AND A COPY OF YOUR SALES RECEIPT AS PROOF OF YOUR ORIGINAL DATE OF PURCHASE. YOU MUST ALSO WRITE THE RMA PROMINENTLY ON THE PACKAGE IF YOU RETURN THE PRODUCT, OTHERWISE THERE MAY BE A LENGTHY DELAY IN THE PROCESSING OF YOUR RETURN. WE STRONGLY RECOMMEND USING A TRACKABLE FORM OF DELIVERY TO FRANKLIN FOR YOUR RETURN.

Notes
