

Before Using This Device

Thank you for purchasing the Samsung Lens. Some functions described in this manual may not be available depending on the camera model. For best performance when using this lens, you must keep the camera's firmware up-to-date. To use this lens with NX10, NX100, NX11, NX5, NX200, NX210, NX20, or NX1000 cameras, you must use the latest version of firmware. Visit www.samsung.com to download the firmware.

Special features

Use this multipurpose lens to capture all types of photos from landscapes to close-up photo. You can quickly and quietly adjust the focal length from 16-50 mm with the focus adjusting feature, to change the angle of view. A dust- and water-resistant body protects the lens from damage and maintains its condition and performance.

Unpacking

Lens, Lens cap, Lens mount cover, Hood, Case, User manual

•Optional Item: Filter

Layouts (See illustration A)

- 1 Lens hood mount index 2 Lens 3 OIS switch
- 4 AF/MF switch 5 i-Function button 6 Zoom ring
- 7 Lens mount index 8 Lens contacts 9 Focus ring

Attaching and Removing the Lens

► To attach the lens,

- 1 Remove the lens cap, lens mount cover, and body cap.
- 2 Align the red mark on the lens with the red mark on the camera body. Then, rotate the lens as shown in the illustration until it locks into place. (See illustration B)

► To remove the lens, press and hold the lens release button, and then rotate the lens as shown in the illustration. (See illustration C)

Setting the Focus Method

Set the AF/MF switch on the lens to **AF** or **MF**. (See illustration D)

Auto Focus (AF): The focus is adjusted automatically when you half-press [Shutter].

Manual Focus (MF): The focus can be adjusted manually by rotating the focus ring.

Use the **MF Assist** function and the **DMF Responsiveness** function to adjust the focus precisely and conveniently. Refer to your camera manual for more details.

Using i-Function

When you press the i-Function button on the lens, you can use the 1 effect mode or 1 zoom or adjust some shooting options. In the 1 effect mode, you can select scenes or filter effects that your camera supports. 1 zoom allows you to zoom in on a subject with less degradation of photo quality than the Digital zoom. This feature is available only when your camera supports it. i-Scene mode is available only on some camera models.

- 1 Rotate the mode dial to **P**, **A**, **S**, **M**, or 1.
- 2 Press [i-Function] on the lens to select a setting. (See illustration E)
 - Available settings may differ depending on the shooting mode.

Setting	Shooting mode	Setting	Shooting mode
1 effect	1	Aperture value	A, M
1 zoom	P, A, S, M, 1	Exposure value	P, A, S
Shutter speed	S, M	White Balance, ISO	P, A, S, M

- 3 Rotate the focus ring on the lens to adjust the setting (or to change the zoom rate in 1 zoom mode).
- 4 Focus and capture the photo.

•To select the items that will appear when you press the i-Function button on the lens, you can use the **iFn Customizing** menu on your camera.

•Available scenes or filter effects in the 1 effect mode may vary depending on the camera model.

•If you select 1 zoom, the photo resolution will vary according to the zoom rate.

Using the Zoom Ring

Set the composition of the photo (the focal distance of the lens) by rotating the zoom ring on the lens.

When you use the zoom function, focus can be slightly changed. Adjust the focus again before you capture a photo.

Using the Optical Image Stabilization (OIS) Function (See illustration F)

The user can minimize the shaking of camera by using the OIS function. Set the OIS switch on the lens to **ON**.

Using a Lens Hood (See illustration G)

To prevent deterioration of image quality by blocking out unnecessary light, use a lens hood. When you are not using the lens hood it can be reverse-mounted on the lens for storage.

When you use a flash in situations where the distance between the subject and the camera is close, the flash light may be partially blocked by the lens or a lens hood. To ensure proper lighting, remove the lens hood or adjust the distance between the camera and subjects.

Using a Filter (optional)

Before putting a filter on the lens, make sure it is compatible. Refer to "Specifications" for compatible filter size.

•A filter is a precise optical product. Keep away from dust, dirt or scratches. Also, do not try to mount two or more filters at the same time. Doing so may deteriorate the image quality and cause vignetting (a reduction of an image's brightness or saturation at the periphery as the viewing angle of the lens is hidden).

•In case of a thick framed filter, the vignetting can occur with a wide-angle lens.

Specifications

Lens Name	SAMSUNG 16-50mm F2-2.8 S ED OIS
•Focal length:	16–50 mm (equivalent to 24.6–77 mm in 35 mm format)
•Elements in Group:	18 elements in 12 groups (3 aspheric lens, 2 Extra-low Dispersion lens, 2 Xtreme High Refractive Lens included)
•Angle of View:	82.6°–31.4°
•Aperture:	F2–2.8 (Minimum: F22), (Number of Blades: 9, Circular Aperture Diaphragm)
•Mount Type:	Samsung NX mount (Exclusive to NX series)
•Optical Image Stabilizer:	Supported
•Minimum Focus Distance:	0.3 m
•Maximum Magnification:	Approx. 0.19X
•i-Scene Mode:	Supported (Beauty Shot, Portrait, Children, Backlight, Landscape, Sunset, Dawn, Beach & Snow, Night)
•Lens Hood:	Included
•Filter Size:	72 mm
•Max. Diameter X Length:	81 X 96.5 mm
•Weight:	Approx. 622 g (without hood)
•Operating Temperature:	0–40 °C
•Operating Humidity:	5–85 %

Health and Safety Information

Please read the following safety tips carefully for proper and safe use.

Warning	•Do not stare at the sun through the lens or camera. This may cause severe damage to your eyes.
Caution	•Keep your lens or camera away from small children and pets.
	•Do not store the lens in direct sunlight without the lens cap. Direct sunlight that passes through the lens may combust if it comes into contact with flammable materials.
	•Use only sturdy tripods. Lightweight or unstable tripods may fall over and damage the camera.

Lens Storage and Maintenance

- Store the lens in dry and well ventilated areas.
- Do not store the lens in areas of high temperature or humidity or in a closet, car, or confined area where chemicals are stored.
- Do not expose the lens to water.
- The lens' dust-proof body is not perfectly sealed. Avoid removing or changing the lens in dusty areas.
- Do not use chemicals such as thinner, alcohol, or benzene to remove dust.
- Do not drop the lens or apply excessive shock to it. The lens is a precise optical product.
- Avoid using the lens anywhere there is a sudden temperature change. Keep the lens in a plastic bag or a camera case to prevent condensation from forming on the inside or outside of the lens.

- When carrying or not using the lens, place the lens cap and lens mount cover on the lens to prevent contamination from foreign particles and protect the lens from scratches.
- Do not keep the camera mounted on a tripod without the lens cap. The inside of the camera can be damaged by direct sunlight.
- Check the lens once every year or two for best performance.
- Do not apply excessive force to the front of the lens.
- For safe use of the lens, mount or dismount the lens while the camera is turned off.
- Samsung is not responsible for any damage incurred by using other manufacturers' lenses.
- Make sure to change lenses only in a clean environment and do not put your fingers into the lens mount when mounting the lens. Foreign particles may affect shooting results or cause a malfunction if they enter the camera body or the lens.
- Do not transport or store the lens with any part of the tube is extended. Completely retract the lens tube inside the body by rotating the zoom ring on the lens.
- To reduce the amount of dust or moisture that can enter the lens, the lens mount is fitted with a rubber seal. If the seal is damaged or worn, contact a Samsung service center to have it replaced (charges may apply). The rubber seal and the surfaces it contacts may experience wear and tear. This should not affect your camera's lifespan or performance.
- When using a tripod, position the tripod to avoid contact between the lens and the tripod.

Correct Disposal of This Product (Waste Electrical & Electronic Equipment) (Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources. Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling. Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

PlanetFirst represents Samsung Electronics' commitment to the sustainable development and social responsibility through eco-driven business and management activities.

Please refer to the warranty that came with your product or visit our website www.samsung.com for after-sales service or inquiries.