

# User Manual

SAMSUNG 20-50mm F3.5-5.6 ED II

ENG / KOR / FRE / GER / SPA / TCH / ITA / POR / BRA / TUR / RUS / SWF / FIN / DUT / DAN / NOR / S.CHI

This User Manual has been specially designed to guide you through the basic functions and features of your device.

Please read the User Manual carefully to ensure safe and correct use.

CE Please refer to the warranty that came with your product or visit our website www.samsung.com for after-sales service or inquiries.

AD68-08108A (1.1)

## English

### Before Using This Device

Thank you for purchasing the Samsung Lens. The illustrations used in this manual may differ from the actual lens. Some functions described in the manual are not available on the camera model. Update the firmware of the camera body and lens. Visit www.samsung.com to download the firmware.

### Unpacking

Lens, Cap, Lens mount cover, User manual

### Optional Item: Filter, Case

### Layouts (See illustration A)

- ① Lens mount index ② Zoom lock switch ③ Focus ring ④ Lens ⑤ Function dial ⑥ Zoom ring ⑦ Lens information contacts

### Attaching and Removing the Lens

- Remove the lens cap, lens mount cover, and body cap.
- 2 Align the red mark on the lens with the red mark on the camera body. Then, rotate the lens as shown in the illustration until it locks into place. (See illustration B)

### Attaching the lens

Before using the lens, you must unlock it. Rotate the zoom ring counter-clockwise until you hear a click.

### Unlocking the lens

After using the lens, you must unlock it. Rotate the zoom ring counter-clockwise until you hear a click.

### Using the focus ring

In the MF mode, adjust the focus manually by rotating the focus ring on the lens. You can select the MF mode on the camera.

Do not apply excessive force to the front of the lens while the lens is attached to the camera body. Doing so may cause the lens to malfunction.

If you select ①zoom, the photo resolution will vary according to the zoom rate.

► Use the MF Assist function on the camera to aid with manual focusing. Refer to your camera manual for more details.

### Using I-Function

When you press the I-Function button on the lens, you can use the I-effect mode, which allows you to change various camera settings.

► If you use the I-Function button on the lens, you can change the zoom, aperture, and shutter speed.

► When you use the zoom function, focus can be slightly changed. Adjust the focus again before you capture a photo.

### Locking the lens (See illustration E)

► When using the lens, press and hold the lens release button, and then rotate the lens to lock the lens. (See illustration C)

### Using a Filter (optional) (See illustration F)

Before putting a filter on the lens, make sure it is compatible.

Refer to "Specifications" for filter size.

► If you attach a non-compatible product, keep it away from dust, dirt, or scratches. Also, do not try to mount two or more filters at the same time. Doing so may deteriorate the image quality and cause vignetting (a reduction of an image's brightness or saturation at the periphery of the viewing angle of the lens is hidden).

► In case of a thick framed filter, the vignetting can occur with a wide-angle lens.

► Focus and capture the photo.

### Specifications

Lens Name SAMSUNG 20-50mm F3.5-5.6 ED II

Focal Length 20~50 mm

Filter size in 35 mm Equivalent 30.8~77 mm

Lens Construction-Elements 9

Lens Construction-Groups 8

Aspherical Elements 1

ED Element 1

Angle of View 70.2~31.4°

Maximum Aperture F3.5~5.6

Minimum Aperture F22

Number of Diaphragm Blades 7

Minimum Focus Distance (Wide) 0.28 m

Maximum Focus Distance (Tele) 0.28 m

Maximum Magnification 0.22x

Lens Hood Optional

Optical Image Stabilizer No

Mount Type Samsung NX Mount

Filter 40.5 mm

Max. Diameter 63.2 mm

Weight (Lens Only) 39.8 mm

Weight (Lens Only, Approx.) 119 g

Operating Temperature 0~40 °C

Operating Humidity 5~85 %

### Using the focus ring

In the MF mode, adjust the focus manually by rotating the focus ring on the lens.

You can select the MF mode on the camera.

Do not apply excessive force to the front of the lens while the lens is attached to the camera body. Doing so may cause the lens to malfunction.

If you select ①zoom, the photo resolution will vary according to the zoom rate.

► Use the MF Assist function on the camera to aid with manual focusing. Refer to your camera manual for more details.

### Using I-Function

Before using the lens, you must unlock it. Rotate the zoom ring counter-clockwise until you hear a click.

### Attaching and Removing the lens

- Detach the lens from the camera body. Turn the lens lock switch to the lock position. (See illustration A)
- 2 Align the red mark on the lens with the red mark on the camera body. Then, rotate the lens as shown in the illustration until it locks into place. (See illustration B)

### Attaching the lens

Before using the lens, you must unlock it. Turn the lens lock switch to the lock position. (See illustration C)

### Unlocking the lens

After using the lens, you must unlock it. Turn the lens lock switch to the lock position. (See illustration D)

### Using the focus ring

In the MF mode, adjust the focus manually by rotating the focus ring on the lens.

You can select the MF mode on the camera.

Do not apply excessive force to the front of the lens while the lens is attached to the camera body. Doing so may cause the lens to malfunction.

If you select ①zoom, the photo resolution will vary according to the zoom rate.

► Use the MF Assist function on the camera to aid with manual focusing. Refer to your camera manual for more details.

### Using I-Function

Before using the lens, you must unlock it. Rotate the zoom ring counter-clockwise until you hear a click.

### Attaching and Removing the lens

- Detach the lens from the camera body. Turn the lens lock switch to the lock position. (See illustration A)
- 2 Align the red mark on the lens with the red mark on the camera body. Then, rotate the lens as shown in the illustration until it locks into place. (See illustration B)

### Attaching the lens

Before using the lens, you must unlock it. Turn the lens lock switch to the lock position. (See illustration C)

### Unlocking the lens

After using the lens, you must unlock it. Turn the lens lock switch to the lock position. (See illustration D)

### Using the focus ring

In the MF mode, adjust the focus manually by rotating the focus ring on the lens.

You can select the MF mode on the camera.

Do not apply excessive force to the front of the lens while the lens is attached to the camera body. Doing so may cause the lens to malfunction.

If you select ①zoom, the photo resolution will vary according to the zoom rate.

► Use the MF Assist function on the camera to aid with manual focusing. Refer to your camera manual for more details.

### Using I-Function

Before using the lens, you must unlock it. Rotate the zoom ring counter-clockwise until you hear a click.

### Attaching and Removing the lens

- Detach the lens from the camera body. Turn the lens lock switch to the lock position. (See illustration A)
- 2 Align the red mark on the lens with the red mark on the camera body. Then, rotate the lens as shown in the illustration until it locks into place. (See illustration B)

### Attaching the lens

Before using the lens, you must unlock it. Turn the lens lock switch to the lock position. (See illustration C)

### Unlocking the lens

After using the lens, you must unlock it. Turn the lens lock switch to the lock position. (See illustration D)

### Using the focus ring

In the MF mode, adjust the focus manually by rotating the focus ring on the lens.

You can select the MF mode on the camera.

Do not apply excessive force to the front of the lens while the lens is attached to the camera body. Doing so may cause the lens to malfunction.

If you select ①zoom, the photo resolution will vary according to the zoom rate.

► Use the MF Assist function on the camera to aid with manual focusing. Refer to your camera manual for more details.

### Using I-Function

Before using the lens, you must unlock it. Rotate the zoom ring counter-clockwise until you hear a click.

### Attaching and Removing the lens

- Detach the lens from the camera body. Turn the lens lock switch to the lock position. (See illustration A)
- 2 Align the red mark on the lens with the red mark on the camera body. Then, rotate the lens as shown in the illustration until it locks into place. (See illustration B)

### Attaching the lens

Before using the lens, you must unlock it. Turn the lens lock switch to the lock position. (See illustration C)

### Unlocking the lens

After using the lens, you must unlock it. Turn the lens lock switch to the lock position. (See illustration D)

### Using the focus ring

In the MF mode, adjust the focus manually by rotating the focus ring on the lens.

You can select the MF mode on the camera.

Do not apply excessive force to the front of the lens while the lens is attached to the camera body. Doing so may cause the lens to malfunction.

If you select ①zoom, the photo resolution will vary according to the zoom rate.

► Use the MF Assist function on the camera to aid with manual focusing. Refer to your camera manual for more details.

### Using I-Function

Before using the lens, you must unlock it. Rotate the zoom ring counter-clockwise until you hear a click.

### Attaching and Removing the lens

- Detach the lens from the camera body. Turn the lens lock switch to the lock position. (See illustration A)
- 2 Align the red mark on the lens with the red mark on the camera body. Then, rotate the lens as shown in the illustration until it locks into place. (See illustration B)

### Attaching the lens

Before using the lens, you must unlock it. Turn the lens lock switch to the lock position. (See illustration C)

### Unlocking the lens

After using the lens, you must unlock it. Turn the lens lock switch to the lock position. (See illustration D)

### Using the focus ring

In the MF mode, adjust the focus manually by rotating the focus ring on the lens.

You can select the MF mode on the camera.

Do not apply excessive force to the front of the lens while the lens is attached to the camera body. Doing so may cause the lens to malfunction.

If you select ①zoom, the photo resolution will vary according to the zoom rate.

► Use the MF Assist function on the camera to aid with manual focusing. Refer to your camera manual for more details.

### Using I-Function

Before using the lens, you must unlock it. Rotate the zoom ring counter-clockwise until you hear a click.

### Attaching and Removing the lens

- Detach the lens from the camera body. Turn the lens lock switch to the lock position. (See illustration A)
- 2 Align the red mark on the lens with the red mark on the camera body. Then, rotate the lens as shown in the illustration until it locks into place. (See illustration B)

### Attaching the lens

Before using the lens, you must unlock it. Turn the lens lock switch to the lock position. (See illustration C)

### Unlocking the lens

After using the lens, you must unlock it. Turn the lens lock switch to the lock position. (See illustration D)

### Using the focus ring

In the MF mode, adjust the focus manually by rotating the focus ring on the lens.

You can select the MF mode on the camera.

Do not apply excessive force to the front of the lens while the lens is attached to the camera body. Doing so may cause the lens to malfunction.

If you select ①zoom, the photo resolution will vary according to the zoom rate.

► Use the MF Assist function on the camera to aid with manual focusing. Refer to your camera manual for



## Русский

### Подготовка к использованию объектива

Благодарим вас за покупку объектива Samsung. Внешний вид компонентов и конструкции камеры может отличаться от представленного на изображении. Для получения информации о этом руководстве, может быть недоступен в зависимости от конкретной модели камеры. Обновите прошивку камеры и определите, соответствует ли ваша модель предложенному веб-сайту [www.samsung.com](http://www.samsung.com).

### Комплект поставки

Объектив, Кронштейн, Крышка бленда, Руководство пользователя, Установка, Установка, Чехол.

### Устройство объектива (См. рис. А)

- 1 Металл бленда
- 2 Противоударный блокировочный зум
- 3 Фокусировочное кольцо
- 4 Окно для съемки
- 5 Крышка зума
- 6 Контакты объектива

### Установка и снятие объектива

1 Установите объектив в камеру. Снимите крышу бленда и крышу корпуса.

2 Совместите краяну крыши на объективе с краем бленда на корпусе.

3 Нажмите на конец крыши на объективе, пока он не зафиксируется в разъеме. (Одн. рис. B)

4 Чтобы снять объектив, нажмите на контакт объектива, как показано на рисунке.

### Разблокировка объектива

Перед использованием объектива его нужно разблокировать.

Поверните кольцо зума против часовой стрелки до щелчка.

### Использование фокусировочного кольца

В режиме MF фокусировка выполняется вручную с помощью фокусировочного кольца на объективе. Режим MF можно выбрать на экране.

1 Нажмите на контакт объектива, чтобы выбрать режим MF.

2 Поверните фокусировочное кольцо на объективе.

3 Поверните фокусировочное кольцо объектива, чтобы настроить параметр или изменить масштаб в режиме **zoom**.

4 Фокусировка и съемка.

### Функция i-Function

После настройки i-Function на объективе можно воспользоваться режимом **i effect** или **zoom** при съемке с помощью функции **zoom**. Съемка с помощью **zoom** может быть выполнена с помощью функции **zoom**, которая упрощает монтаж изображения с меньшей потерей качества, чем при использовании цифрового зума. Последняя функция доступна, только в некоторых моделях камеры.

### Съемка крыши бленда (См. рис. C)

После использования объектива потребуется перезапечатать блюскоры зума с направлением от корпуса фотокамеры и, наконец, повернуть кольцо зума на цифровой зум.

### Светофильтр (приобретается дополнительно) (См. рис. D)

Перед установкой светофильтра на объективе убедитесь в совместности обоих устройств. Размеры съёмочных фильтров приведены в разделе «Технические характеристики» на

### Максимальное увеличение

0,22X Приобретается дополнительно.

### Бленда

Нет

### Оптическая стабилизация изображения

Нет

### Тип крепления

Бланкет Samsung NX

### Размер фильтра

40,5 мм

### Максимальный диаметр

63,2 мм

### Длина

39,8 мм

### Масса (только объектив, прибл.)

119 г

### Рабочая температура

-40~40°C

### Рабочая влажность

5~85%

### Модификация

Ektastrudstry

### Optisk bildstabilisator

Nej

### Monteringstype

Samsung NX-montering

### Antal blendermøller

7

### Minste fokusavstand (vid)

0,28 m

### Maximale forstørrelse

0,22X

### Modifystand

Brugt robust stativ, Lette og stabile stativer kan være værdige kamerastativer.

### Forsigtig

• Objektivet er ikke beregnet for skader, der måtte opstå ved brug af andre produktet.

### Opbevaring af og vedligeholdelse af objektivet

• Objektivet monteres ved at:

1. Fjerner objektivet, monteringsdækslet og beskyttelsen til kamerahusets.

2. Monterer objektivet på kamerahuset.

3. Monterer objektivet med en dækkende filter.

4. Monterer objektivet med et gummibundet.

5. Monterer objektivet med et gummibundet.

6. Monterer objektivet med et gummibundet.

7. Monterer objektivet med et gummibundet.

8. Monterer objektivet med et gummibundet.

9. Monterer objektivet med et gummibundet.

10. Monterer objektivet med et gummibundet.

11. Monterer objektivet med et gummibundet.

12. Monterer objektivet med et gummibundet.

13. Monterer objektivet med et gummibundet.

14. Monterer objektivet med et gummibundet.

15. Monterer objektivet med et gummibundet.

16. Monterer objektivet med et gummibundet.

17. Monterer objektivet med et gummibundet.

18. Monterer objektivet med et gummibundet.

19. Monterer objektivet med et gummibundet.

20. Monterer objektivet med et gummibundet.

21. Monterer objektivet med et gummibundet.

22. Monterer objektivet med et gummibundet.

23. Monterer objektivet med et gummibundet.

24. Monterer objektivet med et gummibundet.

25. Monterer objektivet med et gummibundet.

26. Monterer objektivet med et gummibundet.

27. Monterer objektivet med et gummibundet.

28. Monterer objektivet med et gummibundet.

29. Monterer objektivet med et gummibundet.

30. Monterer objektivet med et gummibundet.

31. Monterer objektivet med et gummibundet.

32. Monterer objektivet med et gummibundet.

33. Monterer objektivet med et gummibundet.

34. Monterer objektivet med et gummibundet.

35. Monterer objektivet med et gummibundet.

36. Monterer objektivet med et gummibundet.

37. Monterer objektivet med et gummibundet.

38. Monterer objektivet med et gummibundet.

39. Monterer objektivet med et gummibundet.

40. Monterer objektivet med et gummibundet.

41. Monterer objektivet med et gummibundet.

42. Monterer objektivet med et gummibundet.

43. Monterer objektivet med et gummibundet.

44. Monterer objektivet med et gummibundet.

45. Monterer objektivet med et gummibundet.

46. Monterer objektivet med et gummibundet.

47. Monterer objektivet med et gummibundet.

48. Monterer objektivet med et gummibundet.

49. Monterer objektivet med et gummibundet.

50. Monterer objektivet med et gummibundet.

51. Monterer objektivet med et gummibundet.

52. Monterer objektivet med et gummibundet.

53. Monterer objektivet med et gummibundet.

54. Monterer objektivet med et gummibundet.

55. Monterer objektivet med et gummibundet.

56. Monterer objektivet med et gummibundet.

57. Monterer objektivet med et gummibundet.

58. Monterer objektivet med et gummibundet.

59. Monterer objektivet med et gummibundet.

60. Monterer objektivet med et gummibundet.

61. Monterer objektivet med et gummibundet.

62. Monterer objektivet med et gummibundet.

63. Monterer objektivet med et gummibundet.

64. Monterer objektivet med et gummibundet.

65. Monterer objektivet med et gummibundet.

66. Monterer objektivet med et gummibundet.

67. Monterer objektivet med et gummibundet.

68. Monterer objektivet med et gummibundet.

69. Monterer objektivet med et gummibundet.

70. Monterer objektivet med et gummibundet.

71. Monterer objektivet med et gummibundet.

72. Monterer objektivet med et gummibundet.

73. Monterer objektivet med et gummibundet.

74. Monterer objektivet med et gummibundet.

75. Monterer objektivet med et gummibundet.

76. Monterer objektivet med et gummibundet.

77. Monterer objektivet med et gummibundet.

78. Monterer objektivet med et gummibundet.

79. Monterer objektivet med et gummibundet.

80. Monterer objektivet med et gummibundet.

81. Monterer objektivet med et gummibundet.

82. Monterer objektivet med et gummibundet.

83. Monterer objektivet med et gummibundet.

84. Monterer objektivet med et gummibundet.

85. Monterer objektivet med et gummibundet.

86. Monterer objektivet med et gummibundet.

87. Monterer objektivet med et gummibundet.

88. Monterer objektivet med et gummibundet.

89. Monterer objektivet med et gummibundet.

90. Monterer objektivet med et gummibundet.

91. Monterer objektivet med et gummibundet.

92. Monterer objektivet med et gummibundet.

93. Monterer objekt