

World Wide Web www.samsungmobile.com

Earpiece

Adapter jack

Charging the headset

Volume up button

Volume down button

Your headset overview

Printed in Korea Code No.: GH68-20686A 11/2008. Rev. 1.0

Earhook

button

Multi-function

Indicator light

Microphone

# **Enalish**

Bluetooth® is a registered trademark of the Bluetooth SIG. Inc. worldwide. Bluetooth OD ID: B014535

## Safety and usage information

- · Never disassemble or modify your headset for any reason. Doing this may cause the headset to malfunction or become combustible. Bring the headset to an authorised service centre to repair it or replace the battery.
- When using your headset while driving, follow local regulations in the country or region you are in.
- Avoid storage at high temperatures (above 50° C/122° F), such as in a hot vehicle or in direct sunlight, as this can damage performance and reduce battery life.
- Do not expose the headset or any of its supplied parts to rain or other liquids.

At very high volumes, prolonged listening to the headset can damage At very high v

## Turning the headset on or off

## Understanding various modes

- Standby mode: The headset is waiting for a call. The blue indicator light flashes every 6 seconds.
- Active mode: The headset has a call in progress. The blue indicator light flashes every 8 seconds.
- to your headset on your phone.
- Low battery mode: There is less than 10% of battery power left. The red indicator light flashes. You must recharge the battery.

- Turn off your headset and press and hold the Multi-function button until the blue indicator light remains lit after blinking.
- If you turn it on for the first time, it proceeds into Pairing mode

### Warranty and parts replacement

Samsung warrants this product as free of defects in material, design and workmanship for the period of one year from the original date of purchase. (Depending on your country, the length of warranty may vary.)

If during the period of warranty this product proves defective under normal use and service you should return the product to the retailer from whom it was originally purchased or qualified service center. The liability of Samsung and its appointed maintenance company is limited to the cost of repair and/ or replacement of the unit under warranty.

- The warranty is limited to the original purchaser
- A copy of your receipt or other proof of purchase is required for a proper warranty service
- The warranty is void if the serial number, date code label or product label is removed, or if the product has been subject to physical abuse, improper installation modification, or repair by unauthorised third parties
- Specifically exempt from any warranty are limited-life consumable components such as batteries and other accessories
- Samsung will not assume any responsibility for any loss or damage incurred in shipping. All repair work on Samsung products by unauthorised third parties voids any warranty

• If the pairing is successful, the blue indicator light will flash 10 times

When the headset and the phone are paired, the headset attempts to reconnect automatically each time in a paired, the headset attempts to

reconnect automatically each time it turns on. Otherwise, press the Multi-

## Correct disposal of this product



(Waste Electrical & Electronic Equipment)

This marking shown on the product or its literature, indicates that it should not be disposed with other household wastes at the end of its working life.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this from other types of wastes and recycle it responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial wastes for disposal.

#### 2. Search for and pair with your phone according to your phone's user guide. Press and hold Multi-function button to: · Place a call on hold

- · Answer a second call
- · Retrieve a call on hold

Press [+] or [-] to adjust the volume.

Press and hold [+] or [-] to turn the microphone off or on.

## **Specifications**

Item	Specifications and description
Bluetooth version	2.0 + EDR
Support profile	Headset Profile, Hands-Free Profile
Operating range	Up to 30 feet (10 metres)
Standby time	Up to 200 hours*
Active time	Up to 9 hours*
Charging time	Approximately 2 hours*

\* Depending on the phone type and usage, the actual time may vary.

To turn the headset on, press and hold the Multi-function button until the

- Pairing mode: The blue indicator light stays lit. You can discover and connect

## Pairing with your Bluetooth phone

- 1. Enter Pairing mode.

  - immediately.

blue indicator light flashes 4 times

To turn the headset off, press and hold the Multi-function button until both blue and red indicator lights flash.

## Using call functions

function button to reconnect.

(Bluetooth PIN: 0000, 4 zeros)

rapidly before entering Standby mode.

• If the blue indicator light remains lit, retry pairing.

Some functions may not be supported by your phone.

### In Standby mode

Press the Multi-function button to:

- · Answer an incoming call
- · Redial the last number called

 
Press and hold Multi-function button to:

- · Make a voice-activated call
- · Reject an incoming call

### In Active mode

Press the Multi-function button to:

- · End a call
- . Transfer a call from the phone to the headset



# 中文

Bluetooth® 爲 Bluetooth SIC, Inc. 全球的註册商標。Bluetooth QD ID: B014535

## 安全與使用資訊

- 絶不可拆卸或改裝本耳機,以免耳機故障或燒毀。請將耳機送至授權服務中心維修或更換電池。
- 若開車時需使用耳機,請遵守所在國家或地區的法律。
- 避免將耳機存放在溫度高(50°C/122°F以上)的地方,例如高溫車內或日光直 射處,可能會使效能受損並縮短電池壽命。
- 請勿讓耳機或任何隨附零件淋雨或接觸其他液體

若音量過高,長時間使用耳機可能會傷害您的聽力。

• 本機限在不干擾合法電臺與不受被干擾保障條件下於室内使用。

# 保固與零件更換

本産品自原購買日期起,Samsung 對産品素材、設計與工藝提供一年無瑕疵保固。 (保固期視各國情況可能有所不同。)

若於保固期限內在正常使用情況下證實本產品有缺陷,請您將產品送回至當初購買產品的零售商或合格的服務中心。Samsung 與其指定維護公司的責任僅限於負擔在保固範圍內維修及/或更換裝置的成本。

- 限原消費者才能享有保固。
- 若要享有適當的保固服務,您必須提供收據或其他購買證明
- 若產品序號、日期碼標籤或產品標籤遭移除,或若產品曾遭未經授權之協力廠商濫用、不適安裝、修改或維修,則本公司無責任提供保固。
- 電池和其他配件等有使用期限的耗材皆不在保固範圍內。
- Samsung 對產品運送過程所造成的損失或損毀,不負任何損害賠償責任。若由未經 授權的第三方執行 Samsung 產品所有的維修工作,將會使保固失效。

## 使用通話功能

您的手機可能不支援某些功能。

### 待機模式中

按下[多功能]鈕可以:

- 接聽來電。
- 重撥最後一個撥打的號碼

按住[多功能]鈕可以:

- 語音聲控撥號。
- 拒絶來電。

### 使用中模式:

按下[多功能]鈕可以:

- 結束通話。
- 將通話從手機轉接至耳機。

按住[多功能]鈕可以:

- 保留來電。
- 接聽第二通來電。
- 與保留來電恢復通話。

按下 [+]或 [-] 可調整音量。

按住[+]及[-]鈕則可開啓或關閉麥克風。

## 正確的産品廢棄方式



(廢棄的電機與電子設備)

在産品或印刷品上出現的這個標記,代表當産品不堪使用時,不得將產品與 其他家庭廢棄物一同丢棄。

爲避免可能因廢棄作業未受控制而對環境或人們的健康造成傷害,請將本産 品與其他類型的廢棄物分開,並執行資源回收以便重複使用資源。

家庭使用者應治當初購買本産品的零售商或與當地政府相關部門聯絡,取得可處理本 裝置的地點與處理方式的相關資訊,以便執行資源回收及保護環境。

企業使用者應治供應商,並確認購買合約的條款與條件。本產品不得與其他商業廢棄 物混合丢棄。

## 耳機相關概述



## 耳機充電

將電源轉接器插入耳機的插孔與電源插座。讓耳機充電直到耳機 上的紅燈變成藍燈。

↑ 請勿試圖使用隨附轉接器以外的任何轉接器進行充 電。



## 開/關耳機電源

若要開啓耳機電源,請按住多功能鈕直到藍色指示燈閃爍4次。 若要關閉耳機電源,請按住多功能鈕直到藍色與紅色指示燈閃爍

# 瞭解各種模式

- 待機模式:耳機正在等候來電。藍色指示燈每6秒閃爍一次。
- 使用中模式:目前正使用耳機通話中。藍色指示燈每8秒閃爍一次。
- 配對模式:藍色指示燈恒亮。您可以搜尋到耳機,並將耳機連與您的手機連線
- 低電力模式:剩餘電力不到10%。紅色指示燈閃爍。您必須將電池重新充電。

# 與藍牙手機配對

- 請進入配對模式。
  - 關閉耳機並按住多功能鈕,直到藍色指示燈閃爍之後恒亮
- 若您第一次啓動耳機,耳機便會立即進入配對模式。
- 2. 根據手機使用指南,使用手機搜尋耳機及配對。(藍牙 PIN 碼:0000,4 個 0)
  - 若配對成功,藍色指示燈便會快速閃爍 10次,然後進入待機模式。
  - 若藍色指示燈持續亮起,請重新配對一次。

☑ 將耳機與手機配對完成之後,耳機便會在每次啓動時自動嘗試與手機重新連線。 否則,便請按下[多功能]組重新連線。

# 規格

項目	規格與説明
藍牙版本	2.0 + EDR
支援設定檔樣版	耳機設定檔、免持聽筒設定檔
操作範圍	最遠 30 呎 (10 公尺)
待機時間	可達 200 小時*
使用時間	可達 9 小時*
充電時間	約2小時*

\* 視手機的類型和使用狀態而定,實際時間可能不同。

## <u>Memo</u>