






Mono & Stereo

 Dual Headset

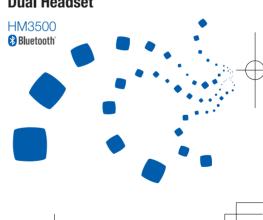





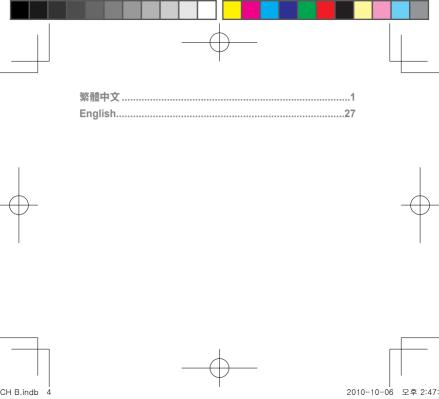



開始使用

耳機機	[覽	3
按鈕リ	b能	4
耳機介	雷	5
偏戴目	[機	7
PP4204-1	124	

使用耳機

T/LA#	
連接耳機與音樂裝置	20
使用通話功能	
透過主動配對功能進行配對	15
配對與連接耳機	11
用各/關闭斗機電源	

附錄

常見問題	22
保固與零件更換	24
排格	25

1









使用 HM3500 藍牙耳機之前,請先花些時間詳閱本使用手册。 Bluetooth[®] 是 Bluetooth SIG, Inc. 的註册商標 – Bluetooth OD ID: B016579

有關藍牙的詳細資訊,請上 www.bluetooth.com 查詢。



安全注意事項

- 切勿因任何原因拆卸或改裝本耳機。否則可能會造成耳機故障或燒壞。需維修時, 請將耳機送至授權維修中心。
- 如需在開車時使用耳機,請導守所在地區的法律。
- 請避免將耳機存放在高溫(50°C/122°F以上)之處,例如高溫的車內或日光直 射處,否則會損壞效能和降低雷池使用壽命。
- 請勿讓耳機或任何隨附的零件淋雨或接觸液體。



耳機音量過大時,長時間使用可能會傷害聽力。將耳機配對後,請務必先降低 音量,並只使用所需的最低音量來聆聽通話內容或音樂。



2



 






本節説明有關正確使用藍牙耳機的注意事項。

耳機槪覽





- 請確定耳機是否隨附下列配件:旅行充電器、頸帶耳機、襯衫夾、橡皮耳墊以及使
 - 耳機隨附的物品可能視地區而有所不同,且可能與本手册中所顯示的圖片不同。





3

CH B.indb 3

2010-10-06 오후 2:47

按鈕功能

按鈕	功能
◎ 電源	向上或向下滑動,可開啓或關閉耳機。
通訊	按下即可撥打或接聽電話。按下即可結束通話。按住可進入配對模式。
音量	 按下可調整音量。 按住可開啓或關閉麥克風。 在配對模式中,按住增加音量按鈕可開啓多點功能。 在配對模式中,按住降低音量按鈕可關閉多點功能。

☑ 當耳機調到最小或最大音量時,您會聽到嗶聲。









本耳機内建無法取出的可重複充電電池。請確定在第一次使用耳機前,電池能量已 經充滿。

將旅行充電器較小的一端插入多功能插孔。



2 將旅行充電器較大的一端插入電源插座。在充電期間,指示燈將會變成紅色。 若充電尚未開始,請將旅行充電器的插頭拔掉並再次插上。





CH B.indb 5

5



3 耳機充滿雷時,紅色指示燈會變爲藍色。請將旅行充雷器的插頭從雷源插座與耳 機上拔下。



- 僅能使用 Samsung 認可的旅行充電器。未經授權的旅行充電器 可能導致爆炸或使耳機受損。
 - 由於雷池爲耗材,在充雷或放雷後,雷池會逐漸耗損。
 - 充雷時若收到來電,請將耳機從旅行充電器拔出,然後接聽電話。

常電池電量不足時

雷池雷量低時耳機會發出嗶嗶聲。發生這種情時時,請再次對電池充電。若耳機在 诵話期間關機, 诵話會自動轉接到您的手機。

檢查雷池雷量

請同時按住降低音量按鈕與通話按鈕。視電池電量而定,指示燈會以下列一種色彩 閃爍5次:









電池電量	指示燈色彩
高於 80%	藍色
80~20%	紫色
低於 20%	紅色


佩戴耳機

用作單聲道耳機 將耳機戴在耳朵上。







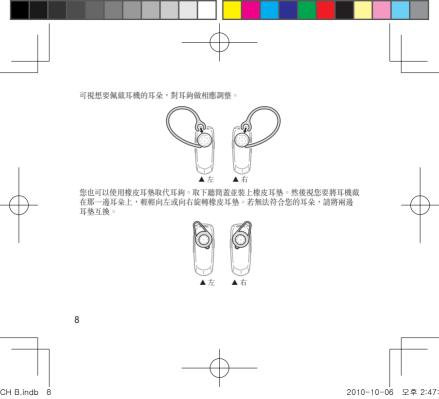

使用頸帶耳機與襯衫夾。 **1** 拿下耳鉤並接上襯衫夾。



 
- 2 將頸帶耳機的插頭插入耳機的多功能插孔,並戴上頸帶耳機。
- 3 使用襯衫夾將耳機夾在衣服上。



9








使用耳機

 本節説明如何開啓耳機雷源,與手機配對和連接,以及各種功能的使用。



開啟/關閉耳機電源

- 若要開啓耳機電源,請向上滑動電源開關。藍色指示燈會閃爍4次。
- 若要關閉耳機電源,請向下滑動電源開闢。指示熔將會由藍色變爲紅色,然後 關閉。









配對與連接耳機

配對作業將會在兩個啓用藍牙的裝置 (例如藍牙手機與藍牙耳機) 之間建立唯一且加密的無線連接。

若要將耳機搭配其他藍牙裝置使用,必須先讓兩個裝置進行配對。嘗試配對兩個裝置時,請保持耳機與手機適當靠近。配對完成後,就可以連接這兩個裝置了。

將耳機與手機配對及連接

- 1 進入配對模式。
 - 啓動耳機並按住通話按鈕,直到藍色指示燈持續亮起。
 - 第一次啓動耳機時,耳機會立即進入配對模式。
 - 若耳機無法連接之前已經完成配對的裝置,便會自動進入配對模式。 配對模式將持續3分鐘。













 
CH B.indb 12 2010



啓用多點功能後,您的耳機便能同時連接兩個藍牙手機。

- 1 連接第一個藍牙手機後,按住通話按鈕,直到藍色指示燈持續亮起。
- 2 按住增加音量按鈕以啓用多點功能。
- 在第二個藍牙手機上啓用藍牙功能並搜尋耳機 (請參閱手機的使用手册)。
- 從第二個藍牙手機找到的裝置清單中選擇耳機 (HM3500)。
- 輸入藍牙 PIN 碼 (0000,4 個 0),將耳機連接至手機。
- 重新啓動耳機。開啓耳機時,耳機會自動與兩個藍牙手機連接。







- 加音量按鈕,直到藍色指示燈閃爍兩次。
- 若只要重新連接到最近連接的一個手機, 請停用多點功能。在配對模式中, 按住降低音量按鈕, 直到紅色指示燈閃爍兩次。
- 使用免持聽筒模式時,耳機會連接兩個藍牙手機。使用進階音源分配模式時,耳機 僅會連接一個藍牙手機。
- 如果耳機同時與兩個藍牙手機連接,某些手機可能無法作爲第二個藍牙手機連線到 耳機。

斷開耳機連接

若要斷開手機與耳機的連接:

- 向下滑動電源開關以關閉耳機。
- 使用手機上的藍牙功能表。











 
耳機與手機配對後,每次開啓耳機時,耳機即會自動嘗試重新連接。 若耳機未自動嘗試重新連接:

- 按下通話按鈕。
- 使用手機上的藍牙功能表。

透過主動配對功能進行配對

使用主動配對功能,您的耳機便能自動搜尋藍牙手機並嘗試與之連接。

- 1 啓動耳機。
- 2 進入配對模式。請參閱第 11 頁。
- 3 按住通話按鈕,直到紫色指示燈亮起。 耳機會切換爲主動配對模式,搜尋範圍內的藍牙手機,並嘗試與之配對。



15





- 免鼠其他裝置配對。 • 耳機會嘗試進行主動配對達 20 秒。
- 您要連接的藍牙手機不得與其他裝置配對。如果手機已經與另一個裝置配對,諸結束 連接並重新啓動主動配對功能。
- 此功能可供手機使用,但手機的藍牙可見度選項必須設定爲開啓。 · 某些 PDA 可能不支援此功能。

使用涌話功能

撥打雷話

重撥最後一個號碼

按通話按鈕重撥最近連接手機的上一個號碼。

在某些手機上,按下通話按鈕可開啓通話記錄清單。再次按下通話按鈕可撥打選取 的號碼。











按住通話按鈕,然後通過語音説要撥號的名稱。

✓ 可用的通話功能可能會依手機而有所不同。

接聽來電

當聽到來電鈴聲時,按下通話按鈕即可接聽電話。 當兩個連接的手機同時來雷時,您可以接聽第一個手機的來雷。

結束通話

按下诵話按鈕,即可结束诵話。

拒接來雷

按住通話按鈕,即可拒接來電。當兩個連接的手機同時來電時,您可以拒接第一個手機的來電。

▼ 此功能僅在免持聽筒模式上可用。 如需有關詳細資料,請查看手機的用户手册。

17







在通話過程中,您可使用以下功能控制通話。

調整吾量

按下增加/降低音量按鈕可調整音量。

麥克風辭音

按住增加或降低音量按鈕可將麥克風關閉,使通話對方無法聽到您的聲音。麥克風關 閉時,耳機會定時發出嗶聲。 再次按住增加或降低音量按鈕,可取消麥克風靜音。

將通話從手機轉接至耳機

按下通話按鈕,即可將通話從手機轉接至耳機。

保留通話

按住通話按鈕,即可保留目前的通話。



- 耳機與兩個手機連接時,此功能便無法使用。
- 此功能僅在免持聽筒模式上可用。如需有關詳細資料,請查看手機的用户手册。

18









- 在聽到待接通話時,按下通話按鈕以結束第一通來電,並接聽同一個手機的第二 通來電。
- 在聽到待接通話時,按住通話按鈕以保留第一通電話,並接聽同一個手機的第二 通來電。
- 若要在目前的通話與保留的通話之間切換,請按住通話按鈕。

耳機與兩個監牙手機連接時,您無法接聽同一個手機的第二通來電。此功能僅在免持點簡模式上可用。如需有關詳細資料,請查看手機的用户手册。

接聽第二個手機的新來電

- 在聽到待接通話時,按下通話按鈕以結束第一通電話,並接聽另一個手機的第二 通來電。
- 在聽到待接通話時,按住通話按鈕以保留第一通電話,並接聽另一個手機的第二 通來電。
- 若要在目前的通話與保留的通話之間切換,請按住通話按鈕。

✓ 此功能僅在免持聽筒模式上可用。如需有關詳細資料,請查看手機的用户手册。





2010-10-06 오후 2:47

19

CH B.indb 1

| b 19



您可以將耳機分別與藍牙手機和播放音樂檔案的藍牙裝置進行配對與連接。

將耳機與音樂裝置進行配對及連接

- 1 將耳機與手機配對。請參閱第 11 頁。
- 2 若成功,按住通話按鈕,直到藍色指示燈持續亮起。
- 3 根據裝置的使用手冊搜尋所需的音樂裝置,並與之配對及連接。
- 4 按下通話按鈕以連接配對的手機。
- 5 手機與音樂裝置成功連接到耳機時,便可在聽音樂時,打電話或接聽來電。











聽音樂時若有來電,耳機將提醒您接聽電話。

- 1 耳機響起來電鈴聲時,請按下通話按鈕。 音樂將停止,並且您將連接到來電者。
- 2 結束對話時,請按下通話按鈕以結束通話。通話結束後,音樂裝置會自動繼續 播放。

 


21



CH B.indb 21

2010-10-06 오후 2:47



附錄

常見問題

本耳機是否適用於筆記型電腦、個人電腦和 PDA? 本耳機可搭配支援此耳機藍牙版本與模式的裝置 使用。如需規格的詳細資訊,請參閱第25頁。

通話中時,爲何我聽到 靜電或干擾聲音? 無線電話或無線網路設備等裝置都可能出現干擾 情形,通常類似于靜電聲音。爲減少干擾,請讓 耳機遠離會使用或可產生電波的裝置。

本耳機是否會干擾車上 的電子設備、收音機或 電腦? 本耳機所產生的功率比一般手機要小得多。並且, 耳機發射的信號符合國際藍牙標準規範。因此,標準 家用電子設備並不會受到任何干擾。









其他的藍牙手機使用 者是否會聽到我的通 話內容?

耳機配對藍牙手機時,此兩個藍牙裝置之間會形成一個私人的無線溝通管道。由於藍牙無線信號的射頻功率比一般手機的射頻功率要小得多,因此本產品使用的無線藍牙技術不易遺第三者監聽

請調整耳機音量,或移至其他區域再試一次。

通話中時,為何我聽到 迴音?

請使用柔軟的乾布擦拭。

我該如何清理耳機? 耳機無法充滿電。

旅行充電器未正確插人耳機。 請將耳機自旅行充電器上拔除,然後重新連接再 充電。









自原購買日期起一年内, Samsung 保證本産品的材料缺陷、設計和做工爲免費。*

在保固期間,若此產品於正常使用與服務下證明有缺陷,您應將產品退回原零售商或 合格服務中心。Samsung 和指定維修公司之責任僅限於保固維修成本及或元件 更接。

- 限原消費者才能享有保固。
- 爲享有適當的保固服務,您必須提供收據或其他購買證明。
- 若產品序號、日期碼標籤或產品標籤遭移除,或若產品曾遭未經授權之第三者濫用、不當安裝、修改或維修,則本公司無責任提供保固。
- 電池和其他配件等有使用期限的耗材皆不在保固範圍內。
- Samsung 對於產品運送過程所造成的損失或損毀,不負任何損害賠償責任。 對於未總授權的第三者對本公司產品所進行的任何維修工作、Samsung 不提供 保固。

* 保固期可能會依各地區情況有所不同。

24





規格

項目	規格及說明
藍牙版本	2.1+EDR
支援模式	耳機模式、免持聽筒模式、進階音效傳輸操作模式
操作範圍	可達 33 英尺 (10 公尺)
待機時間	可達 180 小時*
通話時間	可達 6 小時*
播放時間	可達 5 小時*
充電時間	大約2小時*


^{*} 視手機的類型和使用狀態而定,實際時間可能有所不同。









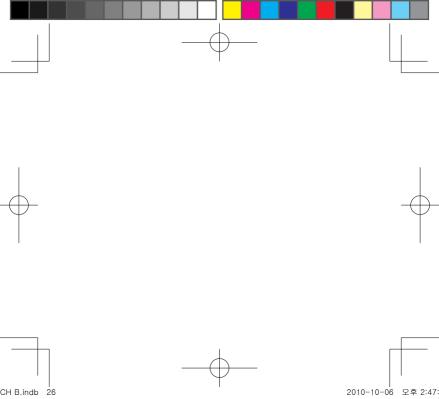

Contents

Getting started

Your headset overview	29
Button functions	30
Charging the headset	31
Wearing the headset	

Using your headset

Turning the headset on or off	36
Pairing and connecting the headset	37
Pairing via the Active pairing feature	41
Using call functions	42
Connecting the headset with a music device	46

Appendix

Frequently asked questions	
Warranty and parts replacement50	
Specifications 51	











Take the time to read through this user manual before using HM3500 Bluetooth Headset. Bluetooth* is a registered trademark of the Bluetooth SIG, Inc. worldwide — Bluetooth OD ID: B016579

More information about Bluetooth is available at www.bluetooth.com.



Safety precautions

- Never disassemble or modify your headset for any reason. Doing this may cause the headset to malfunction or become combustible. Bring the headset to an authorised service centre to repair it or replace the battery.
- When using your headset while driving, follow local regulations of the country or region you are in.
- Avoid storage at high temperatures (above 50 °C/122 °F), such as in a hot vehicle
 or in direct sunlight, as this can damage performance and reduce battery life.
- · Do not expose the headset or any of its supplied parts to rain or other liquids.



Excessive exposure to sound at high volumes can cause hearing damage. Always turn the volume down before plugging the earphones into an audio source and use only the minimum volume setting necessary to hear your conversation or music.





 




Getting started

This section explains what to remember for the proper use of your Bluetooth headset.

Your headset overview



- $\sqrt{}$
- Make sure you have the following items with your headset: Travel adapter, neckstrap headset, shirt clip, ear rubbers, and user manual.
- The items supplied with your headset may vary depending on your region and may appear different from the illustrations in this manual.


29







2010-10-06 오후 2:47

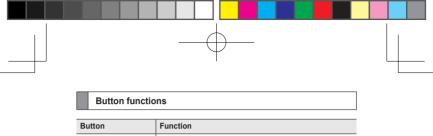

Button		Function		
0	Power	Slide up or down to turn the headset on or off.		
		Press to make or answer a call.		
	Talk	Press to end a call.		
		Press and hold to enter Pairing mode.		
		Press to adjust the volume.		
		Press and hold to turn the microphone on or off.		
	Volume	In Pairing mode, press and hold the Volume up button to turn the Multi-point feature on.		
7		In Pairing mode, press and hold the Volume down button to turn the Multi-point feature off.		

You can hear a beep when the volume level of the headset reaches to the lowest or highest level.









 
2 Plug the large end of the travel adapter into a power outlet. During charging, the indicator light will turn red. If charging does not begin, unplug the travel adapter and plug it in again.











3 When the headset is fully charged, the red indicator light changes to blue. Unplug the travel adapter from the power outlet and the headset.



- Use only a Samsung-approved travel adapter. Unauthorised travel adapters may cause an explosion or damage to the headset.
- The battery will gradually wear out while charging or discharging because it is a consumable part.
- When a call comes in while charging, disconnect your headset from the travel adapter and answer the call.

When the battery power is low

The headset beeps when the battery power is low. When this happens, recharge the battery. If the headset powers off during a call, the call will automatically transfer to your phone.

Checking the battery level

At the same time, press and hold the Volume down and the Talk button. Depending on the battery level, the indicator light flashes 5 times in one of the following colours:









Red

Wearing	the	headset

Below 20%

Using as a mono headset Place the headset on your ear.




33

English








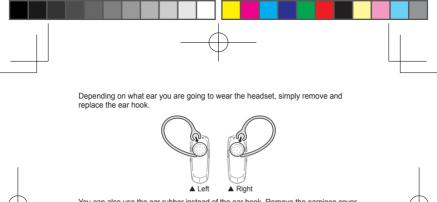

 You can also use the ear rubber instead of the ear hook. Remove the earpiece cover and attach the ear rubber. Then, rotate the ear rubber left or right slightly depending on what ear you are going to wear the headset. If it does not fit your ear, replace it with the other.







Using as a stereo headset

Use the supplied neckstrap headset with the shirt clip.

1 Remove the ear hook and attach the shirt clip.



- 2 Plug the connector of the neckstrap headset into the multifunction jack on the headset and wear the neckstrap headset.
- 3 Clip the headset to your clothes using the shirt clip.

 


35

English







Using your headset

This section explains how to turn the headset on, pair and connect to the phone, and use various functions.



Activated functions and features may differ depending on your type of phone.

Some devices, especially those that are not tested or approved by the Bluetooth SIG, may be incompatible with your headset.

Turning the headset on or off

- To turn the headset on, slide up the power switch. The blue indicator light flashes 4 times
- To turn the headset off, slide down the power switch. The indicator light turns off after the blue indicator light changes to red.









CH B.indb 36 2010-10-06 오후 2:47:



Pairing and connecting the headset

Pairing will create a unique and encrypted wireless link between two Bluetoothenabled devices, such as a Bluetooth phone and your Bluetooth headset.

To use the headset with other Bluetooth devices, the devices must be paired. When trying to pair the two devices, keep the headset and the other device reasonably close together. After pairing, you can connect the two devices.

Pairing and connecting the headset to a phone

- Enter Pairing mode.
 - Turn on your headset and press and hold the talk button until the blue indicator light stays lit.
 - If you turn the headset on for the first time, it proceeds into Pairing mode immediately.
 - If the headset fails to reconnect to the device that has been paired with before, it automatically enters Pairing mode. The Pairing mode stays for 3 minutes.







CU B indb



Your headset supports the Simple Pairing feature which allows the headset to be paired with a phone without requesting a PIN. This feature is available for phones that are compliant with Bluetooth version 2.1 or higher.

The headset also can be paired via the Active Paring feature, see page 41.









With the Multi-point feature activated, your headset can be connected with two Bluetooth phones at the same time.


- After connecting with the first Bluetooth phone, press and hold the Talk button until the blue indicator light stays lit.
- 2 Press and hold the Volume up button to activate the Multi-point feature.
- 3 Activate the Bluetooth feature on the second Bluetooth phone and search for the headset (see your phone's user manual).
- 4 Select the headset (HM3500) from the list of devices found by the second Bluetooth phone.
- 5 Enter the Bluetooth PIN (0000, 4 zeros) to connect the headset to the phone.
- 6 Turn the headset off and on. When the headset turns on, it automatically connects with the two Bluetooth phones.



CH B.indb

2010-10-06 오후 2:47

English

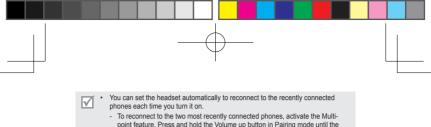

- To recommend to the working conflicted priories, activate the initial point feature. Press and hold the Volume up button in Pairing mode until the blue indicator light flashes twice.
- To reconnect to only the most recently connected phone, deactivate the Multipoint feature. Press and hold the Volume down button in Pairing mode until the red indicator light flashes twice.
- With the Hands-Free Profile, the headset connects to two Bluetooth phones. With the Advanced Audio Distribution Profile, it connects to one Bluetooth phone only.
- When the headset connects to two Bluetooth phones, some phones may not connect to the headset as the second Bluetooth phone.

Disconnecting the headset

To disconnect the headset from your phone,

- · Slide down the power switch to turn off the headset.
- Use the Bluetooth menu on your phone.









Reconnecting the headset

When the headset is paired with a phone, it will attempt to automatically reconnect each time you turn the power on.

If the headset does not automatically attempt to reconnect,

- · Press the Talk button.
- Use the Bluetooth menu on your phone.

Pairing via the Active pairing feature

With the Active pairing feature, your headset can automatically search for a Bluetooth phone and try to make a connection with it.


- 1 Turn on the headset.
- 2 Enter Pairing mode. See page 37.
- ${\bf 3} \quad \hbox{Press and hold the Talk button until the violet indicator light turns on}.$

The headset will switch to Active Pairing mode, search for a Bluetooth phone within range, and attempt to pair with it.



41

English

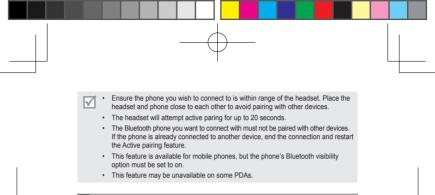

Using call functions

 
Making a call

making a can

Redialling the last number

Press the Talk button to redial the last number of the most recently connected phone.

For some phones, pressing the Talk button opens the call log list. Press the Talk button again to dial the selected number.



43

Dialling a number by voice

Press and hold the Talk button, and then say a name to dial a number by voice.



Available call functions may vary by the phone.

Answering a call

Press the Talk button to answer a call when you hear incoming call tones.

When two calls from the two connected phones come in, you can answer the call of the first phone.

Ending a call

Press the Talk button to end a call.

Rejecting a call

Press and hold the Talk button to reject a call when a call comes in. When two calls from the two connected phones come in, you can reject the call of the first phone.



This fuction is available only on the Hands-Free profile. For more information, see your phone's user manual.







Using options during a call

You can use the following functions to control your call during a call.

Adjusting the volume

Press the Volume up or down button to adjust the volume.

Muting the microphone

Press and hold the Volume up or down button to turn the microphone off so that the person with whom you are speaking cannot hear you. When the microphone is turned off, the headset beeps at regular intervals. Press and hold the Volume up or down button again to turn the microphone back on.

Transferring a call from the phone to the headset

Press the Talk button to transfer a call from the phone to the headset.

Placing a call on hold

Press and hold the Talk button to place the current call on hold.



- · When the headset is connected with two phones, this function is not available.
- This fuction is available only on the Hands-Free profile. For more information, see your phone's user manual.









- Press the Talk button to end the first call and answer a second call of the same phone when you hear call waiting tones.
- · Press and hold the Talk button to place the first call on hold and answer a second call of the same phone when you hear call waiting tones.
- To switch between the current call and the held call, press and hold the Talk button.



- When the headset is connected with two Bluetooth phones, you cannot answer a second call of the same phone.
- · This fuction is available only on the Hands-Free profile. For more information, see your phone's user manual.

Answering a new call of the second phone

- Press the Talk button to end the first call and answer a second call of the other phone when you hear call waiting tones.
- · Press and hold the Talk button to place the first call on hold and answer a second call of the other phone when you hear call waiting tones.
- To switch between the current call and the held call, press and hold the Talk button.



This fuction is available only on the Hands-Free profile. For more information. see your phone's user manual.









You can separately pair and connect your headset with a Bluetooth phone and a Bluetooth device that plays music files.

Pairing with connecting the headset with a music device

- 1 Pair the headset with a phone. See page 37.
- 2 If successful, press and hold the Talk button until the blue indicator light stays lit.
- 3 Search for, pair, and connect with the music device you want according to the device's user manual
- 4 Press the Talk button to connect with the paired phone.
- 5 When the phone and the device are successfully connected with the headset, you can make or answer a call while you are listening to music.









47





- You can start, pause, and resume playback, and scan backward or forward in a music file only with the connected music device.
- · If the headset loses the connection to the paired music device, press and hold the Volume up button to reconnect.

Answering a call while listening to music

When a call comes in while listening to music, your headset will alert you so that you can answer the call.

When the headset sounds incoming call tones, press the Talk button.

The music stops and you are connected with the caller.

When you have finished the conversation, press the Talk button to end the call. The music device automatically resumes playback after the call.









Appendix

Frequently asked questions

Will my headset work with laptops, PCs, and PDAs?	Your headset will work with devices that support your headset's Bluetooth version and profiles. For specifications, see page 51.
Will anything cause interference with my conversation when I am using my headset?	Appliances such as cordless phones and wireless networking equipment may cause interference with your conversation, usually adding a crackling noise. To reduce any interference, keep the headset away from other devices that use or produce radio waves.
Will my headset interfere with my car's electronics, radio, or computer?	Your headset produces significantly less power than a typical mobile phone. It also only emits signals that are in compliance with the international Bluetooth standard. Therefore, you should not expect any interference with standard consumer-grade electronics equipment.

48







Can other Bluetooth phone users hear my conversation?

When you pair your headset to your Bluetooth phone. you are creating a private link between only these two Bluetooth devices. The wireless Bluetooth technology used in your headset is not easily monitored by third parties because Bluetooth wireless signals are significantly lower in radio frequency power than those produced by a typical mobile phone. Why do I hear an echo Adjust the headset volume, or move to another area

while on a call? How do I clean

my headset?

Wipe it with a soft dry cloth.

and try again.

The headset does not fully charge.

The headset and the travel adapter may not have been connected properly. Separate the headset from the travel adapter, reconnect, and charge the headset.











Samsung warrants this product as free of defects in material, design and workmanship for the period of one year from the original date of purchase.*

If during the period of warranty this product proves defective under normal use and service you should return the product to the retailer from whom it was originally purchased or a qualified service centre. The liability of Samsung and its appointed maintenance company is limited to the cost of repair and/or replacement of the unit under warranty.

- The warranty is limited to the original purchaser.
- A copy of your receipt or other proof of purchase is required for a proper warranty service.
- The warranty is void if the serial number, date code label or product label is removed, or if the product has been subject to physical abuse, improper installation, modification, or repair by unauthorised third parties.
- Specifically exempt from any warranty are limited-life consumable components such as batteries and other accessories
- Samsung will not assume any responsibility for any loss or damage incurred in shipping. All repair work on Samsung products by unauthorised third parties voids any warranty.

^{*} Depending on your region, the length of warranty may vary.









51

Specifications

Item	Specifications and description
Bluetooth version	2.1+EDR
Support profile	Headset Profile, Hands-Free Profile, Advanced Audio Distribution Profile
Operating range	Up to 33 feet (10 metres)
Standby time	Up to 180 hours*
Talk time	Up to 6 hours*
Play time	Up to 5 hours*
Charging time	Approximately 2 hours*

^{*} Depending on the phone type and usage, the actual time may vary.



