

**SAMSUNG**

# Microwave Oven

## OWNER'S MANUAL

**MW740WA / MW740GA  
ME740WA**



<b>Safety</b> .....	<b>2</b>
<b>Your New Microwave Oven</b> .....	<b>5</b>
Checking Parts.....	5
Setting Up Your Microwave Oven .....	5
Control Panel Buttons .....	6
<b>Operation</b> .....	<b>7</b>
Setting the Clock .....	7
Using the Pausa/Cancelar Button .....	7
Using the Instant Cook Buttons .....	7
Using the Un Minuto Más Button .....	8
Using Defrosting .....	9
Setting Cooking Times & Power Levels .....	9
<b>Cooking Instructions</b> .....	<b>10</b>
Cooking Utensils .....	10
Testing Utensils .....	10
Cooking Techniques .....	11
General Tips .....	11
Cooking Guides .....	12
Defrosting Guide .....	14
Recipes .....	15
<b>Appendix</b> .....	<b>17</b>
Troubleshooting Guide .....	17
Care and Cleaning .....	17
Specifications .....	18
<b>Quick Reference</b> .....	<b>Back Cover</b>

## SAFETY

### PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY:

- (a) Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- (b) Do not place any object between the front face of the oven and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c) Do not operate the oven if it is damaged. It is particularly important that the oven door close properly and that there is no damage to the
  - 1) Door (bent or dented),
  - 2) Hinges and latches (broken or loosened),
  - 3) Door seals and sealing surfaces.
- (d) The oven should not be adjusted or repaired by anyone except properly qualified service personnel.

### WARNING

Always observe Safety Precautions when using your oven. Never try to repair the oven on your own - there is dangerous voltage inside. If the oven needs to be repaired, call 336-8686 for the name of an authorized service center near you.

### IMPORTANT SAFETY INSTRUCTIONS

When using any electrical appliance, basic safety precautions should be followed, including the following:

### WARNING

To reduce risk of burns, electric shock, fire, personal injury or exposure to excessive microwave energy:

- Read all safety instructions before using the appliance.
- Read and follow the specific “**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**” on this page.
- This appliance must be grounded. Connect only to properly grounded outlets. See “**IMPORTANT GROUNDING INSTRUCTIONS**” on page 4 of this manual.
- Install or place this appliance only in accordance with the installation instructions provided.
- Some items, like whole eggs and food in sealed containers, may explode if heated in this oven.
- Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- As with any appliance, close supervision is necessary when used by children.
- Do not operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been damaged.
- This appliance should be serviced only by qualified service personnel. Contact the nearest authorized service facility for examination, repair, or adjustment.
- Do not cover or block any of the openings on this appliance.

# SAVE THESE INSTRUCTIONS

---

# SAFETY

---

## Important Safety Instructions, continued

- Do not store this appliance outdoors. Do not use near water – for example, near a kitchen sink, in a wet basement, or near a swimming pool, etc.
  - Keep the inside of the oven clean. Food particles or spattered oils stuck to the oven walls or floor can cause paint damage and reduce the efficiency of the oven.
  - Do not immerse cord or plug in water.
  - Keep cord away from heated surfaces.
  - Do not let cord hang over edge of table or counter.
  - When cleaning door and oven surfaces, use only mild, nonabrasive soaps or detergents applied with a sponge or soft cloth.
  - To reduce the risk of fire in the oven:
    - a. Do not overcook food. Watch appliance care fully if paper, plastic, or other combustible materials are inside.
    - b. Remove wire twist-ties from plastic cooking bags before placing bags in oven.
    - c. If materials inside the oven ignite, keep the oven door closed, turn the oven off, disconnect the power cord, or shut off the power at the fuse or circuit breaker panel.
    - d. Do not use the oven compartment for storage purposes. Do not leave paper products, cooking utensils, or food in the oven when not in use.
  - Do not try to preheat oven or operate while empty.
  - Do not cook without the glass tray in place on the oven floor. Food will not cook properly without the tray.
  - Do not defrost frozen beverages in narrow-necked bottles. The containers can break.
  - Dishes and containers can become hot. Handle with care.
  - Carefully remove container coverings, directing steam away from hands and face.
  - Remove lids from baby food before reheating. After heating baby food, stir well and test temperature by tasting before serving.
- A short power-supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. Longer cord sets or extension cords are available and may be used with caution.
  - Do not operate any other heating or cooking appliance beneath this appliance.
  - Do not mount unit over or near any portion of a heating or cooking appliance.
  - Do not mount over a sink.
  - Do not store anything directly on top of the appliance when it is in operation.

# SAVE THESE INSTRUCTIONS

---

## SAFETY

---

### Important Grounding Instructions

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electrical current. Your oven should be the only appliance on this circuit.



#### WARNING

Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or servicer if you do not understand the grounding instructions or if you are not sure if the appliance is properly grounded.

#### Use of Extension Cords

A short power-supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. Longer cord sets or extension cords are available and may be used if care is exercised in their use. If a long cord or extension cord is used:


- 1. The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
- 2. The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over accidentally. If you use an extension cord, the interior light may flicker and the blower may vary when the microwave oven is on. Cooking times may be longer, too.

**SAVE THESE INSTRUCTIONS**

# YOUR NEW MICROWAVE OVEN

## Checking Parts

Unpack your microwave oven and check to make sure that you have all the parts shown here. If any part is missing or broken, call your dealer.

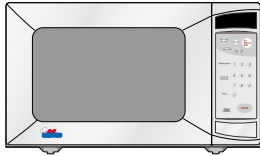

microwave oven



instruction manual



glass tray



roller guide ring

## Thank You for Choosing Samsung

Your new oven represents the latest in microwave cooking technology. This oven is a full-featured, easy-to-use appliance built to strict quality standards set by Samsung — the highest in the industry. We're proud to offer you a product that will provide convenient, dependable service for years to come.

Please record the serial number from the inside or back of your Samsung microwave oven and the date of purchase in the space provided below. We recommend that you keep your purchase receipt with this manual for easy warranty service.

Model Number \_\_\_\_\_

Serial Number \_\_\_\_\_

Date Purchased \_\_\_\_\_

Dealer \_\_\_\_\_

## Setting Up Your Microwave Oven

- 1 Place the oven on a flat, sturdy surface and plug the cord into a grounded outlet. Once plugged in, the display on your oven will show:




*Make sure there is adequate ventilation for your oven by leaving at least four inches of space behind, above, and to the sides of the oven.*


- 2 Open the oven door by pressing the button below the control panel.

- 3 Wipe the inside of the oven with a damp cloth.

- 4 Place the pre-assembled ring in the indentation in the center of the oven.

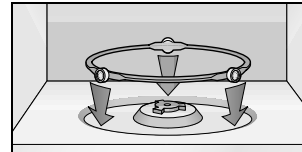


- 5 Place the glass tray on top of the ring so that the three glass tabs in the center of the tray fit securely into the tabs on the floor of the oven.

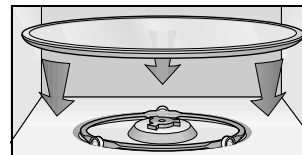

# YOUR NEW MICROWAVE OVEN

## Control Panel Buttons

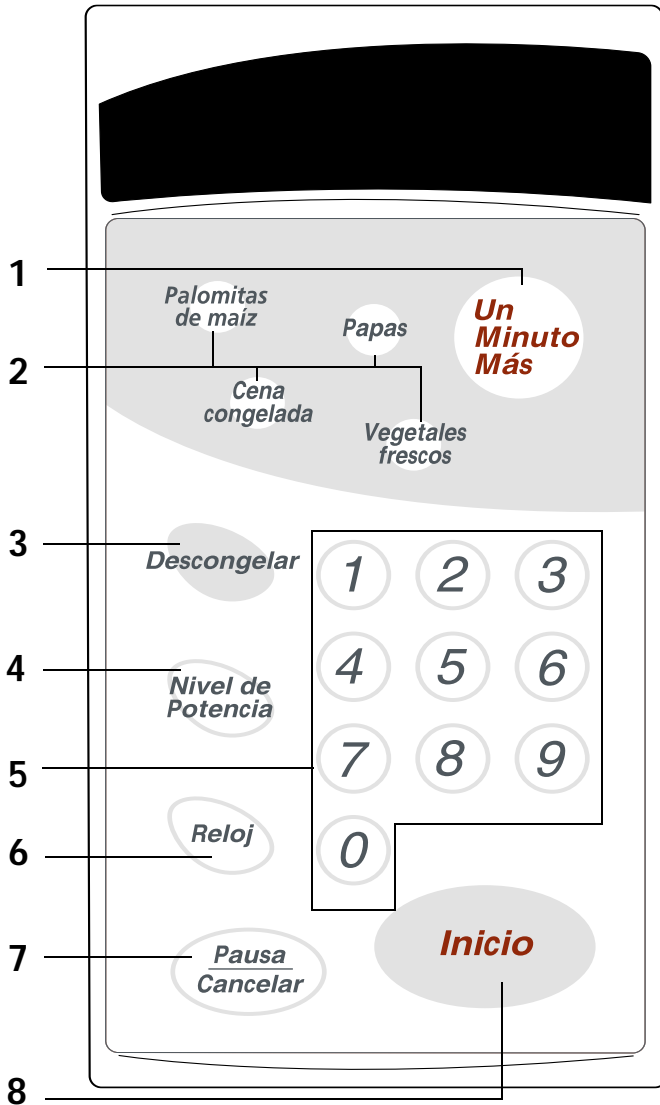

- 1. One Minute+** p. 8  
Press once for every minute of cooking at High power.
- 2. Instant Cook Buttons** p. 7  
Instant settings to cook popular foods.
- 3. Defrost** p. 9  
Press to set the defrosting time of the food to be defrosted.
- 4. Power Level** p. 9  
Sets power to a level other than high.
- 5. Number Buttons**  
Sets cooking times or amounts.
- 6. Clock** p. 7  
Sets current time.
- 7. Pause/Cancel** p. 7  
Press to pause oven or correct a mistake.
- 8. Start**  
Press to start cooking.

## OPERATION

### Setting the Clock

- 1 Press the **Reloj** button. The display will show:



- 2 Use the number buttons to enter the current time. You must press at least three numbers to set the clock. If the current time is 5:00 enter, 5,0,0.



- 3 Press **Reloj** again. A colon will appear, indicating that the time is set.



*If there is a power interruption, you will need to reset the clock.*

*You can check the current time while cooking is in progress by pressing the **Reloj** button.*

### Using the Pausa/Cancelar Button

The **Pausa/Cancelar** button allows you to clear instructions you have entered. It also allows you to pause the oven's cooking cycle, so that you can check the food.

 
 
- To pause the oven during cooking: press **Pausa/Cancelar** once. To restart, press **Inicio**.
- To stop cooking, erase instructions, and return the oven display to the time of day: press **Pausa/Cancelar** twice.
- To correct a mistake you have just entered: press **Pausa/Cancelar** once, then re-enter the instructions.

### Using the Instant Cook Buttons

- 1 Press the **Instant Cook** button corresponding to the food you are cooking (Popcorn, for example). The display shows the first serving size:




- 2 Press the button repeatedly to select the serving size you want. The display will cycle through all available serving sizes. Once you select the correct serving size, the microwave will begin cooking automatically.



# OPERATION

## Instant Cook Chart

Item	Weight	Remarks
Popcorn	3.5 oz 3.0-3.5 oz 1.75 oz 1.5-1.75 oz	<ul style="list-style-type: none"><li>• Use one microwave-only bag of popcorn.</li><li>• Use caution when removing and opening hot bag from oven.</li><li>• To help prevent the popcorn bag from getting stuck in the oven, fold each end of the bag up one inch (  ) before placing the bag in the center of the oven.</li><li>• If it still gets stuck, open the door and reposition the bag, close the door and press start.</li></ul>
Potato	1 EA 2 EA 3 EA 4 EA	<ul style="list-style-type: none"><li>• Potato 1 EA: Turn the food over when the oven beeps.</li><li>• Prick each potato several times with fork.</li><li>• Place it on turntable in spoke-like fashion.</li><li>• Remove from oven, wrap in foil and let stand 3-5 min.</li></ul>
Frozen Dinner	7-10 oz 10-12 oz	<ul style="list-style-type: none"><li>• Remove package from outer wrapping and follow package instructions for covering and standing. After cooking, let stand 1-3 min.</li></ul>
Fresh Vegetables	1 cup 2 cups 3 cups 4 cups	<ul style="list-style-type: none"><li>• Place the vegetables into a casserole and add a small amount of water(2-4 Tbsp). Cover during cooking and stir before standing.</li></ul>

## Using the Un Minuto Más Button

This button offers a convenient way to heat food in one-minute increments at the High power level.

- 1 Press the **Un Minuto Más** button once for each minute you wish to cook the food.  
*For example, press it twice for two minutes.* The time will display, and the oven starts automatically.

*Add minutes to a program in progress by pressing the **Un Minuto Más** button for each minute you want to add.*

*You can only adjust the time during cooking when the time cook mode is selected.*



# OPERATION

## Using Defrosting

The defrost setting is designed for speedy thawing of frozen food and is one of the great advantages of the microwave oven. (Power level of 30% is automatically set for defrosting)

- 1 Press the **Descongelar** button. The display shows "PL:30".



- 2 Press the buttons (0-9) sequentially to enter the desired defrosting time.
- 3 Press the **Inicio** button to begin defrosting.

• *See page 14 for the Defrosting Guide.*

## Setting Cooking Times & Power Levels

The power level lets you control the heating intensity from Warm (10%) to High (100%) with the **Nivel de Potencia** button.

- 1 Press the button (0-9) sequentially to enter the desired cooking time.
- 2 Press the **Nivel de Potencia** button. The power level is automatically set at high. If you want to set the power level to something other than High, press the **Nivel de Potencia** button repeatedly.

DISPLAY	OUTPUT POWER
PL:Hi = High	700W
PL:90 = Sauté	630W
PL:80 = Reheat	560W
PL:70 = Medium High	490W
PL:60 = Simmer	420W
PL:50 = Medium	350W
PL:40 = Medium Low	280W
PL:30 = Defrost	210W
PL:20 = Low	140W
PL:10 = Warm	70W

- 3 Press the **Inicio** button to begin cooking.

# COOKING INSTRUCTIONS

## Cooking Utensils

### Recommended Use

- Glass and glass-ceramic bowls and dishes — Use for heating or cooking.
- Microwave browning dish — Use to brown the exterior of small items such as steaks, chops, or pancakes. Follow the directions provided with your browning dish.
- Microwavable plastic wrap — Use to retain steam. Leave a small opening for some steam to escape and avoid placing it directly on the food.
- Wax paper — Use as a cover to prevent spattering.
- Paper towels and napkins — Use for short-term heating and covering; they absorb excess moisture and prevent spattering. Do not use recycled paper towels, which may contain metal and can catch fire.
- Paper plates and cups — Use for short-term heating at low temperatures. Do not use recycled paper, which may contain metal and can catch fire.
- Thermometers — Use only those labeled “Microwave Safe” and follow all directions. Check the food in several places. Conventional thermometers may be used once the food has been removed from the oven.

### Limited Use

- Aluminum foil — Use narrow strips of foil to prevent overcooking of exposed areas. Using too much foil can damage your oven, so be careful.
- Ceramic, porcelain, and stoneware — Use these if they are labeled “Microwave Safe.” If they are not labeled, test them to make sure they can be used safely. Never use dishes with metallic trim.
- Plastic — Use only if labeled “Microwave Safe.” Other plastics can melt.
- Straw, wicker, and wood — Use only for short-term heating, as they can be flammable.


### Not Recommended

- Glass jars and bottles — Regular glass is too thin to be used in a microwave, and can shatter.
- Paper bags — These are a fire hazard, except for popcorn bags that are designed for microwave use.
- Styrofoam plates and cups — These can melt and leave an unhealthy residue on food.
- Plastic storage and food containers — Containers such as margarine tubs can melt in the microwave.
- Metal utensils — These can damage your oven. Remove all metal before cooking.

## Testing Utensils

If you are not sure whether a dish is microwave-safe or not, you can perform this test:

- 1 Fill a 1 cup glass measuring cup with water and put it inside your oven, next to the dish you want to test.

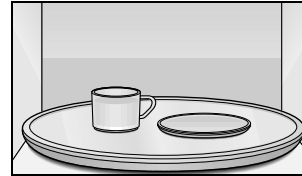

- 2 Press the **Un Minuto Más** button once to heat them for one minute at High power.

The water should be warm and the dish you are testing should be cool. If the dish is warm, then it is absorbing microwave energy and is not acceptable for use in the microwave.

---

# COOKING INSTRUCTIONS

---

## Cooking Techniques

### Stirring

Stir foods such as casseroles and vegetables while cooking to distribute heat evenly. Food at the outside of the dish absorbs more energy and heats more quickly, so stir from the outside to the center. The oven will turn off when you open the door to stir your food.

### Arrangement

Arrange unevenly shaped foods, such as chicken pieces or chops, with the thicker, meatier parts toward the outside of the turntable where they receive more microwave energy. To prevent overcooking, place thin or delicate parts toward the center of the turntable.

### Shielding

Shield food with narrow strips of aluminum foil to prevent overcooking. Areas that need shielding include poultry wing-tips, the ends of poultry legs, and corners of square baking dishes. Use only small amounts of aluminum foil. Larger amounts can damage your oven.

### Turning

Turn foods over midway through cooking to expose all parts to microwave energy. This is especially important with large items such as roasts.

### Standing

Foods cooked in the microwave build up internal heat and continue to cook for a few minutes after the oven stops. Let foods stand to complete cooking, especially foods such as roasts and whole vegetables. Roasts need this time to complete cooking in the center without overcooking the outer areas. All liquids, such as soup or hot chocolate, should be shaken or stirred when cooking is complete. Let liquids stand a moment before serving. When heating baby food, stir well and test the temperature before serving.

### Adding Moisture

Microwave energy is attracted to water molecules. Food that is uneven in moisture content should be covered or allowed to stand so that the heat disperses evenly. Add a small amount of water to dry food to help it cook.

## General Tips

- Dense foods, such as potatoes, take longer to heat than lighter foods. Foods with a delicate texture should be heated at a low power level to avoid becoming tough.
- Altitude and the type of cookware you are using can affect cooking time. When using a new recipe, use the minimum cooking time and check the food occasionally to prevent overcooking.
- Foods with a non-porous skin or shell, such as potatoes, eggs, or hot dogs, should be pierced to prevent bursting.
- Frying with heating oil or fat is not recommended. Fat and oil can suddenly boil over and cause severe burns.
- Some ingredients heat faster than others. For example, the jelly inside a jelly doughnut will be hotter than the dough. Keep this in mind to avoid burns.
- Home canning in the microwave oven is not recommended because all harmful bacteria may not be destroyed by the microwave heating process.
- Although microwaves do not heat the cookware, the heat is often transferred to the cookware. Always use pot holders when removing food from the microwave and instruct children to do the same.

# COOKING INSTRUCTIONS

## Cooking Guides

### Guide for Cooking Meat in Your Microwave

- Place meat on a microwave-safe roasting rack in a microwave-safe dish.
- Start meat fat-side down. Use narrow strips of aluminum foil to shield any bone tips or thin meat areas.
- Check the temperature in several places before letting the meat stand the recommended time.
- The following temperatures are removal temperatures. The temperature of the food will rise during the standing time.

Food	Cook Time /Power Level	Directions
Roast Beef Boneless Up to 4 lbs.	Cooking Time: 7-10 min. / lb. for 115° F - Rare 8-11 min. / lb. for 120° F - Medium 9-14 min. / lb. for 145° F - Well Done <i>Power Level: High(HI) for first 5 min., then Medium(50).</i>	Place roast fat-side down on roasting rack. Cover with wax paper. Turn over when cooking time is half up. Let stand 10 min.
Pork Boneless or bone-in Up to 4 lbs.	Cooking Time: 18-20 min. / lb. for 160° F Well Done <i>Power Level: High(HI) for first 5 min., then Medium(50).</i>	Place roast fat-side down on roasting rack. Cover with vented plastic wrap. Turn over when cooking time is half up. Let stand 10 min.
Bacon 2-6 slices	Cooking Time: 2 slices: 1½- 2 min. 4 slices: 2½- 3½ min. 6 slices: 4-5½ min <i>Power Level: High(HI).</i>	Arrange slices on roasting rack or a dish lined with paper-towel. Cover with paper towel. Microwave until crisp.

### Guide for Cooking Poultry in Your Microwave

- Place poultry on a microwave-safe roasting rack in a microwave-safe dish.
- Cover poultry with wax paper to prevent spattering.
- Use aluminum foil to shield bone tips, thin meat areas, or areas that start to overcook.
- Check the temperature in several places before letting the poultry stand the recommended time.

Food	Cook Time /Power Level	Directions
Whole Chicken Up to 4 lbs.	Cooking Time: 6-9 min. / lb. 170° -180°F <i>Power Level: High(HI)</i>	Place chicken breast-side down on roasting rack. Cover with wax paper. Turn over when cooking time is half up. Cook until juices run clear and meat near the bone is no longer pink. Let stand 5-10 min.
Chicken Pieces Up to 2 lbs.	Cooking Time: 6-9 min. / lb. 180°F dark meat 170°F light meat <i>Power Level: High(HI)</i>	Place chicken bone-side down on dish, with the thickest portions towards the outside of the dish. Cover with wax paper. Turn over when cooking time is half up. Cook until juices run clear and meat near the bone is no longer pink. Let stand 5-10 min.

# COOKING INSTRUCTIONS

## Guide for Cooking Seafood in Your Microwave

- Cook fish until it flakes easily with a fork.
- Place fish on a microwave-safe roasting rack in a microwave-safe dish.
- Use a tight cover to steam fish. A lighter cover of wax paper or paper towel provides less steaming.
- Do not overcook fish; check it at minimum cooking time.

Food	Cook Time /Power Level	Directions
Steaks Up to 1.5 lbs.	Cooking Time: 6-8 min. / lb.  <i>Power Level: Medium-High(70).</i>	Arrange steaks on roasting rack with meaty portions towards the outside of rack. Cover with wax paper. Turn over and rearrange when cooking time is half up. Cook until fish flakes easily with a fork. Let stand 3-5 min.
Fillets Up to 1.5 lbs.	Cooking Time: 3-5 min. / lb.  <i>Power Level: High(HI).</i>	Arrange fillets in a baking dish, turning any thin pieces under. Cover with wax paper. If over ½ inch thick, turn over and rearrange when cooking time is half up. Cook until fish flakes easily with a fork. Let stand 2-3 min.
Shrimp Up to 1.5 lbs.	Cooking Time: 3-5½min. / lb.  <i>Power Level: High(HI).</i>	Arrange shrimp in a baking dish without overlapping or layering. Cover with wax paper. Cook until firm and opaque, stirring 2 or 3 times. Let stand 5 min.

## Guide for Cooking Eggs in Your Microwave

- Never cook eggs in the shell, and never warm hard-cooked eggs in the shell; they can explode.
- Always pierce whole eggs to keep them from bursting.
- Cook eggs just until set; they become tough if overcooked.

## Guide for Cooking Vegetables in Your Microwave

- Vegetables should be washed just before cooking. Often, no extra water is needed. If dense vegetables such as potatoes, carrots and green beans are being cooked, add about ¼ cup water.
- Small vegetables (sliced carrots, peas, lima beans, etc.) will cook faster than larger ones.
- Whole vegetables, such as potatoes, acorn squash or corn on the cob, should be arranged in a circle on the turntable before cooking. They will cook more evenly if turned over after half the cooking time.
- Always place vegetables like asparagus and broccoli with the stem ends pointing towards the edge of the dish and the tips toward the center.
- When cooking cut vegetables, always cover the dish with a lid or vented microwavable plastic wrap.
- Whole, unpeeled vegetables such as potatoes, squash, eggplant, etc., should have their skin pricked in several spots before cooking to prevent them from bursting.
- For more even cooking, stir or rearrange whole vegetables halfway through the cooking time.
- Generally, the denser the food, the longer the standing time. (Standing time refers to the time necessary for dense, large foods and vegetables to finish cooking after they come out of the oven.) A baked potato can stand on the counter for five minutes before cooking is completed, while a dish of peas can be served immediately.

# COOKING INSTRUCTIONS

## Defrosting Guide

- Unwrap food. Place food on microwave-safe rack, plate or shallow dish.
- After first half of defrosting time: remove any remaining wrap, break food apart or separate pieces if possible, remove any thawed food, if possible, shield tips, thin meat or warm areas of food with foil.
- When defrosted, food should be cool, but softened in all areas. If still slightly icy, return to microwave oven very briefly, or let stand a few minutes.
- Poultry and fish may be placed under running cool water until defrosted.

Food	Microwave Time at Defrost Level	Directions
<b>Beef Chuck Roast</b> up to 5 lbs	<i>Microwave Time: 7-9 min / lb Let Stand:5-10 min.</i>	Place on plate or rack. Microwave until a wooden pick can be easily inserted in center. Turn over twice.
<b>Steaks</b> up to 5 lbs	<i>Microwave Time: 6-9 min / lb Let Stand:5-10 min.</i>	Place on plate or rack. Microwave until pliable, then separate steaks and rearrange. Turn over twice.
<b>Ground Beef</b> up to 3 lbs	<i>Microwave Time: 8-10 min / lb Let Stand:5-10 min.</i>	Place on plate or rack. Microwave until pliable, then break apart and remove defrosted portions at halftime. Turn over twice.
<b>Pork Spareribs</b> up to 3 lbs	<i>Microwave Time: 6-8 min / lb Let Stand:5-10 min.</i>	Place on plate or rack. Microwave until pliable, then separate and rearrange. Turn over twice.
<b>Pork Chops</b> up to 3 lbs	<i>Microwave Time: 6-8 min / lb Let Stand:5-10 min.</i>	Place on plate or rack. Microwave until pliable, then separate and rearrange. Turn over twice.

<b>Poultry Whole Chicken</b> up to 5 lbs	<i>Microwave Time: 7-9 min / lb Let Stand:5-10 min.</i>	Place on plate or rack. Microwave until pliable, then break apart and rearrange portions at half time. Rinse cavity with cool water. Remove giblets.
<b>Pieces</b> up to 2 lbs	<i>Microwave Time: 9-11 min / lb Let Stand:5-10 min.</i>	Place on plate or rack. Microwave until pliable, then break apart and rearrange portions at half time.
<b>Seafood Steaks</b> up to 3-5 lbs	<i>Microwave Time: 6-9min / lb Let Stand:5-10 min.</i>	Place on plate or rack. Microwave until a wooden pick can be easily inserted in center, break apart and rearrange at half time.
<b>Filletts</b> up to 3-5 lbs	<i>Microwave Time: 4-7 min / lb Let Stand:5-10 min.</i>	Place on plate or rack. Microwave until a wooden pick can be easily inserted in center, break apart and rearrange at half time.
<b>Shrimp</b> up to 3 lbs	<i>Microwave Time: 4-7 min / lb Let Stand:5-10 min.</i>	Place on plate or rack. Microwave until pliable, then separate and rearrange at half time.

---

# COOKING INSTRUCTIONS

---

## Recipes

### Beef and Barley Stew

1½ lbs. beef stew cubes, cut into ½-inch pieces

½ cup chopped onion

2 Tbs. all-purpose flour

1 Tbs Worcestershire sauce

1 can (13.75-14.5 oz.) beef broth

2 medium carrots, cut into ½-inch slices  
(about 1 cup)

½ cup barley

1 bay leaf

¼ tsp. pepper

1 pkg. (9-10 oz.) frozen peas, thawed

1. In a 2-quart casserole, combine beef, onion, flour, and Worcestershire; mix well. Cover with lid. Cook at High for 6 to 8 minutes until beef is no longer pink, stirring once.
2. Stir in beef broth, carrots, barley, bay leaf, and pepper. Cover with lid. Cook at Medium for 45 to 50 minutes until carrots and beef are tender, stirring 2 to 3 times.
3. Stir in peas. Cover with lid. Cook at Medium for 10 minutes. Let stand for 10 minutes. Remove bay leaf before serving. *Makes 6 servings.*

### Broccoli and Cheese Casserole

¼ cup butter or margarine

¼ cup chopped onion

1½ Tbs. flour

• ½ tsp. salt

¼ tsp. dry mustard

1/8 tsp. pepper

1½ cups milk

¼ cup chopped red pepper

8 oz. (2 cups) cheddar cheese, shredded

1 pkg. (9-10 oz.) frozen chopped broccoli, thawed

- 4 cups cooked spiral shaped pasta (8 oz. dry)

1. In a 2-quart casserole, cook butter and onion at High for 2 to 3 minutes until onion is soft, stirring once.
  2. Add flour, salt, mustard, and pepper; mix well. Cook at High for 60 to 90 seconds until mixture boils. Stir in milk until smooth.
  3. Stir in red pepper. Cook at High for 2 to 3 minutes until mixture boils and thickens slightly, stirring twice. Stir in cheese until melted.
  4. Add broccoli and pasta, mix well. Cover with lid. Cook at High for 4 to 6 minutes until heated through, stirring once. Stir before serving. *Makes 6 servings.*
-

---

# COOKING INSTRUCTIONS

---

## Recipes

### Warm Potato Salad

2 lbs. small red potatoes, cut into ½-inch pieces  
4 slices bacon (uncooked), cut into ½-inch pieces  
¼ cup chopped onion  
2 tsp. sugar  
1 tsp. salt  
1 tsp. flour  
½ tsp. celery seed  
⅛ tsp. pepper  
2½ Tbs. apple cider vinegar

1. In a 2-quart casserole, combine potatoes and ¼ cup water. Cover with lid. Cook at High until potatoes are tender (10-12 min.); stir twice. Drain and set aside to cool slightly.
2. In a medium bowl, cook bacon at High until crisp (3-5 min.); stir once. Place bacon on a paper towel. Reserve 1 Tbs. drippings.
3. Combine drippings and onion. Cover with plastic wrap; turn back a corner to vent steam. Cook at High until tender (3-4 min.); stir once.
4. Stir in sugar, salt, flour, celery seed, and pepper. Cook at High until mixture boils (30-40 sec.). Stir in vinegar and ½ cup water. Cook at High until liquid boils and thickens slightly (1-2 min.); stir once. Add bacon to dressing. Pour dressing over potatoes. Stir well. *Makes 6 servings.*

### Black Bean Soup

1 cup chopped onion  
1 clove garlic, minced  
2 cans (15 oz. each) black beans, drained  
• 1 can (14-16 oz.) stewed tomatoes, chopped  
1 can (13.75-14.5 oz.) chicken broth  
1 can (7-8.5 oz.) corn  
1 can (4 oz.) chopped green chillies  
1-2 tsp. ground cumin, or to taste

1. Place onion and garlic in a 3-quart casserole. Cover with lid. Cook at High for 3 to 5 minutes until tender.
- 2. Add one can of beans, mash beans with a fork. Add remaining ingredients; mix well.
3. Cook uncovered, at High for 10 minutes; stir. Reduce power to Medium and cook for 5 minutes. Stir before serving. *Makes about 2 quarts.*



# APPENDIX

## Troubleshooting Guide

Before you call a repair person for your oven, check this list of possible problems and solutions.

### Neither the oven's display nor the oven operate.

- Properly insert the plug into a grounded outlet.
- If the outlet is controlled by a wall switch, make sure the wall switch is turned on.
- Remove the plug from the outlet, wait ten seconds, then plug it in again.
- Reset the circuit breaker or replace any blown fuse.
- Plug another appliance into the outlet; if the other appliance doesn't work, have a qualified electrician repair the outlet.
- Plug the oven into a different outlet.

### The oven's display works, but the power won't come on.

- Make sure the door is closed securely.
- Check to see if packing material or other material is stuck to the door seal.
- Check for door damage.
- Press Cancel twice and re-enter all cooking instructions.

### The power goes off before the set time has elapsed.

- If there has not been a power outage, remove the plug from the outlet, wait ten seconds, then plug it in again. If there was a power outage, the time indicator will display "■■■■".

Reset the clock and any cooking instructions.

- Reset the circuit breaker or replace any blown fuse.

### The food is cooking too slowly.

- Make sure the oven is on its own 10 amp circuit line. Operating another appliance on the same circuit can cause a voltage drop. If necessary, move the oven to its own circuit.

### You see sparks or arcing.

- Remove any metallic utensils, cookware, or metal ties. If using foil, use only narrow strips and allow at least one inch between the foil and interior oven walls.

### The turntable makes noises or sticks.

- Clean the turntable, roller ring and oven floor.
- Make sure the turntable and roller ring are positioned correctly.

### Using your microwave causes TV or radio interference.

- This is similar to the interference caused by other small appliances, such as hair dryers. Move your microwave further away from other appliances, like your TV or radio.

## Care and Cleaning

Follow these instructions to clean and care for your oven.

- Keep the inside of the oven clean. Food particles and spilled liquids can stick to the oven walls, causing the oven to work less efficiently.
- Wipe up spills immediately. Use a damp cloth and mild soap. Do not use harsh detergents or abrasives.
- To help loosen baked on food particles or liquids, heat two cups of water (add the juice of one lemon if you desire to keep the oven fresh) in a four-cup measuring glass at High power for five minutes or until boiling. Let stand in the oven for one or two minutes.
- Remove the glass tray from the oven when cleaning the oven or tray. To prevent the tray from breaking, handle it carefully and do not put it in water immediately after cooking. Wash the tray carefully in warm sudsy water or in the dishwasher.
- Clean the outside surface of the oven with soap and a damp cloth. Dry with a soft cloth. To prevent damage to the operating parts of the oven, don't let water seep into the openings.
- Wash the door window with very mild soap and water. Be sure to use a soft cloth to avoid scratching.
- If steam accumulates inside or outside the oven door, wipe with a soft cloth. Steam can accumulate when operating the oven in high humidity and in no way indicates microwave leakage.
- Never operate the oven without food in it; this can damage the magnetron tube or glass tray. You may wish to leave a cup of water in the oven when it is not in use to prevent damage if the oven is accidentally turned on.

**If you have a problem you cannot solve,  
please call our service line:  
336-8686**

## APPENDIX

### Specifications

Model Number	MW740WA/MW740GA/ME740WA
Oven Cavity	0.7cuft
Controls	10 power levels, including defrost
Timer	99 minutes, 99 seconds
Power Source	220 VAC, 60 Hz
Power Output	700 Watts
Outside Dimensions	48,9 cm (W) x 27,5 cm (H) x 35,3 cm (D)
Oven Cavity Dimensions	30,6 cm (W) x 18,9 cm (H) x 32,2 cm (D)
Net/Gross Weight	12,5 kg/14 kg

## APPENDIX

### Warranty Information

#### Limited Warranty for Original Purchaser

This Samsung product is warranted by Samtronics Peru S.A. (hereafter referred to as SAPESA) against manufacturing defects in material or workmanship for one year.

- SAPESA further warrants that if this product fails to operate properly within the specified warranty period and the failure is due to improper workmanship or defective material, SAPESA will repair or replace the product at its option.

All warranty repairs or part replacements must be performed by SAPESA, through their Servicio Integral Samsung. (To find the nearest Servicio Intergral Samsung. (To find the nearest Servicio Integral Samsung, call 336-8686).

- Obligation to the Original Owner**

The original dated sales receipt must be retained by the customer and is the only acceptable proof of purchase. It must be presented to SAPESA, Servicio Intergral Samsung, at the time service is requested before warranty services are rendered. On all carry-in models, transportation to and from the Authorized Service Center is responsibility of the customer.

#### Exclusions of the Warranty

This warranty does not cover damage due to accident, fire, flood, and/or other Acts of God: misuse, incorrent line voltage, improper installation, improper or unauthorized repairs, commercial use, or damage that occurs during shipping. Customer adjustments, which are explained in this owner's manual, are not covered under the terms of this warranty. This warranty will automatically be voided for any unit found with a missing or altered serial number. This warranty is valid only on products purchased and used in Peru.

---

## NOTE

---

•

•

•

# WARRANTY

## SAMSUNG ELECTRONICS PERUVIAN LIMITED WARRANTY

Subject to the requirements, conditions, exclusions, and limitations of the Original Limited Warranty supplied with Samsung Electronics (SAMSUNG) products, and the requirements, conditions, exclusions and limitations contained herein, SAMSUNG will additionally provide the Warranty Repair Service (Servicio Integral Samsung) in Peru on SAMSUNG products purchased in Peru, for the warranty period originally specified, and to the Original Purchaser only .

The above described warranty repairs must be performed by a SAMSUNG Authorized Service Center (Servicio Integral Samsung). Along with this Statement, the original Limited Warranty Statement and a dated Bill of Sale as Proof of Purchase must be presented to the Authorized Service Center (Servicio Integral Samsung). Transportation to and from the Service Center is the responsibility of the purchaser.

Conditions covered are limited only to manufacturing defects in material or workmanship, and only those encountered in normal use of the product.

Excluded, but not limited to, are any original specified provisions for, in-home or on-site services minimum or maximum repair times, exchanges or replacements, accessories, options, upgrades or consumables.

For the locations of Servicio Integral SAMSUNG, please call:

Lima : 336-8686

# QUICK REFERENCE

Feature	Operation
Set Clock	<ol style="list-style-type: none"><li>1. Press RELOJ.</li><li>2. Use number buttons to enter time.</li><li>3. Press RELOJ again.</li></ol>
One Minute+ Cooking	<ol style="list-style-type: none"><li>1. Press the UN MINUTO MÁS button once for each minute of cooking.</li><li>2. The time will display and the oven will start.</li></ol>
Instant Cook Buttons	<ol style="list-style-type: none"><li>1. Press button that corresponds to the food you are cooking. (for example, POPCORN)</li><li>2. Press the button repeatedly to select serving size.</li></ol>
Defrost	<ol style="list-style-type: none"><li>1. Press DESCONGELAR.</li><li>2. Press the buttons(0-9) sequentially to enter the desired defrosting time.</li><li>3. Press INICIO.</li></ol>
Set Cooking Time and Power Levels	<ol style="list-style-type: none"><li>1. Use number buttons to set cooking time.</li><li>2. Press the NIVEL DE POTENCIA button. If you want to set the power level to something other than High, press the NIVEL DE POTENCIA button repeatedly.</li><li>3. Press INICIO to begin cooking.</li></ol>



Samsung Electronics Co., Ltd.  
Printed in Korea