


SAMSUNG

MICROWAVE OVEN

Owner's Instructions

MW73C

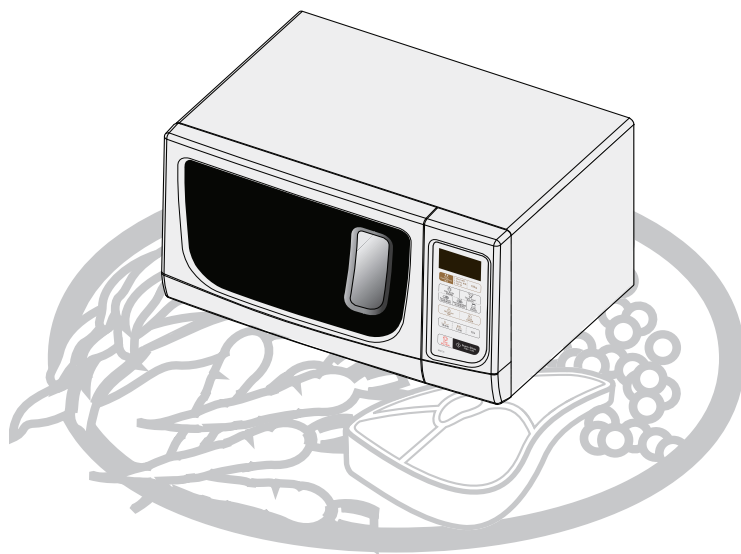


Oven	2
Accessories	2
Control Panel	2
Using this Instruction Booklet	3
Safety Precautions	3
Installing Your Microwave oven	4
Setting the Time	5
What to Do if You are in Doubt or Have a Problem	5
Cooking / Reheating	6
Power Levels	6
Stopping the Cooking	6
Adjusting the Cooking Time	7
Using the Instant Reheat Feature	7
Instant Reheat Settings	7
Using the Sterilize Milk Bottle Feature	8
Sterilize Milk Bottle Feature Settings	8
Using the Steam Towel Feature	9
Steam Towel Settings	9
Using the Auto Rapid Defrost Feature	10
Auto Rapid Defrost Settings	10
Multistage Cooking	11
Cookware Guide	12
Cleaning Your Microwave Oven	13
Technical Specifications	13



RoHS compliant


Our product complies with "The Restriction Of the use of certain Hazardous Substances in electrical and electronic equipment", and we do not use the 6 hazardous materials-Cadmium(Cd), Lead (Pb), Mercury (Hg), Hexavalent Chromium (Cr +6), Poly Brominated Biphenyls (PBBs), Poly Brominated Diphenyl Ethers(PBDEs)- in our products.

Oven

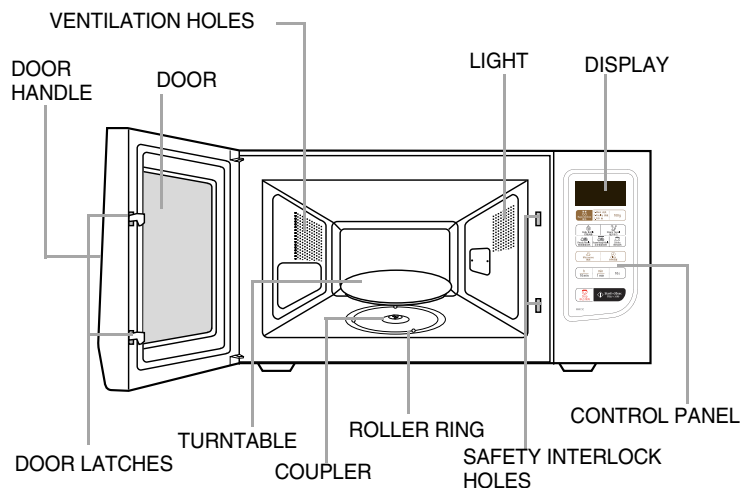


Accessories

 
Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.



 - Coupler**, already placed over the motor shaft in the base of the oven.
Purpose: The coupler rotates the turntable.



 - Roller ring**, to be placed in the centre of the oven.
Purpose: The roller ring supports the turntable.




- Turntable**, to be placed on the roller ring with the centre fitting to the coupler.
Purpose: The turntable serves as the main cooking surface; it can be easily removed for cleaning.



DO NOT operate the microwave oven without the roller ring and turntable.

Control Panel

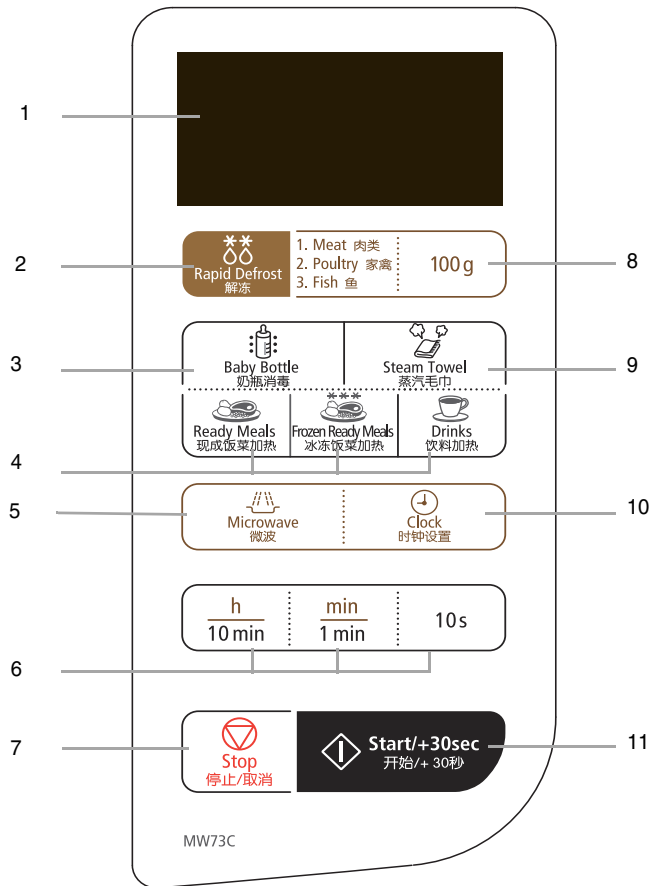

- | | |
|---|-----------------------------|
| 1. DISPLAY | 5. MICROWAVE MODE SELECTION |
| 2. AUTO RAPID DEFROST FEATURE SELECTION | 6. TIME SETTING |
| 3. STERILIZE BABY BOTTLE SELECTION | 7. STOP/CANCEL BUTTON |
| 4. AUTO REHEAT/COOK SELECTION | 8. WEIGHT SELECTION |
| | 9. STEAM TOWEL SELECTION |
| | 10. CLOCK SETTING |
| | 11. START BUTTON |

Using this Instruction Booklet

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain much valuable information on cooking with your microwave oven:

- Safety precautions
- Suitable accessories and cookware
- Useful cooking tips

At the front of the booklet you will find illustrations of the oven, and more importantly the control panel, so that you can find the buttons more easily.

The step-by-step procedures use two different symbols.



Important



Note

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

- Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.
- Do not place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.
- Do not operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
 - Door (bent)
 - Door hinges (broken or loose)
 - door seals and sealing surfaces
- The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

Safety Precautions

IMPORTANT SAFETY INSTRUCTIONS.

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Before cooking food or liquids in your microwave oven, please check that the following safety precautions are taken.

- Only use utensils that are suitable for use in microwave ovens; **DO NOT** use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc.
Remove wire twist ties from paper or plastic bags.
- **Reason:** Electric arcing or sparking may occur and may damage the oven.
- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;
Do not use your microwave oven to dry papers or clothes.
- Small amounts of food require shorter cooking or heating time.
If normal times are allowed they may overheat and burn.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation **ALWAYS** allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize.
Stir during heating, if necessary, and **ALWAYS** stir after heating.
In the event of scalding, follow these **FIRST AID** instructions:
 - * Immerse the scalded area in cold water for at least 10 minutes.
 - * Cover with a clean, dry dressing.
 - * Do not apply any creams, oils or lotions.
- **NEVER** fill the container to the top and choose a container that is wider at the top than at the bottom to prevent the liquid from boiling over. Bottles with narrow necks may also explode if overheated.
NEVER heat a baby's bottle with the teat on, as the bottle may explode if overheated.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns;
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended;
Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts in shells, tomatoes etc.
- The oven should be cleaned regularly and any food deposits removed;
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation;
- **DO NOT** cover the ventilation slots with cloths or paper. They may catch fire as hot air is evacuated from the oven.
The oven may overheat and automatically switch itself off. It will remain inoperable until it has cooled sufficiently.
- **ALWAYS** use oven gloves when removing a dish from the oven to avoid unintentional burn.

Safety Precautions (continued)

- **DO NOT** touch heating elements or interior oven walls until the oven be cooled down.
 - Do not immerse the power cable or plug in water and keep the power cable away from heated surfaces.
Do not operate this appliance if it has a damaged power cable or plug.
 - Stand at arms length from the oven when opening the door.
- Reason:** The hot air or steam released may cause scalding.
- You may notice a Clicking sound during operation(especially when the oven is defrosting).
- Reason:** This sound is normal when the electrical power output is changing.
- **DO NOT** operate the microwave oven when it is empty. The power will be cut off automatically for safety. You can operate normally after letting it stand for over 30 minutes.
It is best to leave a glass of water inside the oven at all times.The water will absorb the microwaves energy if the oven accidently started.
 - The microwave oven shall not be placed in a cabinet.

IMPORTANT

- Young children should **NEVER** be allowed to use or play with the microwave oven. Nor should they be left unattended near the microwave oven when it is in use. Items of interest to children should not be stored or hidden just above the oven.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

WARNING:

If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING:

It is hazardous for anyone other than a competent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.

WARNING:

 
 
Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING:

Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Installing Your Microwave oven

Place the oven on a flat level surface 85cm above the floor. The surface should be strong enough to safely bear the weight of the oven.



1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.
2. Remove all packing materials inside the oven. Install the roller ring and turntable. Check that the turntable rotates freely.
3. This microwave oven has to be positioned so that plug is accessible.



If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.

For your personal safety, plug the cable into a 3-pin, 230 Volt, 50 Hz, AC earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable.




Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

Setting the Time

 
Your microwave oven has an inbuilt clock. When power is supplied, “:0”, “88:88” or “12:00” is automatically displayed on the display. Please set the current time. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:

- When you first install your microwave oven
- After a power failure

 Do not forget to reset the clock when you switch to and from summer and winter time.



1. To display the time in the...
24-hour notation
12-hour notation
- Then press the **Clock (+)** button...
Once
Twice




2. Set the hour with the **h** button and the minutes with the **min** button.



3. When the right time is displayed, press the **Clock (+)** button again to start the clock.
Result: The time is displayed whenever you are not using the microwave oven

What to Do if You are in Doubt or Have a Problem

If you have any of the problems listed below try the solutions given.

- ◆ This is normal.
 - Condensation inside the oven
 - Air flow around the door and outer casing
 - Light reflection around the door and outer casing
 - Steam escaping from around the door or vents
 - ◆ The oven does not start when you press the **Start (◇)** button.
 - Is the door completely closed?
 - ◆ The food is not cooked at all
 - Have you set the timer correctly and/or pressed the **Start (◇)** button?
 - Is the door closed?
 - Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?
 - ◆ The food is either overcooked or undercooked
 - Was the appropriate cooking length set for the type of food?
 - Was an appropriate power level chosen?
 - ◆ Sparking and cracking occur inside the oven (arcing)
 - Have you used a dish with metal trimmings?
 - Have you left a fork or other metal utensil inside the oven?
 - Is aluminium foil too close to the inside walls?
 - ◆ The oven causes interference with radios or televisions
 - Slight interference may be observed on televisions or radios when the oven is operating. This is normal. To solve this problem, install the oven away from televisions, radios and aerials.
 - If interference is detected by the oven's microprocessor, the display may be reset. To solve this problem, disconnect the power plug and reconnect it. Reset the time.
-  If the above guidelines do not enable you to solve the problem, contact your local dealer or SAMSUNG after-sales service.

Cooking / Reheating

 
The following procedure explains how to cook or reheat food. **ALWAYS check your cooking settings before leaving the oven unattended.**

First, place the food in the centre of the turntable and close the door.



1. Press the button.

Result : The 800 W (maximum cooking power) indications are displayed:
Select the appropriate power level by pressing the button again until the corresponding wattage is displayed. Refer to the power level table.



2. Set the cooking time by pressing the **10min**, **1min** and **10s** button.



3. Press the **Start** () button.

Result : The oven light comes on and the turntable starts rotating.
Cooking starts and when it has finished the oven beeps four times.



Never switch the microwave oven on when it is empty.



If you wish to heat a dish for a short period of time at maximum power (800W), simply press the **+30 s** button once for each 30 seconds of cooking time. The oven starts immediately.

Power Levels


You can choose among the power levels below.

Power Level	Output
HIGH	800 W
MEDIUM HIGH	600 W
MEDIUM	450 W
MEDIUM LOW	300 W
DEFROST()	180 W
LOW	100 W

- If you select higher power level, the cooking time must be decreased.
- If you select lower power level, the cooking time must be increased.

Stopping the Cooking

 You can stop cooking at any time to check the food.



1. To stop temporarily;
Open the door.

Result : Cooking stops. To resume cooking, close the door and press **Start** () again.



2. To stop Completely;
Press the **Stop** () button.

Result : The cooking stops.
If you wish to cancel the cooking settings, press the **Stop** () button.



You can cancel any setting before starting cooking by simply pressing **Stop** () button.

Adjusting the Cooking Time

You can increase the cooking time by pressing the **+30 s** button once for each 30 seconds to be added.

 


Press the **+30 s** button once for each 30 seconds to be added.

Using the Instant Reheat Feature

With the **Instant Reheat** feature, the cooking time is set automatically and you do not have to press the Start button. You can adjust the number of servings by pressing the appropriate **Instant Reheat** button the required number of times.

First, place the food in the centre of the turntable and close the door.



Press the **Instant Reheat** button which you want the required number of times.

Result: Cooking starts after about two seconds.

When it has finished:

- 1) The oven beeps four times.
- 2) The end reminder signal will beep 3 times (once every minute).
- 3) The current time is displayed again.

Example: Press the **Drinks** button one times to reheat one cups of coffee. Refer to the table.

☒ Use only recipients that are microwave-safe.


Instant Reheat Settings

The following table presents the various **Instant Reheat Programmes**, quantities, standing times and appropriate recommendations.

Button	Food	Serving Size	Standing Time	Recommendations
	Ready Meals	300-350 g 400-450 g	3 min.	Put on a ceramic plate and cover it with microwave cling film. This programme is suitable for meals consisting of 3 components (e.g. meat with sauce, vegetables and side dish like potatoes, rice or pasta).
	Frozen Ready Meals	300-350 g 400-450 g	4 min.	Take frozen ready meal and check if dish is suitable for microwave. Pierce film of ready meal in the centre. This programme is suitable for frozen ready meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dish like potatoes, rice or pasta).
	Drinks (coffee, milk, tea, water with room temperature)	150 ml (1 cup) 250 ml (1 mug)	1- 2 min.	Pour into a ceramic cup and reheat uncovered. Place cup(150 ml) or mug(250 ml) in the centre of turntable. Stir carefully before and after standing time.

Using the Sterilize Baby Bottle Feature

 With the Sterilize a Baby Bottle feature, the heating time is set automatically and you do not have to press the Baby Bottle button.




Place the Baby Bottle to be sterilized onto the turntable.




Press the **Baby Bottle** () button once.

- 1) The Baby Bottle operation will automatically start after 2 seconds.



If you want to cancel the sterilization process, press the **Stop** () button.


Cautions

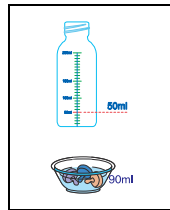

1. Do not heat the Baby Bottle when empty.
2. Use a cooking glove to remove the sterilized Baby bottle as it is very hot.
3. Do not open the door while sterilization is in progress.
4. Wait one minute before opening the door after sterilization is completed. Failing to do so may cause the hot water to boil over.
5. Do not fill the bottle to be sterilized over 50 ml. Hot water may boil over, resulting in burns!


Sterilize Baby Bottle Feature Settings

The following table presents the Sterilize Baby Bottle Programs, quantities, standing times and appropriate recommendations.

Button	Item	Serving Size	Standing Time	Recommendations
	Baby Bottle	1~2 pieces	1~2 min	Fill each bottle with 50 ml of water, and insert the nipples into a heat resistance container filled with 90 ml of water. Press the Baby Bottle button to start the process.

Using the Steam Towel Feature

 With the steam towel feature, the heating time is set automatically and you do not have to press the Steam Towel button.



Place the towel onto the turntable.



Press the **Steam Towel** (🌀) button once.

- 1) The Steam Towel operation will automatically start after 2 seconds.




If you want to cancel the heating process, press the **Stop** (⊘) button.

Steam Towel Settings

The following table presents the Steam Towel Programs, quantities, standing times and appropriate recommendations.


EN

Button	Item	Serving Size	Standing Time	Recommendations
	Steam Towel	Mid-sized Towel	1~2 min	Soak a mid-sized towel in water, wring it out slightly, and heat the resistance plate. Press the Steam Towel button to start the process.

Using the Auto Rapid Defrost Feature

The Auto Rapid Defrost feature enables you to defrost meat, poultry, fish.

The defrost time and power level are set automatically. You simply select the programme and the weight.

 Use only dishes that are microwave-safe.

 
First, place the frozen food in the centre of the turntable and close the door.



1. Press the **Rapid**() button.

Result : The following indication is displayed:



Press the **Rapid**() button one or more times according to the type of food to be defrosted. Refer to the table for further details.





2. Select the food weight by pressing the **100g** button. It is possible to set up to a maximum of 2000 g.



3. Press **Start** () button.

Result :

- ◆ Defrosting begins.
- ◆ The oven beeps halfway through defrosting to remind you to turn the food over.
- ◆ Press **Start** () again to finish defrosting.

 You can also defrost food manually. To do so, select the microwave cooking/reheating function with a power level of 180 W. Refer to the section entitled "Cooking/Reheating" on page 6 for further details.

Auto Rapid Defrost Settings

The following table presents the various Auto Rapid Defrost programmes, quantities, standing times and appropriate recommendations.

Remove all kinds of package material before defrosting. Place meat, poultry, fish on a ceramic plate.

Code / Food	Portion	Standing Time	Recommendations
1. Meat	100-2000 g	20-90 min.	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat.
2. Poultry	100-2000 g	20-90 min.	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions.
3. Fish	100-2000 g	20-80 min.	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets.

Multistage Cooking

Your microwave oven can be programmed to cook food in up to three stages.

Example: You wish to defrost food and cook it without having to reset the oven after each stage. You can thus defrost and cook a 500g fish in three stages:

- **Defrosting**
- **Cook I**
- **Cook II**

- ☒ You can set between two and three stages in multistage cooking.
- ☒ If you set three stage, the first stage must be defrosting.
- ☒ Don't press **Start** button until you've set the final stage.






 
1. Press the **Rapid** (**) button once or more times.



2. Set the weight by pressing the **100g** buttons the appropriate number of times(500g in the example).






 
3. Press the  button.
The microwave mode(I):
 ; if necessary, set the power level by pressing the  button again one or more times.
(600W in the example)



4. Set the cooking time by pressing the **10min**, **1min** and **10s** buttons the appropriate number of times (4 minutes in the example).



5. Press the  button.
The microwave mode(II):
 ; if necessary, set the power level by pressing the  button again one or more times.
(450W in the example)



6. Set the cooking time by pressing the **10min**, **1min** and **10s** buttons the appropriate number of times (5 minutes in the example).



7. Press the **Start** (◇) button.

Result : The three modes [defrosting and cooking(I,II)] are selected on after. According to the defrosting mode that you have chosen, the oven may beep half way through defrosting to remind you to turn the food over.
◆ When cooking is over, the oven beeps four times.

Cookware Guide

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-Safe	Comments
Aluminium foil	✓ X	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Browning plate	✓	Do not preheat for more than eight minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt. May catch fire.
• Paper bags or newspaper	X	
• Recycled paper or metal trims	X	May cause arcing.
• Glassware		
Glassware		
• Oven-to-table ware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes Spoons forks	X	May cause arcing or fire.
• Freezer bag twist ties	X	

Paper		
• Plates, cups, napkins and Kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture. May cause arcing.
• Recycled paper	X	
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic. Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Cling film	✓	
• Freezer bags	✓ X	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ :Recommended


✓X :Use Caution


X :Unsafe

Cleaning Your Microwave Oven


The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- **Inside and outside surfaces**
- **Door and door seals**
- **Turntable and Roller rings**

 **ALWAYS** ensure that the door seals are clean and the door closes properly.

 Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.
2. Remove any splashes or stains on the inside surfaces or on the roller ring with a soapy cloth. Rinse and dry.
3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the turntable and heat for ten minutes at maximum power.
4. Wash the dishwasher-safe plate whenever necessary.

 **DO NOT** spill water in the vents. **NEVER** use any abrasive products or chemical solvents. Take particular care when cleaning the door seals to ensure that no particles:

- Accumulate
- Prevent the door from closing correctly

Technical Specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	MW73C
Power source	230 V ~ 50 Hz
Power consumption Microwave	1150 W
Output power	100 W / 800 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OM75S(31)
Cooling method	Cooling fan motor
Dimensions (W x H x D) Outside Oven cavity	489 x 275 x 361 mm 306 x 211 x 320 mm
Volume	20 liter
Weight Net	12.5 kg approx

|

•

•

•



QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRALIA	1300 362 603	www.samsung.com/au
New zealand	0800 SAMSUNG (0800-726-786)	www.samsung.com/nz
CHINA	800-810-5858 400-810-5858 010-6475 1880	www.samsung.com/cn
HONG KONG	3698-4698	www.samsung.com/hk
INDIA	3030 8282 1800 110011 1-800-3000-8282	www.samsung.com/in
INDONESIA	0800-112-8888	www.samsung.com/id
JAPAN	0120-327-527	www.samsung.com/jp
MALAYSIA	1800-88-9999	www.samsung.com/my
PHILIPPINES	1-800-10-SAMSUNG(726-7864) 1-800-3-SAMSUNG(726-7864) 02-5805777	www.samsung.com/ph
SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg
THAILAND	1800-29-3232 02-689-3232	www.samsung.com/th
TAIWAN	0800-329-999	www.samsung.com/tw
VIETNAM	1 800 588 889	www.samsung.com/vn